

# حاتفم 4500/4900 ۋەزافىح ۋە داملىك تىرىتسى كىرەم فەرسەم عەم

## تايىوتەنەلە

### ۋە مەدىقەنەلە

[ۋە يىس اس الا تابىلەتتەنەلە](#)

[تابىلەتتەنەلە](#)

[ۋە مەدىخىتەنەلە تانوکەنەلە](#)

[تاخالى طەصەلە](#)

[ۋە يىس اس اتامولۇم](#)

[نىيوكەنەلە قىلىمۇم](#)

[چارخالا ونىيوكەنەلە ئىلەن لە ئاشم](#)

[ۋە ۋەلەس تازەتامولۇم](#)

## ۋە مەدىقەنەلە

نأ حاتفم 4500/4900 ۋەزافىح ۋە دام ئىلەن دوقۇم رورم ۋە مەلىك درتىسى نأ فيك ۋە قىيىتىۋادە فەصىي ئىچىمرب ® Cisco iOS ضەكىرى نأ كىرەم فەرسەم ئىقلەتى.

## ۋە يىس اس الا تابىلەتتەنەلە

### تابىلەتتەنەلە

دەنەتسەنەلە اذەل ۋە صاخ تابىلەتتەنەلە دەجۇت ئەل.

### ۋە مەدىخىتەنەلە تانوکەنەلە

ۋە نىيۇم ۋە يىدام تانوکەنەلە جەنمەرپ تارادىشى ئىلەن دەنەتسەنەلە اذە رەستقىي ئەل.

ۋە صاخ ۋە قىلىمۇم ۋە ئىب يې ف ۋە دوچۇمەلە ۋە زەھەنەلە نەم دەنەتسەنەلە اذە يې ف ۋە دراولە ۋە زەھەنەلە ئەشىنە مەت تەنەك اذى .(يىضارىتىف) حوسەم نىيوكەنەلە دەنەتسەنەلە اذە يې ف ۋە مەدىخىتەنەلە ۋە زەھەنەلە ۋە عېمەج تەأدەب رەمأ يىأ لە مەتتەنەلە رىيىتەنەلە كەمەف نەم دەكأتىف ،لىغۇشىتەنەلە دېق كەتكەپش.

### تاخالى طەصەلە

تاخالى طەصەلە لەھەنەلە ئەلەن دەيىزم ئىلەن لە وصەحلەللىق Cisco تاخىيەتتەنەلە ئەنلىق تاخالى طەصەلە ئەلەن دەنەتسەنەلە.

## ۋە يىس اس اتامولۇم

---

و II+ فرشملا تاکرجم معدت Catalyst 4500/4000 Series Switches، II و ا فرشملا تاکرجم و Cisco IOS جمانرب طقف V-10GE و IV و III و II+TS و II+10GE، II، II+ و ا کرجم فرشملا ىلع ةملکلا تدرتسا in order to تلحأ قملک، [CatOS](#) ضکري نأ قزافح ةدام لـ عارج ا ةداعتسا.

---

لوجه ىلع ةفوري ريغ وأ ةدوقفم رورم ةملک دنتسملا اذه حضوي Catalyst 4500/4000، II-Plus-TS (WS-X4013+) فرشملا کرجم، II-Plus (WS-X4013)، Supervisor Engine III (WS-X4014)، Supervisor Engine IV (WS-X4515)، v-10GE (WS-X4516)، 10GE (WS-X4516-10GE) كرجم فرشم، 4948 cisco 4900m ةزافح ةدام، 4948 10GE، cisco 4900m ةزافح ةدام، 4948 10GE، 4900m حاتفم.

## نيوكـلـا ةـيلـمع

حـاتـفـم 4500/4900 ةـزـافـحـ ةـدـامـلـا ىـلـعـ كـرـورـمـ ةـمـلـكـ درـتـسـيـ نـأـ

---

ةـدـحـوـ لـوـصـوـ مـادـخـتـسـاـ نـمـوـ لـوـحـمـلـاـ ىـلـاـ يـلـعـ لـوـصـوـ ىـلـعـ كـلـوـصـحـ نـمـ دـكـأـتـ:ـ ظـاحـالـمـ لـوـصـحـلـلـ .ـ تـاوـطـخـلـاـ هـذـهـ ذـيـفـنـتـ عـانـثـأـ (ـفـرـشـمـلـاـ کـرـجـمـ)ـ سـوـبـرـيـوـنـرـ إـنـجـنـيـرـاـتـ ةـدـحـوـ ىـلـاـ مـكـحـتـلـاـ [ةـدـحـوـ ذـفـنـمـبـ مـدـومـ لـيـصـوـتـ](#)ـ ىـلـاـ عـجـراـ،ـ لـوـحـمـلـاـ مـكـحـتـ ةـدـحـوـ لـاـصـتـاـ لـوـحـ لـيـصـوـتـ ىـلـعـ [تـالـوـحـمـ يـفـ مـكـحـتـلـاـ Catalystـ](#).

---

ةـسـرـامـمـ لـضـفـأـكـ .ـ رـوـكـذـمـ وـهـ اـمـكـ عـارـجـ إـلـاـ عـابـتـاـ مـتـ اـذـاـ لـوـحـمـلـاـ نـيـوـكـتـ دـقـفـ مـتـيـ الـ:ـ حـيـمـلـتـ مـدـاخـ يـفـ Ciscoـ ةـزـهـجـأـ عـيـمـجـ نـيـوـكـتـ نـمـ ةـيـطـايـتـحـاـ ةـخـسـنـ كـيـدـلـ نـوـكـيـ نـأـبـ Ciscoـ يـصـوـتـ TFTPـ وـأـ تـفـرـجـلـاـ مـدـاخـ .ـ كـبـشـ ةـرـادـاـ مـدـاخـ

---

1. زـاهـجـلـاـ ةـقـاطـ ةـرـوـدـ بـمـقـ.

هـلـيـغـشـتـ دـعـأـ مـثـ ،ـ زـاهـجـلـاـ لـيـغـشـتـ فـاقـيـابـ مـقـ ،ـ ةـقـاطـلـاـ ةـرـوـدـ لـجـأـ نـمـ.

يـفـ عـارـجـ إـلـاـ اـذـهـ كـعـضـيـ .ـ يـئـاقـلـتـلـاـ دـيـهـمـتـلـاـ عـنـمـلـ نـاـوـثـ 5ـ نـوـضـغـ يـفـ Ctrl-Cـ ىـلـعـ طـغـضـاـ ةـشـاشـبـ صـاخـلـاـ ةـبـلـاطـمـلـاـ عـضـوـ.

---

<#root>

!--- Here, you power cycle the switch.

```
*****
*                                         *
* Welcome to ROM Monitor for WS-X4014 System.          *
* Copyright (c) 1999-2000, 2001 by Cisco Systems, Inc.      *
* All rights reserved.                                     *
*****
```

ROM Monitor Program Version 12.1(10r)EY(1.21)

Board type 1, Board revision 7

```
Swamp FPGA revision 16, Dagobah FPGA revision 43
```

```
Timer interrupt test passed.
```

```
MAC Address : 00-02-b9-83-af-fe  
IP Address : 172.16.84.122  
Netmask : 255.255.255.0  
Gateway : 172.16.84.1  
TftpServer : Not set.  
Main Memory : 256 MBytes
```

```
***** The system will autoboot in 5 seconds *****
```

```
Type control-C to prevent autobooting.
```

*!--- At this point, press Ctrl-C.*

```
Autoboot cancelled..... please wait!!!  
Autoboot cancelled..... please wait!!!
```

```
rommon 1
```

```
> [interrupt]
```

*!--- The module ended in the ROMmon.*

```
rommon 1
```

```
> [interrupt]
```

2. رم او جوم confreg ىلع ةدایقلا rommon رادصا ب مق.

: رورملا ۋەملىك دادرتسال رم او لار طس ئەجاو يىف انه رەظت يىتلاتا دىدھەتلا لەمۇپ مق

```
<#root>
```

```
rommon 1 >
```

```
set
```

```
<#root>
```

```
rommon 1 >
```

```
confreg
```

```
Configuration Summary :
```

```
=> load ROM after netboot fails
```

```
=> console baud: 9600
```

```
=> autoboot from: commands specified in 'BOOT' environment variable
```

```
do you wish to change the configuration? y/n [n]:
```

```

y
enable "diagnostic mode"? y/n [n]:
n
enable "use net in IP bcast address"? y/n [n]:
n
disable "load ROM after netboot fails"? y/n [n]:
n
enable "use all zero broadcast"? y/n [n]:
n
enable "break/abort has effect"? y/n [n]:
n
enable "ignore system config info"? y/n [n]:
y

change console baud rate? y/n [n]:
n

change the boot characteristics? y/n [n]:
n

Configuration Summary :
=> load ROM after netboot fails
=> ignore system config info
=> console baud: 9600
=> autoboot from: commands specified in 'BOOT' environment variable

do you wish to save this configuration? y/n [n]:
y

You must reset or power cycle for new configuration to take effect

```

نییعتل ROMmon رمألا هجوم يف رمألا confreg 0x2142 مادختسإ اضيأ كنكمي :ةظحالم  
ةرکاذ يف نرخملالا ليغشتلار عدب نیوکت يطختل نیوکتلار لجس ۆمیق NVRAM.

```

<#root>

rommon 1 >
confreg 0x2142

You must reset or power cycle for the new configuration to take effect.

```

3. ئەي طەمنلە دەحولە لىغۇشت ئەداعاب حەمسى يىذلا رەمألا `reset` رادصاپ مۇق.

اھنكلو ئەي طەمنلە دەحولە دىھەمەت ئەداعا مەتت، 2. ۋەطخىلا يىف اھب تەمك يىتلە تارىيىغىتلىل ارظن ظوفەحملە نىوكتىلە لەجاتت.

```
<#root>

rommon 2 >
reset

Resetting . . . . .

rommon 3 >

*****
*           *
* Welcome to ROM Monitor for WS-X4014 System.      *
* Copyright (c) 1999-2000, 2001 by Cisco Systems, Inc.  *
* All rights reserved.          *
*           *
*****
```

*!--- Output suppressed.*

**Press RETURN to get started!**

*!--- Press Return.*

```
00:00:21: %SYS-5-RESTART: System restarted --
Cisco Internetwork Operating System Software
IOS (tm) Catalyst 4000 L3 Switch Software (cat4000-IS-M),
    Version 12.1(8a)EW, RELEASE SOFTWARE (fc1)
TAC Support: http://www.cisco.com/tac
Copyright (c) 1986-2002 by cisco Systems, Inc.
Compiled Thu 24-Jan-02 17:34 by cc当地
00:00:21: %SNMP-5-COLDSTART: SNMP agent on host Switch
    is undergoing a cold start
Switch>
```

4. ئەن كەن دەكأت ئەن كەن 0x2142 يە نىوكتىلە لەجس ۋەميق نأ نم دەكأت.

لىمەخت نود (ئەتقۇفەملە ۋەركاذا) Flash نەم ئەي طەمنلە دەحولە دىھەمەتلىع ۋەميقلىا ھەذە لەمعەت ىلى لاكتىنالىل Switch ۋېلەطەم ۋەذفان يىف رەمألا رادصاپ مۇق. ظوفەحملە نىوكتىلە نىكەمەتلىل show version ۋەرمألا رادصاپ مۇق مۇت. نىكەمەتلىل عەضو.

```
<#root>

Switch>
enable
```

```

Switch#  

show version  

Cisco Internetwork Operating System Software  

IOS (TM) Catalyst 4000 L3 Switch Software (cat4000-IS-M),  

    Version 12.1(8a)EW, RELEASE SOFTWARE (fc1)  

TAC Support: http://www.cisco.com/tac  

Copyright (c) 1986-2002 by cisco Systems, Inc.  

Compiled Thu 24-Jan-02 17:34 by ccai  

Image text-base: 0x00000000, data-base: 0x00AA2B8C  

ROM: 12.1(10r)EY(1.21)  

Switch uptime is 5 minutes  

System returned to ROM by reload  

Running default software

```

```

cisco WS-C4006 (MPC8245) processor (revision 7) with 262144K bytes of memory.  

Processor board ID FOX04183666  

Last reset from Reload  

32 Gigabit Ethernet/IEEE 802.3 interface(s)  

467K bytes of non-volatile configuration memory.

```

```
Configuration register is 0x2142
```

```
Switch#
```

5. يف NVRAM ةركا ذخسنل رادصا بمق `copy startup-config running-config` ورأ مألا `configure memory` راكذا لـ.

ةدحولـا ىلع يضارـفالـا نـيـوكـتـلـا ضـرـعـيـ يـذـلـا ،رمـأـلا رـادـصـا مـدـعـ .ةـيـطـمـنـلـا.

```

<#root>  

Switch#  

configure memory  

Uncompressed configuration from 1307 bytes to 3014 bytes  

Switch#  

00:13:52: %SYS-5-CONFIG_I: Configured from memory by console  

c-4006-SUPIII#

```

6. يـدـبـيـ اـقـبـاسـ لـمـعـتـسـيـ نـاـكـ نـأـ رـاقـلـاـ نـأـ دـكـأـتـيـ نـأـ رـمـأـ `show ip interface brief` رـادـصـا بـمقـ up/up عـضـوـ.

لمـعـ فـاقـيـاـ نـمـ اـمـ لـاـ ،يـدـبـيـ ةـدـاعـتـسـاـ ةـمـلـكـلـاـ لـبـقـ لـمـعـتـسـيـ نـاـكـ نـأـ رـاقـ قـوـفـ نـرـاقـلـاـ بـلـجـيـ نـأـ رـاقـ نـأـ ىـلـعـ رـمـأـ.

ىلע ظوفحمل ا نيوكتل ا ضرع ل show running-config رمألا و أ write terminal رمألا رادص اب مق. 7. ئي طمن ل ا ة دحول ا.

```
<#root>

c-4006-SUPIII#
show running-config

Building configuration...

Current configuration : 3014 bytes
!
version 12.1
no service pad
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
service compress-config
!
hostname c-4006-SUPIII
!
boot system flash bootflash:
!
vtp mode transparent

!--- Output suppressed.

line con 0
stopbits 1
line vty 0 4
login
!
end

c-4006-SUPIII#
```

ةي طمن ل ا ة دحول ا ئل ع رورم ل ا ئم ل ك ر ي غ ت ل ز هاج ن آ ل ا ت ن ا.

8. ئم ل ك ل ا ر ي غ ي ن ا ر م ا ا ذ ه ت ردص ا:

```
<#root>

c-4006-SUPIII#
configure terminal

Enter configuration commands, one per line. End with CNTL/Z.
c-4006-SUPIII(config)#
no enable secret

!--- This step is necessary if the switch had an enable secret password.
```

```
c-4006-SUPIII(config)#  
enable secret < password >  
[Choose a strong password with at least one capital letter,  
one number, and one special character.]
```

*!--- This command sets the new password.*

9. ىلإ نيوكتل لجس ةميق ڈاع| نم دكأت.

وختل او نيوكتل لجس ةميق رئيغتل ConfigPrompt رمألا هجوم يف تاوطلخا هذه لمكأهونم.

```
<#root>  
  
c-4006-SUPIII(config)#  
config-register 0x2102  
  
c-4006-SUPIII(config)#  
  
^Z  
  
c-4006-SUPIII#  
00:19:01: %SYS-5-CONFIG_I: Configured from console by console  
c-4006-SUPIII#  
  
write memory
```

*!--- This step saves the configuration.*

```
Building configuration...  
Compressed configuration from 3061 bytes to 1365 bytes[OK]  
c-4006-SUPIII#  
  
show version
```

*!--- This step verifies the value change.*

```
Cisco Internetwork Operating System Software  
IOS (TM) Catalyst 4000 L3 Switch Software (cat4000-IS-M),  
Version 12.1(8a)EW, RELEASE SOFTWARE (fc1)  
TAC Support: http://www.cisco.com/tac  
Copyright (c) 1986-2002 by cisco Systems, Inc.  
Compiled Thu 24-Jan-02 17:34 by ccai  
Image text-base: 0x00000000, database: 0x00AA2B8C
```

```
ROM: 12.1(10r)EY(1.21)  
c-4006-SUPIII uptime is 20 minutes  
System returned to ROM by reload  
Running default software
```

```
cisco WS-C4006 (MPC8245) processor (revision 7) with 262144K bytes of memory.  
Processor board ID FOX04183666  
Last reset from Reload
```

```
32 Gigabit Ethernet/IEEE 802.3 interface(s)
467K bytes of nonvolatile configuration memory.
```

```
Configuration register is 0x2142 (
will be 0x2102 at next reload
)

c-4006-SUPIII#
```

رورملا ۋە مەلک رىيغىتپ تىمىق، ئەطقىنلا ھۇزى دىنۇ.

## جاخىلارنى يوكىتلا ئىلع لاثم

iii. كىرحەم فىرىشم 4000 ۋە زاۋىح ۋە دام ئىلع ئارچى ۋە داعىتسا ۋە مەلکلى نەم ۋە جىيتىنلا جاتىن لاثم اذە.

```
<#root>
```

```
c-4006-SUPIII>
```

```
enable
```

```
Password:
```

```
Password:
```

```
Password:
```

```
% Bad secrets
```

*!--- Here, you power cycle the switch.*

```
*****
*
* Welcome to ROM Monitor for WS-X4014 System. *
* Copyright (c) 1999-2000, 2001 by Cisco Systems, Inc. *
* All rights reserved. *
*
*****
```

ROM Monitor Program Version 12.1(10r)EY(1.21)

Board type 1, Board revision 7  
Swamp FPGA revision 16, Dagobah FPGA revision 43

Timer interrupt test passed.

MAC Address : 00-02-b9-83-af-fe  
IP Address : 172.16.84.122  
Netmask : 255.255.255.0  
Gateway : 172.16.84.1  
TftpServer : Not set.  
Main Memory : 256 Mbytes

\*\*\*\*\* The system will autoboot in 5 seconds \*\*\*\*\*

Type control-C to prevent autobooting.

*!--- At this point, press Ctrl-C.*

```
Autoboot cancelled..... please wait!!!
Autoboot cancelled..... please wait!!!
rommon 1 > [interrupt]

rommon 1 > [interrupt]

rommon 1 >

confreg

Configuration Summary :
=> load ROM after netboot fails
=> console baud: 9600
=> autoboot from: commands specified in 'BOOT' environment variable

do you wish to change the configuration? y/n [n]:
y

enable "diagnostic mode"? y/n [n]:
n

enable "use net in IP bcast address"? y/n [n]:
n

disable "load ROM after netboot fails"? y/n [n]:
n

enable "use all zero broadcast"? y/n [n]:
n

enable "break/abort has effect"? y/n [n]:
n

enable "ignore system config info"? y/n [n]:
y

change console baud rate? y/n [n]:
n

change the boot characteristics? y/n [n]:
n

Configuration Summary :
```

```
=> load ROM after netboot fails  
=> ignore system config info  
=> console baud: 9600  
=> autoboot from: commands specified in 'BOOT' environment variable
```

```
do you wish to save this configuration? y/n [n]:
```

```
y
```

```
You must reset or power cycle for new configuration to take effect
```

```
rommon 2 >
```

```
reset
```

```
Resetting .....
```

```
rommon 3 >
```

```
*****  
* *  
* Welcome to ROM Monitor for WS-X4014 System. *  
* Copyright (c) 1999-2000, 2001 by Cisco Systems, Inc. *  
* All rights reserved. *  
* *  
*****
```

```
ROM Monitor Program Version 12.1(10r)EY(1.21)  
Board type 1, Board revision 7  
Swamp FPGA revision 16,  
Dagobah FPGA revision 43
```

```
Timer interrupt test passed.
```

```
MAC Address : 00-02-b9-83-af-fe  
IP Address : 172.16.84.122  
Netmask : 255.255.255.0  
Gateway : 172.16.84.1  
TftpServer : Not set.  
Main Memory : 256 Mbytes
```

```
***** The system will autoboot in 5 seconds *****
```

```
Type control-C to prevent autobooting.  
.....
```

```
***** The system will autoboot now *****
```

```
config-register = 0x2142  
Autobooting using BOOT variable specified file.....
```

```
Current BOOT file is --- bootflash:
```

```
Rommon reg: 0x2B004180  
Decompressing the image : #####  
#####  
##### [OK]
```

k2diags version 1.6

prod: WS-X4014 part: 73-6854-07 serial: JAB0546060Z

Power-on-self-test for Module 1: WS-X4014

Status: (. = Pass, F = Fail)

Traffic using serdes loopback (L2; one port at a time)...

switch port 0: . switch port 1: . switch port 2: .

switch port 3: . switch port 4: . switch port 5: .

switch port 6: . switch port 7: . switch port 8: .

*!--- Output suppressed.*

Module 1 Passed

Exiting to ios...

Rommon reg: 0x2B000180

Decompressing the image : #####

*!--- Output suppressed.*

##### [OK]

Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) of the Commercial Computer Software - Restricted Rights clause at FAR sec. 52.227-19 and subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS sec. 252.227-7013.

cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, California 95134-1706

Cisco Internetwork Operating System Software  
IOS (TM) Catalyst 4000 L3 Switch Software (cat4000-IS-M),  
Version 12.1(8a)EW, RELEASE SOFTWARE (fc1)  
TAC Support: <http://www.cisco.com/tac>  
Copyright (c) 1986-2002 by cisco Systems, Inc.  
Compiled Thu 24-Jan-02 17:34 by ccai  
Image text-base: 0x00000000, database: 0x00AA2B8C

cisco WS-C4006 (MPC8245) processor (revision 7) with 262144K bytes of memory.  
Processor board ID FOX04183666  
Last reset from Reload  
32 Gigabit Ethernet/IEEE 802.3 interface(s)  
467K bytes of nonvolatile configuration memory.

Press RETURN to get started!

00:00:21: %SYS-5-RESTART: System restarted --  
Cisco Internetwork Operating System Software

```
IOS (TM) Catalyst 4000 L3 Switch Software (cat4000-IS-M),  
Version 12.1(8a)EW, RELEASE SOFTWARE (fc1)  
TAC Support: http://www.cisco.com/tac  
Copyright (c) 1986-2002 by cisco Systems, Inc.  
Compiled Thu 24-Jan-02 17:34 by ccai  
00:00:21: %SNMP-5-COLDSTART: SNMP agent on host Switch is undergoing a cold start  
Switch>
```

```
enable
```

```
Switch#
```

```
show version
```

```
Cisco Internetwork Operating System Software  
IOS (TM) Catalyst 4000 L3 Switch Software (cat4000-IS-M),  
Version 12.1(8a)EW, RELEASE SOFTWARE (fc1)  
TAC Support: http://www.cisco.com/tac  
Copyright (c) 1986-2002 by cisco Systems, Inc.  
Compiled Thu 24-Jan-02 17:34 by ccai  
Image text-base: 0x00000000, database: 0x00AA2B8C
```

```
ROM: 12.1(10r)EY(1.21)  
Switch uptime is 5 minutes  
System returned to ROM by reload  
Running default software
```

```
cisco WS-C4006 (MPC8245) processor (revision 7) with 262144K bytes of memory.  
Processor board ID FOX04183666  
Last reset from Reload  
32 Gigabit Ethernet/IEEE 802.3 interface(s)  
467K bytes of nonvolatile configuration memory.
```

```
Configuration register is 0x2142
```

```
Switch#
```

```
Switch#
```

```
configure memory
```

```
Uncompressed configuration from 1307 bytes to 3014 bytes  
c-4006-SUPIII#  
00:13:52: %SYS-5-CONFIG_I: Configured from memory by console  
c-4006-SUPIII#
```

```
show running-config
```

```
Building configuration...
```

```
Current configuration : 3014 bytes  
!  
version 12.1  
no service pad  
service timestamps debug uptime  
service timestamps log uptime  
no service password-encryption
```

```
service compress-config
!
hostname c-4006-SUPIII

!
boot system flash bootflash:
!
vtp mode transparent
!
vlan 20
    private-vlan primary
!
vlan 100
!
vlan 202
    private-vlan association 440
!
vlan 440
    private-vlan isolated
!
vlan 500
ip subnet-zero
no ip domain-lookup
!
ip multicast-routing
!
!
interface GigabitEthernet1/1
no switchport
ip address 10.1.1.1 255.255.255.0
ip pim dense-mode
!
interface GigabitEthernet1/2
no switchport
ip address 10.2.2.2 255.255.255.0
!
```

*!--- Output suppressed.*

```
!
interface Vlan1
ip address 172.16.84.140 255.255.255.0
ip pim dense-mode
!
interface Vlan2
no ip address
shutdown
!
interface Vlan20
no ip address
shutdown
!
```

*!--- Output suppressed.*

```
!
line con 0
stopbits 1
```

```
line vty 0 4
login
!
end

c-4006-SUPIII#
configure terminal

Enter configuration commands, one per line. End with CNTL/Z.
c-4006-SUPIII(config)#

no enable secret

--- This step is necessary if the switch had an enable secret password.

c-4006-SUPIII(config)#
enable secret < password >
[Choose a strong password with at least one capital letter,
one number, and one special character.]


c-4006-SUPIII(config)#
config-register 0x2102

c-4006-SUPIII(config)#
^Z

c-4006-SUPIII#
00:19:01: %SYS-5-CONFIG_I: Configured from console by console
c-4006-SUPIII#
write memory

Building configuration...
Compressed configuration from 3061 bytes to 1365 bytes[OK]
c-4006-SUPIII#
show version

Cisco Internetwork Operating System Software
IOS (TM) Catalyst 4000 L3 Switch Software (cat4000-IS-M),
Version 12.1(8a)EW, RELEASE SOFTWARE (fc1)
TAC Support: http://www.cisco.com/tac
Copyright (c) 1986-2002 by cisco Systems, Inc.
Compiled Thu 24-Jan-02 17:34 by ccai
Image text-base: 0x00000000, database: 0x00AA2B8C

ROM: 12.1(10r)EY(1.21)
c-4006-SUPIII uptime is 20 minutes
System returned to ROM by reload
Running default software

cisco WS-C4006 (MPC8245) processor (revision 7) with 262144K bytes of memory.
Processor board ID FOX04183666
Last reset from Reload
32 Gigabit Ethernet/IEEE 802.3 interface(s)
```

467K bytes of nonvolatile configuration memory.

Configuration register is 0x2142 (will be 0x2102 at next reload)

c-4006-SUPIII#

## ةلص تاذ تامولع م

- رورملا ةملك دادرتس| عانثأ ئيسي ايقلا Break حيـتـافـم لـسـلسـتـتـاعـوـمـجـمـ
- رورملا ةملك دادرتس| تاعارجا
- تالوـحـمـ تـاجـتـنـمـ معـدـ
- تـادـنـتـسـمـلـاوـيـنـقـتـلـاـ معـدـ Cisco Systems

## هـ لـ وـ لـ جـ رـ تـ لـ اـ هـ ذـ هـ

ةـ يـ لـ آـ لـ اـ تـ اـ يـ نـ قـ تـ لـ اـ نـ مـ مـ جـ مـ وـ عـ مـ اـ دـ خـ تـ سـ اـ بـ دـ نـ تـ سـ مـ لـ اـ اـ ذـ هـ تـ مـ جـ رـ تـ  
لـ اـ عـ لـ اـ ءـ اـ حـ نـ اـ عـ يـ مـ جـ يـ فـ نـ يـ مـ دـ خـ تـ سـ مـ لـ لـ مـ عـ دـ ئـ وـ تـ حـ مـ يـ دـ قـ تـ لـ ةـ يـ رـ شـ بـ لـ اـ وـ  
اـ مـ كـ ةـ قـ يـ قـ دـ نـ وـ كـ تـ نـ لـ ةـ يـ لـ آـ ةـ مـ جـ رـ تـ لـ ضـ فـ اـ نـ اـ ةـ ظـ حـ اـ لـ مـ ئـ جـ رـ يـ .ـ صـ اـ خـ لـ اـ مـ هـ تـ غـ لـ بـ  
يـ لـ خـ تـ .ـ فـ رـ تـ حـ مـ مـ جـ رـ تـ مـ اـ هـ دـ قـ يـ يـ تـ لـ اـ ةـ يـ فـ اـ رـ تـ حـ اـ لـ اـ ةـ مـ جـ رـ تـ لـ اـ عـ مـ لـ اـ حـ لـ اـ وـ  
ىـ لـ إـ أـ مـ ئـ اـ دـ عـ وـ جـ رـ لـ اـ بـ يـ صـ وـ تـ وـ تـ اـ مـ جـ رـ تـ لـ اـ هـ ذـ هـ ةـ قـ دـ نـ عـ اـ هـ تـ يـ لـ وـ ئـ سـ مـ  
(رـ فـ وـ تـ مـ طـ بـ اـ رـ لـ اـ)ـ يـ لـ صـ أـ لـ اـ يـ زـ يـ لـ جـ نـ إـ لـ اـ دـ نـ تـ سـ مـ لـ اـ).