



The bridge to possible

Deployment guide
Cisco public

Cisco Aironet Active Sensor

Contents

Overview of the Cisco Aironet Active Sensor	3
Aironet Active Sensor hardware	5
Sensor hardware deployment	8
Sensor data flow	12
Sensor provisioning	13
Upgrade the sensor software	42
Manage sensors	45
Create a sensor test template	46
Monitor sensor health	67
Sensor global issues	75
Troubleshooting	76
Useful links	83

Overview of the Cisco Aironet Active Sensor

Enterprise wireless networks are a rapidly growing part of today's age of technology. They are becoming more mission critical each day as additional companies migrate to wireless solutions as a means to run their business. As wireless networks grow exponentially, so does their complexity, and thus it's important to be able to quickly identify and resolve potential connectivity issues before degradation occurs. While this applies to all networks, it is especially true in remote facilities where IT professionals may not be onsite. A consistent solution is needed that can take on this network health assessment role. To address these pain points, Cisco has created an intent-based networking and network analytics solution, the Cisco® Aironet® Active Sensor, together with Cisco DNA Assurance.

The Aironet Active Sensor is a state-of-the-art wireless device that functions like a regular WLAN client, but has the ability to continuously collect various metrics that determine the health and effectiveness of a wireless network. This data is then analyzed for issues and sent to Cisco DNA Assurance, where it can be displayed graphically for intuitive interpretation by the user.

Cisco DNA Assurance is an enterprise-grade intent-based networking software application that allows a user to easily configure, monitor, and troubleshoot the health of their network. It has numerous features and use cases; however, the primary focus in this deployment guide will be on its Proactive Health Assessment feature, together with the Aironet Active Sensor.

Together, the sensor and Cisco DNA Assurance provide users with around-the-clock feedback related to any weakness in the network so that any issues can be mitigated before they become serious. Since this is a software-centric solution, the moment the sensors are deployed onsite, users will have immediate access to an in-depth visualization of their network's health from anywhere in the world.

This document covers the deployment of the Cisco Aironet Active Sensor together with Cisco DNA Assurance.

Recommended software

- Cisco DNA Center Software Release 2.1.2.0
- Aironet Active Sensor Software Release 2.1.2.0

Note: This document is based on the software releases recommended above. Certain features described in this deployment guide are not supported for earlier software releases.

Table 1. Aironet Active Sensor and Cisco DNA Center software matrix


Sensor software release	Cisco DNA Center software release
2.1.2.0	2.1.2.0
2.1.1.0	2.1.1.0
1.3.3.0	1.3.3.x
1.3.1.2	1.3.1.2 or later 1.3.1.x
8.8.263.0	1.3.0.3 or earlier (example: 1.2.x)

Note: The sensor device side software release must match the Cisco DNA Center software for proper compatibility.

Prerequisite: Installing sensor packages from Cisco DNA Center

Cisco DNA Center provides the option to download separate sensor packages called **Assurance - Sensor** and **Automation - Sensor**. You will be able to download and install these packages on top of the base Cisco DNA Center software.

- To install the sensor packages, log in to Cisco DNA Center and open the hamburger menu in the top left corner.
- Click System > Software Updates, then click Installed Apps on the left. Scroll down to Assurance and you will find the packages available there for download or install (**Figure 1.**).

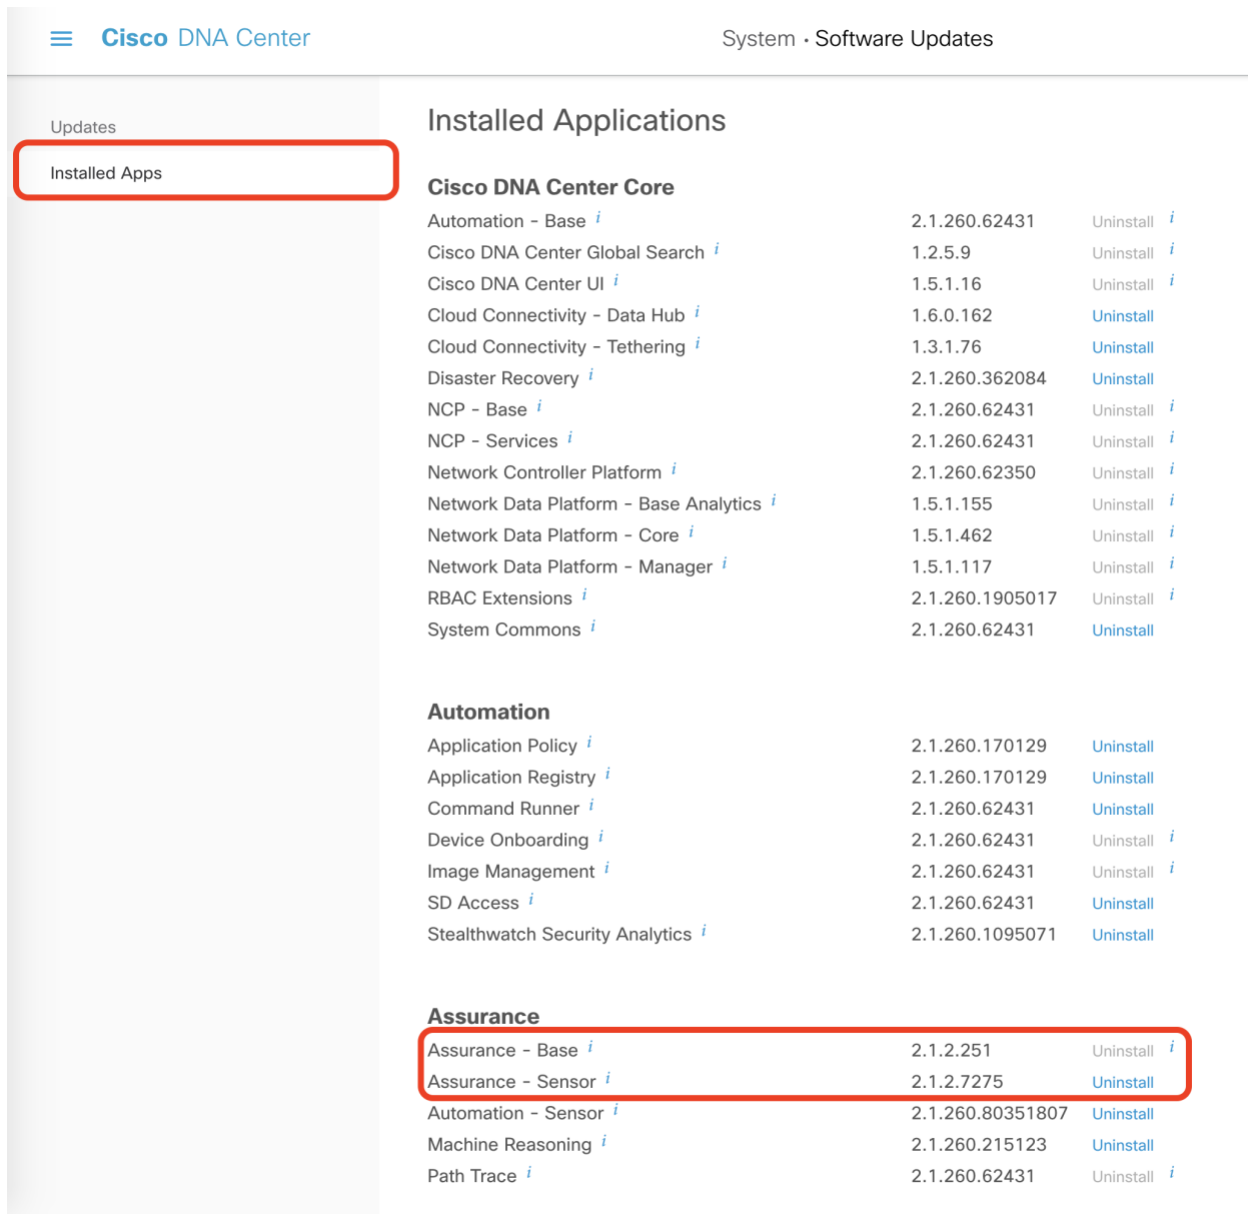

The screenshot shows the Cisco DNA Center interface. The top navigation bar includes the Cisco DNA Center logo and the path 'System · Software Updates'. On the left, a sidebar menu has 'Updates' and 'Installed Apps' (highlighted with a red box). The main content area is titled 'Installed Applications' and lists various software components. The 'Assurance' section is highlighted with a red box, showing the following packages:

Application Name	Version	Action
Assurance - Base	2.1.2.251	Uninstall
Assurance - Sensor	2.1.2.7275	Uninstall
Automation - Sensor	2.1.260.80351807	Uninstall
Machine Reasoning	2.1.260.215123	Uninstall
Path Trace	2.1.260.62431	Uninstall

Figure 1.
Location of Assurance – Sensor and Automation – Sensor packages

Aironet Active Sensor hardware

Description: The Aironet Active Sensor is a small-form-factor, dedicated hardware-based wireless sensor that can be powered in many different ways through a small sliding module that inserts into the sensor (**Figure 2.**).



Figure 2.
Aironet Active Sensor hardware

Technical specifications

- Purpose-built wireless sensor for Cisco DNA Assurance
- 2x2 radio with two spatial streams
- 802.11ac Wave 2 wireless capabilities
- Multiple power options:
 - 802.3af PoE module
 - Micro USB Type B connector (2.5A/5V)
 - AC wall socket adapter
- Small form factor (WxLxH):
 - 3.25 x 4.75 x 0.75 in. (85 x 119 x 24 mm)

Without a Power over Ethernet (PoE) module, power can be supplied from a local 2.5A/5V USB port, using a micro USB Type B connector. (There is a USB Type C connector, but it is dedicated for the PoE module connection.) Additionally, there are modules that allow for a direct AC power supply, as well as PoE operation (**Figure 3.**).

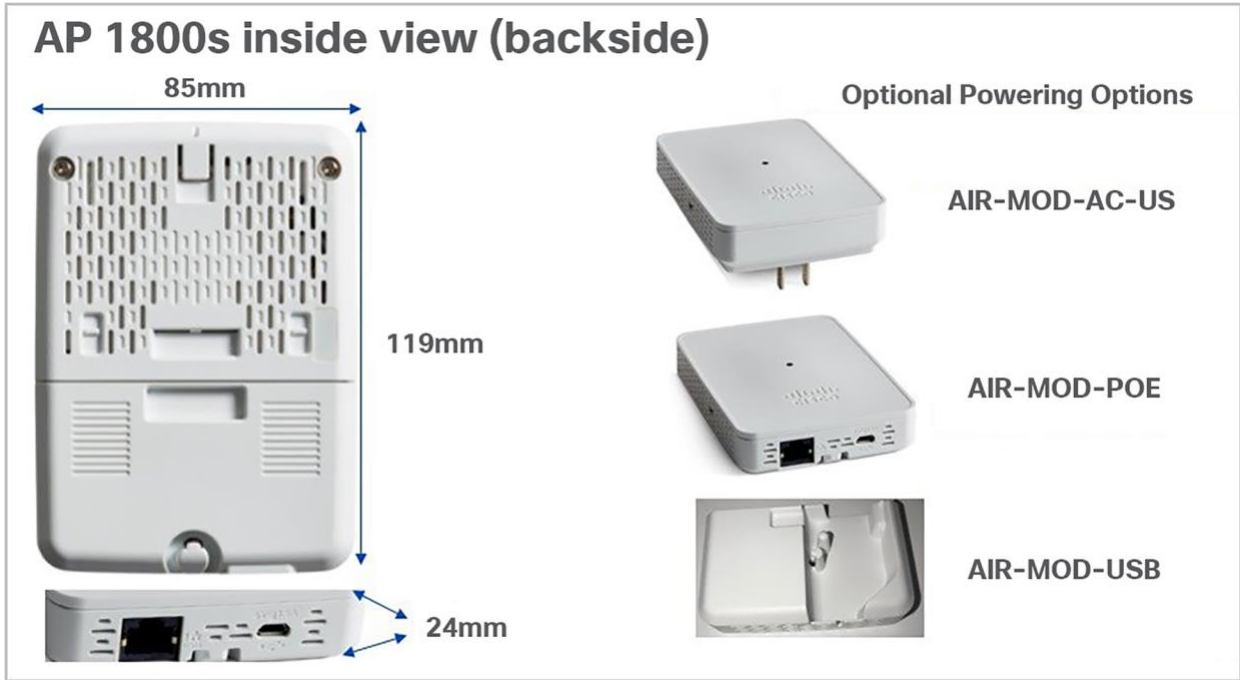


Figure 3.
Rear view of sensor and powering options

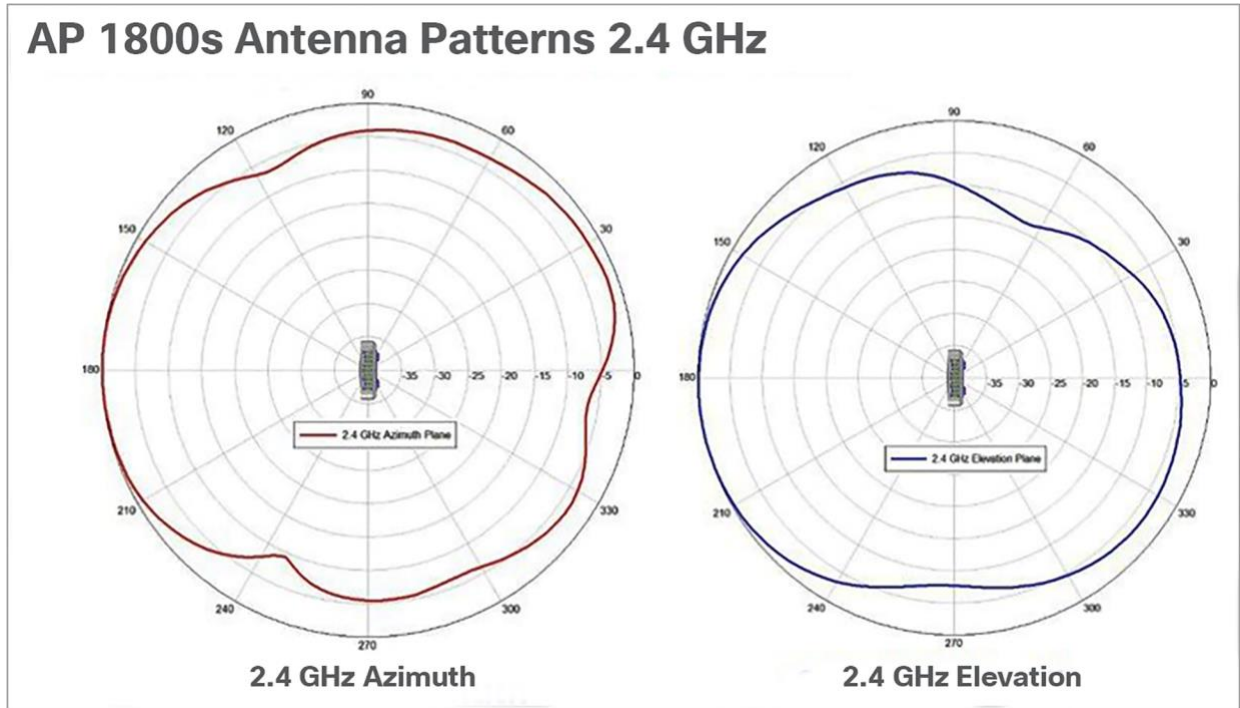


Figure 4.
Antenna patterns, 2.4 GHz

AP 1800s Antenna Patterns 5 GHz

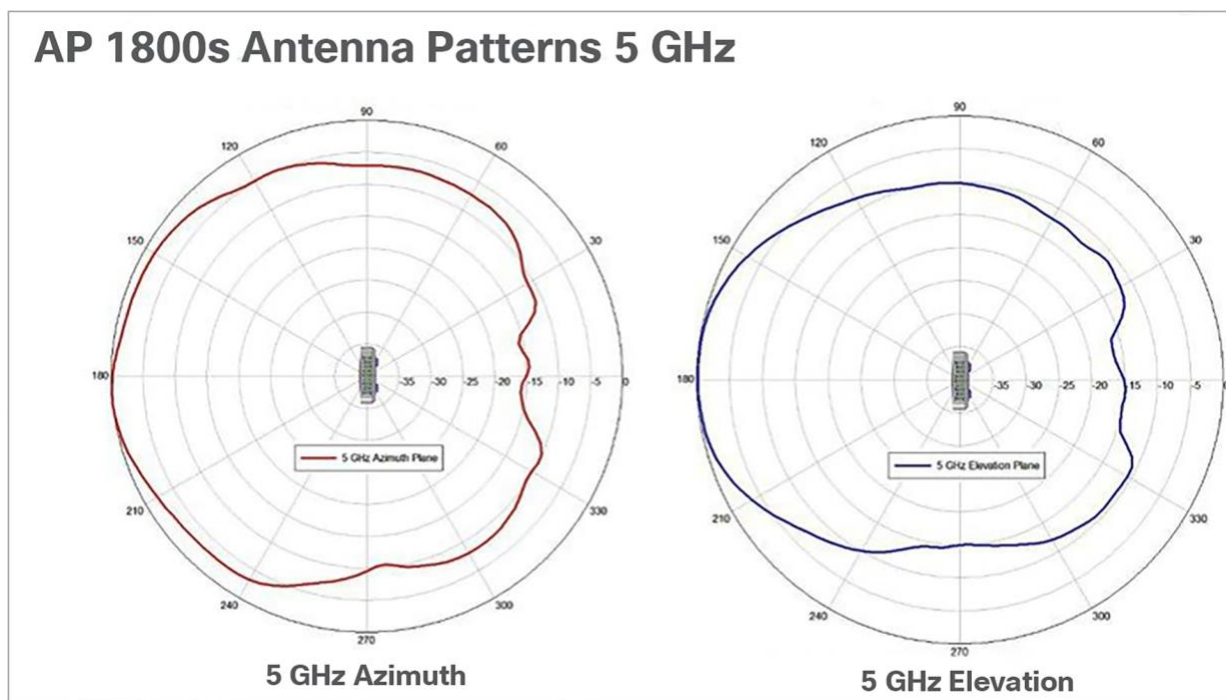


Figure 5.
Antenna patterns, 5 GHz

Table 2. Aironet Active Sensor and accessory product IDs

Product	Product ID
Aironet Active Sensor	AIR-1800S-x-K9
PoE with 1G Ethernet module	AIR-MOD-SPOE
USB adapter power module – US plug only	AIR-MOD-USB-US=
USB adapter power module – rest of world (includes bag of 5 international plugs)	AIR-MOD-USB-RW=
Wall-mount bracket kit	AIR-AP-BRAKET-NS
Aironet Active Sensor console cable	AIR-CONSADPT=
AC adapter power module	AIR-MOD-AC-US/CH/EU/IN/UK

Sensor hardware deployment

Description: The ideal deployment location for sensors is wall mounted at desktop height, between 22 and 47 inches (56 and 120 cm) from the floor. However, in addition to being wall mounted, the sensor can be mounted on a desk or ceiling.

- Due to its small size, the sensor uses a specially designed metal-based wall-mount bracket (part number AIR-AP-BRACKET-NS) (**Figure 6.**).

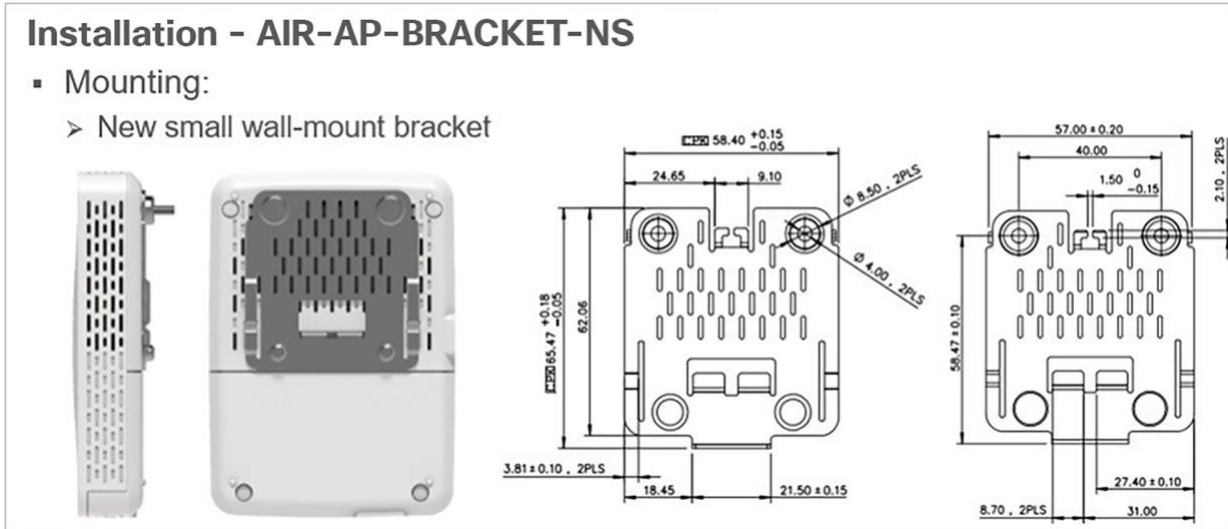


Figure 6.
Wall-mounting the sensor

The Aironet Active Sensor simulates a wireless client and automatically associates to the nearest access point (AP) based on the Received Signal Strength Indicator (RSSI), and can be configured to test up to five APs per test cycle consecutively. For example, if a single floor has 40 APs, the administrator should deploy at least 8 sensors to that floor to have maximum sensor coverage. By default, the sensor targets the user-defined SSID automatically based on whichever SSID has the highest RSSI; however, there is also an option to specify specific APs for the sensor to target (Discussed later in the deployment guide around Figure 78).

As shown in (**Figure 7.**) below, a typically sensor deployment should have between one to five APs per sensor.



Figure 7.
Sensor and AP floor map deployment

Sensor deployment checklist

This deployment guide will describe in detail each step in the deployment checklist shown in **(Figure 8.)**

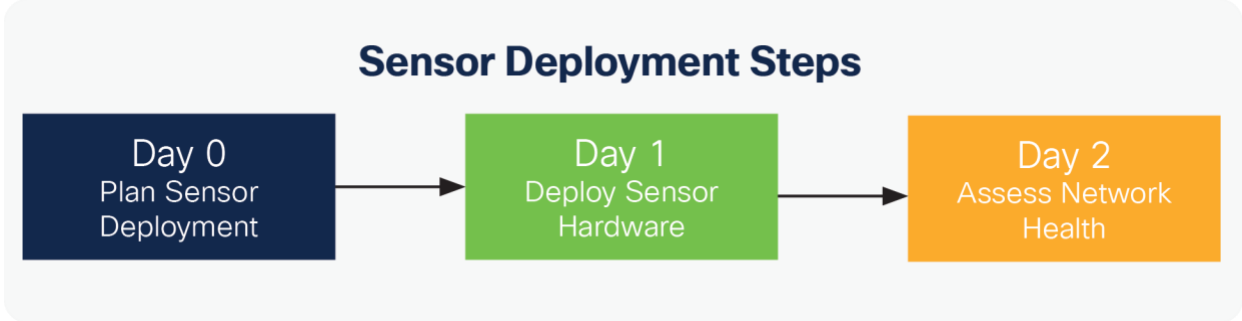


Figure 8.
Sensor deployment steps

Day 0: Plan sensor deployment

1. Plan the number of sensors that will be deployed per site and the location.
 - a. To determine the number of sensors to deploy and their position of deployment, we must consider the following.
 - i. During each test cycle, the sensor can test up to 5 surrounding APs with the highest RSSI. This means that we must first analyze each location's floor map to determine which potential sensor deployment locations will allow every AP on the floor to be tested.
 - ii. Determine the scope of your wireless tests from a frequency perspective, and take into consideration whether you plan to test just 2.4GHz, just 5GHz, or both. A 2.4GHz signal will have a further range compared to 5GHz, and the sensor deployment may differ based on how your network is configured.
 - iii. Pay attention to each floor's physical layout and where the RF signal can easily travel vs. not. For example, if your building has many solid walls or areas that easily reflect RF signals, take it into account during the planning phase. Consider visiting the potential sites of deployment and analyze whether you're able to see each of the broadcasted SSIDs/BSSIDs from each of the APs you'd like to test. If you're able to see all of these SSIDs/BSSIDs within the RSSI range you plan to configure, this could be an ideal location for sensor testing.
 - iv. Remember that the Aironet Active Sensor's goal is to test the wireless network from the perspective of a client. While all prior points are critical, it is also essential to place your sensors in a location where laptops or phones would typically be used. For example, placing a sensor in an area where a large amount of employees work would be more beneficial to understanding the effectiveness of your wireless network than compared to putting the sensor in an area where there is no one.
2. Configure the network infrastructure necessary for Sensor deployment and testing.
 - a. Create a VLAN planned for sensor use on a switch that can reach Cisco DNA Center.
 - b. Configure a Dynamic Host Configuration Protocol (DHCP) or DNS server for the created VLAN, and include Plug and Play (PnP) discovery method details (option 43 or pnpserver.<domain name>.com DNS entry, e.g., pnpserver.cisco.com) to allow the sensor to discover Cisco DNA Center during provisioning.
 - c. Optional planned PnP: Create and claim PnP profiles on Cisco DNA Center for the sensors you plan to install on day 1.
 - d. Prepare the sensor test target servers such as AAA, email, and FTP, and ensure that the sensor device network has direct access to these.
 - e. Create and deploy a sensor test template to the desired sites in Cisco DNA Center.
 - f. Option 1 – wired backhaul: Set up a wired network between the sensor and Cisco DNA Center.
 - i. Note: 802.1x wired backhaul is supported, for more information visit the "Create a sensor backhaul profile in Cisco DNA Center" section.
 - g. Option 2 – wireless backhaul: Create a CiscoSensorProvisioning SSID on the wireless controller.
 - i. Note: 802.1x wireless backhaul is supported, for more information visit the "Create a sensor backhaul profile in Cisco DNA Center" section.

ii.

Day 1: Deploy sensor hardware

1. Install the sensors in the planned locations.
 - a. Connect the sensors through PoE, USB, or AC (depending on whether you're planning to use a wired or wireless backhaul) to have them begin PnP discovery to Cisco DNA Center once they receive IP addresses from the DHCP server.
 - b. Once the sensor appears in the PnP page of Cisco DNA Center, claim the sensor to a site and verify in the sensor list page that the claim was successful.
 - c. Optional image upgrade: If the sensors are not running the latest image, mark the latest image within the Software Images page as the golden image, then upgrade the sensors through the Inventory page.
 - d. If not already assigned in day 0, create and assign test templates to specific sites or sensors to begin testing.

Day 2: Assess network health


1. Observe the sensor test results through the Wireless Sensors dashboard and Sensor 360 page.
 - a. Troubleshoot any sensor issues using the Sensor 360 page's event log feature.

Sensor data flow

Description:

- This section covers a new concept known as the **backhaul**, which is the communication network the sensor uses to communicate with Cisco DNA Center. This is described in detail in the following sections.
- The sensor receives the test suite configuration directly from Cisco DNA Center (**Figure 9.**).
- Sensor test results traverse directly from the sensor to Cisco DNA Center (**Figure 10.**).

Sensor can Automatically Download New Test Config from Cisco DNA Assurance

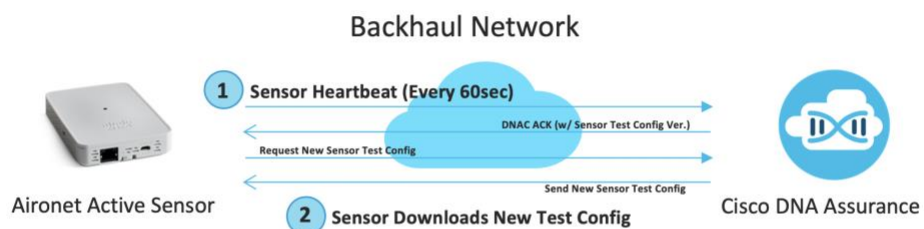

To check the sensor test configuration downloaded from Cisco DNA Assurance:

```
# show dot11 sensor test config
```

Sensor will automatically pull a new configuration if the heartbeat returned from Cisco DNA Assurance indicates a new test configuration version.

Figure 9.

Sensor test configuration data flow

Sensor Communicate direct with Cisco DNA Center

- Sensor communicate directly with Cisco DNA Center for its operations
 - http (TCP 80) - PNP Discovery. Essential to register sensor into Cisco DNA Center
 - https (TCP 443) - PNP registration, Backhaul Channel
 - Heartbeat between Sensor and Cisco DNA Center
 - Test config download and Test result upload
 - Image Upgrade



Figure 10.

Network port between sensor and Cisco DNA Center

Sensor provisioning

Description: The sensor is not an AP, but rather a dedicated wireless client simulating real client behavior; therefore, it actually operates independently from the wireless controller. Instead, the sensor depends on Cisco DNA Center for provisioning, configuration, operation, monitoring, and upgrade.

- **DHCP option 43:** Through the sensor's built-in PnP agent, the device will automatically connect to Cisco DNA Center by leveraging the DHCP option 43 field as part of DHCP OFFER from the DHCP server.
 - **Note:** The option 43 string contains a list of parameters that the sensor's PnP agent uses to discover Cisco DNA Center. One of these parameters is the enterprise IP address of Cisco DNA Center.
- **DNS:** If the sensor fails to receive the IP address of Cisco DNA Center from the option 43 string, the sensor's PnP agent will make a DNS query to the predefined hostname, PNPSEVER.
 - **Note:** If a domain name is configured within the DHCP server, the DNS query will use that domain name and make a Fully Qualified Domain Name (FQDN) query.
 - **Example:** If the domain name is configured to be cisco.com, the DNS query will be to PNPSEVER.cisco.com.
- **Note:** The last resort is a manual command entered using the Command-Line Interface (CLI) through the console or Secure Shell (SSH) protocol.

Preparation: Network connectivity between sensors and Cisco DNA Center

For correct sensor operation, direct network connectivity is required between the sensor and Cisco DNA Center. This network connectivity from the sensor is called the **backhaul interface** (which can be wired or wireless). Sensors use this backhaul interface to communicate with Cisco DNA Center, which requires direct connectivity using HTTP (TCP 80) and HTTPS (TCP 443). A proxy is not supported.

Wired backhaul environment

When the sensor is equipped with a PoE module (AIR-MOD-POE=), the sensor can receive power from the PoE switch port using the 802.3af standard. The sensor can also establish a connection to Cisco DNA Center through this wired PoE interface using the wired IP address for communication. This type of sensor network configuration is called **wired backhaul**.

Wireless backhaul environment

If the sensor either (1) does not receive an IP address from the wired interface, or (2) does receive an IP address from the wired interface but cannot discover Cisco DNA Center, it switches to the **wireless backhaul** as a second option to search for and connect to Cisco DNA Center (**Figure 11.**). For this wireless backhaul option, the administrator must assign a sensor profile during the sensor PnP claiming step. In an SD-Access/fabric environment, the fabric edge that serves the sensor connection has a Maximum Transmission Unit (MTU) that is automatically configured to 9100.

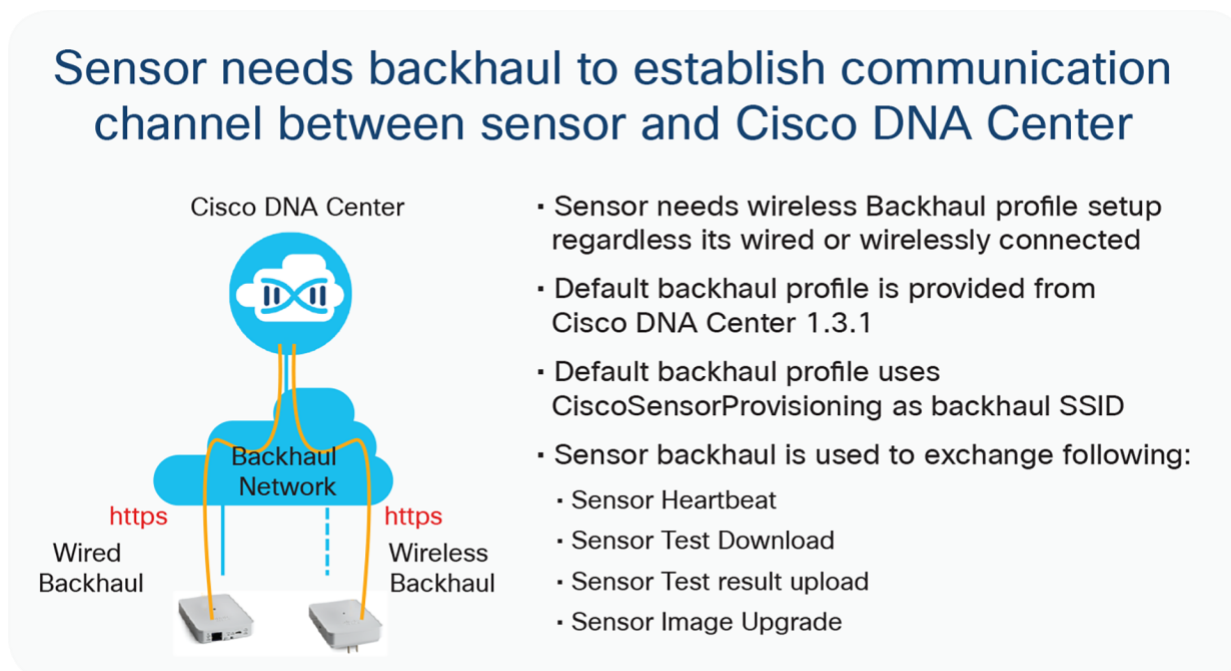


Figure 11.
Sensor backhaul network types

Note: The wireless backhaul shares the radio interface with the wireless testing radio; however, if testing is going on for the 2.4-GHz radio, the backhaul will change to the 5-GHz radio and vice versa.

Day-0, factory-installed SSID between sensor and Cisco AP

Out of the box, the sensor must be able to associate and communicate with the Cisco DNA Center. This is relatively easy if the sensor has a wired Ethernet connection. If it does not have an Ethernet connection but only the power to boot up, the sensor cannot connect to any AP.

To solve this problem, the AP and sensor use a factory-installed SSID named **CiscoSensorProvisioning**. This SSID is known to both the wireless controller and the sensor from a factory shipment level.

- The CiscoSensorProvisioning SSID is designed to connect the sensor to Cisco DNA Center.
- The CiscoSensorProvisioning SSID uses 802.1X and Extensible Authentication Protocol – Transport Layer Security (EAP-TLS) as its sensor device authentication and encryption mechanism.

- The wireless controller enables the CiscoSensorProvisioning SSID and assigns it to one of the first 16 WLAN SSIDs.
- The CiscoSensorProvisioning SSID can be used in Cisco FlexConnect® environments, but in such cases, it can be used only in a central switching SSID.

Configuring the sensor backhaul SSID for AireOS WLCs

1. Create a backhaul SSID with the predefined CiscoSensorProvisioning name (**Figure 12.**)
 - This is a special-purpose, hidden SSID that is designed to connect to the sensor wirelessly.
 - The sensor can connect to the Cisco AP and use it to reach Cisco DNA Center.
 - The CiscoSensorProvisioning SSID uses any available WLAN ID from among the first 16 WLAN IDs. If WLAN IDs 1 to 16 are all in use, CiscoSensorProvisioning SSID creation fails

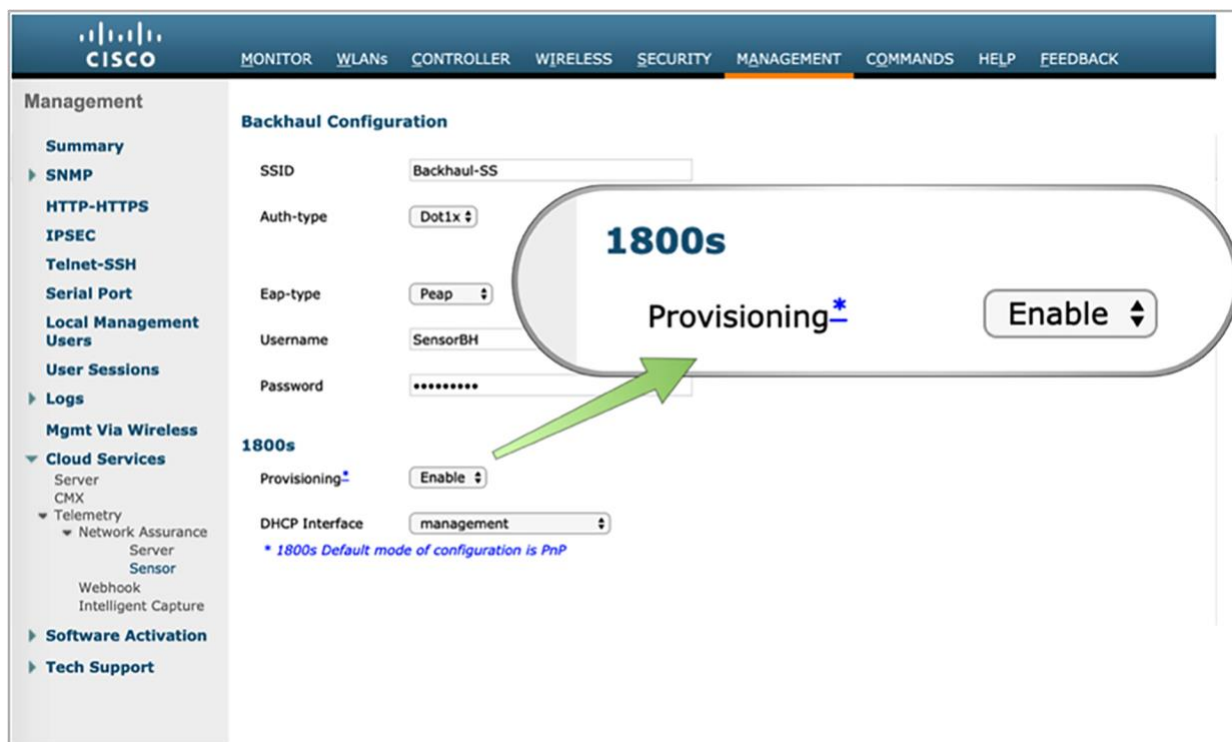


Figure 12.
Aironet Active Sensor day-0 provisioning configuration on the WLC

Note: Disregard the “Backhaul Configuration” section within the controller; this portion is configured from Cisco DNA Center

- a. Enable the local EAP server with EAP-TLS to authenticate the sensor’s embedded certificate (**Figure 13.**).

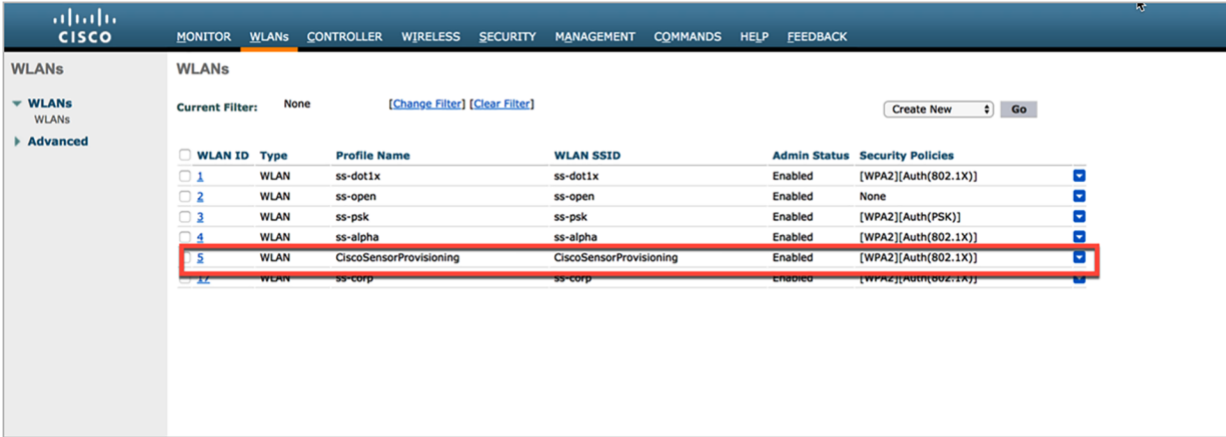


Figure 13.
Aironet Active Sensor provisioning SSID

Note: This SSID enables a local authentication profile that is created automatically when you specify the CiscoSensorProvisioning SSID.

- b. Ensure that the SSID and local authentication profiles have now been created (**Figure 14.**).

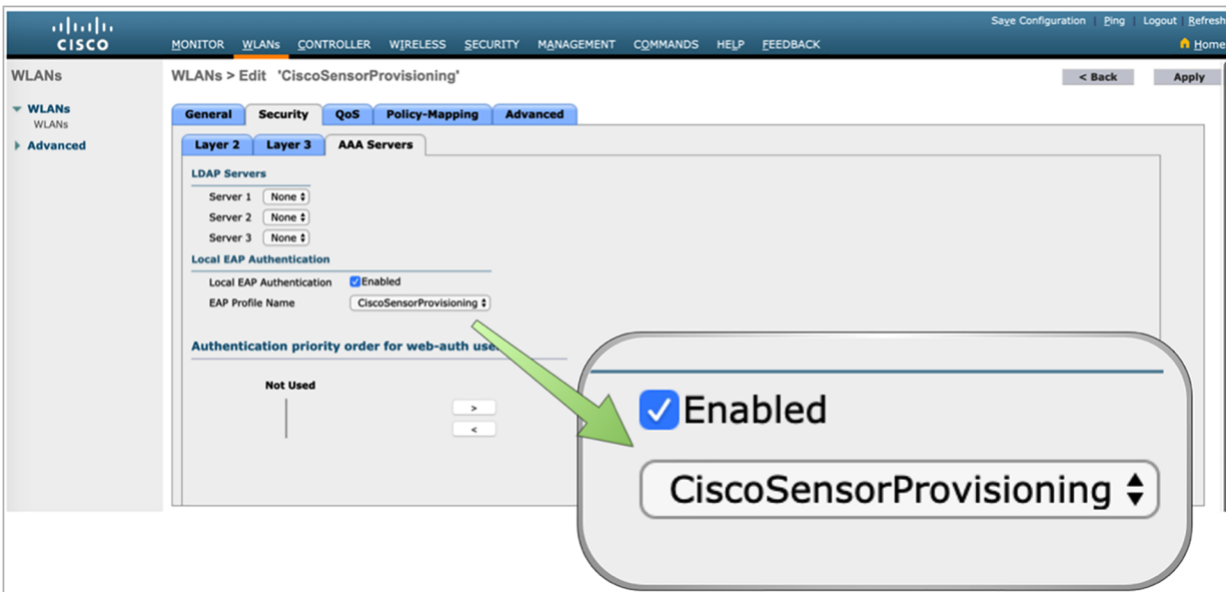


Figure 14.
Local authentication profile assigned to the CiscoSensorProvisioning SSID

Profile Name	LEAP	EAP-FAST	EAP-TLS	PEAP
Local1x	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
cisco6-peap	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
CiscoSensorProvisioning	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Figure 15.
Local authentication profile for Aironet Active Sensor provisioning

Notes:

- The sensor authenticates with the controller using a built-in Manufacturer Installed Certificate (MIC) with EAP-TLS (**Figure 15.**); however, there is an option to use a custom certificate by defining and pushing a new backhaul profile in Cisco DNA Center.
- The CiscoSensorProvisioning SSID does not broadcast the SSID over the air; instead, it's hidden by default, but the sensor can still discover and connect to it.
- The network administrator can allocate the CiscoSensorProvisioning SSID to various AP groups, making the CiscoSensorProvisioning SSID available only to specific locations.

Configuring the sensor backhaul SSID for Cisco IOS XE WLCs

- c. For Cisco Catalyst® 9800 Series devices, the CiscoSensorProvisioning SSID is enabled from Configuration > Services > Cloud Services > Network Assurance > Provisioning: ENABLED (**Figure 16.**).

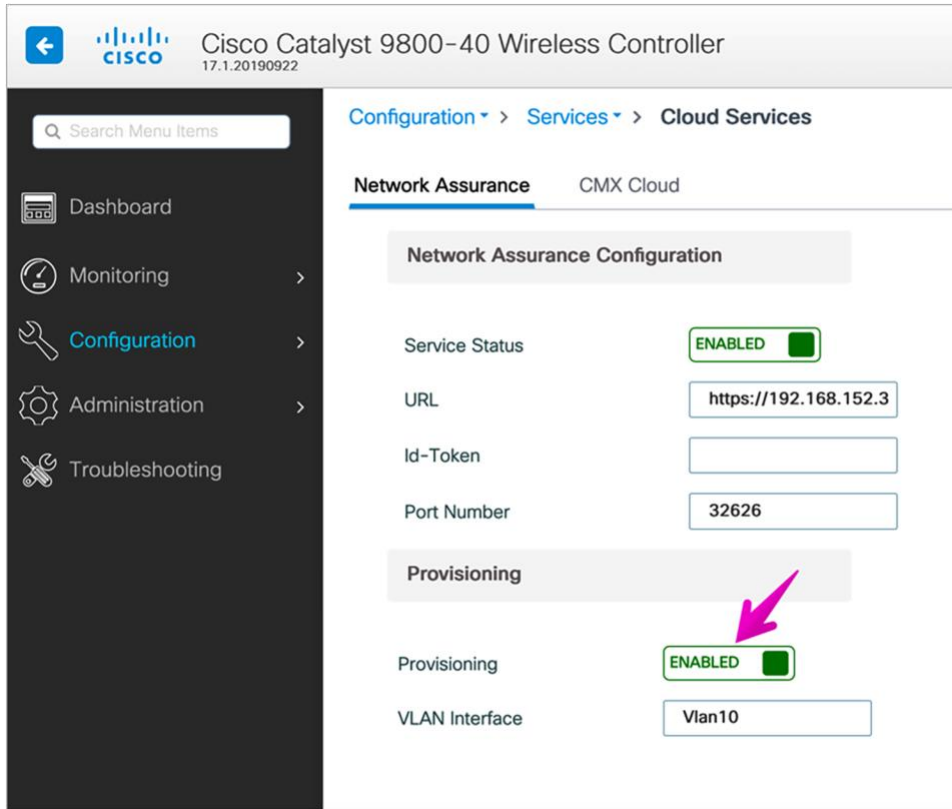


Figure 16.
Location of Provisioning button on the 9800 Series WLC

- d. After provisioning is enabled, the network administrator can view the newly added SSID from Configuration > Tags and Profiles > WLANs (**Figure 17.**).

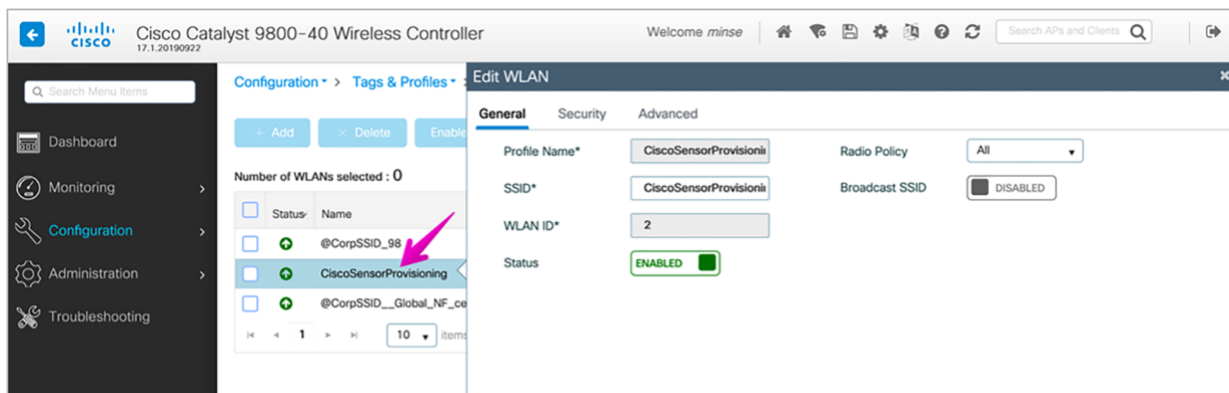


Figure 17.
Viewing the CiscoSensorProvisioning WLAN

Note: Unlike AireOS, the Cisco IOS® XE-based Cisco Catalyst 9800 Series does allow configuration changes for the CiscoSensorProvisioning SSID. However, we do not recommend that you change the configuration, as this can break compatibility with the sensor.

Certificate management with SCEP

Description: The Simple Certificate Enrollment Protocol (SCEP) provides two main advantages during the device certificate enrollment process. The first is that it allows network devices to easily enroll for a certificate using a URL and a one-time password (the shared secret is also supported but is much less secure) to communicate with a Public Key Infrastructure (PKI). This process is automatic as opposed to its usual manual process, which significantly saves administrative time by speeding up the device certificate enrollment process. The second is that automating this process removes any human intervention during the handling of security certificates, which avoids these certificates being exposed to machines or humans, providing a genuinely secure provisioning process.

There is the ability to create a SCEP profile directly on the sensor page. This gives the Aironet Active Sensor devices the ability to automatically pull these certificates directly from Cisco DNA Center and provision themselves. This automated process is especially useful for large-scale deployments, as it eliminates all manual effort.

1. SCEP profiles can be created and managed by navigating to the hamburger menu and clicking Assurance > Sensors and then choosing Setting > SCEP Profiles > Add SCEP Profile (**Figure 18.**).

Create SCEP Profile

SCEP Profile Name*
Sensor Profile

Content:

URL Base*
scep.example.com

Common Name (email for Microsoft)*
scep@example.com

State
CA

Country Code
US

Locality
SJ

Organization
Cisco123

Organization Unit
Cisco123

Email

Server certificate fingerprint

Cancel Save

Figure 18.
Create SCEP Profile page

Note: For more information about SCEP, refer to the following link: https://cs.co/scep_config.

Cisco DNA Center discovery from the sensor

First, the sensor must learn the Cisco DNA Center IP address. It can do so via the following methods.

- DHCP option 43
- DNS discovery
- Configuration through the sensor's CLI using the console cable (AIR-CONSADPT=) or SSH

DHCP option 43

The most common method of sending the IP address of Cisco DNA Center to the sensor is by packaging the IP address as part of the DHCP IP addressing process.

The network administrator uses the DHCP option 43 field to add the Cisco DNA Center IP address. The network administrator enters the following ASCII-formatted string into the DHCP option 43 field:

```
5A1N;B2;K4;I<Cisco DNA Center IP Address>;J80
```

When the sensor receives its own IP address from the DHCP server, it also gets the Cisco DNA Center IP address through the DHCP option 43 field.

Sample configuration from a Cisco IOS device:

```
ip dhcp pool vlan30
  network 30.30.0.0 255.255.0.0
  default-router 30.30.0.1
  dns-server 100.100.100.11
  option 43 ascii 5A1N;B2;K4;I100.100.100.80;J80
```

By default, Cisco DNA Center uses a self-assigned certificate when initially brought up; however, there is the option to include a 3rd party certificate to the application. In the case that a 3rd party certificate was added to the application you need to look out for the following scenario to avoid any issues. If the Subject Alternative Name (SAN) field in the new certificate installed on Cisco DNA Center does not match the method that is given to the Aironet Active Sensor, you may run into issues during provisioning.

For example, if option 43 is used to provide PnP details to the sensor, but only the Cisco DNA Center IP address is provided in the PnP details (and the new certificate is missing the IP address in the SAN field), the mismatch will cause issues when the sensor discovers Cisco DNA Center.

To ensure this issue not hit, make sure that the SAN field in the new certificate contains the IP address. Alternatively, change the method used to provide PnP details for the Aironet Active Sensor.

For example, if only the IP address was used previously, change the option 43 field from:

```
option 43 ascii "5A1D;B2;K4;I<IP Address>;J80"
to
option 43 ascii "5A1D;B1;K4;I<FQDN>;J80"
```

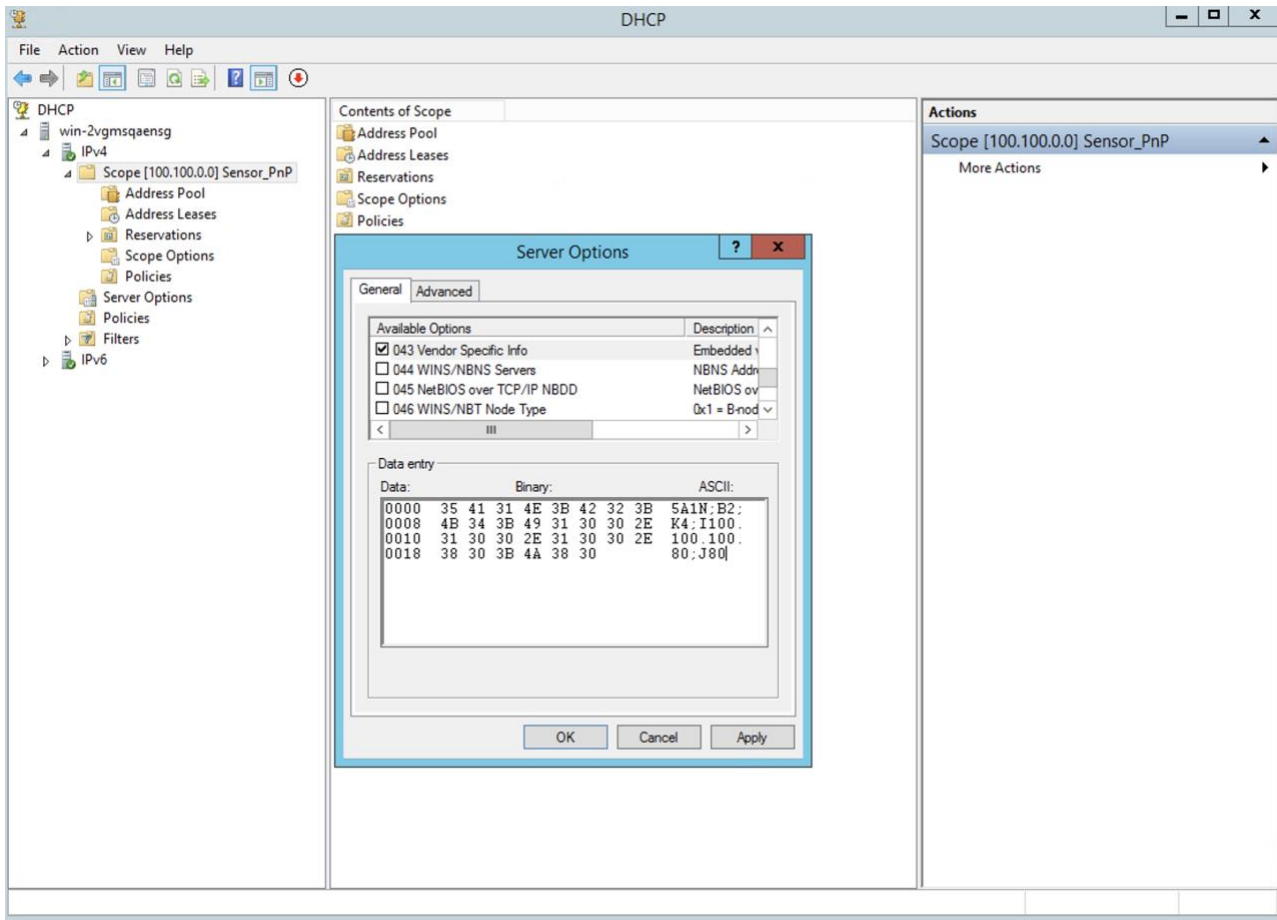



Figure 19.
Option 43 sample configuration on Windows Server

1. For Infoblox, under Data Management > DHCP > Networks, choose the IPv4 network and click Edit (**Figure 20.**).

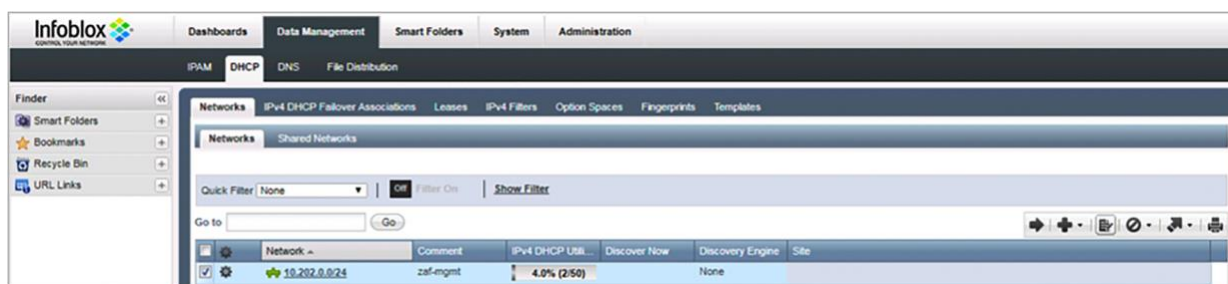


Figure 20.
Infoblox DHCP server GUI

- a. In the Custom DHCP options area, choose DHCP and vendor-encapsulated-options (43) string. Enter the option 43 ASCII string, such as 5A1N;B2;K4;I192.168.139.141;J80 (**Figure 21.**).

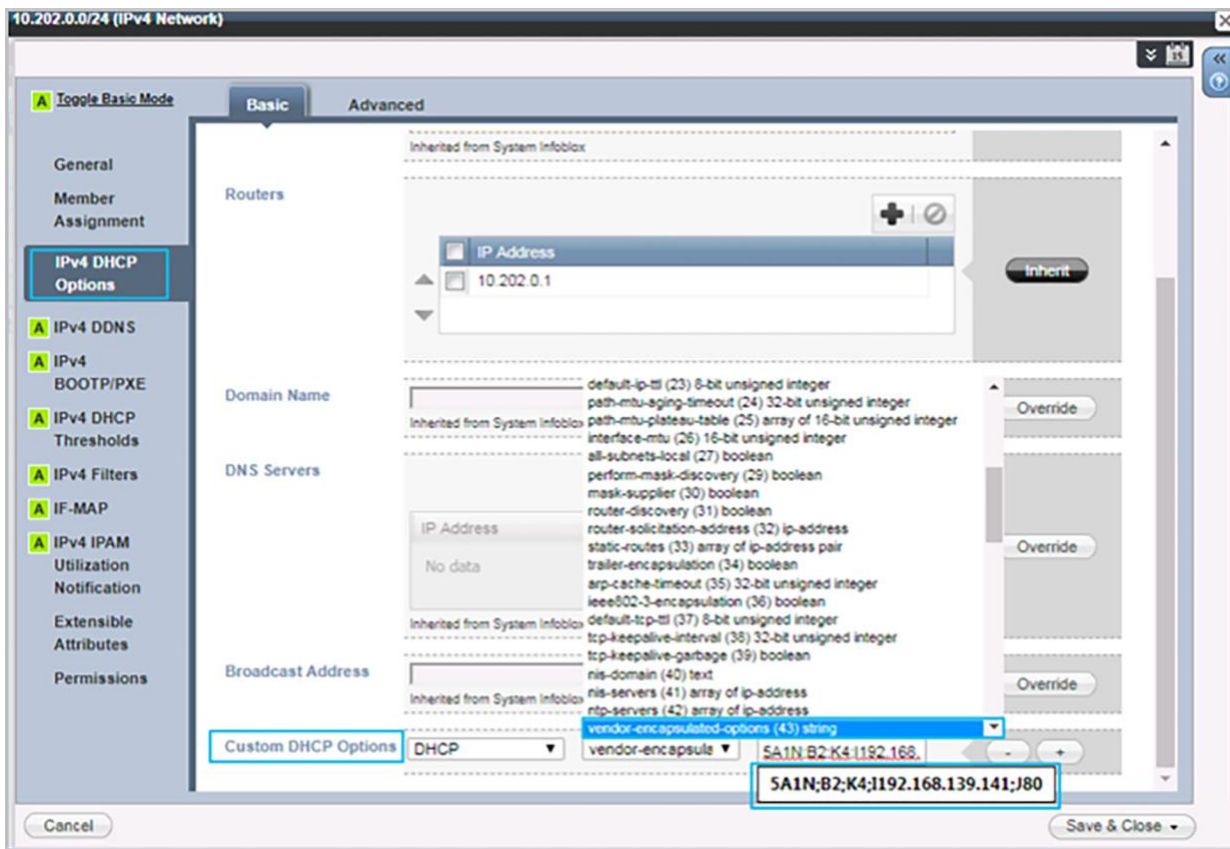


Figure 21.
Creating an option 43 string on an Infoblox DHCP server

Note: Make sure to use uppercase letters to configure the option 43 field.

- b. Conditional: If the DHCP option 43 field is already used for another purpose (such as to send the wireless controller IP address to the AP), you can configure the DHCP server to return a different option 43 message based on the client device type (**Figure 22.**)
- To identify the client device type, validate the identifier message (DHCP option 60) within the DHCP request packet from the client (in this case, the Aironet Active Sensor).

If DHCP Option 43 field is already used for WLC Provisioning, have the DHCP server send a conditional option 43 return per the VCI* string from the sensor

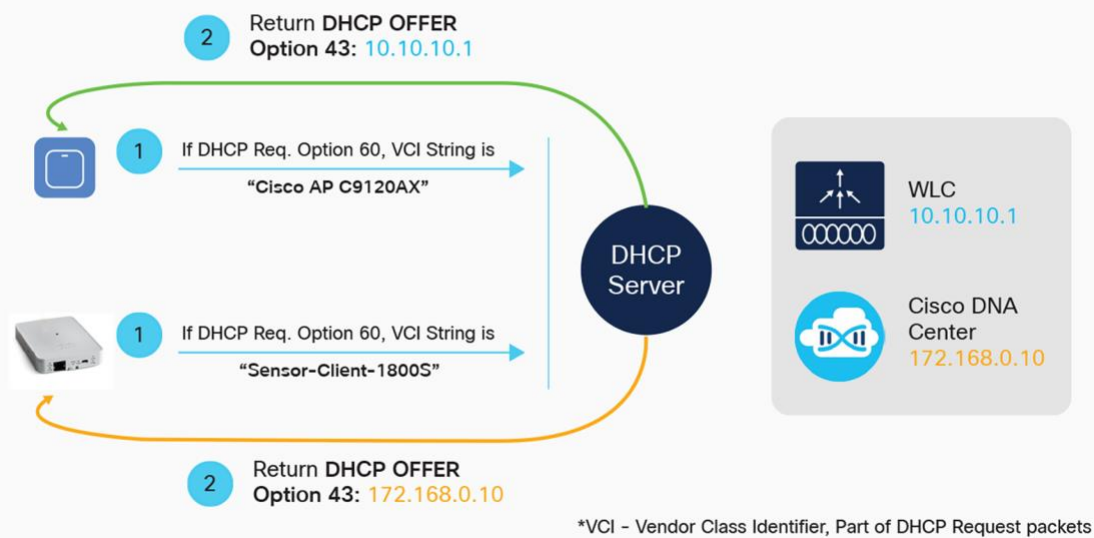


Figure 22.
DHCP option 43 and option 60 workflow

When the sensor sends the DHCP request, it always includes the DHCP option 60 field, the Vendor Class Identifier (VCI). The VCI is a text string that uniquely identifies the vendor of the DHCP client device. The Aironet Active Sensor's VCI string is Sensor-Client-1800S.

To use the unique VCI string, the DHCP server administrator must set up special conditional handling of the option 43 return field. Based on the incoming VCI string, the DHCP server can return different IP addresses.

For example, if the DHCP client includes the VCI string Cisco AP c3800, it means the DHCP client is a Aironet 3800 Series AP and needs to retrieve the Cisco wireless controller's IP address part of the option 43 message. If the DHCP request message includes the VCI string Sensor-Client-1800S, it means the client device is an Aironet Active Sensor, and the option 43 field from the DHCP server is the Cisco DNA Center IP address.

You can find different VCI string examples at https://cs.co/vci_strings.

To configure your window's server to redirect your sensor to Cisco DNA Center conditionally through the VCI string sent by the device, follow the steps below:

The steps below assume that you've already created (1) a DHCP pool used by both sensors and APs, and (2) an option 43 scope used by the APs for redirection to anything other than the Cisco DNA Center we would like to direct our sensors to.

2. Open your Window's DHCP server, right click on **IPv4**, then click on **Define Vendor Classes (Figure 23).**

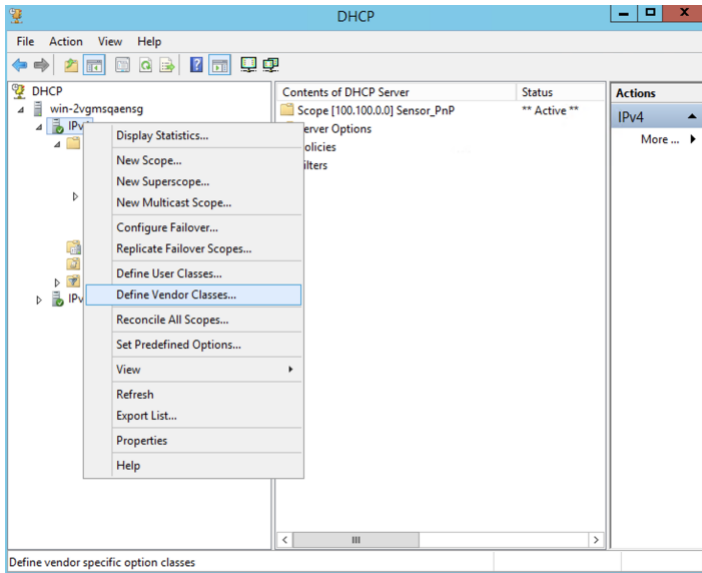


Figure 23.
Define Vendor Classes location on Windows Server

3. Click on **Add**, enter the following, then click **OK**, then **Close (Figure 24).**
- Display Name:** Any text name to used to identify the DHCP Vendor Class
 - Description:** Information regarding the DHCP Vendor Class
 - ASCII:** The predefined VCI string of the device. In our case, the Aironet Active Sensor's VCI strings is "Sensor-Client-1800S".

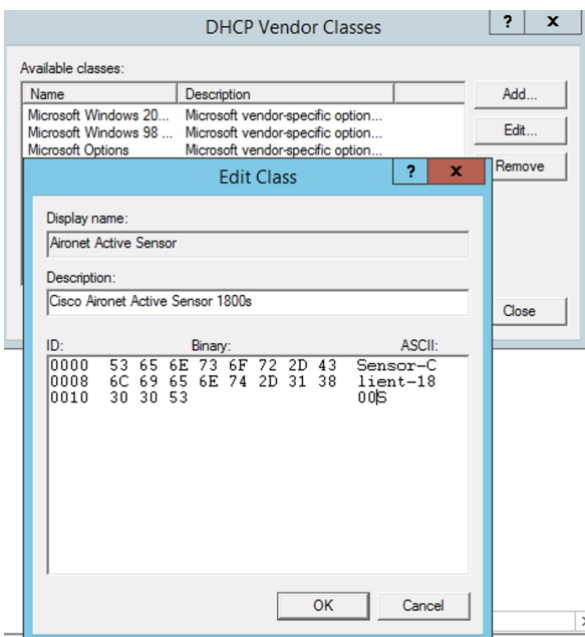


Figure 24.
Define Vendor Classes location on Windows Server

4. Right click on IPv4, then **Set Predefined Options**, then open the **Option class** drop down menu and select the **DHCP Vendor Class** you've created the step prior then click **Add (Figure 25.)**

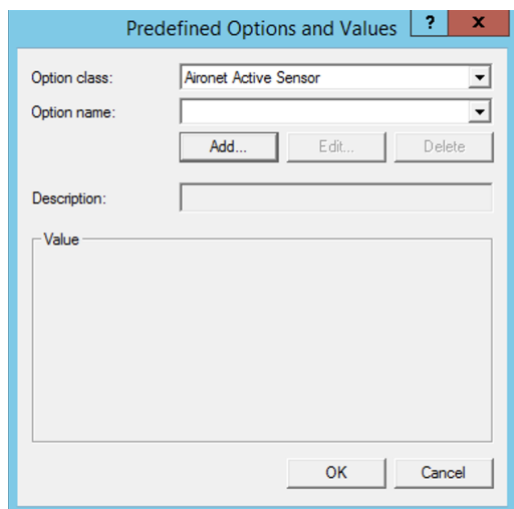


Figure 25.
Define Vendor Classes location on Windows Server

5. A **Change Option Name** dialog box will appear; enter the following and click **OK (Figure 26.)**
 - a. **Name:** Any text used to identify the Option Type.
 - b. **Data type:** String
 - c. **Code:** 43
 - d. **Description:** Information regarding the Option Type.

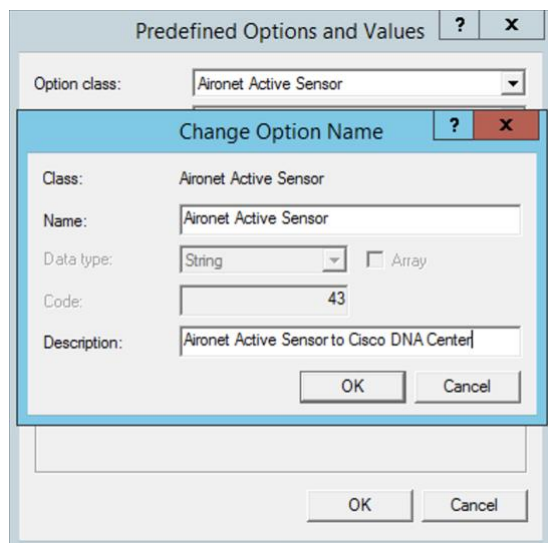


Figure 26.
Define Vendor Classes location on Windows Server

6. Within the **String** input field, enter the following: 5A1N;B4;K4;I<Cisco DNA Center IP>;J<Port Number>, then hit **OK** (**Figure 27.**).
 - a. **Note:** Refer to the DHCP Option 43 section later in this document for more information regarding option 43 PnP discovery.

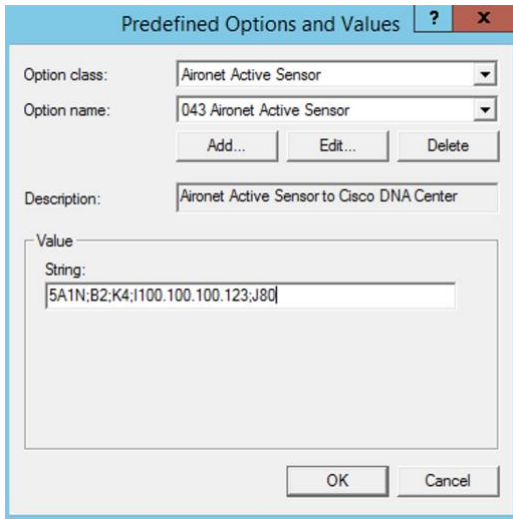


Figure 27.
Define Vendor Classes location on Windows Server

7. Under your DHCP IP Scope, right click on **Scope Options** and a **Scope Options** dialog will appear (**Figure 28.**).
 - a. Click the **Advanced** tab, then open the **Vendor Class** drop down menu and select your sensor vendor class name and hit the check box under the **Available Options** header then click **OK**.

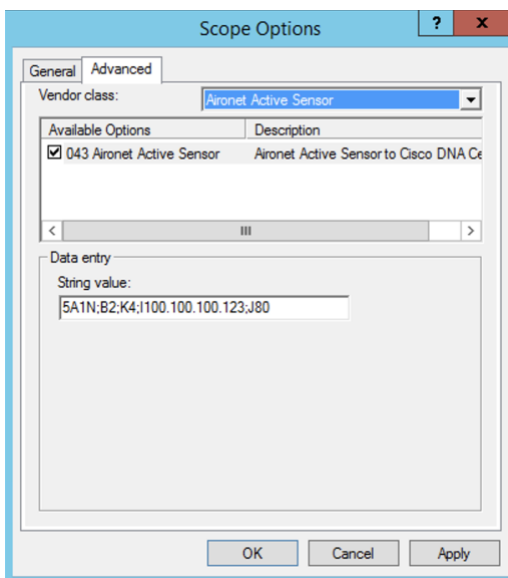


Figure 28.
Define Vendor Classes location on Windows Server

- Within the **Scope Options** directory, and under the **Option Name** header, a custom option 43 field for the Aironet Active Sensor should've now appeared, and you've now completed configuring the conditional option 43 redirection through utilizing the device side VCI string (**Figure 29.**).

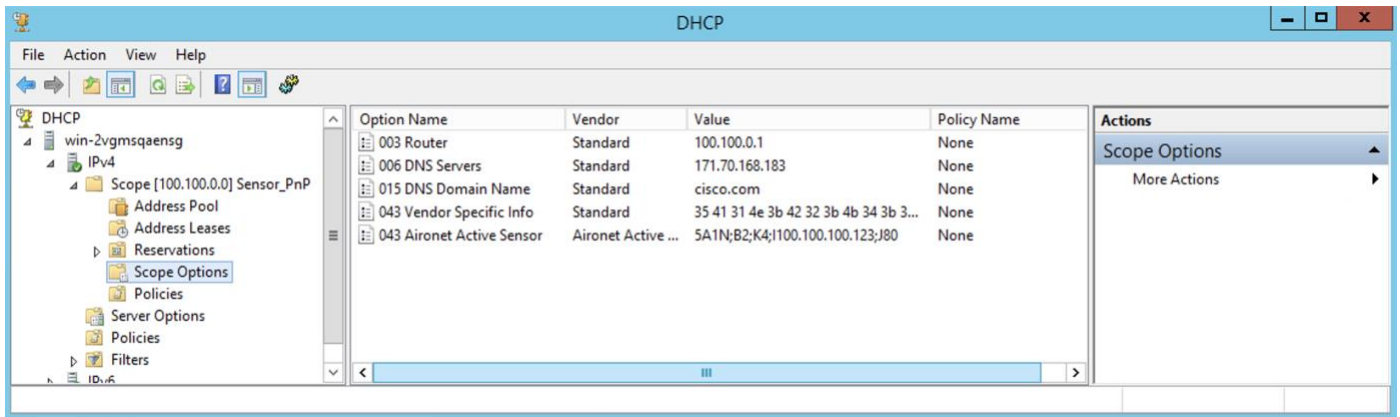


Figure 29.
Define Vendor Classes location on Windows Server

In addition to option 43, if the sensor has an 8.7.258 image, the sensor requires the Network Time Protocol (NTP) server IP address. The DHCP server includes the NTP server IP address in the option 60 field. This information is not required if the sensor software is 8.8.261 or later, because the NTP server information is transferred as part of the sensor PnP provisioning process.

For information about DHCP options for PnP, see https://cs.co/dhcp_option_43.

Disclaimer: If your Cisco DNA Center (version 1.3.3.0 or above) is configured with **only** a domain name, and your Aironet Active Sensor(s) are running an image earlier than 1.3.1.0, follow the steps below to ensure that the sensor's PnP onboarding is successful.

- Create a DNS entry for "data.<FQDN>" (i.e., data.citixs.com) and configure the resolution IP to be the same IP as what the "dnac.<FQDN>" the string within your PnP option 43 string (i.e., option 43 ASCII 5A1N;B2;K4;ldnac.citixs.com;J80) would resolve to.

Note: The above is not applicable if your Cisco DNA Center's certificate's common name contains an IP address.

DNS-based Cisco DNA Center discovery

- You can create a host record on the DNS server for the domain with the name PNPSEVER and the IP address of Cisco DNA Center (Figure 30).
- The sensor uses the DHCP received domain name to create a FQDN and make a **pnpserver.domainname.com** query to the DNS server for the Cisco DNA Center IP address.
 - If Cisco DNA Center has a custom or Certificate Authority (CA) signed certificate, the certificate must contain the PnP FQDN string in the SAN DNS entries. Make sure Cisco DNA Center has a domain name configured, because if Cisco DNA Center is installed without a domain name, DNS-based discovery will fail.

Note: Make sure the IP DHCP pool has the dns-server (option 6) and the domain name (option 15) configuration.

For more information on DNS name-based discovery, please visit <https://cs.co/pnp-solution-guide>.

Example:

```
ip dhcp pool vlan30
network 30.30.0.0 255.255.0.0
```



```
default-router 30.30.0.1
domain-name cisco.com
dns-server 100.100.100.11
```

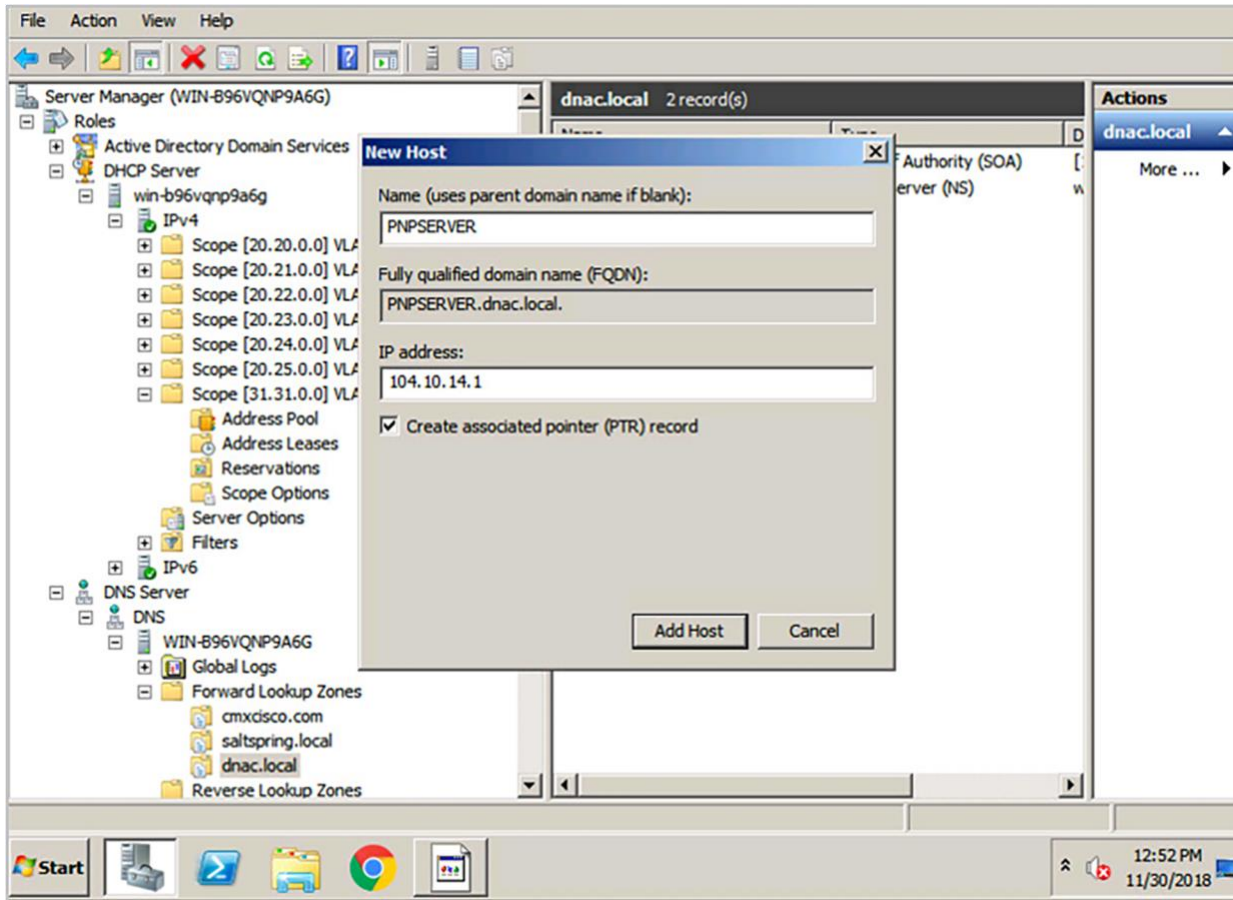


Figure 30.
DNS configuration – Windows Server

Cisco DNA provisioning through the CLI

Starting with Aironet Active Sensor Software Release 8.8.257.0, you can configure Cisco DNA Center manually through the sensor CLI.

1. Connect the sensor through the special console cable (AIR-CONSADPT=) (**Figure 31.**).
 - a. Log in to the sensor with the default username and password (Cisco/Cisco).
 - b. Enter privileged mode with the prompt (#) and then enter the following command:

```
config dot11 sensor pnp ip <ip address of Cisco DNA Center>
```

Example: config dot11 sensor pnp ip 100.100.100.80



Figure 31.
Sensor console connector

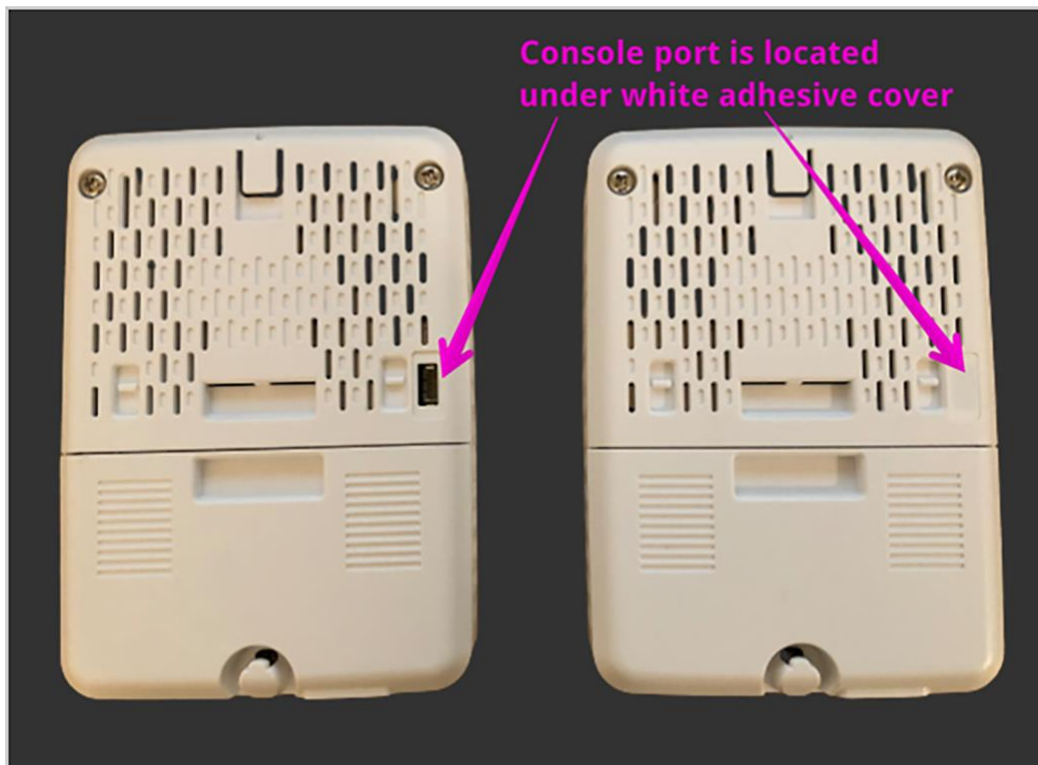


Figure 32.
Location of console port in back of sensor

If the sensor is running Aironet Active Sensor Software Release 1.3.3 or later, day-0 SSH is available. Day-0 SSH offers remote SSH access to sensors, but it doesn't allow privileged mode access.

The sensor's console port is located under the white adhesive cover (**Figure 32.**).

- c. To provision Sensor to Cisco DNA Center manually using CLI, login with the following credentials:
 - i. Sensor Version 2.1.2 & above: (sensor/password)
 - ii. Sensor Version 2.1.1 & below: (Cisco/Cisco)
- d. Upon successful login, enter the following command:

```
config dot11 sensor pnp ip <Cisco_DNA_Center_IP_address>
```

This feature is useful when the sensor is deployed onsite without staging, or when it is reset to the factory default. The network administrator can find the sensor's IP address by using the Cisco Discovery Protocol neighbor details, and SSH into the sensor and Cisco DNA Center IP address.

e. Similarly, to configure the NTP IP address, enter:

```
configure dot11 sensor ntp ip <NTP_server_ip_address>
```

Note: Typically, you don't need to configure NTP, because the NTP IP address can be provided as part of the provisioning process, starting with the 8.8.261 image.

Connecting your sensor to the network

The sensor requires one logical interface, the special-purpose **backhaul interface**, which provides network connectivity between the sensor and Cisco DNA Center.

The sensor can use wired (using the PoE module) or wireless backhaul. For wireless backhaul, the administrator must choose one SSID from the existing WLAN setup. Keep in mind that backhaul SSID creation is not a part of Cisco DNA Automation. The administrator can choose any SSID that is created by Cisco DNA Center or manually created from the wireless controller.

The sensor uses backhaul to:

- Enable the keepalive heartbeat exchange between Cisco DNA Center and the sensor (HTTPS, heartbeat every minute)
- Download the new sensor test configuration
- Upload the sensor test result
- Upgrade the sensor image

Note: The preceding sensor operations use HTTPS.

When the sensor uses wireless backhaul, it switches frequently between the test target SSID and the wireless backhaul SSID. For example, when the sensor finishes a series of tests from the configured AP in the 2.4-GHz band, the sensor switches the SSID to the backhaul SSID and reports results to Cisco DNA Center.

After reporting is finished, the sensor reconnects to the test SSID and runs testing on the other band. Similarly, the sensor comes back regularly to Cisco DNA Center for a heartbeat. Ultimately, the sensor cycles through test SSID1 > backhaul SSID > test SSID2 > backhaul SSID > test SSID3 and time-slices wireless testing, reporting, and heartbeating.

1. Due to the unique behavior described above, we recommend that you enable Fast SSID change from the wireless settings (**Figure 33**).
 - The **Fast SSID change** option does not impact sensor test results or sensor operation

General

Name	<input type="text" value="IntelligentCaptureWLC"/>	
802.3x Flow Control Mode	<input type="button" value="Disabled"/> ▾	
LAG Mode on next reboot	<input type="button" value="Disabled"/> ▾	(LAG Mode is currently disabled)
Broadcast Forwarding	<input type="button" value="Disabled"/> ▾	
AP Multicast Mode	<input type="button" value="Unicast"/> ▾	
AP IPv6 Multicast Mode	<input type="button" value="Unicast"/> ▾	
AP Fallback	<input type="button" value="Enabled"/> ▾	
CAPWAP Preferred Mode	<input type="button" value="ipv4"/> ▾	
Fast SSID change	<input type="button" value="Enabled"/> ▾	
Link Local Bridging	<input type="button" value="Disabled"/> ▾	

Figure 33. Location of the Fast SSID Change toggle in the AireOS WLC GUI

Note: For the Cisco Catalyst 9800 Series controllers, **Fast SSID change** is enabled by default.

Persistent wireless backhaul

If the sensor is running Software Release 1.3.3 or later, it supports **persistent wireless backhaul**, which is a dedicated wireless connection from the sensor to Cisco DNA Center. As long as the sensor’s test band remains in single band, persistent wireless backhaul is maintained. When the wireless test band changes, the wireless backhaul connection shifts to the other band.

During a wireless backhaul connection, the sensor uses virtual MAC addresses for both the wireless persistent backhaul to connect with Cisco DNA Center and for connection to test an AP’s wireless network (**Table 3.**).

Table 3. Backhaul type to sensor MAC address matrix

Connection type	Sensor virtual MAC syntax
Persistent wireless backhaul	Base radio MAC + 0x10
Connection to AP’s SSID for testing	Base radio MAC + 0x11

Example: If the sensor’s radio MAC is AB:CD:EF:00:00:00, the MAC address used for the persistent wireless backhaul will be AB:CD:EF:00:00:10, and the MAC address used to connect to an AP’s radio for testing will be AB:CD:EF:00:00:11

Persistent Wireless Backhaul

Always-on wireless connection regardless of wireless testing activities

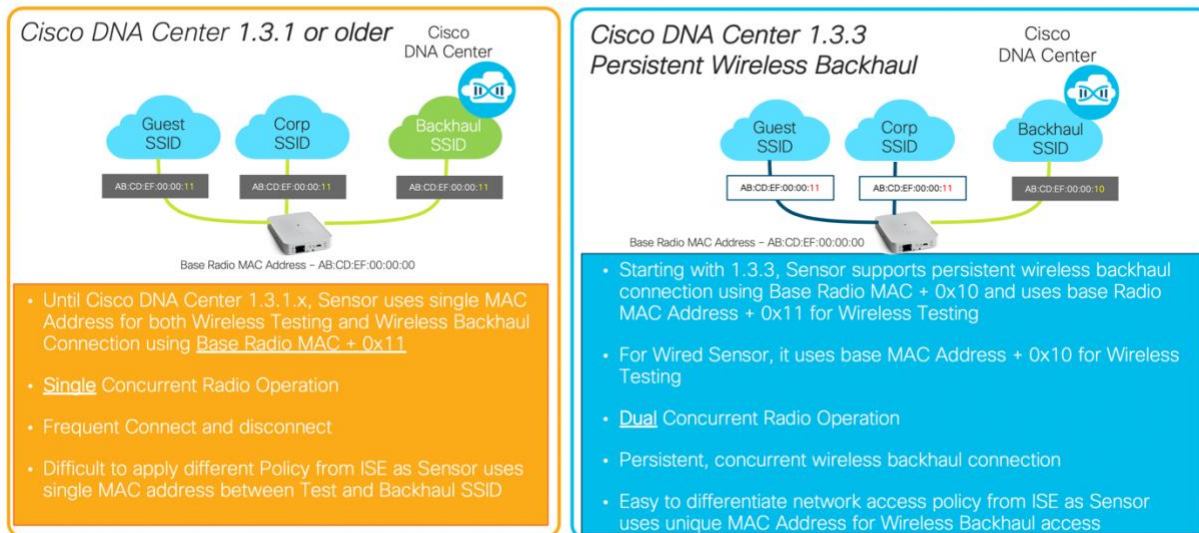


Figure 34.
Advantages of persistent wireless backhaul

Creating a sensor backhaul profile in Cisco DNA Center

A sensor backhaul profile is essential to claiming the sensor on the PnP page. The PnP Claim page has a default sensor backhaul profile titled **CiscoSensorProvisioning**.

Wired Backhaul: If your sensor discovered Cisco DNA Center through a wired backhaul, you can create a custom backhaul profile if you would like to configure an 802.1x EAP security communication method on the wired side.

- **Note:** Custom Wired backhaul is supported starting from Cisco DNA Center v2.1.2.

Wireless Backhaul: If your sensor discovered Cisco DNA Center through a wireless backhaul, you can create a custom backhaul profile if you want your sensor to communicate with Cisco DNA Center through an SSID other than the default **CiscoSensorProvisioning** SSID.

1. To create a new sensor backhaul configuration, open the menu, and click **Assurance > Sensors**, then **Setting > Backhaul Settings**, then **Add Backhaul (Figure 35.)**.

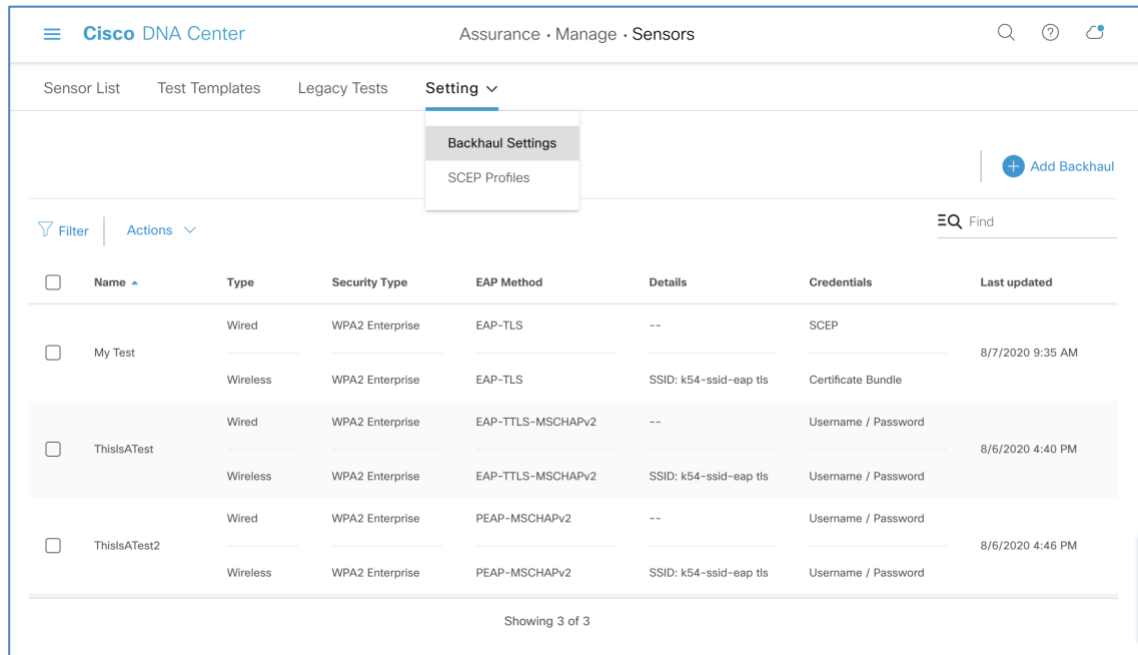


Figure 35.
Location of backhaul settings & add backhaul button in Cisco DNA Center

Note: The setting is local to Cisco DNA Center and is not pushed to the wireless controller.

2. **Wired Backhaul:** Leave **Level of Security** as the default value of **Open**, or select the **802.1x EAP** option to select a security type (Figure 36.).
 - a. **802.1x EAP Security Options:** EAP-FAST, PEAP-MSCHAPv2, EAP-TLS, PEAP-TLS, EAP-TTLS-MSCHAPv2, EAP-TTLS-PAP, EAP-TTLS-CHAP, EAP-FAST-GTC, EAP-PEAP-GTC (**Figure 36.**).
 - b. If EAP-FAST, PEAP-MSCHAPv2, EAP-TTLS-MSCHAPv2, EAP-TTLS-PAP, EAP-TTLS-CHAP, EAP-FAST-GTC, or EAP-PEAP-GTC is selected, enter in a username & password (**Figure 37.**).
 - c. If EAP-TLS or PEAP-TLS is selected, upload either a Certificate Bundle into Cisco DNA Center, along with the bundle's username and password, or Enroll using SCEP (Refer to the Certificate Management with SCEP section for more information) (**Figure 38.**).

Cisco DNA Center Assurance · Manage · Sensors

Sensor List Test Templates Legacy Tests **Setting** ▾

Create Sensor Backhaul SSID Assignment

Settings Name*
Sensor Backhaul

Wired Backhaul

Level of Security
 802.1x EAP Open

EAP Method*
 PEAP-MSCHAPv2

Search

- EAP-FAST
- PEAP-MSCHAPv2
- EAP-TLS
- PEAP-TLS
- EAP-TTLS-MSCHAPv2
- EAP-TTLS-PAP

Password*

Figure 36.
Configuring a wired backhaul profile

Cisco DNA Center Assurance · Manage · Sensors

Sensor List Test Templates Legacy Tests **Setting** ▾

Create Sensor Backhaul SSID Assignment

Settings Name*
Sensor Backhaul

Wired Backhaul

Level of Security
 802.1x EAP Open

EAP Method*
 PEAP-MSCHAPv2

User Name*
Sensor_Test

Password*
 [SHOW](#)

Wireless Backhaul

Wireless Network Name (SSID)*
 CiscoSensorProvisioning

Figure 37.
Configuring username and password with PEAP-MSCHAPv2 for wired backhaul profile

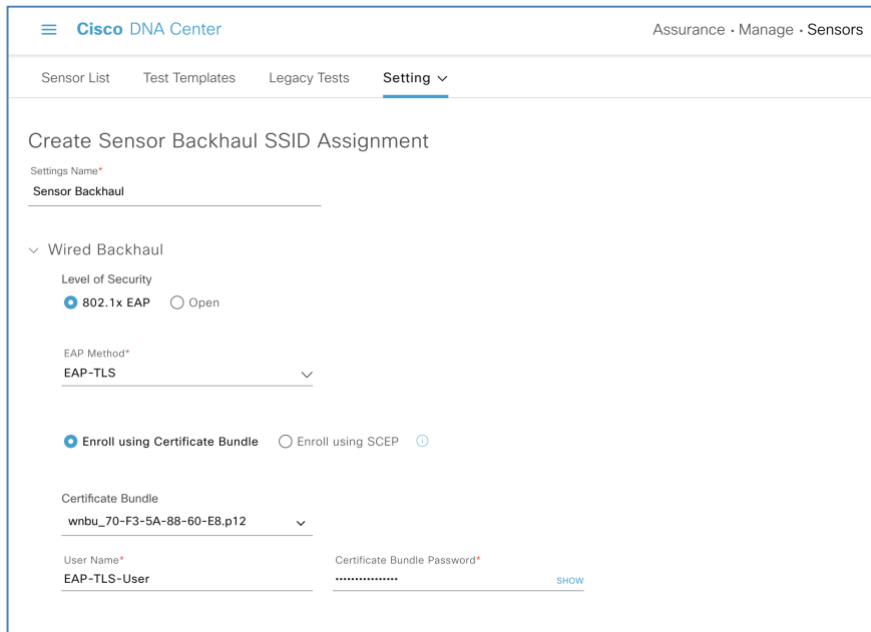


Figure 38. Configuring custom certificate, username, and password with EAP-TLS for wired backhaul profile

3. **Wireless Backhaul:** Select an SSID from the drop down menu and ensure that the selected SSID matches an SSID that is being broadcasted within the proximity of the sensors being claimed with this profile. (**Figure 39.**)

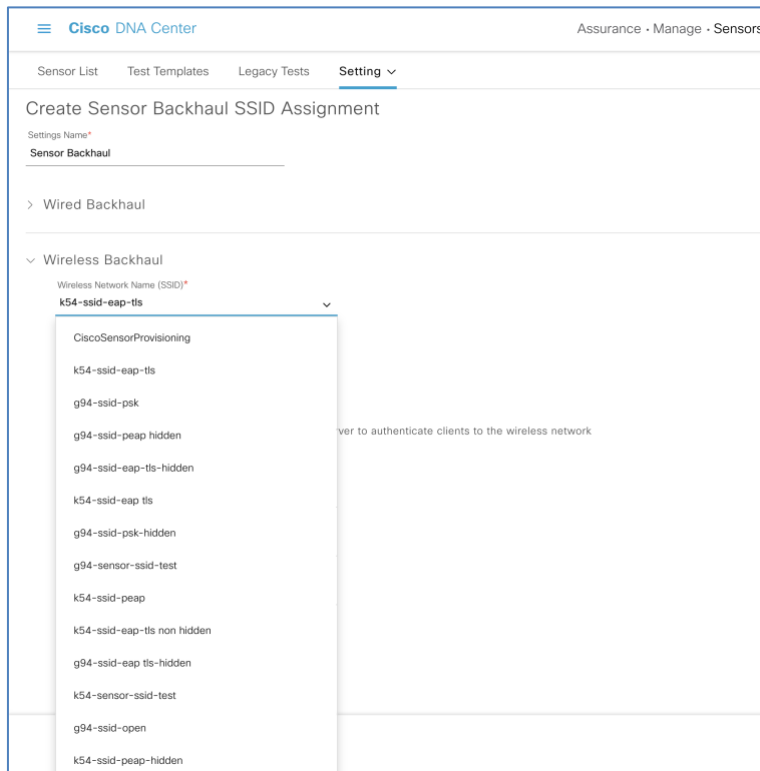


Figure 39. Configuring a wireless backhaul profile and selecting a SSID

4. Configure the security credentials of the chosen SSID (**Figure 40.**)

a. **Wireless Security Options:**

- i. WPA2-Enterprise (EAP-FAST, PEAP-MSCHAPv2, EAP-TLS, PEAP-TLS, **EAP-TTLS-MSCHAPv2, EAP-TTLS-PAP, EAP-TTLS-CHAP, EAP-FAST-GTC, EAP-PEAP-GTC**) (The bolded authentication methods are newly introduced in Cisco DNA Center 2.1.2)
- ii. WPA2-PSK
- iii. Open

The screenshot shows the Cisco DNA Center interface for configuring a sensor backhaul SSID assignment. The page title is "Create Sensor Backhaul SSID Assignment". Under the "Wireless Backhaul" section, the "Wireless Network Name (SSID)" is set to "k54-ssid-eap-tls". The "Level of Security" is set to "WPA2 Enterprise". The "EAP Method" is set to "EAP-FAST". The "Username" is "Demo_Sensor" and the "Password" is masked with dots. The page also shows a note: "User Credentials are validated with 802.1x Radius server to authenticate clients to the wireless network".

Figure 40. Configuring username and password with EAP-FAST wireless backhaul profile

Notes:

- We recommend that you use the latest Aironet Active Sensor Software Release 2.1.2.0 for wireless backhaul operation.
- If the sensor is assigned an SSID that is different from the **CiscoSensorProvisioning** SSID, the sensor does not use the **CiscoSensorProvisioning** SSID after PnP provisioning, because it's configured with a new backhaul SSID. If the backhaul SSID fails to connect, the sensor falls back to the **CiscoSensorProvisioning** SSID.

Provisioning: How to claim the sensor

1. Option 1 – PoE module: If your sensor has a PoE module, connect your sensor to the PoE port on the switch.
 - a. Option 2 – wireless backhaul connection: If your sensor uses a wireless backhaul connection, power the sensor by plugging it into a wall power socket or use the adapter and attached micro USB Type B connector.

Note: For either backhaul type, ensure that the sensor has HTTP (TCP 80) and HTTPS (TCP 443) reachability to the Cisco DNA Center server.

- b. After the sensor is powered on, wait for approximately 5 minutes. If the sensor can reach the Cisco DNA Center server, the sensor appears in an unclaimed state within the PnP page. You can navigate there by opening the hamburger menu and then clicking Provision > Plug and Play.
- c. Before claiming the sensor, you can change the default sensor name to the desired name. To change the sensor name, open the hamburger menu and click Provision > Plug and Play. Then select the target sensor and choose Actions > Edit (**Figure 41.**).

Edit Device : Sensor-02 ✕

Single Device

Serial Number
KWC212100PO

Product ID*
AIR-AP1800S-B-K9 ∨

Chassis Serial Number
Supported Stack PIDs begin with WS-C3850, WS-C3650, C2960, C9200, C9300, and C9500

Device Name
Sensor-02

Device Name

Figure 41.
Edit Sensor menu

Notes:

- In previous Cisco DNA Center Software Releases, 1.3 or earlier, users have the ability to change the sensor name only at this stage and not after the claim process, unless the device is deleted from the inventory.
- Beginning with Cisco DNA Center Software Release 2.1.2, the user has the flexibility to change the name whenever desired.

- d. After you change the sensor name, your sensor is ready to be provisioned. Select the sensor from the list of unclaimed devices and click Claim in the Actions drop-down menu (**Figure 42.**).

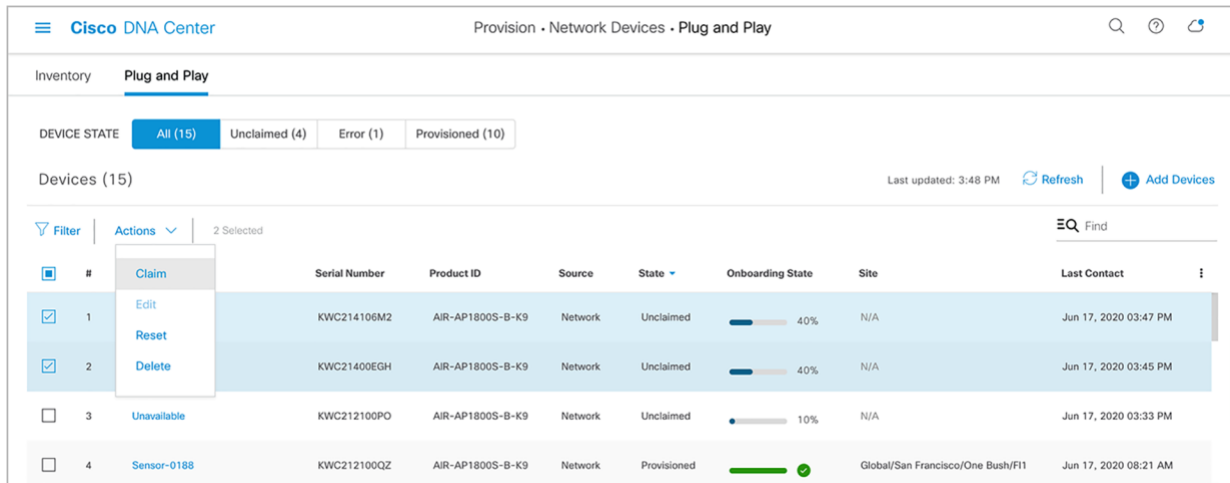


Figure 42.
Location of the Claim button

- e. Select a site to claim the sensor (**Figure 43.**).

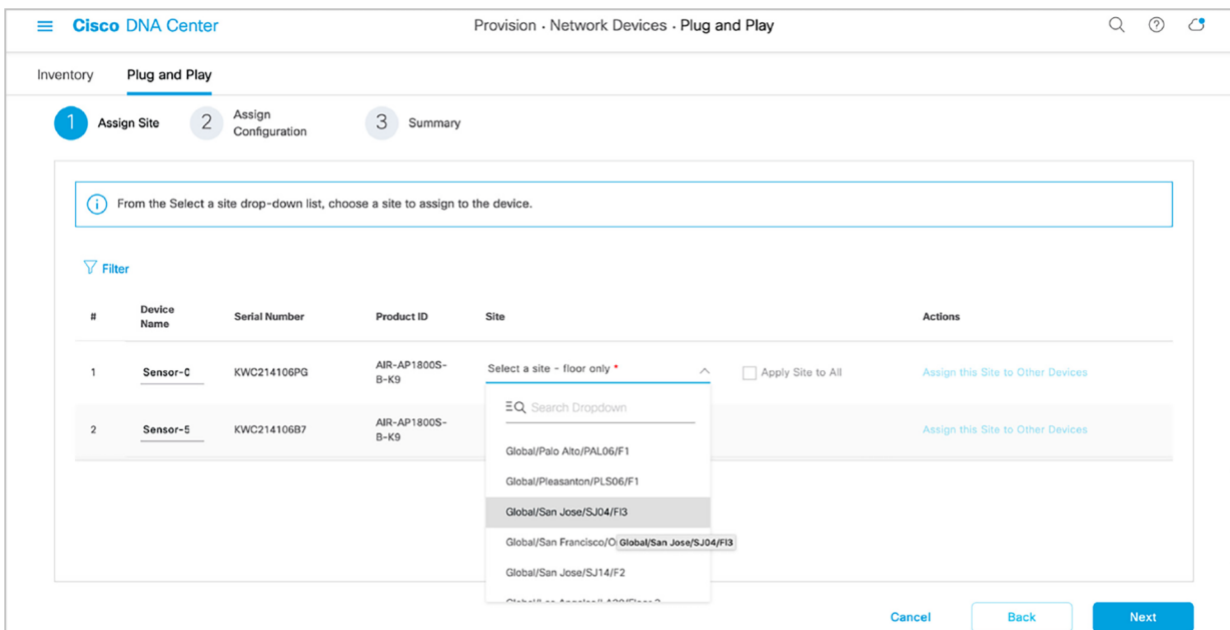


Figure 43.
Selecting a location to claim the sensor

- f. wireless backhaul: If you didn't create a sensor PnP profile, you can use the default CiscoSensorProvisioning sensor profile which is automatically selected (**Figure 44.**).
- g. wired backhaul: If you are deploying a wired sensor, you must still choose one profile, in which case the default profile is a convenient option (**Figure 44.**).

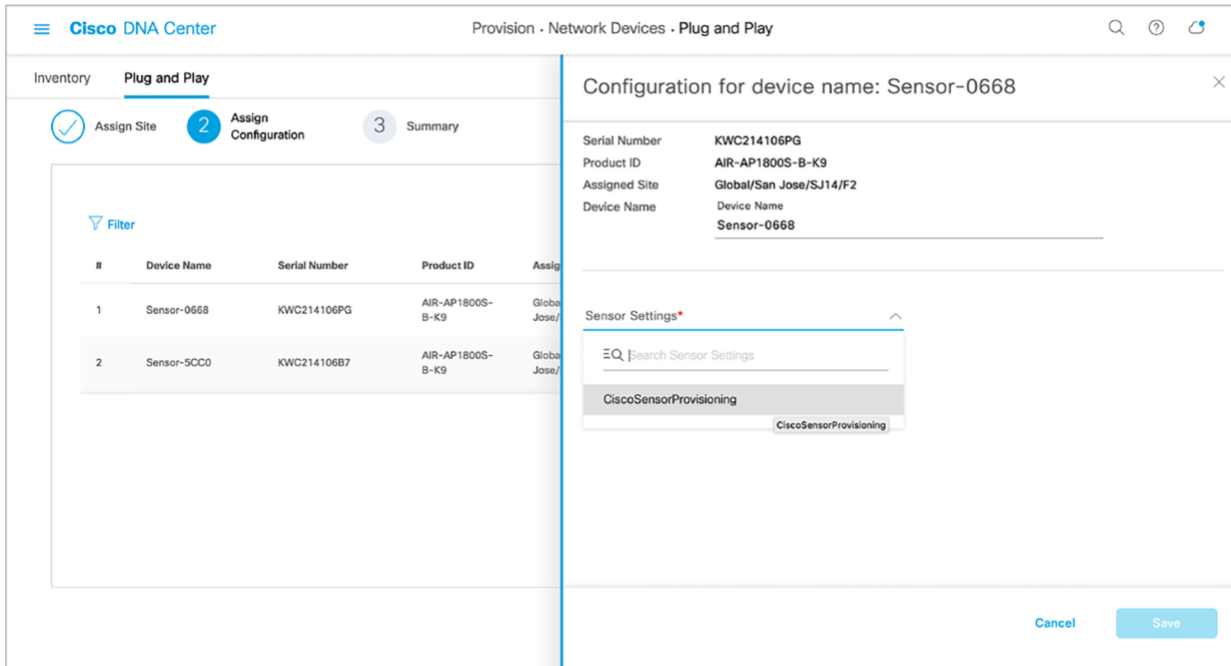


Figure 44.
Selecting the sensor profile for a claimed sensor

- h. If you want to change the sensor name after the PnP claim, go to Assurance > Sensors and choose Edit Sensor Name(s) from the Actions drop-down menu (**Figure 45.**).

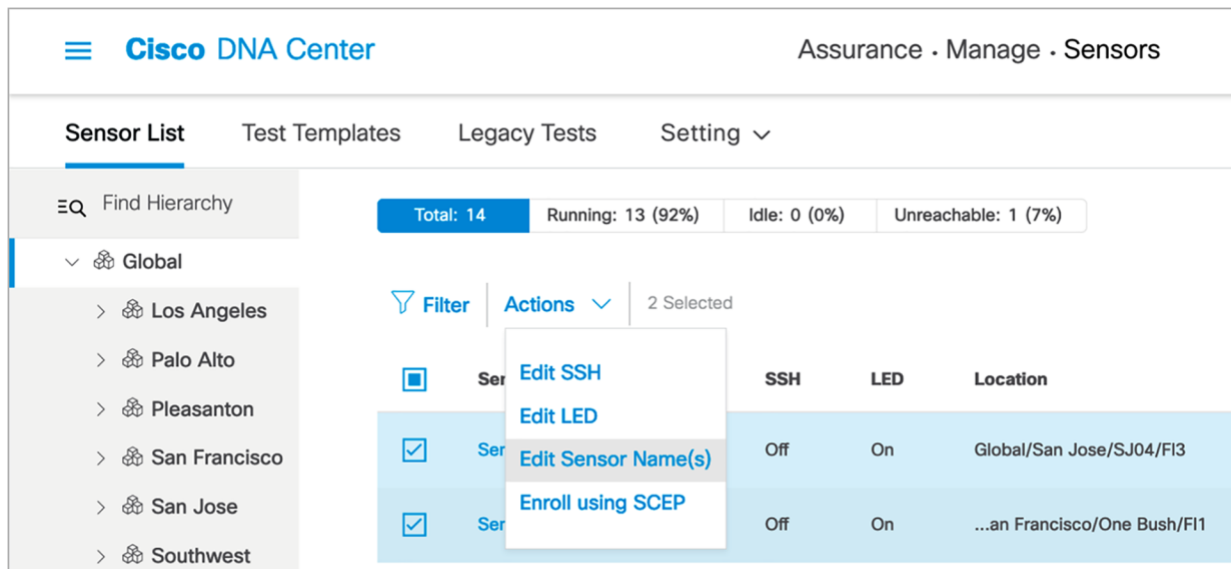


Figure 45.
Editing a sensor name

- i. Ensure that the device status changes from Unclaimed to Planned to Onboarding to Provisioned (**Figure 46.**).
- The device remains in the Provisioned state unless it fails to be provisioned. In this case, the sensor changes to an error state. Any errored entries remain even if the device is removed from the network.

- When the sensor is in the Managed state, it's ready to download the sensor-driven test configuration and run the sensor test.

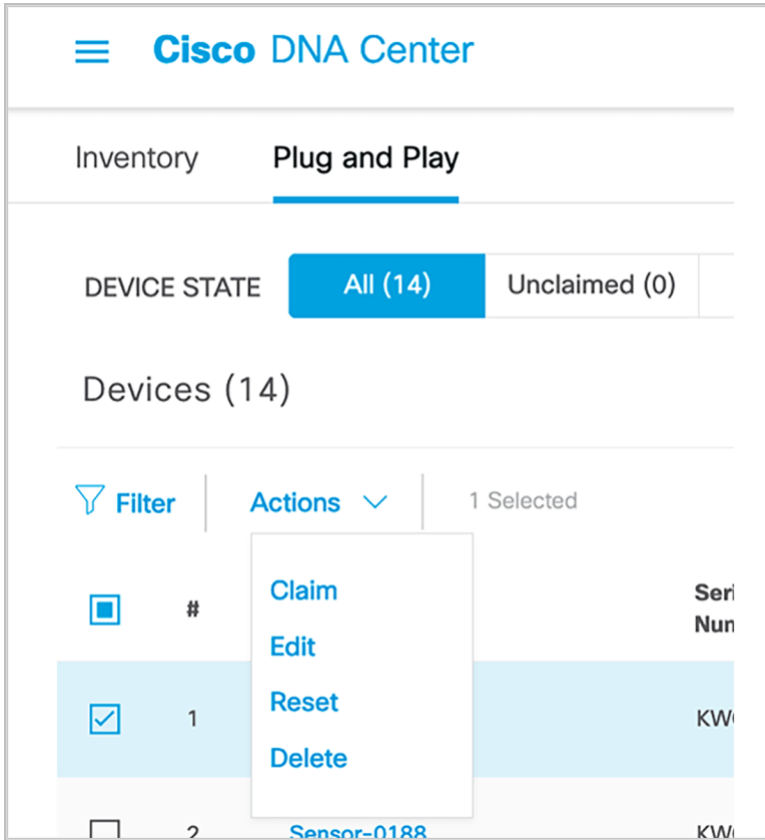


Figure 46.
Sensor provisioning – claiming the device

- j. If the sensor changes to an error status, you can view the error details under the History tab. You can always delete a sensor with an error status; that sensor then returns to the list in an unclaimed state (Figure 47.).

Cisco DNA Center Provision - Network Devices - Plug and Play

Inventory **Plug and Play**

DEVICE STATE **All (14)** Unclaimed (0) Error (0) Provisioned (14)

Devices (14)

Filter Actions 1 Selected

#	Device Name	Serial Number	Product ID
<input checked="" type="checkbox"/>	Sensor-0298	KWC214106M2	AIR-AP1800S-B-K9
<input type="checkbox"/>	Sensor-0188	KWC212100QZ	AIR-AP1800S-B-K9
<input type="checkbox"/>	AP70F3.5A7C.0288	KWC214106M0	AIR-AP1800S-B-K9
<input type="checkbox"/>	AP70F3.5A7C.0340	KWC214106MN	AIR-AP1800S-B-K9
<input type="checkbox"/>	Sensor-0950	KWC214106S1	AIR-AP1800S-B-K9
<input type="checkbox"/>	Sensor-4230	KWC21130004	AIR-AP1800S-B-K9
<input type="checkbox"/>	AP70F3.5A7A.65F8	KWC214106JE	AIR-AP1800S-B-K9
<input type="checkbox"/>	Sensor.0078	KWC214106VQ	AIR-AP1800S-B-K9
<input type="checkbox"/>	Sensor.0048	KWC214106VK	AIR-AP1800S-B-K9

Device Name: Sensor-0298

SUDI: Authenticated [Delete](#)

Details **History** Configuration

History Last updated: 9:12 PM [Refresh](#)

Status	Time	Details	Info
✔	Jun 08, 2020 02:54 PM	Task: Site Config Task Completed	Info
✔	Jun 08, 2020 02:54 PM	Provisioned Device	Info
✔	Jun 08, 2020 02:54 PM	Sensor Manager to add the device to inventory	Info
✔	Jun 08, 2020 02:50 PM	Executing Task: Site Config Task	Info
✔	Jun 08, 2020 02:49 PM	Executing User Workflow: Default_5ed591b0eb53c90009fd8c9c	Info
✔	Jun 08, 2020 02:49 PM	Day 0 Config Generated	Info
✔	Jun 08, 2020 02:49 PM	Day 0 Config Requested	Info
✔	Jun 08, 2020 02:49 PM	Task: System Task Completed	Info

Figure 47. Sensor provisioning – workflow

Upgrade the sensor software


Description: After the sensor has been provisioned, one method of upgrading the sensor software is via the CLI built into the sensor and accessible via SSH or console cable.

1. Once the sensor's CLI has been accessed, a software upgrade can be performed on the sensor by running the following command:

```
archive-download-sw /force-reload /overwrite tftp://<ip address>/image
```

Sensor Image Upgrade through Cisco DNA Center

Step 1 - Prep Image Management

- 1 Tag new sensor image as golden image ★
- 2 Click [Upgrade Device]  Update Device

Step 2 - Upgrade Sensor

- 3 Select upgrade target sensor
- 4 Action > Upgrade OS Image
- 5 [Distribute] select "Now"
- 6 [OS Update] Select "Schedule Activation after Distribution is completed"
- 7 "Confirm" upgrade
- 8 Wait for SWIM to complete upgrade

... or using CLI via Console or SSH

```
# archive download-sw /reload tftp://192.168.0.1/SW1800-SENSOR-K9-2-1-1-0.tar.gz
```

Figure 48.

Steps to upgrade the sensor through Cisco DNA Center

After you provision the sensor, you can update the sensor software to the latest release using Cisco DNA Center. Currently, Aironet Active Sensor Software Release 2.1.2.0 is the latest, and it aligns with the latest Cisco DNA Center Software Release 2.1.2.0. After you enter your Cisco.com ID and password into Cisco DNA Center, Cisco DNA Assurance automatically retrieves the list of device images from Cisco.com.

- a. Option 1 – Cisco.com image import: Before upgrading the image, mark the new image within the Image Repository page (viewed by clicking Design > Image Repository within the hamburger menu) as a golden image so that it will be used as the new sensor software. You mark the new sensor software as the golden image by clicking the star icon next to the desired image in the list (**Figure 49.**).
- Cisco DNA Center starts to retrieve the new software from Cisco.com.
- b. Option 2 – manual import: Alternatively, you can manually import the sensor software into Cisco DNA Center from your local browser. Import the sensor software from the Image Repository tool by clicking Design > Image Repository within the hamburger menu and then clicking Import (**Figure 49.**).

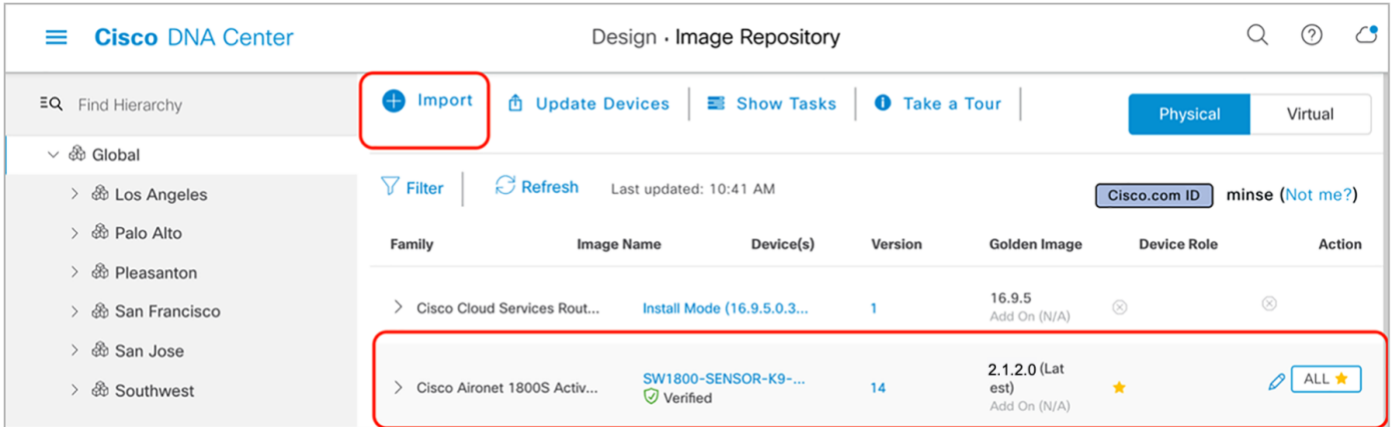


Figure 49.
Marking an image as a golden image

- c. After preparing the golden image, you can start the image upgrade from the Inventory page. The first step is to select the target sensors to be upgraded.
- d. After you select all the sensors, click Action and select Image Upgrade. Make sure all selected sensors are in Manage status (**Figure 50.**).

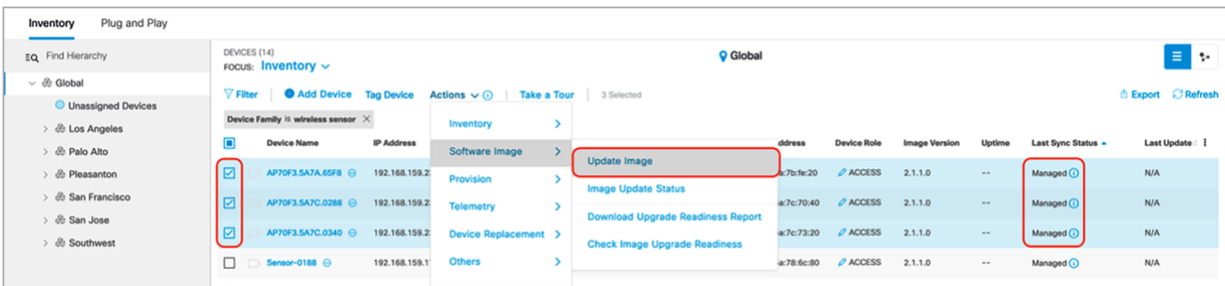


Figure 50.
Location of Software Images page

- e. Click Now and then Next. (Alternatively, click Later to schedule the upgrade for a later time.) (**Figure 51.**).
- f. Check the Schedule Activation after Distribution is completed check box (**Figure 51.**).

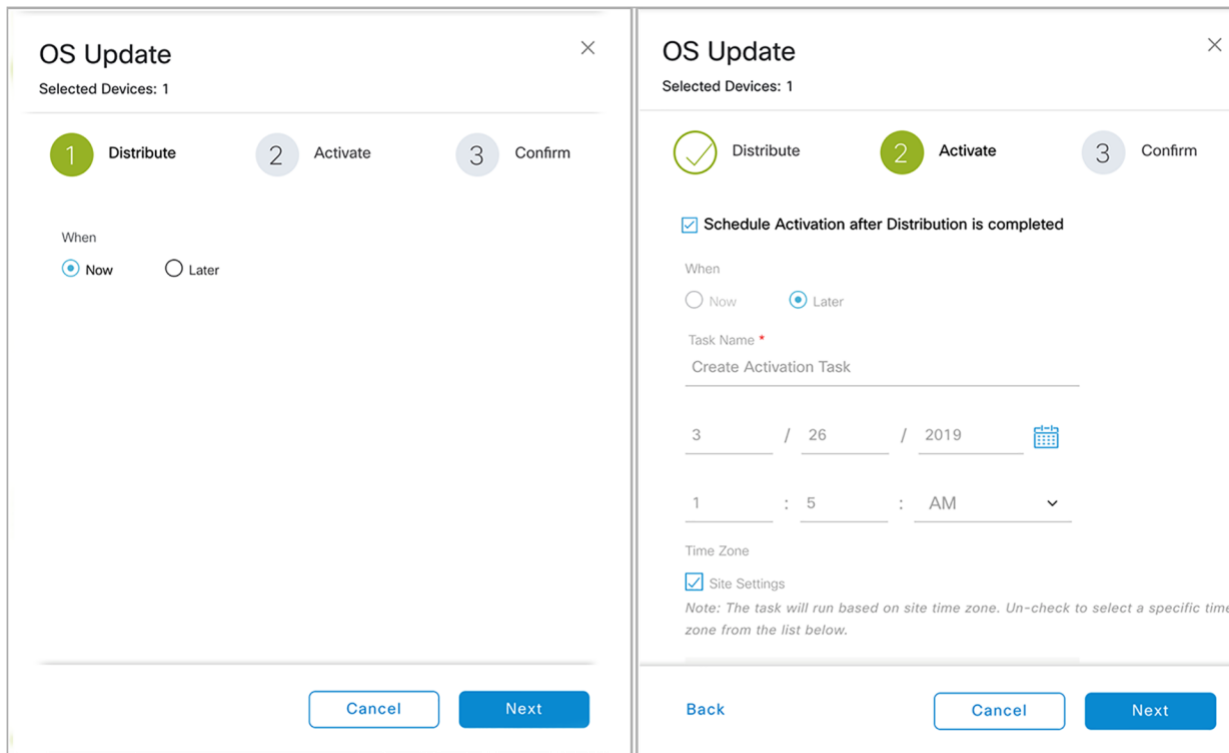


Figure 51.
Scheduling an image upgrade

- g. Click Confirm to initiate the image upgrade.

There are several conditions under which the sensor image upgrade can fail:

- **Failure condition 1 – the golden image has not been selected:** After you confirm the upgrade target image on the **Image Repository** page, you need to manually click the star icon next to the image version to determine the upgrade target image (**Figure 52.**).



Figure 52.
Golden image selected for upgrade

- **Failure condition 2 – partial collection failure status:** This status means that the sensor failed to exchange heartbeats with Cisco DNA Center. In this case, the image upgrade is not initiated. Only after all of the selected sensors are ready to be upgraded can you select **Now** to start the upgrade of all selected sensors.
- **Failure condition 3 – failure conditions 1 and 2 occur in a selected group:** When multiple sensors are selected as upgrade targets and any of the selected sensors experiences failure condition 1 or 2, the image upgrade is not initiated.

Placing sensors on the floor map

You can also provision sensors from the floor map in the Design section.

1. Open the hamburger menu and click Design > Network Hierarchy, then click the desired floor and click Edit (Figure 53).
 - a. You can drag and drop sensors from the upper right corner of the map to their current placement and click Save to apply the changes to the map (Figure 53.).

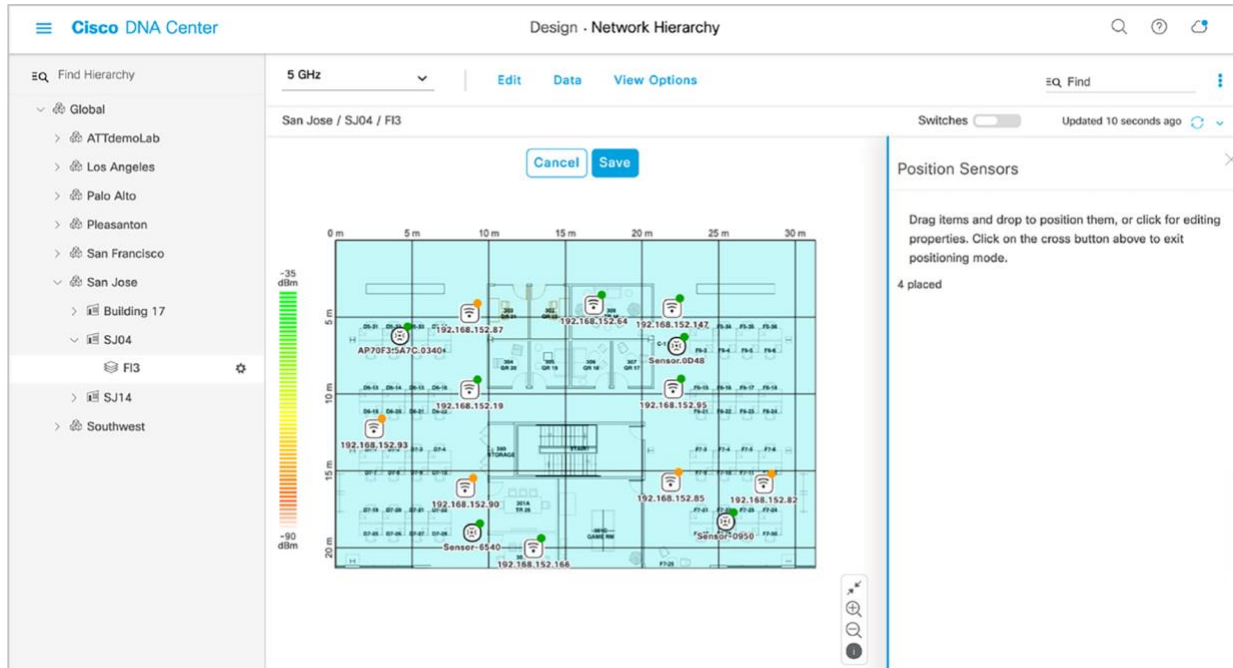


Figure 53.
Placing sensors on the floor map

Manage sensors

Description: The Sensor List page allows you to view and configure everything regarding the Aironet Active Sensor.

This page allows you to configure various settings such as **Sensor Name**, **SSH Username** and **Password**, and **LED**, as well as view a sensor's current operational status (**Running**, **Idle**, or **Unreachable**) and many other attributes (Figure 54.).

Cisco DNA Center Assurance · Manage · Sensors

Sensor List Test Templates Legacy Tests Setting

EQ Find Hierarchy

- Global
 - AREA001
 - AREA002
 - AREA003
 - AREA004
 - AREA005

Wireless Wired

Total: 6 Running: 6 (100%) Idle: 0 (0%) Unreachable: 0 (0%)

Filter Actions

Last updated: 10:46 PM EQ Find

<input type="checkbox"/>	Sensor	Status	SSH	LED	Location	SCEP Profile	Last Seen	Backhaul Type	
<input type="checkbox"/>	AP70F3.5A8A.04C8	Running	Off	On	Global/AREA003/AREA003_BLD001/AREA003_BLD001_FLR001	ISE_as_SCEP_server	Aug 10, 2020 10:45 pm	Wired	
<input type="checkbox"/>	AP70F3.5A8A.0330	Running	Off	On	Global/AREA001/AREA001_BLD001/AREA001_BLD001_FLR001	ISE_as_SCEP_server	Aug 10, 2020 10:45 pm	Wired	
<input type="checkbox"/>	AP70F3.5A88.6640	Running	Off	On	Global/AREA003/AREA003_BLD001/AREA003_BLD001_FLR001	None	Aug 10, 2020 10:45 pm	Wired	
<input type="checkbox"/>	AP70F3.5A88.60E8	Running	Off	On	Global/AREA001/AREA001_BLD001/AREA001_BLD001_FLR001	MsAD_as_SCEP_server	Aug 10, 2020 10:46 pm	Wireless	
<input type="checkbox"/>	AP70F3.5A88.5520	Running	Off	On	Global/AREA003/AREA003_BLD001/AREA003_BLD001_FLR001	MsAD_as_SCEP_server	Aug 10, 2020 10:46 pm	Wired	
<input type="checkbox"/>	AP70F3.5A7E.04F0	Running	Off	On	Global/AREA001/AREA001_BLD001/AREA001_BLD001_FLR001	MsAD_as_SCEP_server	Aug 10, 2020 10:45 pm	Wireless	

Show 10 entries Showing 1 - 6 of 6

Previous 1 Next

Figure 54.
Sensor List page

Notes:

- A sensor uses a single admin ID between SSH and CLI, so if you change the username and password of a sensor, both the SSH and CLI login credentials are changed.
- The default sensor username and password are Cisco/Cisco before v2.1.2 and sensor/password starting v2.1.2 and above. When you configure a username and password, this default value is overwritten.
- The Sensor List page is available only in Cisco DNA Center Software Release 1.3.1 and later.

Create a sensor test template

Creating a sensor test template configures the types of wireless tests to run, the frequency with which to run them, and the APs that the tests are targeted to.

1. To create a test suite, from the hamburger menu choose Assurance > Sensors, and then click Test Templates and Add Sensor Test (**Figure 55.**).

Cisco DNA Center Assurance · Manage · Sensors

Sensor List **Test Templates** Legacy Tests Setting

Wireless Wired

Actions Last updated: 10:48 PM Add Sensor Test EQ Find

Test Name	SSID with Test Types	AP Coverage	Location	Schedule	
<input type="checkbox"/> Kukri_Tests_at_2.4GHz	k54-ssid-psk hidden: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity k54-ssid-psk-wpa-tkip: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity	2.4GHz: 1, -75dBm	Global/AREA001/AREA001_BLD001/AREA001_BLD001_FLR001	Periodic	<input type="button" value="Run Now"/>
<input type="checkbox"/> Kukri_Tests_at_5GHz_Ms_SCEP	k54-3rd-Pty-ssid-psk: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity k54-ssid-eap-tls-MsAuth: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity	5GHz: 1, -75dBm	Global/AREA001/AREA001_BLD001/AREA001_BLD001_FLR001	Periodic	<input type="button" value="Run Now"/>
<input type="checkbox"/> Kukri_Tests_at_2.4GHz_and_5GHz	k54-3rd-Pty-ssid-peap: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity k54-ssid-peap hidden: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity	2.4GHz: 1, -75dBm 5GHz: 1, -75dBm	Global/AREA001/AREA001_BLD001/AREA001_BLD001_FLR001	Periodic	<input type="button" value="Run Now"/>
<input type="checkbox"/> Gladius_Tests_at_2.4GHz	g94-ssid-open: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity	2.4GHz: 1, -75dBm	Global/AREA003/AREA003_BLD001/AREA003_BLD001_FLR001	Periodic	<input type="button" value="Run Now"/>

Figure 55.
Creating a new sensor test

Note: The previous sensor-driven tests are renamed to the legacy test suite in Cisco DNA Center.

Comparing new to legacy sensor test templates

- The template can now be assigned to multiple floors and sites. You no longer need to create a sensor test for every floor.
- The template allows a unique sensor test configuration to be assigned to each SSID. Previously, all configured SSIDs had to share the same test configuration.
- The sensor coverage threshold is now configurable per band (2.4 or 5 GHz).
- The new RF assessment test uses RF parameters collected from other testing.
- The **Run Now** option has been added to provide the ability to start the test immediately.
- The sensor test interval has been expanded from 7 minutes to 24 hours.
- The sensor test can now be enabled by time of day and day of week.
- A new sensor test interval called **Continuous** has been added and allows the sensor to run continuously without stopping.
 - **Disclaimer:** Do not use the test interval for performance testing, as it may overload your AP.
- A single sensor can use only a single sensor test template, so you know exactly what test is running per sensor or per location.

- Certain sensor tests can take longer, and the total sensor test duration varies depending on the number of selected sensor test types. The minimum sensor test interval is automatically adjusted based on the estimated sensor test duration.
- Support for HTTPS and iPerf tests has been added.
- You can configure templates using a new UI workflow.
- Sensor tests can easily be duplicated, edited, deployed, and undeployed.

Network service sensor tests

- **Wireless onboard test:** Cisco DNA Center connects to an SSID with credentials and gets the IP address through DHCP. It then verifies the gateway and DNS server received through DHCP.
- **RF assessment test:** Cisco DNA Center collects various RF performance measurements, such as transmit and receive data rates and Signal-to-Noise Ratio (SNR), during the sensor testing and assesses the quality of the RF environment.
- **DNS test:** Cisco DNA Center resolves IP addresses from the domain name.
- **Host reachability test:** Cisco DNA Center verifies reachability using the Internet Control Message Protocol (ICMP) echo request.
- **RADIUS test:** The sensor acts as a RADIUS authenticator and authenticates through a wireless device. The sensor can test the RADIUS server using the Password Authentication Protocol (PAP) or Challenge-Handshake Authentication Protocol (CHAP).
 - **Note:** If only active user directory is used to authenticate, then only PAP is supported.

Performance sensor tests

- **Speed test:** Cisco DNA Center performs tests against the Network Diagnostic Tool (NDT) servers in the internet to obtain the downlink and uplink throughput and latency. Here is the test sequence:
 1. The sensor sends an HTTP query to the mLab server to get the nearest mLab server information.
 - a. The sensor uses the returned NDT server cluster information.
 - b. The sensor accesses the NDT server using TCP port 3001.

Note: Beginning in Cisco DNA Center Software Release 2.1.2, speed tests can be performed with a private server with iPerf3.

- **IP SLA test:** The sensor sends a User Datagram Protocol (UDP) probe to the AP that functions as a responder to determine the jitter, latency, packet loss, and round-trip time of the last hop.
 - For IP SLA, the sensor is connected to the AP that has the IP SLA responder feature.
 - **The IP SLA responder feature is available on:**
 - **Wave 2 APs:** Aironet 1800, 2800, 3800, and 4800 Series with AireOS Release 8.8 and later
 - **802.11ax APs:** Cisco Catalyst 9100 Access Points

Note: The supported software releases are AireOS Release 8.8 and later and Cisco IOS XE 16.12.1s and later.

Application sensor tests

- **Email tests**, including the following:
 - **Internet Message Access Protocol (IMAP) test:** Cisco DNA Center connects to an IMAP server TCP port (143).
 - **Post Office Protocol 3 (POP3) test:** Cisco DNA Center connects to a POP3 server TCP port (110).
 - **Outlook Web Server (OWS) test:** Cisco DNA Center logs in to the Outlook Web Service and verifies access.
- **File transfer tests:** Cisco DNA Center tests for upload or download file operation using FTP.
- **Web tests (HTTP, HTTPS):** Cisco DNA Center tests for access to the provided URL and verifies the response data.
 - **Example:** https://owa.example.com

Test template creation procedure

1. To create the test suite, open the hamburger menu and click Assurance > Sensors, then Test Templates, then Add Sensor Test (Figure 56.).

The screenshot shows the Cisco DNA Center interface for the 'Test Templates' section. The page is titled 'Assurance · Manage · Sensors' and includes a search bar and a 'Find' button. The main content area is a table of sensor test templates, with tabs for 'Wireless' and 'Wired'. The table has the following columns: Test Name, SSID with Test Types, AP Coverage, Location, and Schedule. Each row represents a different test template and includes a 'Run Now' button.

Test Name	SSID with Test Types	AP Coverage	Location	Schedule
Kukri_Tests_at_2.4GHz	k54-ssid-psk hidden: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity k54-ssid-psk-wpa-tkip: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity	2.4GHz: 1, -75dBm	Global/AREA001/AREA001_BLD001/AREA001_BLD001_FLR001	Periodic
Kukri_Tests_at_5GHz_Ms_SCEP	k54-3rd-Pty-ssid-psk: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity k54-ssid-eap-tls-MsAuth: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity	5GHz: 1, -75dBm	Global/AREA001/AREA001_BLD001/AREA001_BLD001_FLR001	Periodic
Kukri_Tests_at_2.4GHz_and_5GHz	k54-3rd-Pty-ssid-peap: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity k54-ssid-peap hidden: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity	2.4GHz: 1, -75dBm 5GHz: 1, -75dBm	Global/AREA001/AREA001_BLD001/AREA001_BLD001_FLR001	Periodic
Gladius_Tests_at_2.4GHz	g94-ssid-open: Onboarding, RF Assessment, Net.Service, Performance, App.Connectivity	2.4GHz: 1, -75dBm	Global/AREA003/AREA003_BLD001/AREA003_BLD001_FLR001	Periodic

Figure 56.
Adding a sensor test template

- a. From the Set up Sensor Test page, enter a template name, ensure Wireless Sensor is selected, then hit next (Figure 57).

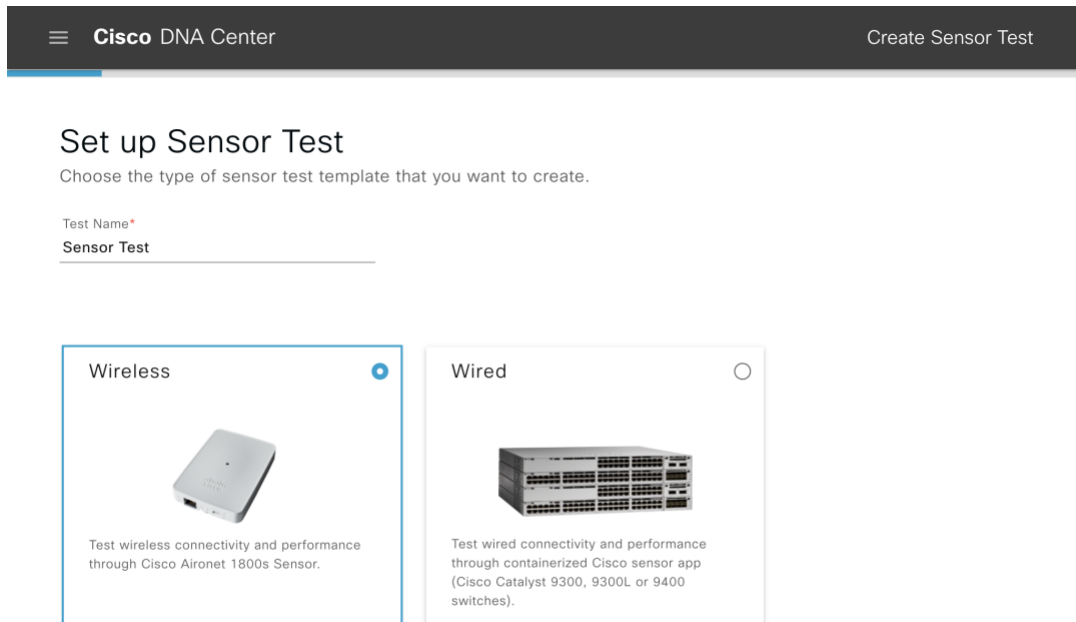


Figure 57.
Set Up Sensor Test page

- b. Choose Cisco SSIDs from the prepopulated list on the left or add third-party SSIDs and select the corresponding level of security (Figure 58).

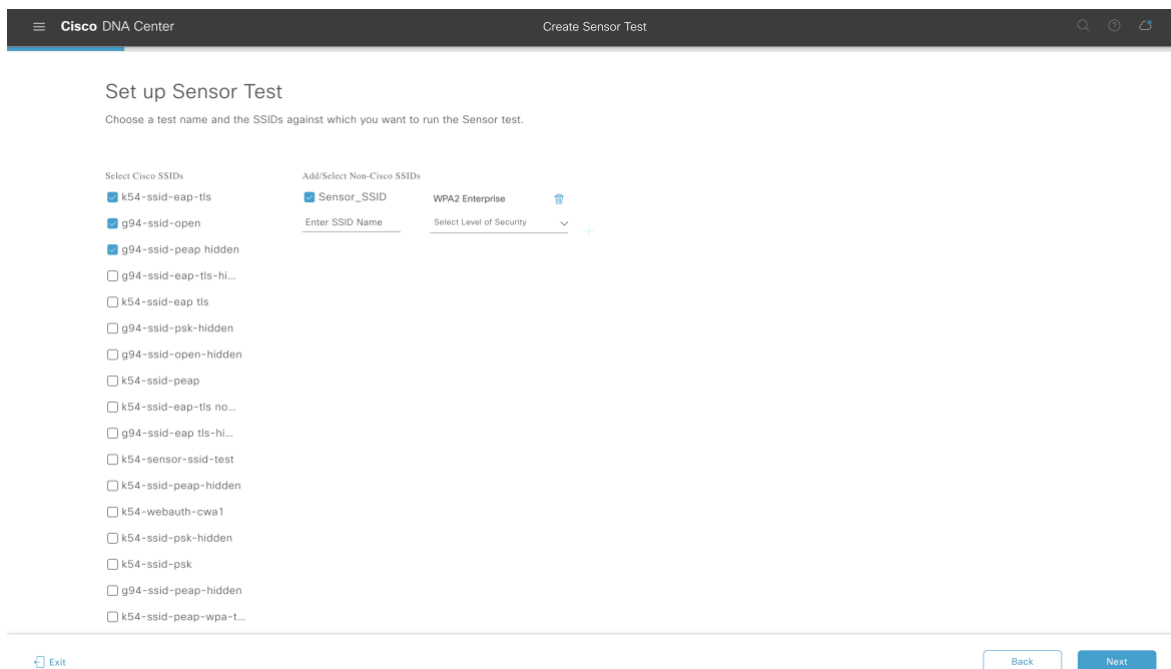


Figure 58.
Set Up Sensor Test page

This ability for a sensor to associate with any third-party SSID creates a large number of advantages:

- Users can assess the health of any legacy network or even a third-party network.
- Users are no longer required to register their AP to a WLC in Cisco DNA Center.
- **Limitations:** If a third-party SSID is used, you will be unable to run certain tests such as IP SLA, select specific APs for the sensors to target, or view data on the Sensor 360 page's Neighbor Map view.

Note: Third-party SSID support is available only in Cisco DNA Center Software Release 2.1.2 and later.

- c. After you choose the test target SSID, enter the credentials for sensor wireless onboarding. The available options for entering SSID credentials are Open (no credentials) or ISE Guest Portal (**Figure 59.**).



Enter SSID Credentials

Specify the SSID details necessary to run the Sensor test.

▼ SSID: OpenWLAN

Security: **Open**

Open ISE Guest Portal Clearpass Guest Portal

Figure 59.

Options provided when creating a new SSID during sensor test creation

- d. If ISE Guest Portal is selected, choose the labels that correspond to those in your ISE guest portal (**Figure 60.**).

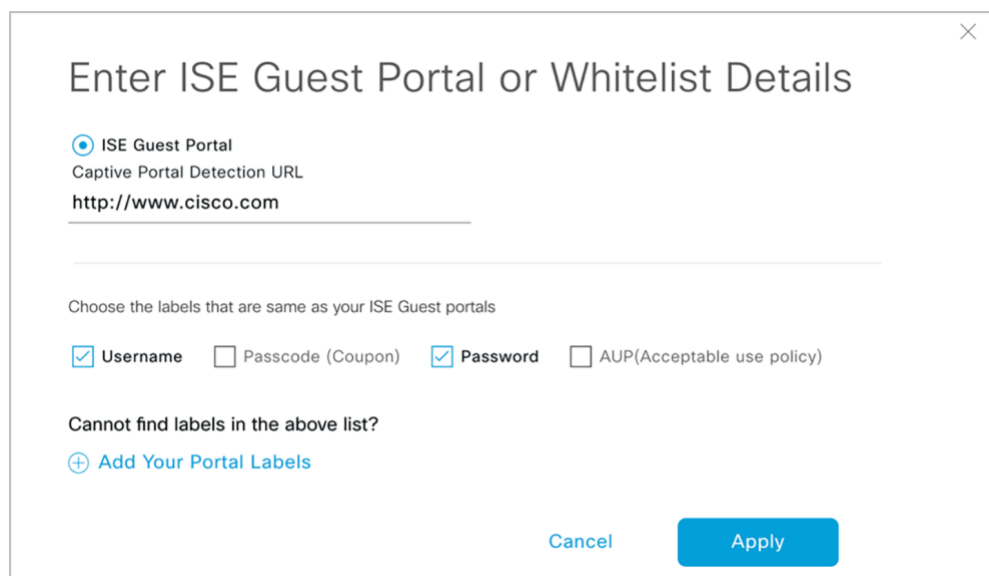


Figure 60.

Configuring ISE Guest Portal Details during test creation

- e. If ClearPass Guest Portal is selected, choose the labels that correspond to those of your ISE guest portal (Figure 61).
 - i. Enter Clearpass Guest Portal credentials and a WLC Virtual IP Address (Figure 62).
 - ii. **Note:** Configuring ClearPass Guest Portal enables external web authentication test using Aruba's ClearPass server.

Figure 61.
Configuring ClearPass Guest Portal Details during test creation

Enter SSID Credentials

Specify the SSID details necessary to run the Sensor test.

SSID: OpenWLAN

Security: **Open**

Open ISE Guest Portal Clearpass Guest Portal

Clearpass Guest Portal [Edit Labels](#)

Username*
 ClearPass_User

Password*
 [SHOW](#)

AUP(Acceptable use policy)

WLC Virtual IP Address*
 172.27.75.142

Figure 62.
Configuring ClearPass Guest Portal credentials and WLC Virtual IP during test creation

- f. Select the types of sensor tests that you would like to be part of this test template (Figure 63.).

Figure 63.
Choosing types of sensor tests

- g. Check the box next to Internet (NDT) Test to configure that as part of the test template (Figure 64.).

Figure 64.
Performance Tests – Speed Test

Note: The Internet Test uses the distributed NDT from the **mLab** server in the cloud (Figure 65.).

Leaving the NDT Server field blank

If you leave the **NDT Server** IP address field empty, the sensor sends an HTTP query to the **mLab** server (<https://mlab-ns.appspot.com/ndt?format=json>) to get the nearest mLab server information, as follows:

```

{
  "city": "San Francisco Bay Area_CA",
  "url": "http://ndt.iupui.mlab2.nuq07.measurement-lab.org:7123",
  "ip": [
    "209.170.110.216",
    "2001:2030:0:12::216"
  ],
  "fqdn": "ndt.iupui.mlab2.nuq07.measurement-lab.org",
  "site": "nuq07",
  "country": "US"
}

```

The sensor then uses the returned NDT server cluster information to run actual performance testing. It uses TCP port 3001 for performance testing.

Adding an NDT server IP

If the connection to the internet requires a proxy server, you can add one.

The proxy server address needs to be an IPv4 address, because the FQDN format is not yet supported.

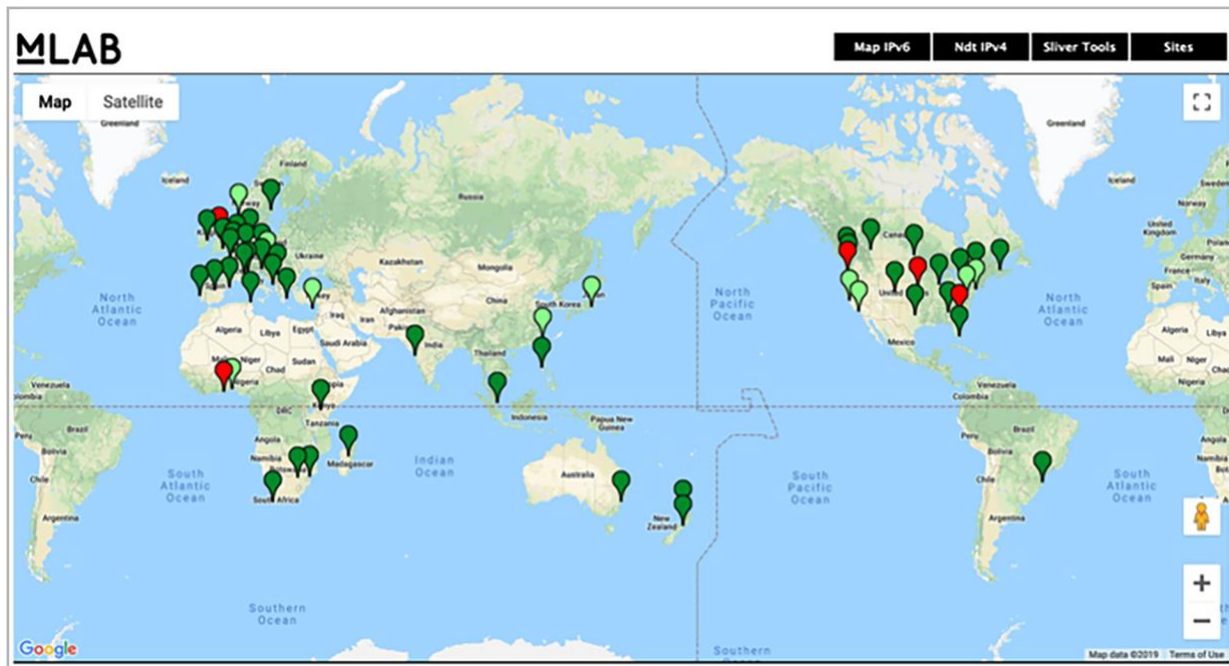


Figure 65. mLab server UI

Notes:

- Typically, the private **NDT server** is not available, so the NDT Server IP address field can be left blank; however, if desired, the source code to set it up can be found at <https://github.com/m-lab/ndt-server>.
- The mLab server provides the NDT server information, so you don't need to prepare the server.
- As a best practice, we recommend dedicating a single sensor per build or site for such a test.

- The recommended NDT test cycle is once every 6 hours per floor.
 - h. Check the box next to iPerf3 to configure that as part of the test template (**Figure 66.**).

Performance Tests

Internet (NDT)

iPerf3 ⓘ

iPerf3 Server*

100.100.100.100

⊕ Add

UDP Bandwidth (Mbps)

150 ⓘ

Start Port

5201

End Port

5201

Figure 66.
Speed Test – iPerf3

Description:

- iPerf3 test was introduced in Cisco DNA Center Software Release 2.1.1 and enables the ability to conduct a sensor speed performance test by pumping traffic to a private iPerf3 server.
- You can add up to five iPerf3 servers and test up to 5 separate ports per server consecutively allowing a sensor to test up to 25 iPerf3 server instances during a single test cycle. These tests will be executed with a round robin method.
- The recommended iPerf3 test cycle is once every 6 hours per floor.

- i. Check the box next to IP SLA and select a QoS Condition to configure that as part of the test template (Figure 67.).

Performance Tests

- Internet (NDT)
- iPerf3 ⓘ
- IP SLA

Platinum ^

- Platinum
- Gold
- Silver
- Bronze

Figure 67.
Performance Tests – IP SLA

Description:

- In IP SLA testing, the sensor measures IP SLA performance using a UDP echo/jitter probe against a connected AP.
- When the sensor sends IP SLA traffic, the AP terminates the IP SLA traffic at the first hop, regardless of whether or not the AP is in traffic forwarding mode (local, Flex, or fabric).
- IP SLA traffic can choose different Wi-Fi Multimedia (WMM) User Priority (UP) tagging values to simulate wireless performance in various Quality-of-Service (QoS) conditions.

Table 4 depicts the WMM UP and Differentiated Services Code Point (DSCP) values associated with each selectable service level in the IP SLA performance test.

Service level	WMM UP	DSCP
Platinum	6	46 (EF)
Gold	5	34 (AF41)
Silver	2	18 (AF21)
Bronze	1	10 (AF11)

The test target SSID QoS level should be higher than the QoS value configured for the sensor IP SLA. For example, if the SSID QoS setting is Gold and the sensor IP SLA QoS setting is Platinum, the AP cannot prioritize Platinum.

Notes:

- IP SLA testing is supported on Wave 2 (Aironet 1800, 2800, 3800, and 4800 Series) and Wi-Fi 6 (Cisco Catalyst 9100) APs running AireOS Release 8.8.111 and later and Catalyst 16.12.1s and later.
- Only in Cisco DNA Center Software Release 2.1.2 and later can a destination target server be specified for sensor performance tests.

j. Check the box next to RADIUS and complete the various fields to configure that as part of the test template (**Figure 68.**).

Network Services Tests

DNS

RADIUS

<p>IP Address / Hostname*</p> <p>100.100.100.100</p> <hr/> <p>Shared Secret*</p> <p>..... SHOW</p> <hr/> <p>Port*</p> <p>1812</p> <hr/>	<p>User Name*</p> <p>Sensor</p> <hr/> <p>Password*</p> <p>..... SHOW</p> <hr/> <p>Protocol</p> <p>CHAP ▼</p> <hr/>
---	---

Figure 68.
Network Services Tests – RADIUS test

Description: In the RADIUS test, the sensor acts as a RADIUS authenticator and authenticates through a wireless device. The sensor can test the RADIUS server using PAP or CHAP.

Note: If you have a Wi-Fi onboarding test that includes 802.1X/EAP authentication, this RADIUS test is already covered as part of the onboarding test.

k. Check the box next to Web and enter a URL to configure that as part of the test template (Figure 69).

Application Tests

Host Reachability

Web

URL*

www.cisco.com

URL*

http or https... ✕ ⊕ Add

FTP

Figure 69.
Application Tests – Web test

Description: The application tests measure serviceability and time to connect to a specific application. This can include either HTTP or HTTPS URLs.

- I. Check the box next to FTP and enter the various FTP credentials to configure that as part of the test template (**Figure 70.**).

FTP

<p>Server IP Address*</p> <p>172.27.75.164</p> <hr/> <p>Transfer Type</p> <p>UPLOAD ▼</p> <hr/> <p>Upload Path/ Download File Path*</p> <p>/</p> <hr/>	<p>User Name*</p> <p>Cisco</p> <hr/> <p>Password*</p> <p>..... SHOW</p> <hr/> <p style="text-align: right;">⊕ Add</p>
--	---

Figure 70.
File transfer tests

Description: The file transfer tests will upload a file to or download a file from the specified FTP server.

Notes:

- Outlook Web Access supports only Exchange Server and not Office 365.
- The web test supports HTTP and HTTPS. You can use a FQDN as the URL.

- The name of the internal file that gets uploaded in an upload test is FTP_UPLOAD_FILE_[Sensor MAC Address].txt. When you choose **Download or Upload** or **Download**, choose a file that is smaller than 5 MB.
- Multiple FTP servers can be added as part of a single test template by clicking the **Add** button (**Figure 70**).
 - m. Check the box next to POP3, IMAP, or Outlook Web Access and fill in the various server names and credentials to configure that as part of the test template (**Figure 71**).

Email

POP3

Pop3 Server*
 ⊕ Add

IMAP

IMAP Server*
 ⊕ Add

Outlook Web Access

URL* User Name*

Password* SHOW ⊕ Add

Figure 71.
Email test

Description: The email test verifies the connection to an IMAP server over TCP port 143, a POP3 server over TCP port 110, or an Outlook Web Server by logging into the OWS (with on-premises Exchange server) and verifying access.

Note: Multiple email servers can be added as part of a single test template by clicking the **Add** button (**Figure 71**).

- n. At this point, you should have completed selecting the tests you want to be part of this template. Click Next.
- o. From the Select AP Coverage page, configure which band to test, the RSSI coverage threshold, and the number of test target APs per band (**Figure 72**).

Cisco DNA Center Create Sensor Test

Select AP Coverage

Choose the Coverage Target against which to run the Sensor test.

Band

2.4GHz

Test Coverage Per Sensor

Number of Target APs

Target AP RSSI Threshold

Band

5GHz

Test Coverage Per Sensor

Number of Target APs

Target AP RSSI Threshold

[Exit](#) [Previous](#) [Next](#)

Figure 72.
Configuring the number of APs and RSSI range for sensors to target

Note: The Target AP RSSI Threshold slider bar is inverted. In the example shown in **(Figure 72.)**, the sensor would be configured to target APs in an RSSI range of -70 to -35 dBm.

- p. Click Next **(Figure 72.)** to display the Summary page **(Figure 73.)**.

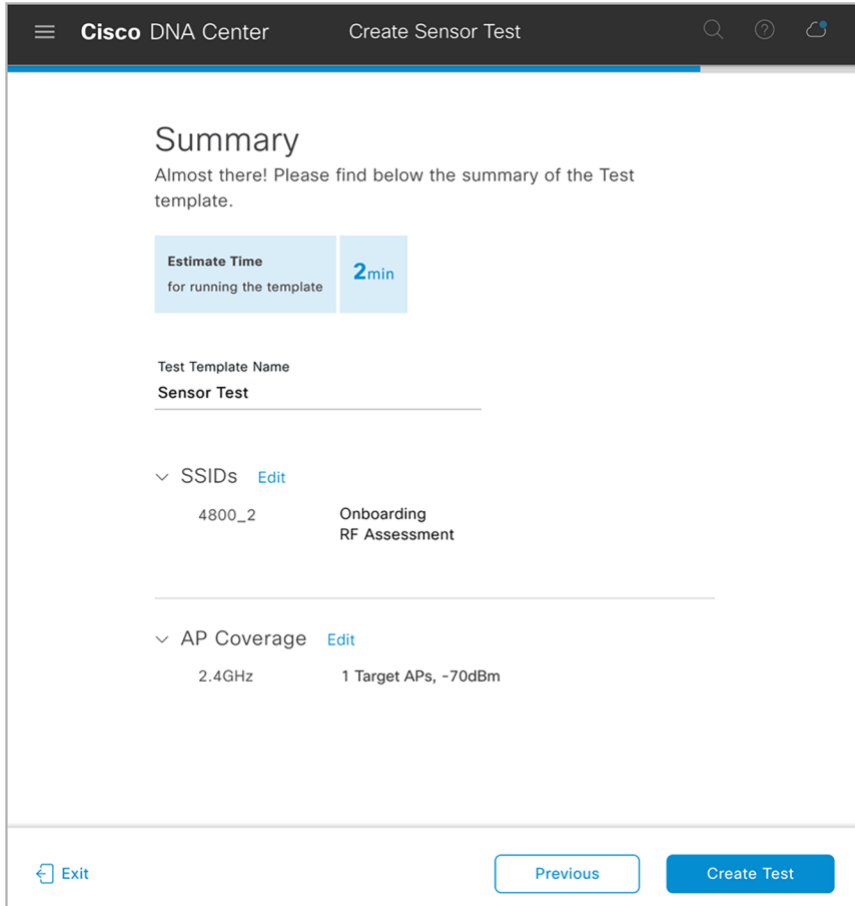


Figure 73.
Summary page to review the sensor tests configured

Description:

- The Summary page shows a recap of the configured sensor test options and allows you to review or go back to edit each section.
- Cisco DNA Center will calculate the estimated time required to run through the entirety of the tests once. The estimated test time is used to determine the sensor test interval.
 - q. Click Create Test (**Figure 73.**) to complete the sensor test creation process (**Figure 74.**).

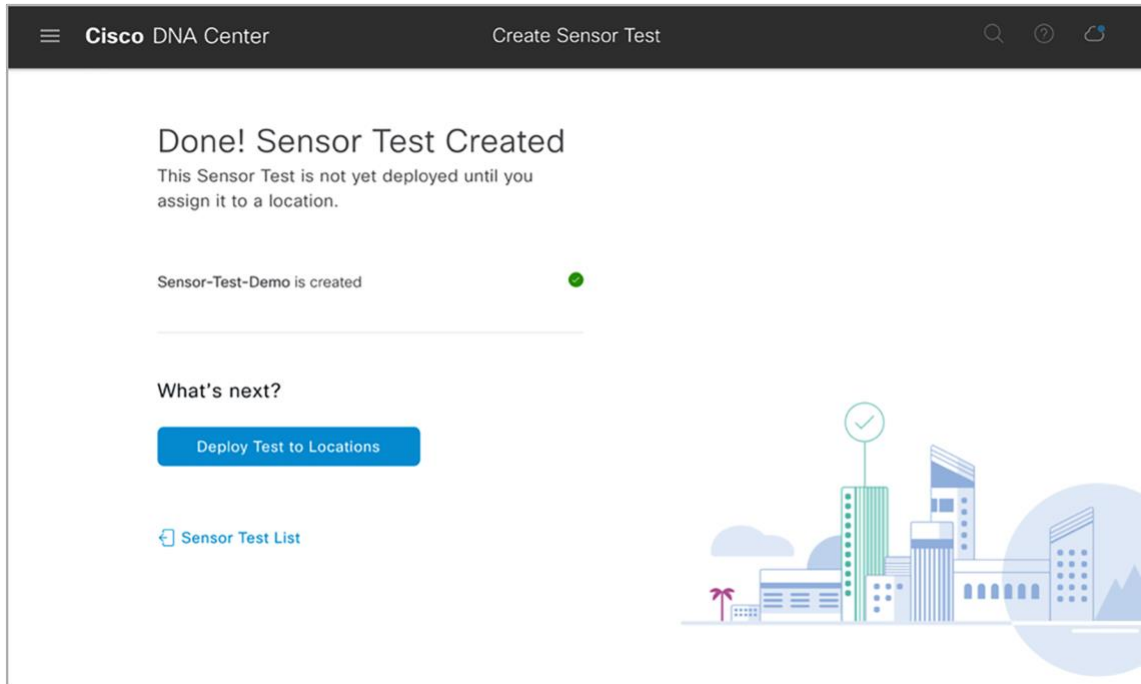


Figure 74.
Sensor test creation confirmation screen

- r. After you create the sensor test template, you can deploy a sensor test by clicking Deploy Test to Locations (**Figure 74.**), or you can navigate directly to the Test Templates page (**Figure 75.**).
- s. Click Deploy Test next to a test template you would like to deploy to a site (**Figure 75.**).

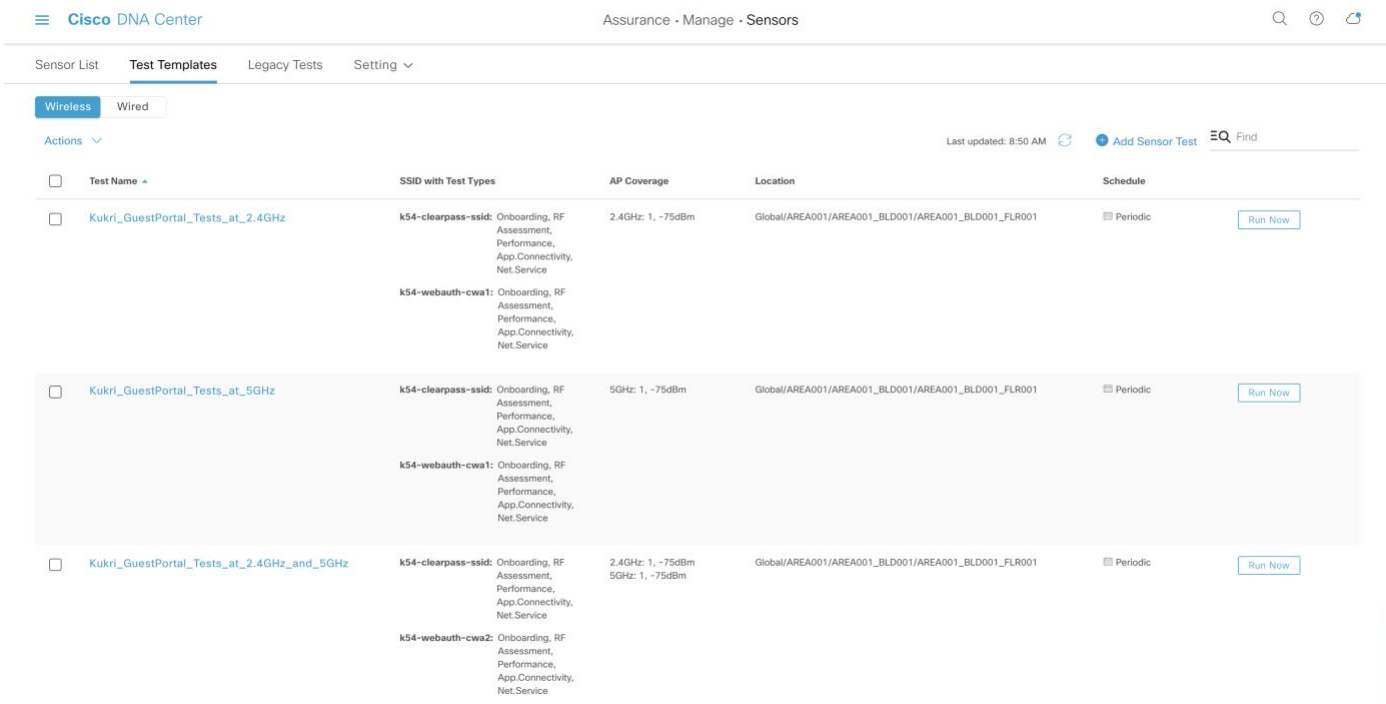


Figure 75.
List of sensor tests created

- t. From the sites hierarchy on the left, select the site(s) to deploy your test template to (Figure 76.).

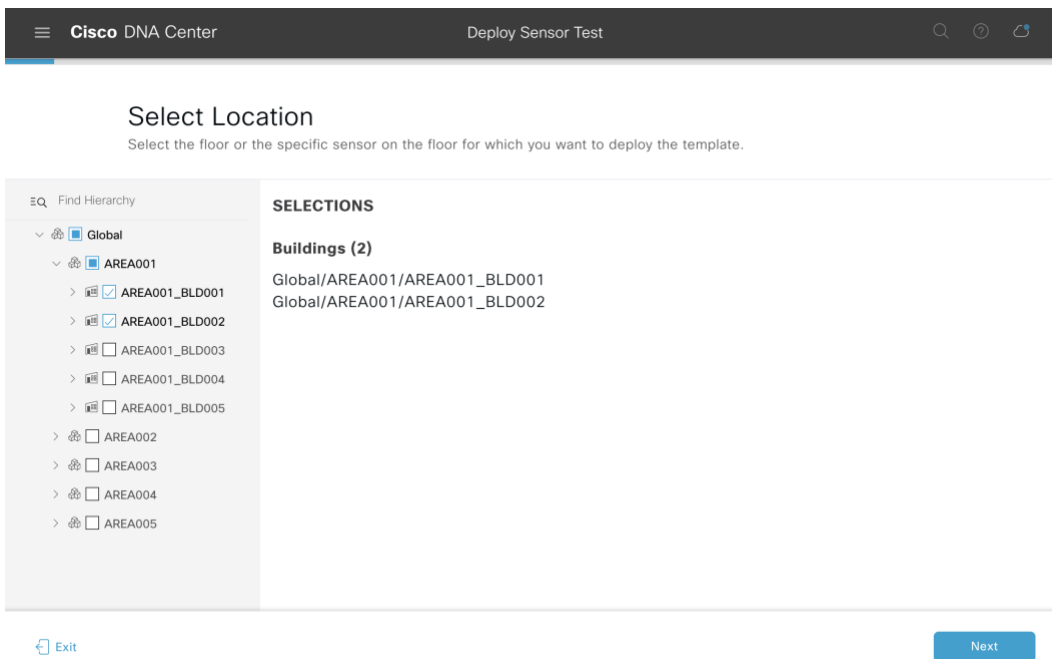


Figure 76.
Selecting buildings or areas when deploying test templates

- u. Optional – selecting individual sensors: If you would like to specify individual sensors to run the selected test, select the floor and you will be given an option to click the All Sensors button, which will allow you to select which sensors to deploy this test to (Figure 77.).

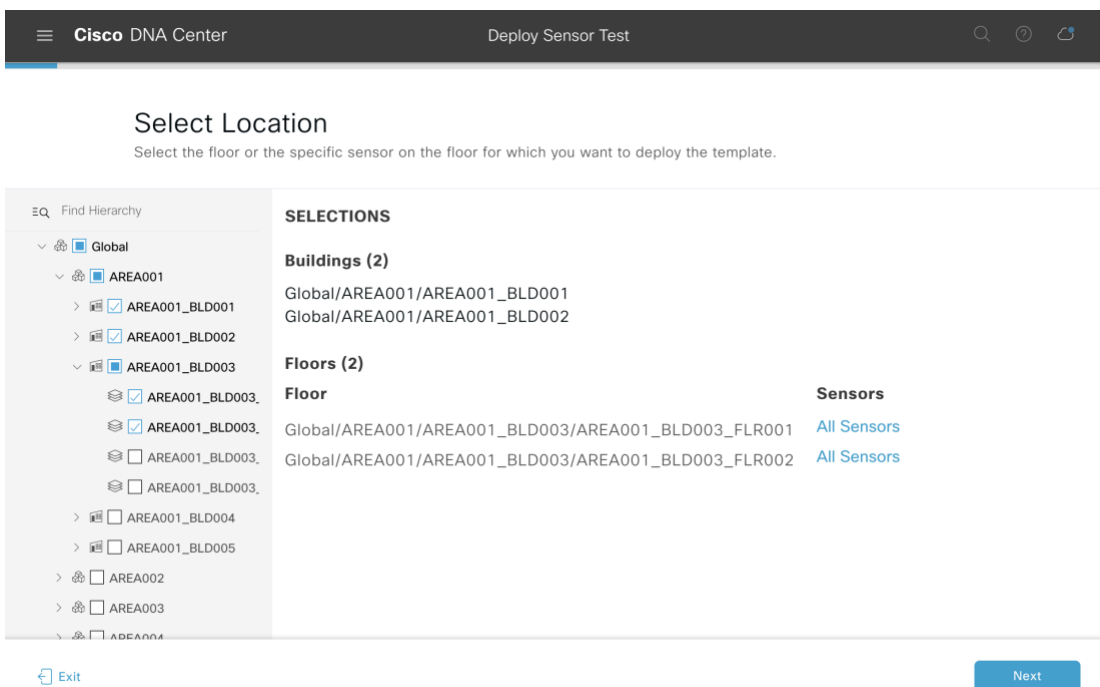


Figure 77.
Selecting individual floors when deploying test templates

- v. Optional – Selecting target APs: Expand the Target AP # column in each row to reveal the APs assigned to the same floor as each of the sensors.
- w. Selecting the checkbox next to the AP under each sensor will allow you to specify which AP each sensor will target during the test cycle. If none is selected, the sensor will test the number of APs configured within the test template using the RSSI threshold (**Figure 78.**)
 - i. **Note:** If more target APs are selected than what was configured within the test template, the number configured within the test template will be overridden. There no hard limit maximum to how many APs a single sensor can test per test cycle.
- x. Click save, then next to continue the workflow process (**Figure 78.**).

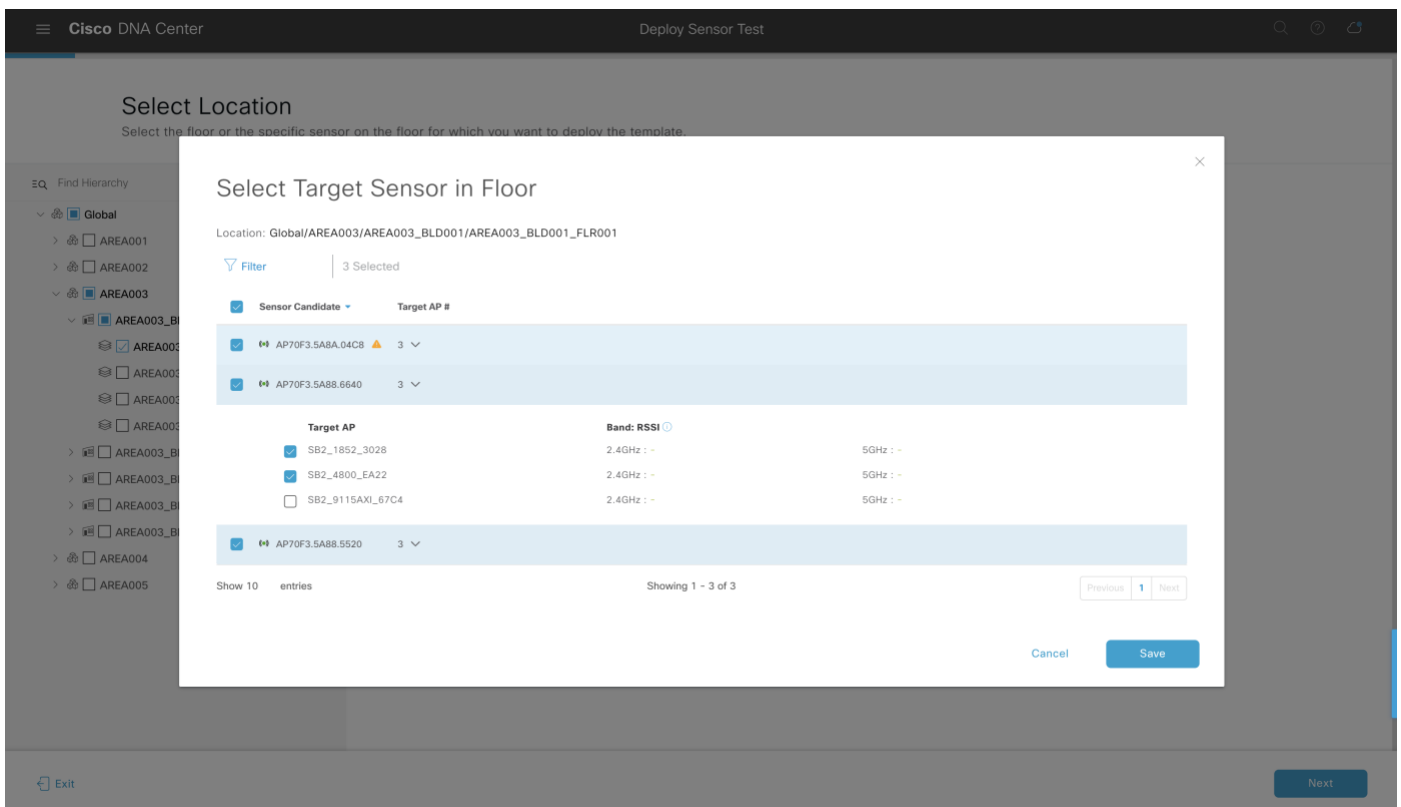


Figure 78.
Selecting individual sensors to deploy the test on

Notes:

- Each sensor can be assigned only one sensor test template; therefore, a warning that the test will be overwritten will be displayed in the form of a yellow triangle if there is already a template deployed to the select sensors.
- Starting with Cisco DNA Center Software Release 1.3.3, using an AP as a sensor is no longer supported, so APs are not selectable as sensor candidates.

- y. Select a sensor test interval to determine the frequency with which the sensor runs the test, then click Next (Figure 79).

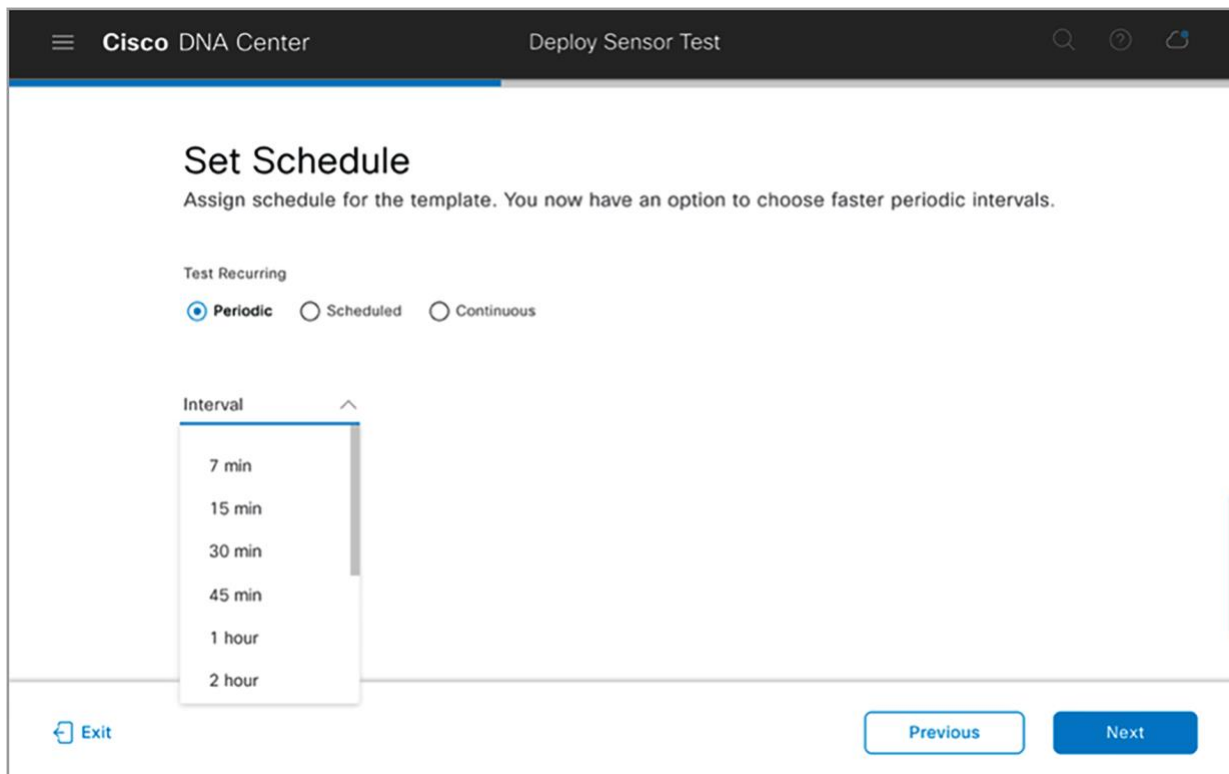


Figure 79.
Configuring the schedule for the sensor test

Description: This page enables you to specify how often the sensor test will run: periodically, on a specified schedule, or continuously.

- **Periodically:** This option allows you to select a frequency by time (between 7 minutes and 24 hours) with which the sensor will run the assigned test.
 - **Example:** If you select 7 minutes, the sensor will run the test once every 7 minutes.
 - **Note:** The sensor test repeat interval must always be higher than the estimated test cycle. If the sensor test estimated time is 25 minutes, the minimum repeat interval is 30 minutes, and so the 7 min and 15 min options are disabled in the drop-down list.
- **Scheduled:** This option allows you to select a specific day of the week and time at which the sensor will run the assigned test.
 - **Example:** A sensor test can be configured to run only on weekdays or only during off-hours.
- **Continuous:** This option will allow the sensor test to run one after another, without a gap between, forever or until manually stopped.
 - **Note:** This option needs to be selected with caution, because it can potentially overload the network or RADIUS server if a lot of performance testing is included in the test.
- **Recommendation:** The recommended best practice is to avoid setting the **Continuous** or a low **Periodic** option when assigning sensor test templates to a large number of sites because it could potentially affect network performance.

- Use the **Continuous** option to select sensors in locations that you suspect have a higher frequency of wireless issues.
- You can also run some continuous sensor onboarding tests temporarily to verify successful network deployment.
 - z. On the Summary page, ensure that you've selected the correct Test Template Name, Location, and Schedule. Once confirmed, click the Deploy Test button (**Figure 80.**).

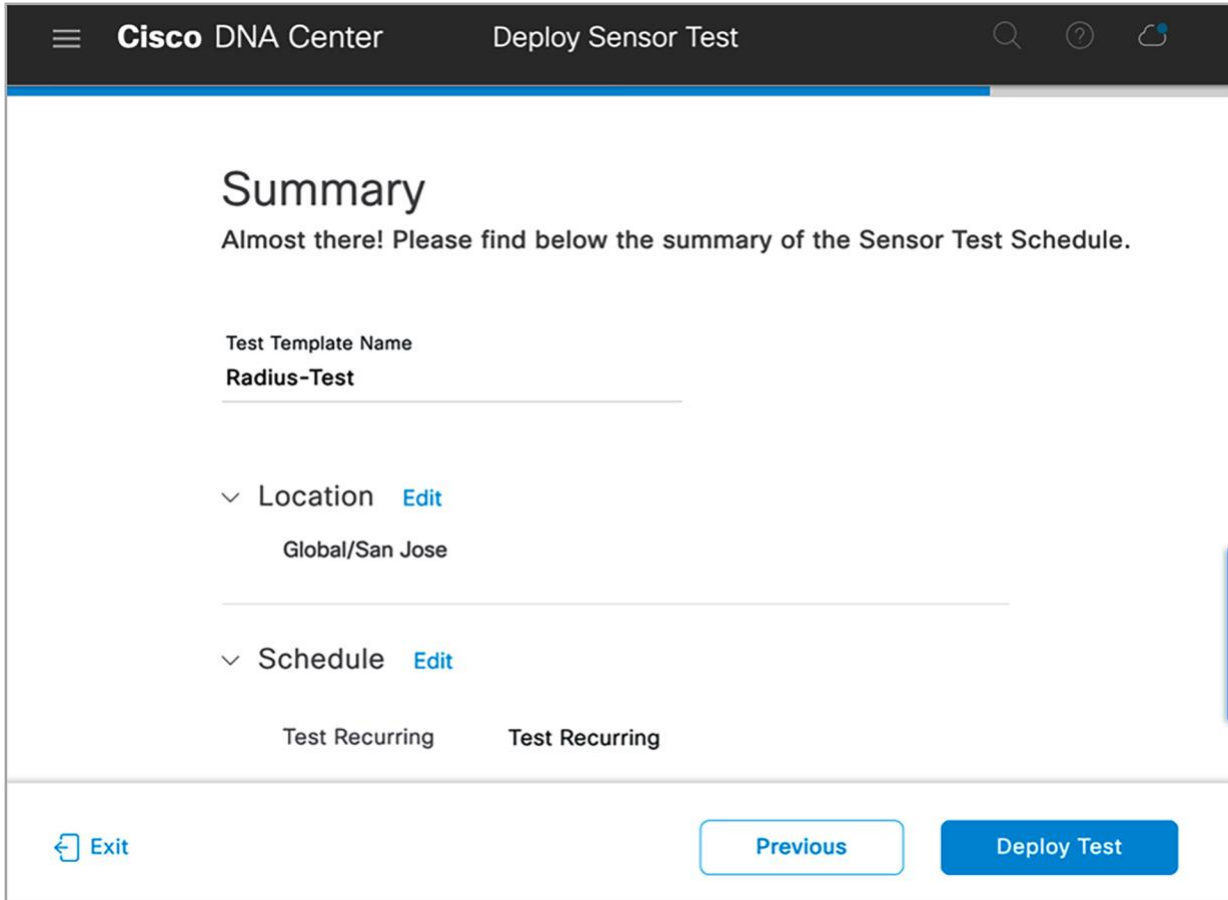


Figure 80.
Summary page for scheduling a sensor test

New sensors: Whenever a new sensor is claimed to a floor, the sensor will automatically download and begin running the test deployed on that floor.

Existing sensors: The sensor runs a heartbeat process to Cisco DNA Center every minute through a dedicated backhaul channel (wired or wireless), and Cisco DNA Center informs the sensor of any new or updated sensor tests. Whenever a new or updated sensor test configuration is detected, the sensor will immediately restart the testing.

Note: The sensor test results may not be updated immediately, because the sensor test is updated only after its first interval has passed.

Monitor sensor health

Wireless Sensors dashboard

Description: Cisco DNA Center provides a global view of the wireless sensor test results in an intuitive heatmap view. This view allows you to determine potential issues and performance problems from an end-device perspective.

1. Open the hamburger menu and click Assurance and then Wireless Sensors.
 - a. View the Wireless Sensors dashboard for test results a couple of minutes after the first round of testing has completed (**Figure 81.**)
 - b. Optional SSID and band filter: To filter the Wireless Sensors dashboard to show only data for specific sites, click the Multiple Sites button in the top right corner of the screen, and select a site (**Figure 81.**)
 - c. Optional site hierarchy filter: To filter the Wireless Sensors dashboard to show only data from a specific band or SSID, click the Filter button in the top right corner of the screen, and make a selection (Figure 74).
 - d. Optional network time travel: Like all Assurance pages on Cisco DNA Center, the Wireless Sensors dashboard provides users the ability to view data back in time for up to 14 days. You can do so either by clicking the date, which provides a drop-down menu that allows you to specify the date and time to view, or by clicking the left and right arrows to the right of the time bar (**Figure 81.**)

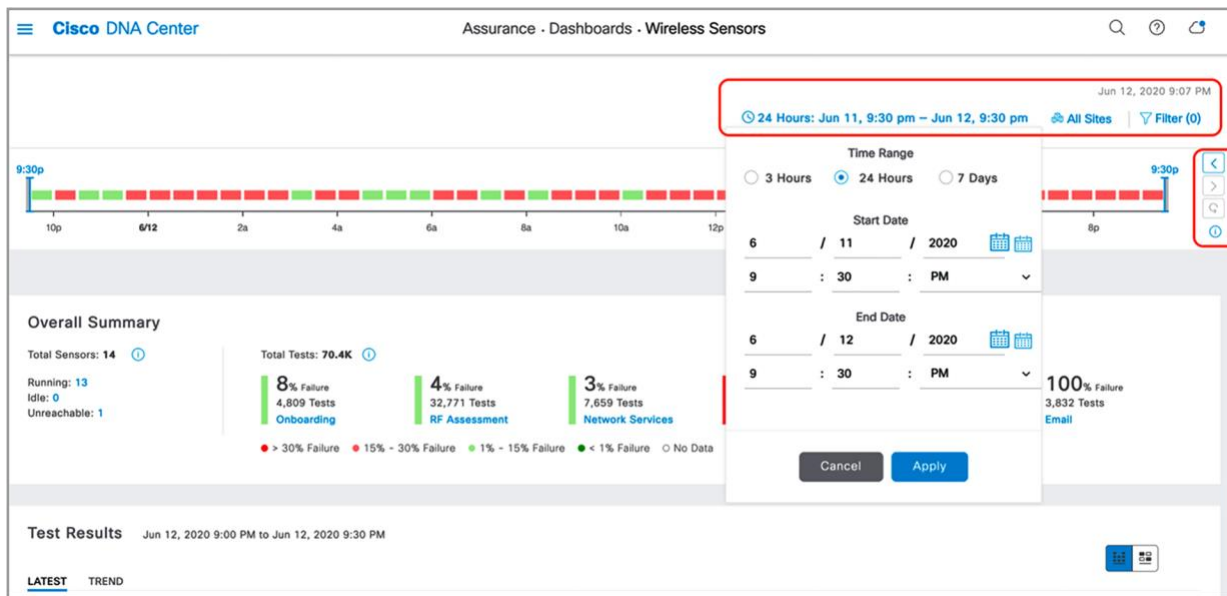


Figure 81.
Wireless Sensors dashboard

Overall Summary dashlet: The purpose of this dashlet is to provide numerical statistics regarding the number of tests run and the number that failed.

- e. Click each of the test types within the heatmap (Onboarding, RF Assessment, Network Services, Performance, App Connectivity, and Email Test) to see a drilled-down view of the test results (**Figure 82.**)

Test Results dashlet: The purpose of this dashlet is to provide users with a visual breakdown of the test results and the reason why they occurred.

- f. The top half of the Test Results dashlet displays a summary of the test results (Figure 82).
- g. To filter the insights by specific locations and/or tests, click the Sites and All Tests drop-down menus to make a selection (Figure 82).
- h. View the heatmap in the bottom half of the Test Results dashlet to visualize the sensor test breakdown for each configured test (Figure 82).

Note: The heatmap is categorized based on test category and location where the test was run. The heatmap is also always sorted by worst to best result, which enables you to easily interpret the most problematic areas within the network.

- i. To search and filter the heatmap, type a location or sensor name in the search bar located above the heatmap (Figure 82).

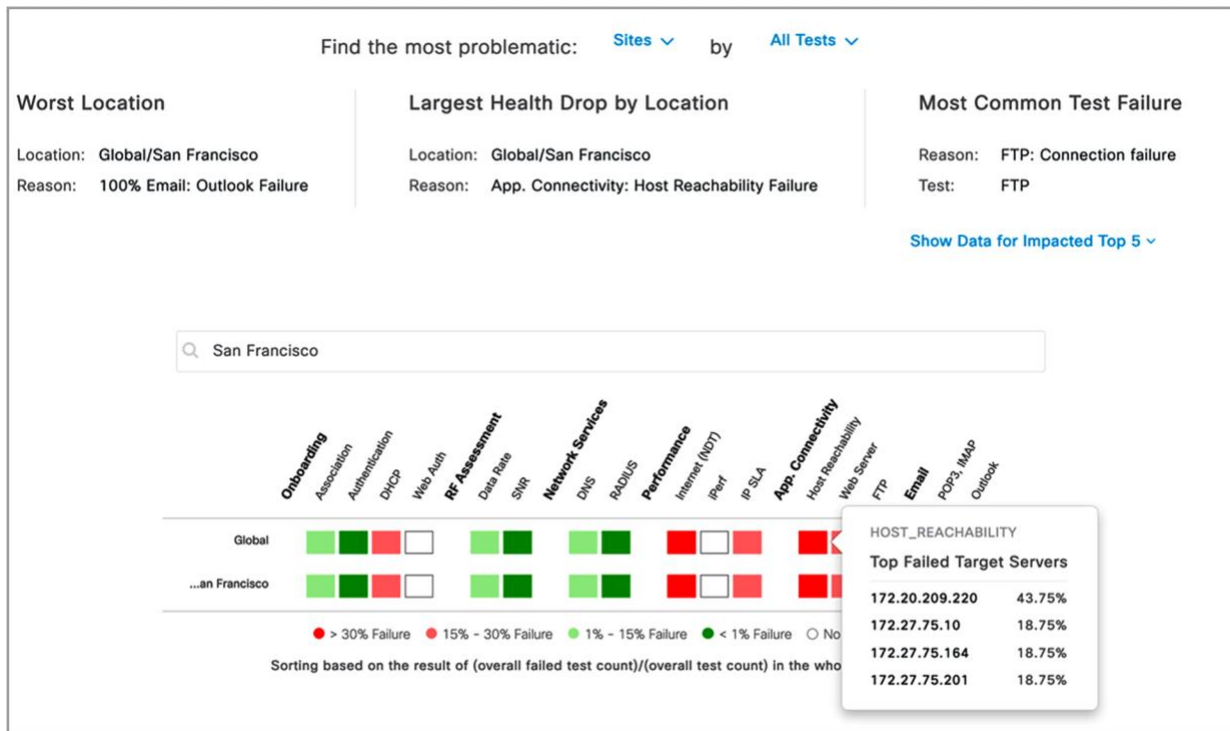


Figure 82.
Wireless Sensors dashboard Test Results dashlet

Note: Hovering your cursor over the server-based test type heatmaps will display the Top Failed Target Servers (up to 5). This is not applicable to non-server-based tests.

- j. To replace the entire heatmap with a dedicated insights card view, click the rightmost button in the top right corner of the Test Results dashlet (Figure 83).

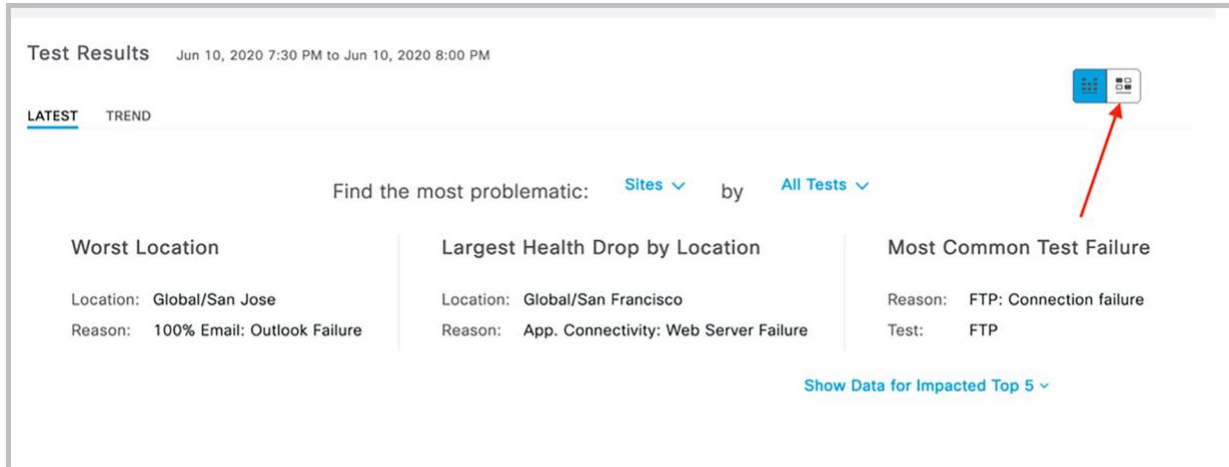


Figure 83.
Test Results Insights View button

- k. Observe that the page has changed into an insights view (**Figure 84.**).
- l. Just as in the heatmap view, to filter the insights by specific site locations and/or tests, click the Sites and All Tests drop-down menus to make a selection (**Figure 84.**).

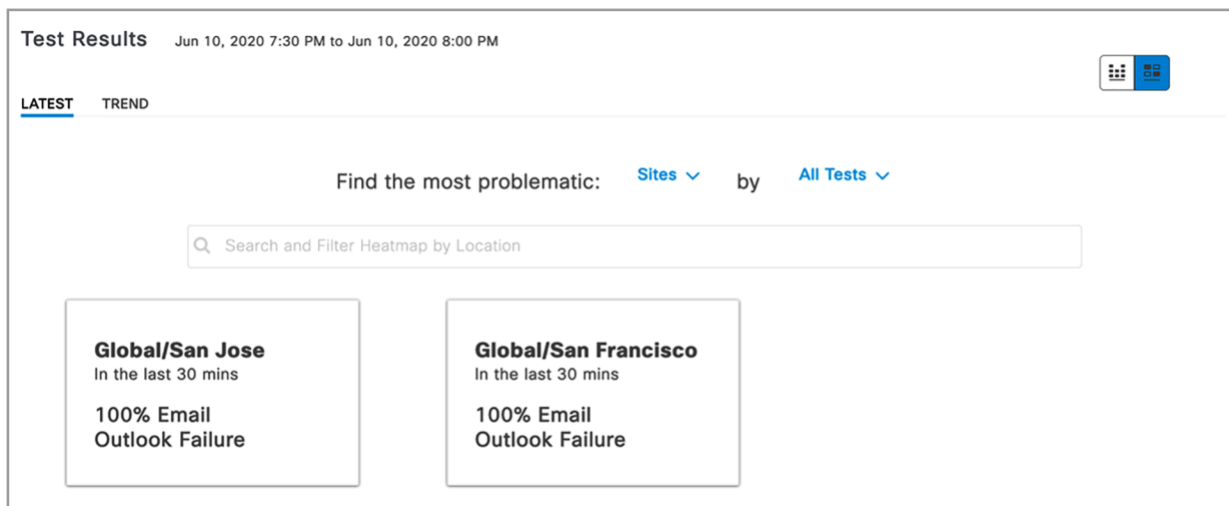


Figure 84.
Test Results insights view

The color code threshold determines the percentage of failed cases that indicate a certain level of failure and is classified by four different colors (**Figure 85.**).

- m. To customize the color code threshold, click the pen button within the bottom right side of the Overall Summary dashlet, make your change, and then click Save (**Figure 85.**).

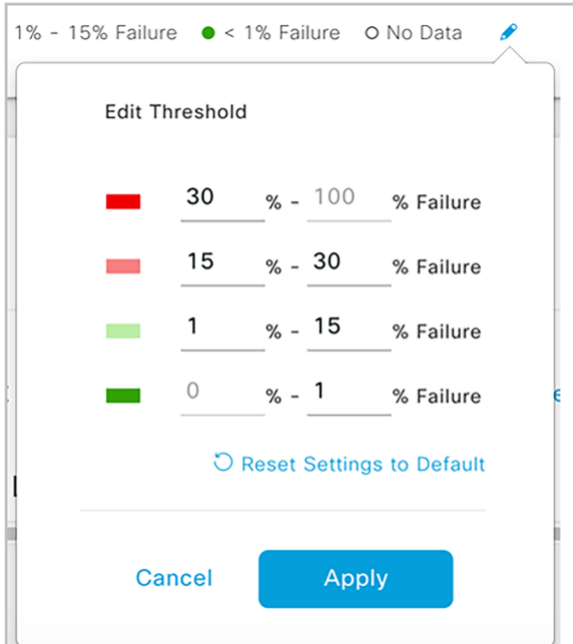


Figure 85.
Editing the color code threshold

- n. Click the SNR heatmap test result to see a cognitive navigation and drill-down view (**Figure 82.**).
- o. From this view, you can easily determine the Location, AP, or Band in which the failures are occurring by clicking any of the top N filters (**Figure 86.**).

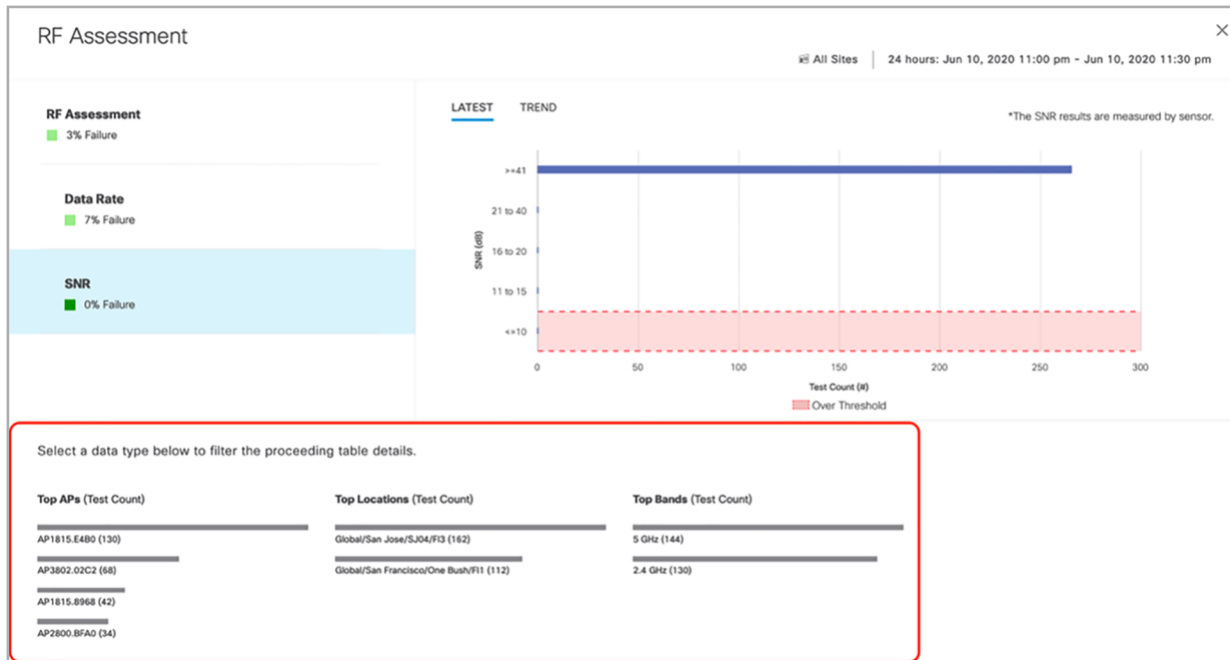


Figure 86.
RF Assessment – SNR sensor test drill-down view

Note: Each instance of an **RF Assessment** test result captures RF performance (RSSI, SNR, transmit/receive [Tx/Rx] rate, Tx retries) during the sensor test. For any test failure case, the drill-down view shows the reason for the failure.

- p. Click the Trend button within any of the sensor test drill-down views to see the test data for the past 24 hours (**Figure 87.**)
 - **Note:** This period can be configured to be 3 hours or 7 days by clicking the date button at the top of the Wireless Sensors dashboard.

When in the trend chart view, in addition to capturing the success and failure in the network, the chart will display a comparison between the best and worst floors at 30-minute intervals.

- q. You can add additional locations to compare by clicking the Add Custom Location button when displaying a trend chart (**Figure 87.**)

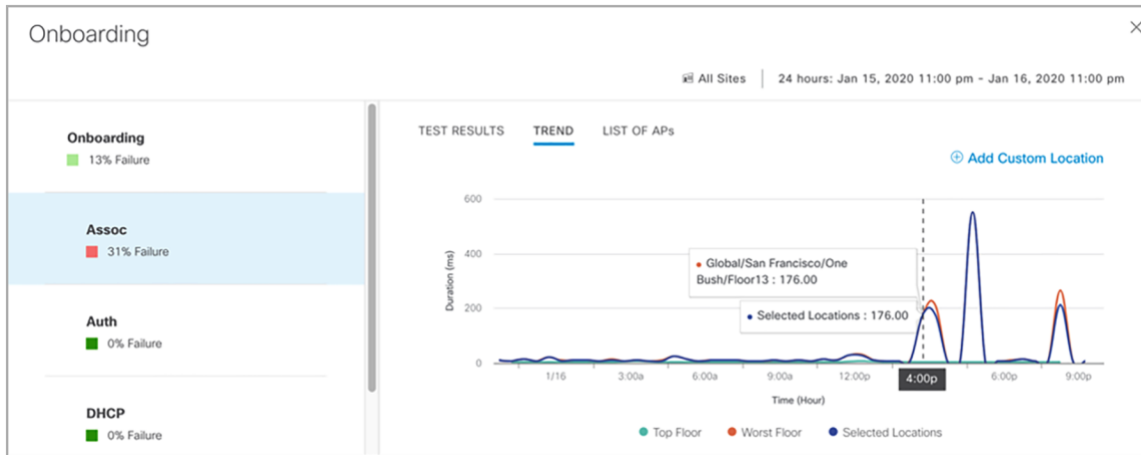


Figure 87.
Onboarding – Association sensor test drill-down view

- r. Click the DNS heatmap under the Network Services category to switch to a drilled-down view (**Figure 88.**)
 - **Observation:** In Figure 74, the DNS drill-down test result provides insight into the times at which DNS response times spiked in the past 24 hours.

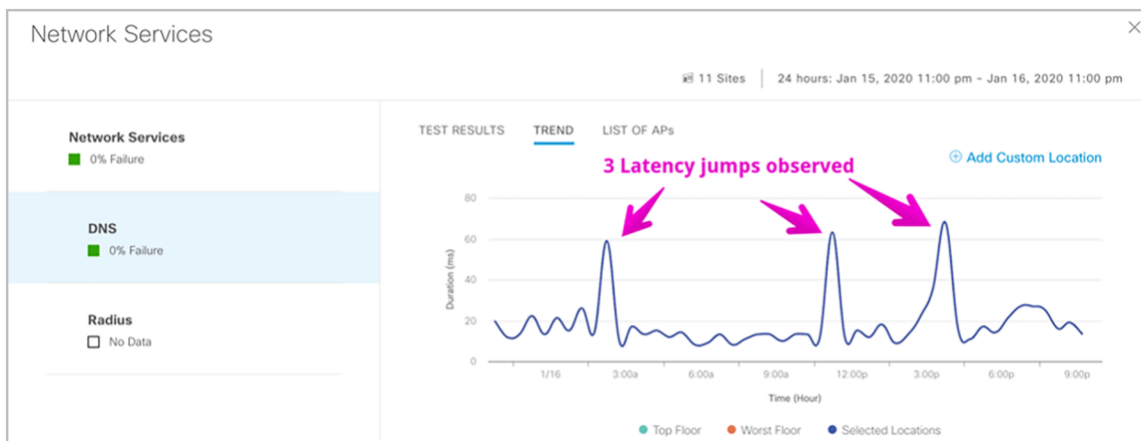


Figure 88.
Network Services – DNS sensor test drill-down view

- s. Click the Data Rate heatmap under the Network Services category to switch to a drilled-down view (**Figure 89.**)

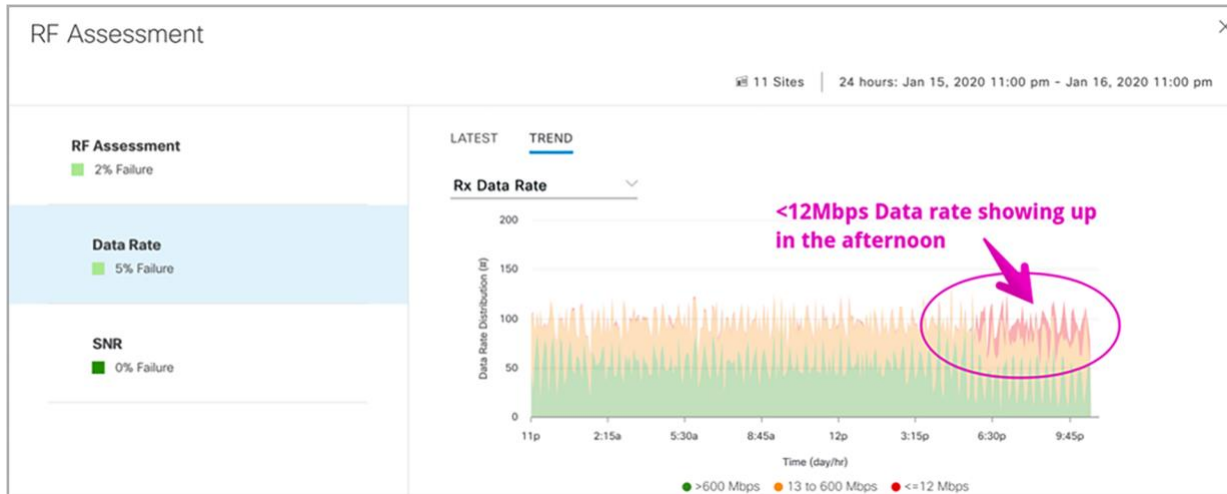


Figure 89.
RF Assessment – Data Rate sensor test drill-down view

- t. Click the X at the corner of the drill-down view to return back to the Wireless Sensors dashboard, then click the Trend button under Test Results to view the 24-hour trend of the heatmap (**Figure 90.**).
- Click the left and right arrows to navigate back or forward in time.

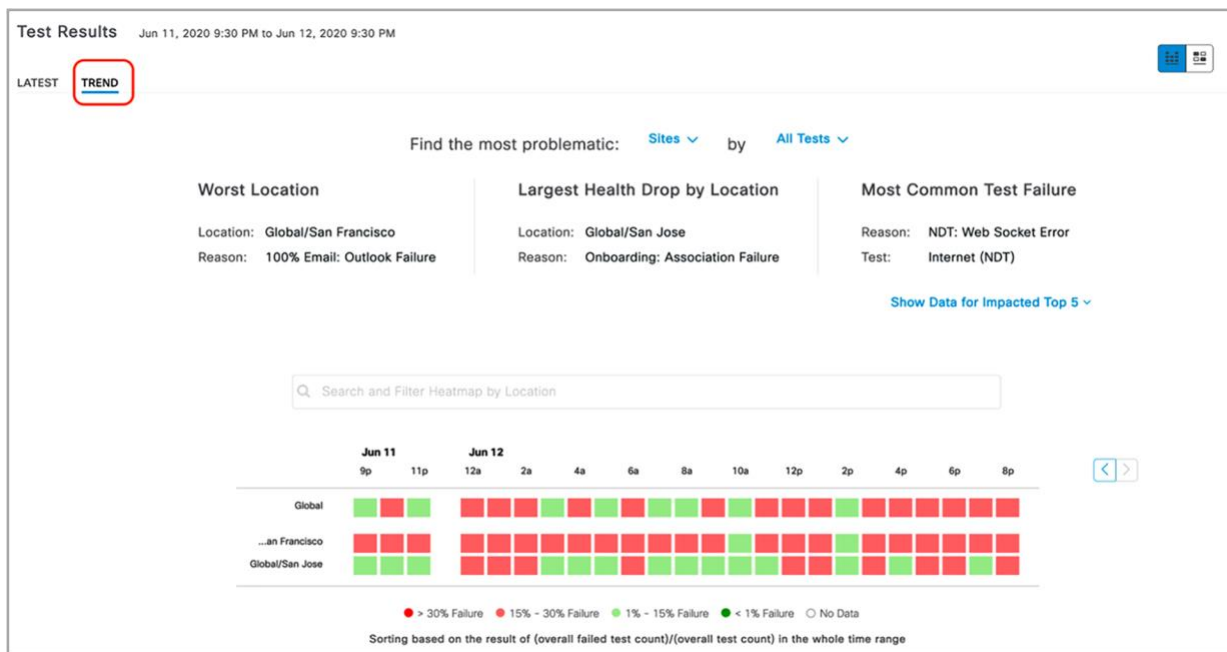


Figure 90.
Sensor test result heatmap view and insights view

Note: The heatmap is always shown in sorted fashion, from worst (top) to best (bottom).

- u. Click Show Data for Impacted Top 5 to view the worst buildings, largest health drop by buildings, and most common test failure (**Figure 91.**).

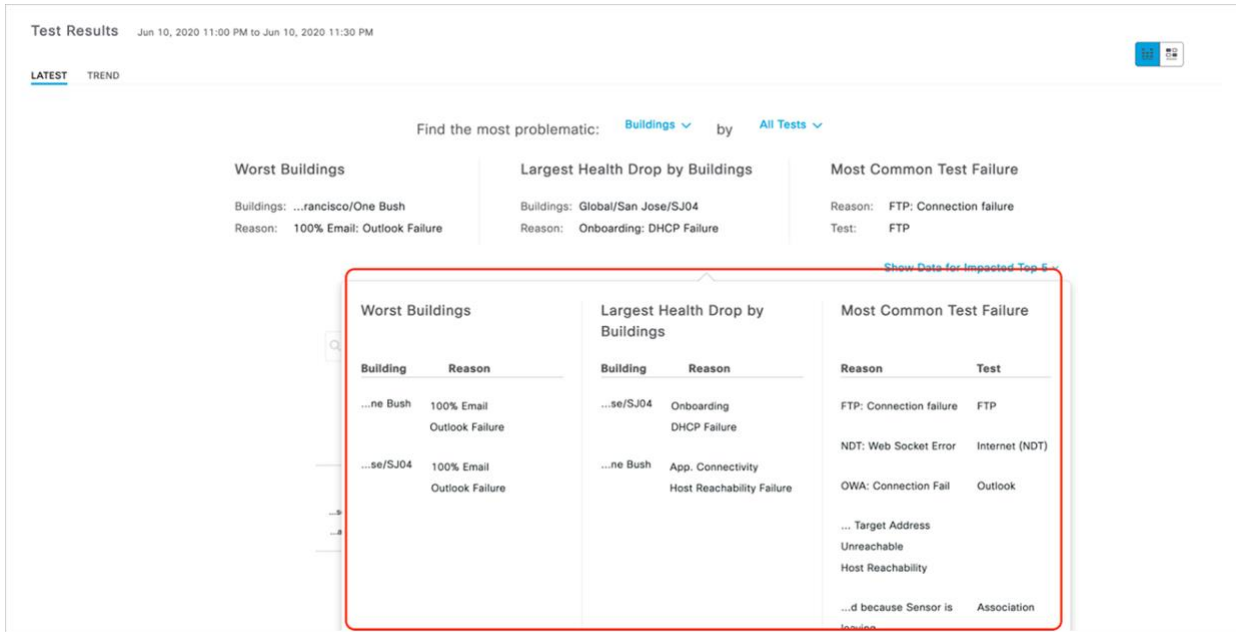


Figure 91.
Top failed sensor tests based on location

Sensor 360

The **Sensor 360** page displays all the details of a specific sensor device, from device details to sensor test results with heatmap and network time-travel bar, sensor performance trends, and neighbor AP list with floor maps, event logs, and so on.

1. Click the name of a sensor from any page (Wireless Sensors dashboard, Inventory, etc.) to enter the Sensor 360 page (**Figure 92**).

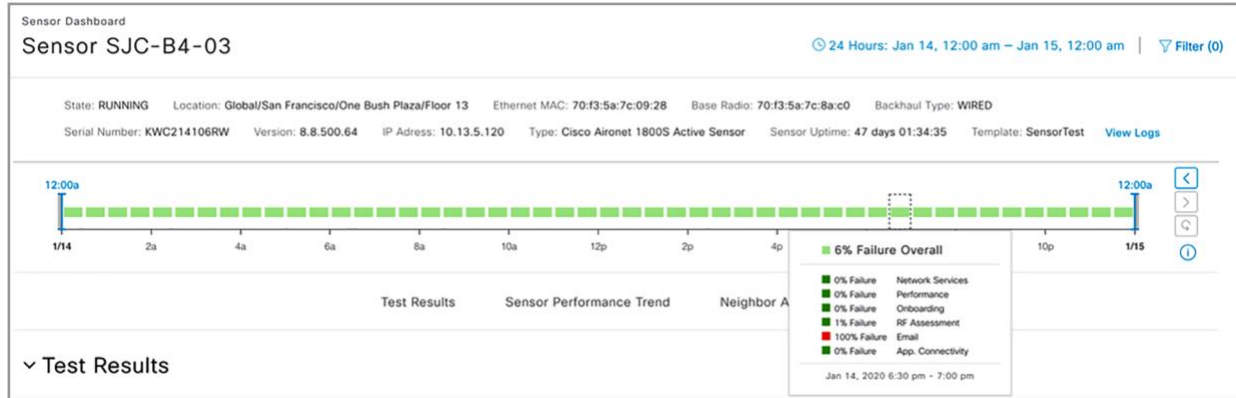


Figure 92.
Sensor 360 page

Note: The **Sensor 360** page also includes a sensor test results bar based on the test success percentage rate as well as navigation and filter rules similar to the Wireless Sensors dashboard.

- a. Scroll down on the Sensor 360 page to view the test results heatmap, which is categorized by AP (**Figure 93**).



Figure 93.
Sensor 360 dashboard

Note: The Sensor 360 heatmap is designed with the same philosophy as the Wireless Sensors dashboard, but the Sensor 360 heatmap provides an additional level of detail by showing the test results per AP.

- b. Scroll down further on the Sensor 360 page to view a trend view chart that can be toggled to show different test types and is categorized by top sensor, worst sensor, and current sensor (**Figure 94.**).
- c. To add sensor test result data from other locations to this chart (which by default shows only data directly related to this sensor), click the Add Customer Location button and select a site (**Figure 94.**).



Figure 94.
Sensor Performance Trend chart

- d. To view all APs neighboring your sensor, scroll down to the Neighbor APs dashlet within the Sensor 360 page (**Figure 95.**).

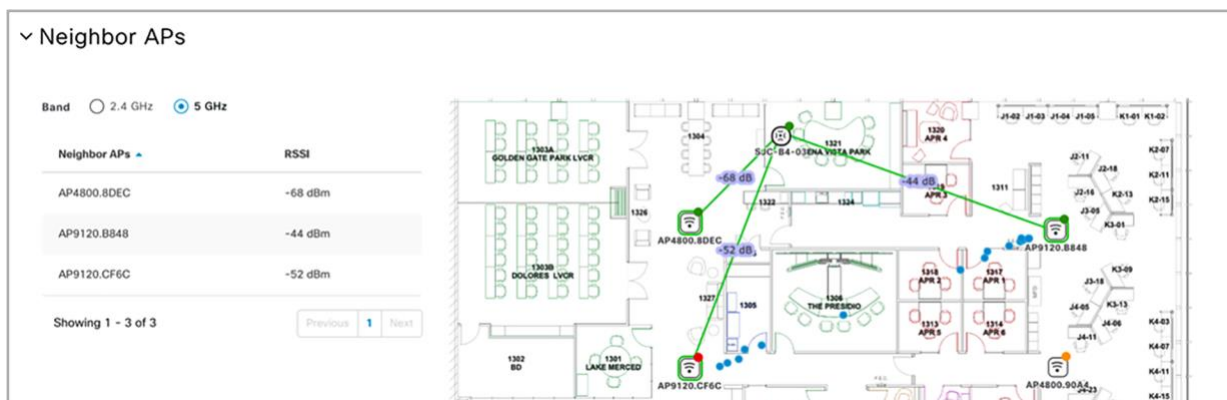


Figure 95.
Neighbor AP map view

Note: The Neighbor AP dashlet provides all of the neighbor-scanning AP results and shows a visual relationship between the sensor location and the deployed AP location.

Sensor global issues

Description: The Issue Settings page depicts the various sensor test failures that can occur when running the sensor tests. This page provides the ability to enable or disable a failure alert as well as to change the priority level.

When two or more sensors on the same floor fail a test in a 30-minute period, the sensor can raise an issue based on the failed test type. These sensor issues are all global issues, meaning that the sensor issue from any floor is escalated and shown in the first **Issue dashboard** page.

1. To view the sensor-specific issue settings, open the hamburger menu and click Assurance > Issue Settings, then click Sensor for the Device Type to filter the page by sensor issues (**Figure 96.**).

- a. Click a sensor Issue Name to toggle its enablement and/or change the priority (**Figure 96.**).

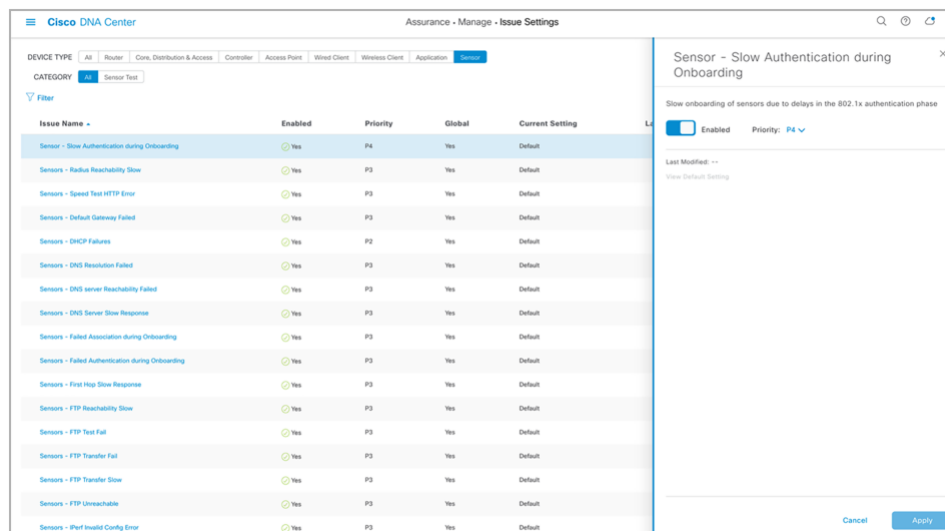


Figure 96.
Sensor issue settings

Note: In Cisco DNA Center Software Release 1.3.3 and later, sensor issues are also exportable from the **Issue dashboard** page.

Troubleshooting

Description: The purpose of this section is to provide you with different methods to troubleshoot any issues seen with your sensor.

Sensor CLI

For troubleshooting the sensor, you can use a console cable, SSH, or a sensor support bundle (described in the next section) that is retrievable from the **Sensor 360** page.

The sensor supports SSH; however, the feature is disabled by default. Only limited day-0 SSH is enabled before the sensor is connected to Cisco DNA Center. After the sensor is provisioned in Cisco DNA Center, day-0 SSH is disabled again.

1. To manually reenble SSH on your sensor(s), open the hamburger menu and click Assurance > Sensors, then select the sensor(s) you would like to enable SSH on. Hover your cursor over the Actions drop-down menu, click Edit SSH, and then enter your desired username and password (**Figure 97**).

The screenshot displays the Cisco DNA Center interface. On the left, a sidebar shows a hierarchy of areas (AREA001 to AREA005). The main content area is titled 'Assurance · Manage · Sensors' and shows a 'Sensor List' for 'Wireless' sensors. A table lists six sensors with columns for Sensor ID, Status, SSH, LED, and Location. The 'SSH' column for all sensors is currently 'Off'. A modal window titled 'Edit SSH' is open on the right, showing a toggle switch for 'SSH' (currently off), a 'Username*' field with the value 'Sensor_User', and a 'Password*' field with masked characters. Below the password field, there are instructions for password requirements: 'Password must: - Have at least one lowercase character, - Have at least one uppercase character, - Include at least one number and symbol, - Be at least 8-32 characters long'. At the bottom of the modal are 'Cancel' and 'Save' buttons.

Sensor	Status	SSH	LED	Location
AP70F3.5A8A.04C8	Idle	Off	On	Global/AREA003/AREA003_BLD001/AREA003_...
AP70F3.5A8A.0330	Running	Off	On	Global/AREA001/AREA001_BLD001/AREA001_...
AP70F3.5A88.6640	Idle	Off	On	Global/AREA003/AREA003_BLD001/AREA003_...
AP70F3.5A88.60E8	Running	Off	On	Global/AREA001/AREA001_BLD001/AREA001_...
AP70F3.5A88.5520	Idle	Off	On	Global/AREA003/AREA003_BLD001/AREA003_...
AP70F3.5A7E.04F0	Running	Off	On	Global/AREA001/AREA001_BLD001/AREA001_...

Figure 97.
Enabling SSH access on selected sensors

Note: The username and password configured are applied on both SSH and console access.

- a. To use any sensor show or config commands, SSH into the device.

Note: Keep in mind that sensor-specific commands have a prefix of `show/config dot11`.

Sensor command examples:

```
Sensor-5C98>show dot11 sensor
Heartbeat Show WSA Agent Heartbeat Information
```



```

Neighbors      Show dot11 sensor neighborlist
prov-ssid     Show dot11 sensor provisioning SSID list
route         Show dot11 sensor route
scan          Show WSA Scanned Information
stats         Show dot11 sensor statistics
synthetic     Show WSA Synthetic Tests Information
test          Show WSA Test Information
wpas-log      Show dot11 sensor WPA-Supplicant log
wsa-log       Show dot11 sensor WSA log

```

Event log and sensor support bundle

1. To view sensor troubleshooting logs, navigate to the Sensor 360 page and click View Logs. The Event Log page will show the sensor event logging viewer and provides a downloadable sensor TAC support bundle (**Figure 98.**).

The screenshot displays the Cisco DNA Center interface for a specific sensor. On the left, the 'Sensor Dashboard' for 'Sensor Sensor.3910' is visible, showing its state as 'RUNNING', location as 'Global/San Jose/SJ04/F...', backhaul type as 'WIRED', and serial number as 'KWC21400EG...'. Below this is a heatmap showing activity from 5:30p to 2a. The main 'Event Logs' panel on the right contains a table with two entries:

Time	Details
May 30, 2020 11:50 am	Claiming a device with serial KWC21400EGH and pid AIR-AP1800S-B-K9.
May 30, 2020 11:50 am	Triggering a preview for site-based Day 0 Configuration for device with serial KWC21400EGH and pid AIR-AP1800S-B-K9.

At the bottom of the interface, there are two buttons: 'Request Support Bundle' (with a timer 'Available in: 3-5 mins') and 'Download Support Bundle' (with 'Last Updated: --').

Figure 98.
Sensor event logs

The sensor support bundle can be retrieved from the sensor and downloaded to Cisco DNA Center by clicking the **Request Support Bundle** button. Once the downloadable support bundle becomes available, an updated time under the **Download Support Bundle** button is displayed.

Note: The support bundle tar file includes all the sensor logging information that is often requested by Cisco TAC, and you can easily attach it to your communication with Cisco TAC.

Reset sensor configuration

1. Option 1 – factory reset via CLI: To reset the sensor’s configuration to the factory default settings, enter the following command:

```
clear dot11 sensor
```

The sensor also provides a hard-reset button on its side panel. This reset button can be used to reset the sensor back to its factory default settings and to erase all configuration, including any static Cisco DNA Center IP addresses.

- a. Option 2 – factory reset via physical button: To reset the sensor’s configuration to the factory default settings, press and hold the Reset button for a minimum of 20 seconds (**Figure 99.**)



Figure 99.
Sensor hard-reset button

Show heartbeat status

A heartbeat between Cisco DNA Center and the sensor occurs every 60 seconds.

1. Run the following command to see the status and last success time of the heartbeat. If there is a failure, confirm connectivity to Cisco DNA Center.

```
show dot11 sensor heartbeat status
```

Sensor heartbeat failure condition:

```
AP70F3.5A7A.5C98#show dot11 sensor heartbeat status
```

```
AP70F3.5A7A.5C98# // No response or message
```

Configuration the sensor received from Cisco DNA Center through the WLC:

```
# show dot11 sensor test config
```

```
Test Config Received Time: 2019-05-25 22:20:44.912481
```

```
{  
  "advancedConfig": {  
    "rssiThreshold": -75  
  },  
  "testConfig": [  
    {  
      "name": "Onboarding",
```

```
"bands": "BOTH",
"scheduleInDays": 0,
"connection": "WIRELESS",
"frequency": {
  "value": 1,
  "unit": "HOURS"
},
"ssids": [
  {
    "username": "Sensor2",
    "validTo": 0,
    "layer3webAuthsecurity": null,
    "numAps": 0,
    "id": 0,
    "authTypeRcvd": null,
```

Results of the sensor tests:

```
# show dot11 sensor test result all
```

```
Test No: 1.1, Name: Onboarding, Time: 2019-05-25 22:52:10.931352
```

```
Test Results: {
```

```
  "macAddress": "70:f3:5a:78:6b:60",
  "testCompleted": "no",
  "type": "DEDICATED",
  "connectivityStats": {
    "wireless": {
      "status": "SUCCESS",
      "channelWidth": 20,
      "connectionTime": 8,
      "bssid": "70:69:5A:51:3F:A0",
      "txDataRate": 78000,
      "responseTimesInMillis": {
        "probeRequest": 53,
        "authenticationRequest": 84,
        "handshake": 1477,
        "associationRequest": 36
      },
    },
    "snr": 42,
    "rssi": -40,
    "channel": 1
  },
```

Details for each test that the sensor will execute:

```
# show dot11 sensor synthetic work list
```

Group	Suite	SSID	Access Point	Radio			
1	Global/San Francisco/One Bush St/Flr13:!	_1800S_Wired	@CorpSSID	70:69:5a:51:3f:a0 802.11b			
	RSSI	Frequency	Skip	Repeat	Min Time	Max Time	Avg Time
	-42 dBm	1 HOURS	0	0	01:82.39	01:82.39	01:82.39
Test Name	Pass	Fail	Latest	Min Time	Max Time	Avg Time	
1	Onboarding	1	0	Pass	00:15.05	00:15.05	00:15.05
2	IpslaSender	0	1	Fail	N/A		
3	DNS	1	0	Pass	00:05.46	00:05.46	00:05.46
4	Ping	1	0	Pass	00:07.14	00:07.14	00:07.14
5	Speed	1	0	Pass	00:43.30	00:43.30	00:43.30
6	WebServer	1	0	Pass	00:01.14	00:01.14	00:01.14

Details of the sensor's network assurance statistics :

```
# show dot11 sensor stats.  
## Network Assurance Sensor Statistics ##  
WSA Status: Enabled  
NA Connectivity: Connected  
NA Connectivity I/F: Wired http  
NA Server URL: https://10.13.1.100  
Auth Type: EAP  
HTTP Proxy IP: PROXY_IP  
Backhaul SSID: SensorBH  
Id-token:  
Port: PORT  
Total Test Cases Run: 55  
Successful Test Cases: 51  
Failed Test Cases: 4  
Network Assurance 5G Radio Statistics  
-----
```

```
Host Rx K Bytes: 1063804
Host Tx K Bytes: 766328
Unicasts Rx: 1528921
Unicasts Tx: 746511
Broadcasts Rx: 0
Broadcasts Tx: 19
Beacons Rx: 3250
Beacons Tx: 0
Multicasts Rx: 0
Multicasts Tx: 0
CRC errors: 4512
TX retries: 24686
```

Notes:

- Look for **Total Test Cases Run**, **Successful Test Cases**, and **Failed Test Cases**. These results give an indication of how many tests the sensor has performed and the overall status of those tests.
- Observe that the output also includes radio stats as well as whether or not Cisco DNA Center connectivity is enabled.

Show the APs that the sensor can hear and at what signal level:

```
# show dot11 sensor scan list
```

Note: Only APs with an RSSI of -75 or higher are tested.

Show the complete logs of all events:

```
# show dot11 sensor wsa-log
```

Dump Web Security Appliance (WSA) related debug logs:

```
# debug wsa debug
```

Note: Use “term mon” to view the full debug output from the WSA debug.

PnP-related commands (useful during the PnP provisioning phase):

```
#config dot11 sensor pnp ip 192.168.0.100. // Prime DNAC's IP address (192.168.0.100)
statically
# show pnp info. // Show the pnp agent version.
PI version: 1.8.0.dev20
PD version: 1.5.2.dev2
# show pnp status // Show the pnp status.
```

Detailed troubleshooting commands output:

```
# show dot11 sensor heartbeat status
Heartbeat Status: Success, Count: 1787
SSH status: Disabled
Heartbeat Version: 3
Heartbeat Last Success Time: 2019-05-25 23:10:08.567167
```

Checking wired backhaul config received from Cisco DNA Center:

```
AP70F3.5A7E.4E98#show dot11 sensor wired-dot1x status
AP70F3.5A7E.4E98#ion": "none", "username": "mohamed", "authType": "dot1x",
"eapTlsCertPassPhrase": "none", "useSCEP": "none", "password": "Password123", "eapType":
"PEAP-MSCHAPv2"}
```

Checking status of wired port 802.1x authentication:

```
AP70F3.5A7E.4E98#show authentication interface wired-port status
key_mgmt=IEEE 802.1X (no WPA)
wpa_state=COMPLETED
address=70:f3:5a:7e:4e:98
Supplicant PAE state=AUTHENTICATED
suppPortStatus=Authorized
EAP state=SUCCESS
selectedMethod=25 (EAP-PEAP)
EAP TLS cipher=ECDHE-RSA-AES256-GCM-SHA384
EAP-PEAPv1 Phase2 method=MSCHAPV2
```

Changing the log level for the 802.1x process over the wired port:

```
AP70F3.5A7E.4E98#debug authentication interface wired
debug      Wired port 802.1X module debug
error      Wired port 802.1X module error
excessive  Wired port 802.1X module excessive
info       Wired port 802.1X module info
msgdump    Wired port 802.1X module msgdump
warning    Wired port 802.1X module warning
AP70F3.5A7E.4E98#debug authentication interface wired msgdump
```

Useful links

Cisco DNA Center Administrator Guide

https://www.cisco.com/c/en/us/td/docs/cloud-systems-management/network-automation-and-management/dna-center/2-1-2/admin_guide/b_cisco_dna_center_admin_guide_2_1_2.html

Cisco DNA Assurance User Guide 2.1.2.0 Manage Sensors and Sensor- Driven Tests

https://www.cisco.com/c/en/us/td/docs/cloud-systems-management/network-automation-and-management/dna-center-assurance/2-1-2/b_cisco_dna_assurance_2_1_2_ug/b_cisco_dna_assurance_2_1_1_ug_chapter_01010.html

Solution Guide for Cisco Network Plug and Play

https://www.cisco.com/c/en/us/td/docs/solutions/Enterprise/Plug-and-Play/solution/guidexml/b_pnp-solution-guide.html#con_115699

Cisco Aironet Series Console Adapter Cable AIR-CONSADPT= Guide

https://www.cisco.com/c/en/us/td/docs/wireless/access_point/console_adptr/guide/air_console_adptr.html

Configure SCEP for Locally Significant Certificate Provisioning on 9800 WLC

<https://www.cisco.com/c/en/us/support/docs/wireless-mobility/wireless-lan-management/215557-configure-scep-for-locally-significant-c.html>

Americas Headquarters
Cisco Systems, Inc.
San Jose, CA

Asia Pacific Headquarters
Cisco Systems (USA) Pte. Ltd.
Singapore

Europe Headquarters
Cisco Systems International BV Amsterdam,
The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at <https://www.cisco.com/go/offices>.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)