

DSL SFP Module

Last Updated: January 4, 2020

78-101550-01A2

These instructions provide a high level example of removing and installing the SFP module. All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current on-line version for the latest version.

https://www.cisco.com/c/en/us/support/routers/1101-industrial-integrated-services-router/model.html

Figure 1 The SFP Module




Installing the SFP Module

Perform the following to install the module:

1. Close the SFP-Pull before inserting the SFP module.

2. Line up the SFP module and slide it into the cage. Refer to Figure 2.

Figure 2 Align SFP Module

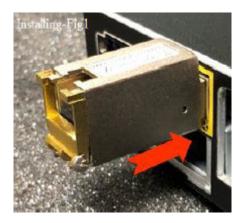

3. Plug in the xDSL connection cable. This is only available for an RJ-45 connector. Refer to Figure 3.

Figure 3 xDSL Connection



Removing the SFP Module

Perform the following to remove the module:

1. Remove the xDSL connection cable from the ports.

2. Open the SFP-Pull with your finger and press it to the end. Refer to Figure 4.

Figure 4 SFP-Pull



Grasp the SFP module between your thumb and index finger and carefully remove it from the cage. Do NOT pull on the SFP-Pull. Refer to Figure 5.

Figure 5 Grasp SFP Module



Note: SFP-VADSL2+-I was evaluated to country specific regulatory requirements only. The product was not evaluated to IEC 61850-3 and IEEE1613 substation / utility standards.

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2020 Cisco Systems, Inc. All rights reserved.



Note: This Table is a regulatory document required for products shipped to the People's Republic of China.

产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅	泵	額	六价铬	多溴联苯	多溴二苯醚
金属部件 (包括紧固件)	x	0	0	0	0	0
印刷电路板组件和元件	X	0	0	0	0	О
缆线和缆线组件	X	0	0	0	0	0
塑料和聚合物部件	0	0	0	0	0	0
显示器,包含灯泡	X	X	0	0	0	0
除印刷电路板外的其他电子组件	x	0	0	0	0	0
光学玻璃材料	x	0	X (消光玻璃)	0	0	0
干电池	0	0	0	0	0	0

本表格依据 SJ/T 11364 的规定编制。

O: 表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。

X:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。

以销售日期为准, 近老显示在"思科系统公司"的电子信息产品部件中何处存在这些有毒有害物质。请注意,并非上列所有部件都有包含在内装产品中。

除幸产品上另有标记,所有内附产品及其部件的'环保使用期限'均由此显示的符号表示。此环保使用期限只适用于产品手册中所规定的使用条件。

