Grundlegende VPN-Einrichtung für RV130 und RV130W

Ziel

Ein virtuelles privates Netzwerk (VPN) wird von Unternehmen häufig zur Erweiterung von Intranets von Unternehmensnetzwerken verwendet. Hierbei handelt es sich um Sites, die nur für die Verwendung durch Mitarbeiter des Unternehmens konzipiert wurden. Ein VPN ist ein privates Netzwerk innerhalb einer öffentlichen Netzwerkinfrastruktur. In einer typischen Umgebung für kleine Unternehmen können VPNs die geografische Anbindung erweitern, die Betriebskosten im Vergleich zu herkömmlichen Wide Area Networks (WANs) senken und die Produktivität der Arbeitsabläufe verbessern.

Auf der Seite "Basic VPN Setup" (Grundlegende VPN-Einrichtung) können Sie auf einfache Weise einen Gateway-to-Gateway-VPN-Tunnel mit anderen Gateway-Geräten am Standort einrichten. Über den VPN-Tunnel können Remote-Benutzer außerdem über eine VPN-Client-Software auf das LAN-Netzwerk Ihres Routers zugreifen.

Anmerkung: Der RV130 und der RV130W unterstützen IPSec VPN-Software von Drittanbietern. Weitere Informationen finden Sie im Produktadministrationsleitfaden.

In diesem Dokument wird die Konfiguration des grundlegenden VPN auf RV130-Geräten erläutert.

Unterstützte Geräte | Firmware-Version

- RV130 | V 1.0.3.28 (Download latest)
- RV130W | V 1.0.3.28 (Download latest)

Standard-VPN-Einstellungen anzeigen

Schritt 1: Wählen Sie im Router-Konfigurationsprogramm "VPN" > "Site-to-Site IPSec VPN" > "Basic VPN Setup". Die Seite *Basic VPN Setup* wird geöffnet:

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:		
Pre-Shared Key:		
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

Schritt 2: Klicken Sie auf die Schaltfläche View Default Settings (Standardeinstellungen anzeigen), um die von Basic VPN festgelegten Standardwerte anzuzeigen.

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:		
Pre-Shared Key:		
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

Auf der Seite *Basic VPN Setup (Grundlegende VPN-Einrichtung*) werden die Standardeinstellungen angezeigt:

Basic VPN Setup Default Values for IKE		
Exchange Mode:	Main	
Local WAN (Internet) ID:	Local WAN (Internet) IP Address	
Remote WAN (Internet) ID:	Remote WAN (Internet) IP Address	
Encryption Algorithm:	AES-128	
Authentication Algorithm:	MD5	
Authentication Method:	Pre-Shared Key	
Diffie-Hellman (DH) Group:	Group2 (1024 bit)	
SA-Lifetime:	8 Hours	
Basic VPN Setup Default Values for VPN		
Encryption Algorithm:	AES-128	
Integrity Algorithm:	MD5	
SA-Lifetime:	1 Hours	
PFS Key Group:	Group 2(1024 bit)	
Back		

Schritt 3: Klicken Sie auf die Schaltfläche **Zurück**, um zum Fenster *Basic VPN Setup* zurückzukehren.

Basic VPN Setup		
Basic VPN Setup Default Va	lues for IKE	
Exchange Mode:	Main	
Local WAN (Internet) ID:	Local WAN (Internet) IP Address	
Remote WAN (Internet) ID:	Remote WAN (Internet) IP Address	
Encryption Algorithm:	AES-128	
Authentication Algorithm:	MD5	
Authentication Method:	Pre-Shared Key	
Diffie-Hellman (DH) Group:	Group2 (1024 bit)	
SA-Lifetime:	8 Hours	
Basic VPN Setup Default Va	lues for VPN	
Encryption Algorithm:	AES-128	
Integrity Algorithm:	MD5	
SA-Lifetime:	1 Hours	
PFS Key Group:	Group 2(1024 bit)	
Back		

Grundlegende VPN-Einrichtung

Schritt 1: Wählen Sie im Router-Konfigurationsprogramm "VPN" > "Site-to-Site IPSec VPN" > "Basic VPN Setup". Die Seite *Basic VPN Setup* wird geöffnet:

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:		
Pre-Shared Key:		
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

Schritt 2: Geben Sie im Feld *Neuer Verbindungsname* einen Verbindungsnamen ein. Dieser Name wird zu Verwaltungszwecken verwendet und hat keine Auswirkungen auf den Betrieb des VPN.

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	cisco_sb)
Pre-Shared Key:		
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

Schritt 3: Geben Sie einen vorinstallierten Schlüssel in das Feld *Vorinstallierter Schlüssel* ein. Dieser Schlüssel wird von einem VPN-Client oder -Gateway benötigt, um eine VPN-Verbindung herzustellen.

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings

Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:		(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

Schritt 4: Wählen Sie in der Dropdown-Liste "*Remote Endpoint" (Remote-Endpunkt)* die Option **IP Address (IP-Adresse)** oder **FQDN** für den Adresstyp, den das Remote-Gateway zum Herstellen einer Verbindung verwenden soll.

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings

Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 💌	
Remote WAN (Internet) IP Address:	IP Address FQDN	(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

Die verfügbaren Optionen sind wie folgt definiert:

- IP-Adresse Eine eindeutige Zeichenfolge aus Zahlen, die durch Punkte getrennt sind und jeden Computer identifiziert, der über das Internetprotokoll über ein Netzwerk kommuniziert.
- FQDN (Fully Qualified Domain Name) Der vollständige Domänenname für das Internet, einen bestimmten Computer oder einen bestimmten Host. Der FQDN besteht aus zwei Teilen: den Hostnamen und den Domänennamen. Ein FQDN für einen hypothetischen Mailserver könnte beispielsweise *mymail.companyname.org lauten*. Der Hostname lautet *mymail*, und der Host befindet sich innerhalb der Domäne *companyname.org*.

Schritt 5: Geben Sie die IP-Adresse oder den FQDN, abhängig von Ihrer Auswahl in Schritt 4, in das Feld *Remote WANs (Internet) IP Address (IP-Adresse für Remote-WANs (Internet)) ein.*

About Basic VPN	Setup
-----------------	-------

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings

Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:	64 32 141 533	(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

Schritt 6: Geben Sie die IP-Adresse und die Subnetzmaske des Remote-LAN in die Felder Remote LAN (Local Network) IP Address (IP-Adresse des lokalen Netzwerks) und Remote LAN (Local Network) Subnet Mask (Subnetzmaske des lokalen Netzwerks) ein.

About Basic VPN Setup

The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu

View Default Settings

Connection Name and Remote IP Type

New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 🔻	
Remote WAN (Internet) IP Address:	1.2.3.4	(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	192.168.2.100	(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:		(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:		(Hint: 255.255.255.0)
Save Cancel		

Schritt 7: Geben Sie Ihre IP-Adresse und die Subnetzmaske des lokalen LAN in die Felder "Local LAN (Local Network) IP Address" (IP-Adresse des lokalen Netzwerks) und "Local LAN (Local Network) Subnet Mask" (Subnetzmaske des lokalen LAN) ein.

Basic ∨PN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters t and assumes a Pre-shared Key, which great you can always update the parameters throug	to defaults as proposed ly simplifies setup. After gh the Policies menu	by the VPN Consortium (VPNC), creating the policies through the Basic VPN Setup,
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:	1.2.3.4	(Hint: 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	192.168.2.100	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.8.100	(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.255	(Hint: 255.255.255.0)
Save Cancel		

Schritt 8: Klicken Sie auf Speichern, um die Einstellungen zu speichern.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	cisco_sb	
Pre-Shared Key:	password1	
Endpoint Information		
Remote Endpoint:	IP Address 👻	
Remote WAN (Internet) IP Address:	1.2.3.4	(Hint 1.2.3.4 or abc.com)
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	192.168.2.100	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.8.100	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.255	(Hint: 255.255.255.0)
Save Cancel		

Video zu diesem Artikel anzeigen ...

Klicken Sie hier, um weitere Tech Talks von Cisco anzuzeigen.

Informationen zu dieser Übersetzung

Cisco hat dieses Dokument maschinell übersetzen und von einem menschlichen Übersetzer editieren und korrigieren lassen, um unseren Benutzern auf der ganzen Welt Support-Inhalte in ihrer eigenen Sprache zu bieten. Bitte beachten Sie, dass selbst die beste maschinelle Übersetzung nicht so genau ist wie eine von einem professionellen Übersetzer angefertigte. Cisco Systems, Inc. übernimmt keine Haftung für die Richtigkeit dieser Übersetzungen und empfiehlt, immer das englische Originaldokument (siehe bereitgestellter Link) heranzuziehen.