

Configure or Change FXOS Firepower 2100 Password

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components used](#)

[Procedure](#)

[Procedure for Firepower 2100 with ASA image](#)

[Procedure for Firepower 2100 with FTD image](#)

[Configuration Example](#)

[Example for Firepower 2100 with ASA code](#)

[Example for Firepower 2100 with FTD code](#)

Introduction

This document describes steps to change the password for a local user on the Firepower 2100 Appliance.

Prerequisites

Requirements

Cisco recommends that you have knowledge of these topics:

- Cisco Firepower FXOS

Components used

The information in this document is based on this hardware/software versions:

- FPR 2100
- FXOS Version 2.1, 2.2 and 2.3

This procedure changes in accordance with the application code used. It can be either Adaptive Security Appliance (ASA) or Firepower Threat Defense (FTD). Both methods are covered in this document.

The information in this document was created for devices where the current admin username and password are known and for devices with a cleared (default) configuration

Procedure

Procedure for Firepower 2100 with ASA image

Step 1. Enter security mode.

```
<#root>
```

```
Firepower-chassis#
```

```
scope security
```

Step 2. Verify which user is configured, where **local-user-name** is the account name to be used to log in into this account.

```
<#root>
```

```
Firepower-chassis /security #
```

```
show local-user
```

Step 3. Enter local-user scope.

```
<#root>
```

```
Firepower-chassis /security/local-user #
```

```
scope local-user username
```

Step 4. Set the new password for the user account.

```
<#root>
```

```
Firepower-chassis /security/local-user #
```

```
set password
```

Enter a password:

Confirm the password:

Step 5. Commit the transaction to the system configuration.

```
<#root>
```

```
Firepower-chassis /security/local-user* #
```

```
commit-buffer
```

Procedure for Firepower 2100 with FTD image

Step 1. Connect to FTD Application through CLI.

```
<#root>  
Firepower-chassis#  
connect ftd
```

Step 2. Verify if the user to change part of the "users" table.

```
<#root>  
>  
show user  
  
Login UID Auth Access Enabled Reset Exp Warn Str Lock Max  
admin 100 Local Config Enabled No Never N/A Dis No 0
```

Step 3. Set the password for the user account.

```
> configure user password admin  
Enter current password:  
Enter new password for user admin:  
Confirm new password for user admin:
```

Configuration Example

Example for Firepower 2100 with ASA code

```
<#root>  
FPR-2100 login:  
admin  
  
password:  
Admin123  
  
FPR-2100#  
scope security
```

```
FPR-2100 /security #
show local-user
User Name      First Name      Last name
-----
admin

FPR-2100 /security #
enter local-user

admin

FPR-2100 /security/local-user #
set password

Enter a password: cisco
Confirm the password: cisco

FPR-2100 /security/local-user* #
commit-buffer

FPR-2100 /security/local-user #
```

After the changes are committed, confirm that it works properly, log out off the session and log back in with the new password **cisco**.

```
<#root>
FPR-2100 /security/local-user #
top

FPR-2100#
exit

FPR-2100 login:
admin

password:
cisco

FPR-2100#
```

Once the password is changed, the older password is replaced by the new one.

Example for Firepower 2100 with FTD code

```
<#root>
```

```
Firepower-chassis#
```

```
connect ftd
```

```
>
```

```
show user
```

```
Login UID Auth Access Enabled Reset Exp Warn Str Lock Max  
admin 100 Local Config Enabled No Never N/A Dis No 0
```

```
>
```

```
configure user password
```

```
admin
```

```
Enter current password:
```

```
oldpassword
```

```
Enter new password for user admin:
```

```
newpassword
```

```
Confirm new password for user admin:
```

```
newpassword
```

After the changes are committed, confirm that it works properly, log out off the session and log back in with the new password **newpassword**.

```
<#root>
```

```
> exit
```

```
Firepower-chassis# exit
```

```
Firepower-chassis login:admin
```

```
password:
```

```
newpassword
```

```
Firepower-chassis#
```