

View the Dashboard on the RV110W

Objectives

The RV110W Dashboard page displays a wealth of concise information about many features on the device.

This document explains how to view the dashboard on the RV110W.

Applicable Devices

- RV110W

View the Dashboard

Step 1. In the web configuration utility choose **Status > Dashboard**.

Refresh Rate:

Device Information	LAN (Local Network) Interface details
System Name: routerE3A2B6	MAC Address: 54:75:D0:E3:A2:B6
Firmware Version: 1.1.0.9	IPv4 Address: 192.168.1.1
Serial Number: CBT15140AAL	DHCP Server: Enabled
Resource Utilization	WAN (Internet) Information details
CPU: 2%	IPv4 Address:
Memory: 55% (34/64 MB)	State: Down
Current Time: 01/01/10 12:21 AM	Wireless Networks details
System Up Time: 0 Days, 0 Hours, 21 Minutes, 24 Seconds	ciscosb1 : Active
Syslog Summary details manage logging	ciscosb2 : Disabled
Emergency: Logging Disabled	ciscosb3 : Disabled
Alert: Logging Disabled	ciscosb4 : Disabled
Critical: Logging Disabled	VPN
Error: Logging Disabled	QuickVPN Users: 0/0
Warning: Logging Disabled	PPTP Users: 0/0

Step 2. To have the dashboard refresh with updated information periodically, choose a time from the Refresh Rate drop-down menu.

Step 3. The dashboard displays the following information:

- Device Information

Device Information
System Name: routerE3A2B6
Firmware Version: 1.1.0.9
Serial Number: CBT15140AAL

– System Name — The name of the device.

– Firmware Version — The current software version the device is running.

– Serial Number — The serial number of the device.

- Resource Utilization

Resource Utilization	
CPU:	4%
Memory:	56% (35/64 MB)
Current Time:	01/01/10 12:00 AM
System Up Time:	0 Days, 0 Hours, 0 Minutes, 35 Seconds

– CPU — The amount of CPU being used by the device.

– Memory — The amount of memory that is free or not being used.

– Current Time — The time that which the device is currently set.

– System Time Up — How long the system has been running.

- Syslog Summary

Syslog Summary details manage logging	
Emergency:	Logging Disabled
Alert:	Logging Disabled
Critical:	Logging Disabled
Error:	Logging Disabled
Warning:	Logging Disabled

Indicates whether logging is enabled for these event categories:

– Emergency — System is unusable. This is normally broadcast to all processes.

– Alert — Immediate action needed.

– Critical — Critical conditions, such as a hard device error are logged.

– Error — Error conditions are logged.

– Warning — Warning conditions are logged.

- LAN (Local Network) Interface

LAN (Local Network) Interface details	
MAC Address:	54:75:D0:E3:A2:B6
IPv4 Address:	192.168.1.1
DHCP Server:	Enabled

– MAC Address — The MAC address of the router.

– IPv4 Address — The local IP address of the router.

– DHCP Server — The status of the router IPv4 DHCP server (Enabled or Disabled).

- WAN (Internet) Information

WAN (Internet) Information [details](#)

IPv4 Address:

State: Down

- IPv4 Address — The IP address of the router WAN port.
- State — The state of the Internet connection (Up or Down).

- Wireless Networks

Wireless Networks [details](#)

ciscosb1 : Active

ciscosb2 : Disabled

ciscosb3 : Disabled

ciscosb4 : Disabled

Lists the status of the four wireless network SSIDs.

- VPN

VPN

QuickVPN Users: 0/0

PPTP Users: 0/0

- QuickVPN Users — The number of QuickVPN users that are assigned on the device and in use.
- PPTP Users — The number of Point-to-Point Tunneling Protocol users that are assigned on the device and in use.