Link Aggregation Group (LAG) Management and Settings on Sx500 Series Stackable Switches

Objective

Link Aggregation Group (LAG) multiply the bandwidth, increase port flexibility, and provide link redundancy between two devices. Link Aggregation Control Protocol (LACP) is a part of IEEE specification (802.3az) that can control the bundling of several physical ports together to form a single logical channel (LAG). Traffic load balancing over the active member ports of a LAG is managed by a hash-based distribution function that distributes unicast and multicast traffic based on Layer 2 or Layer 3 packet header information. LACP helps to form one single LAG by bundling many physical ports. It is also responsible for bandwidth multiplication, increase in port flexibility, and in providing redundancy on links between any 2 devices. Additionally this helps in changing the LAG speed, advertisement, flow control, and also protection which can be easily identified in LAG settings table.

This document shows you how to configure the load balancing algorithm, LAG management, and LAG settings on a switch.

Note: For instructions on how to configure LAG on a switch through the CLI (Command Line Interface), click here.

Applicable Devices

- Sx500 Series Stackable Switches
- Sx350X Series Switches
- Sx550X Series Switches

Software Version

- v2.3.5.63 (Sx350X & Sx550X)
- v1.4.9.4 (Sx500)


LAG Management Procedure

Configure Load Balance Algorithm

The steps in this document are performed under the advanced display mode using the SG550X-24. To change to the advanced display mode, go to the top right corner and select **Advanced** in the *Display Mode* drop-down list.




Step 1. Log in to the web configuration utility and choose **Port Management > Link Aggregation > LAG Management**. The *LAG Management* page opens:

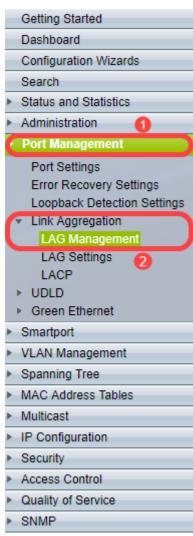


Step 2. Click one of the following radio buttons for the *Load Balance Algorithm*. In this example, we will be configure IP/MAC address as our load balance algorithm.

- MAC Address Performs load balancing based on source and destination MAC addresses on all the packets.
- *IP/MAC Address* Performs load balancing by the source and destination IP addresses on IP packets, and by the source and destination MAC addresses on non-IP packets.

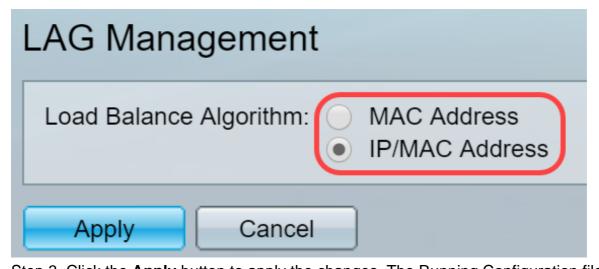

Step 3. Click the **Apply** button to apply the changes. The Running Configuration file is updated.

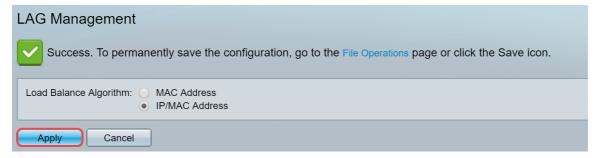

Edit LAG Management

Step 1. To define member or candidate port in the *LAG Management Table* section, click the radio button for the LAG to be configured.

The descriptions of the fields in the *LAG Management Table* are:

- LAG LAGs are shown in the column.
- Name LAG name configured is shown in the column.
- LACP Shows whether LACP is enabled or disabled to the particular LAG.
- Link State Shows whether the LINK of the LAG is active or down.
- Active Member Shows the member which are in the field and are active in the configured set.
- Standby Member Shows the members which are configured to the LAG members which are on standby.

LAC	LAG Management Table						
	LAG	Name	LACP	Link State	Active Member	Standby Member	
0	LAG 1			Link Not Present			
	LAG 2			Link Not Present			
	LAG 3			Link Not Present			
	LAG 4			Link Not Present			
	LAG 5			Link Not Present			

Step 2. Click **Edit...** to modify the LAG.

LAG 28	Link Not Present
LAG 29	Link Not Present
LAG 30	Link Not Present
LAG 31	Link Not Present
LAG 32	Link Not Present
Edit	

Step 3. (Optional) Choose the LAG number from the LAG drop-down list.

LAG:	1	
LAG Name:	2	(0/64 characters used)
LACP:	3 4	able
Unit: 1 ▼	5 6 7	
Port List:	8 9	LAG Members:
GE1 GE2	10 11	
GE3 GE4	12 13	
GE5 GE6	14 15	
GE7	16 17	
GE8	18 19	
Apply		ose


Step 4. Enter a name for the LAG in the LAG Name field.

LAG:	1 •	
LAG Name:	LAG1	(4/64 characters used)
LACP:	Enable	


Step 5. Check **Enable** in the *LACP* field on the chosen LAG. This makes it a dynamic LAG. This field can only be enabled after moving a port to the LAG in the next field.

LAG:	1 🔻	
LAG Name:	LAG1	(4/64 characters used)
LACP:	✓ Enable	

Step 6. Choose the Unit of the switch from the *Unit* field which displays the stacking member for which LAG information is defined.

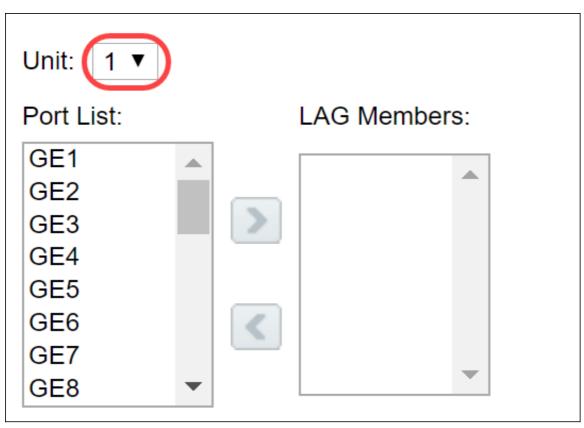

Step 7. Move the ports that are to be assigned to the LAG from the *Port List* to the *LAG Members* list. Up to eight ports per static LAG and 16 ports to a dynamic LAG can be assigned. The chosen Unit/Slot and the Port list are added to the LAG Members list. In this example, we will be selecting **GE1** and **GE2**.

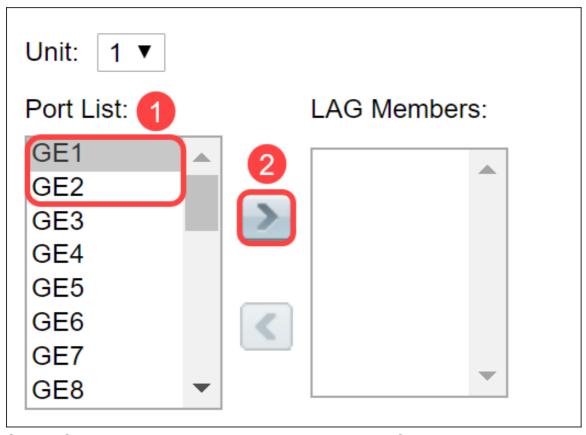

Step 8. Click **Apply** to save the changes in the *Edit LAG Membership* page.


Note: LAG will also need to be configured on the other switch as well. If LAG is not configured on the other switch, then the *Link State* will be *Link Down* and the ports that you have configured will be in *Standby Member* field.

LAC	LAG Management Table						
	LAG	Name	LACP	Link State	Active Member	Standby Member	
	LAG 1	LAG1	Enabled	Link Up	GE1/1, GE1/2		
	LAG 2			Link Not Present			
	LAG 3			Link Not Present			
	LAG 4			Link Not Present			
	LAG 5			Link Not Present			
	LAG 6			Link Not Present			
	LAG 7			Link Not Present			
	LAG 8			Link Not Present			
	LAG 9			Link Not Present			
	LAG 10			Link Not Present			
	LAG 11			Link Not Present			
	LAG 12			Link Not Present			
	LAG 13			Link Not Present			

Configure LAG Settings

The following configuration procedure not only helps you to configure LAG but also to reactivate suspended LAG.

Step 1. Log in to the web configuration utility and choose **Port Management > Link Aggregation > LAG Settings**. The *LAG Settings* page opens:

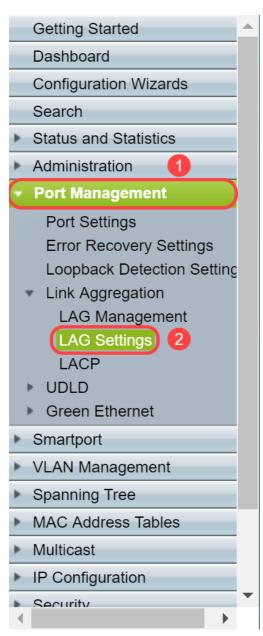

Step 2. Click the LAG that needs to be modified.



Step 3. Click Edit to modify that LAG.

_ 29	LAG 29	Enabled	Unprotected
<u> </u>	LAG 30	Enabled	Unprotected
31	LAG 31	Enabled	Unprotected
32	LAG 32	Enabled	Unprotected
Сору	Settings	Edit	

Step 4. The *Edit LAG Settings* window appears. Choose the LAG ID number from the *LAG* drop-down list.

LAG:	1 🔻]		LAG Type:	1000M-Eth
Description:	2 3		(4/64 chara	cters used)	
Administrative Status:	4 5 6 7	wn		Operational Status:	Up
Link Status SNMP Traps:	8	able			
Time Range:	10	able			
Time Range Name:	11 12 13	idit		Operational Time Range State:	N/A
	14				
Administrative Auto Negotiation:	15 16	able		Operational Auto Negotiation:	Enabled
Administrative Speed:	17 18 19	И DM DOM		Operational LAG Speed:	1000M
Administrative Advertisement:	10	x. Capability 100 Full 00 Full	0 Full	Operational Advertisement:	Max. Capability
Administrative Flow Control:	Dis	nable isable uto Negotiation		Operational Flow Control:	Disabled
Protected LAG:	☐ En	nable			

Step 5. In the *Description* field, enter the LAG name or a comment for identification. The *LAG Type* field will display the port type that comprises the LAG.

LAG: Description:	1 ▼ LAG1	LAG Type: (4/64 characters used)	1000M-Eth
Administrative Status:	UpDown	Operational Status:	Up
Link Status SNMP Traps:	✓ Enable		
Time Range:	Enable		
Time Range Name:	▼ Edit	Operational Time Range State:	N/A

Step 6. Select the LAG to be administratively **Up** or **Down** in the *Administrative Status* field. The *Operational Status* field shows whether LAG is currently operating.

Administrative Status:	Up Down	Operational Status: Up
Link Status SNMP Traps:	Enable	
Time Range:	Enable	
Time Range Name:	▼ Edit	Operational Time Range State: N/A

Step 7. Check the **Enable** checkbox in the *Link Status SNMP traps* field if you want to enable generation of SNMP traps notifying of changes to the link status of the ports in the LAG. Link status SNMP traps is enabled by default.

Administrative Status:	UpDown	Operational Status: Up
Link Status SNMP Traps:	✓ Enable	
Time Range:	Enable	
Time Range Name:	▼ Edit	Operational Time Range State: N/A

Step 8. (Optional) In the *Time Range* field, check the **Enable** checkbox to enable the time range during which the port is in up state. When the time range is not active, the port is in shutdown. If a

time range is configured, it is effective only when the port is administratively up. Time range is not enabled by default. In this example, we will be leaving time range disabled.

Note: This field may vary depending on the switch model you are using.

Administrative Status:	UpDown	Operational Status:	Up
Link Status SNMP Traps:	✓ Enable		
Time Range:	Enable		
Time Range Name:	▼ Edit	Operational Time Range State	: N/A

Step 9. (Optional) If *Time Range* was enabled in the previous step, select the profile that specifies the time range in the *Time Range Name* field. If a time range is not yet defined, click **Edit** to go to the *Time Range* page.

Note: Time range needs to be enabled in order to select a time range name.

Administrative Status:	UpDown	Operational Status: Up
Link Status SNMP Traps:	Enable	
Time Range:	Enable	
Time Range Name:	▼ Edit	Operational Time Range State: N/A

Step 10. Check the **Enable** checkbox in the *Administrative Auto Negotiation* field to enable or disable auto-negotiation on the LAG. Auto-negotiation is a protocol between two link partners that enables a LAG to advertise its transmission speed and flow control to its partner (the Flow Control default is disabled). The *Operational Auto Negotiation* field displays the auto-negotiation settings.

Note: It is recommended to keep auto-negotiation enabled on both sides of an aggregate link, or disabled on both sides, while ensuring that link speeds are identical.

Administrative Auto Negotiation:	✓	Enable	Operational Auto Negotiation:	Enabled
Administrative Speed:	•	10M 100M 1000M	Operational LAG Speed:	1000M
Administrative Advertisement:		Max. Capability 1000 Full 10 Full 100 Full	Operational Advertisement:	Max. Capability
Administrative Flow Control:	•	Enable Disable Auto Negotiation	Operational Flow Control:	Disabled
Protected LAG:		Enable		

Step 11. (Optional) If *Administrative Auto Negotiation* is disabled in the previous step, select the *Administrative Speed*. The *Operational Lag Speed* displays the current speed at which the LAG is operating.

The available speeds are:

- 10M
- 100M
- 1000M

Note: The speed may vary depending on the model of your switch.

Administrative Auto Negotiation:	Enable	Operational Auto Negotiation:	Enabled
Administrative Speed:	10M 100M 1000M	Operational LAG Speed:	1000M
Administrative Advertisement:	Max. Capability 1000 Full 10 Full 100 Full	Operational Advertisement:	Max. Capability
Administrative Flow Control:	EnableDisableAuto Negotiation	Operational Flow Control:	Disabled
Protected LAG:	Enable		

Step 12. In the *Administrative Advertisement* field, check the capabilities to be advertised by the LAG. The *Operational Advertisement* displays the administrative advertisement status. The LAG advertises its capabilities to its neighbor LAG to start the negotiation process. The possible values are:

- Max Capability All LAG speeds and both duplex modes are available.
- 10 Full The LAG advertises a 10 Mbps speed and the mode is full duplex.
- 100 Full The LAG advertises a 100 Mbps speed and the mode is full duplex.
- 1000 Full The LAG advertises a 1000 Mbps speed and the mode is full duplex.



Step 13. Select one of the options in the *Administrative Flow Control* field. Flow control is a feature that allows the receiving device to send a signal to the sending device that it's congested. This tells the sending device to temporarily stop transmitting to help ease the congestion. The *Operational Flow Control* shows the current flow control setting. In this example, we will be enabling flow control.

The options are:

- Enable
- Disable
- Auto Negotiation


Administrative Auto Negotiation:	✓	Enable	Operational Auto Negotiation:	Enabled
Administrative Speed:	•	10M 100M 1000M	Operational LAG Speed:	1000M
Administrative Advertisement:		Max. Capability 1000 Full 10 Full 100 Full	Operational Advertisement:	Max. Capability
Administrative Flow Control:	0	Enable Disable Auto Negotiation	Operational Flow Control:	Disabled
Protected LAG:		Enable		

Step 14. Check the **Enable** checkbox in the *Protected LAG* to make the LAG a protected port for

Layer 2 isolation. In this example, we will enable protected LAG.

Administrative Auto Negotiation:	✓	Enable	Operational Auto Negotiation:	Enabled
Administrative Speed:	•	10M 100M 1000M	Operational LAG Speed:	1000M
Administrative Advertisement:	✓	Max. Capability 1000 Full 10 Full 100 Full	Operational Advertisement:	Max. Capability
Administrative Flow Control:	<!--</td--><td>Enable Disable Auto Negotiation</td><td>Operational Flow Control:</td><td>Disabled</td>	Enable Disable Auto Negotiation	Operational Flow Control:	Disabled
Protected LAG:		Enable		

Step 15. Click Apply. The Running Configuration file is updated.

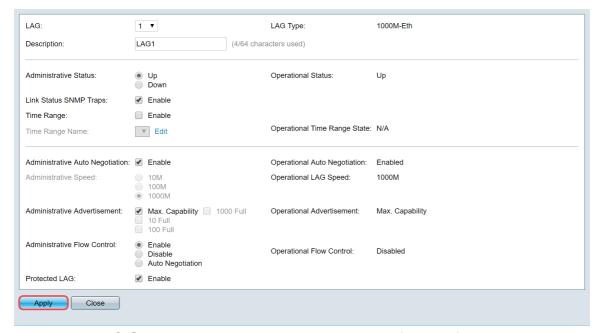

Note: The LAG Setting Table is updated with the modified configuration.



You have now learned the steps to configure the load balancing algorithm, LAG management, and LAG settings on a switch.