

Upgrade CUCM/CUC/CUPS with Prime Collaboration Deployment



Document ID: 118318

Contributed by Mohammed Noorulla Khan, Cisco TAC Engineer.
Jan 29, 2015

Contents

Introduction

Prerequisites

Requirements

Components Used

Background Information

Supported Releases for the Upgrade Task on PCD Version 10.5

Configure

Verify

Troubleshoot

Introduction

This document describes how to upgrade Cisco Unified Communications Manager/Cisco Unity Connection/Cisco Unified Presence Server (CUCM/CUC/CUPS) with Prime Collaboration Deployment (PCD).

Prerequisites

Requirements

There are no specific requirements for this document.

Components Used

The information in this document is based on these software and hardware versions:

- CUCM Release 10.0
- PCD Release 10.5

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact.

Background Information

Cisco PCD is an application designed to assist in the management of Unified Communications applications. It allows the user to perform tasks such as migration of older software versions of clusters to new virtual machines, fresh installs, and upgrades on current clusters. In summary automates upgrade and migration task.

This document is focused on the upgrade task on PCD Release 10.5.

Supported Releases for the Upgrade Task on PCD Version 10.5

These include releases for the upgrade task on the Upgrade Application Server or Install COP files:

- Cisco Unified CM Releases Supported: 8.6(1–2), 9.0.(1), 9.1(1), 9.1(2), 10.x
- Cisco Unified Presence (CUP) Releases Supported: 8.6(3), 8.6(4), 8.6(5)
- Cisco Unified CM – IM and Presence Releases Supported: 9.0(1), 9.1(1), 10.x
- Cisco Unified Contact Center Express Releases Supported: 9.0(2), 10.x
- Cisco Unity Connection Releases Supported:
 - ◆ From 8.6(x) to 8.6(x)
 - ◆ From 8.6(x) to 9.x
 - ◆ From 9.x to 9.x
 - ◆ From 10.0(1) to 10.x


Configure

Complete these steps in order to configure your server:

1. In order for the application servers in the cluster to be upgraded, ensure that the Platform Administrative Web Service (Release 9.x or later) or Platform Simple Object Access Protocol (SOAP) Services (Release 8.6) runs on that server.

Service Name	Status:
Platform Administrative Web Service	Running

2. From a Linux shell, enter `sftp adminstftp@<Cisco Prime Collaboration Deployment server>` and then provide the password (this is the same in both the CLI and the GUI).
3. Change the directory to the upgrade directory. For example, from a Linux shell, enter `cd upgrade` and press **Return**.

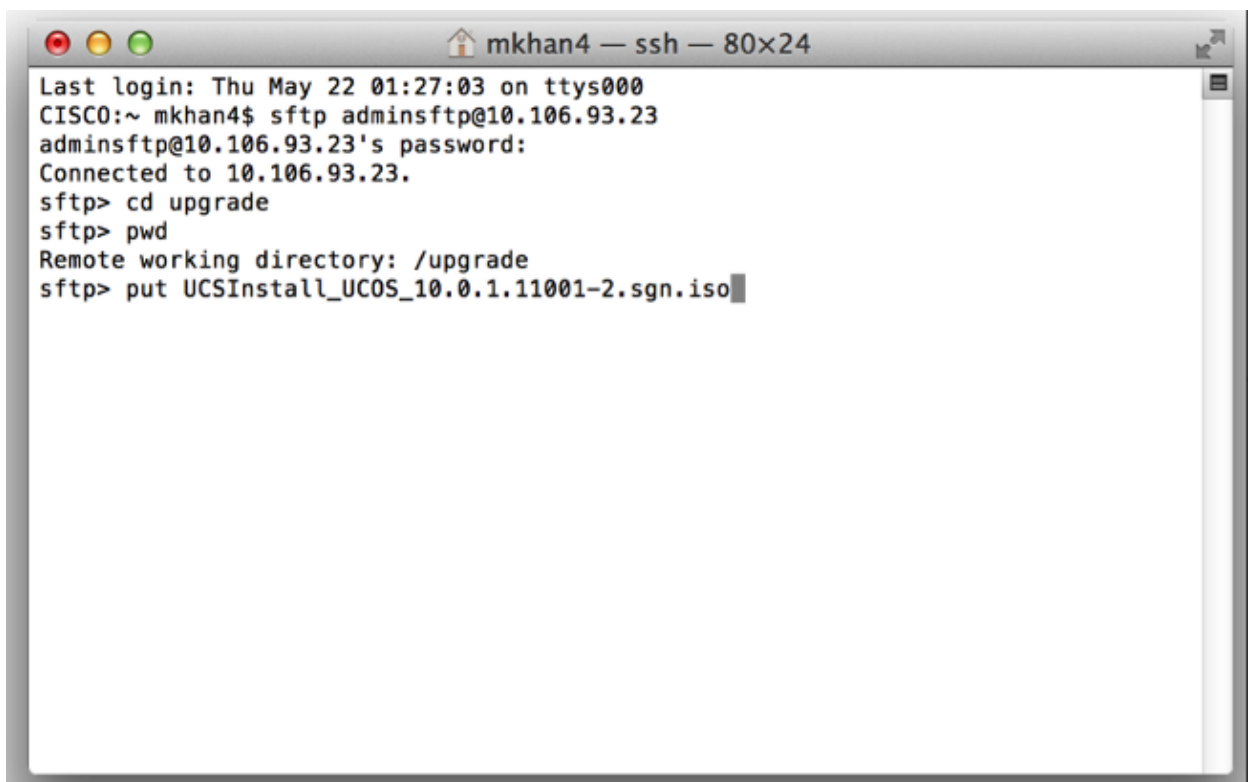


```
mkhan4 — ssh — 80x24
Last login: Thu May 22 01:27:03 on ttys000
CISCO:~ mkhan4$ sftp adminstftp@10.106.93.23
adminstftp@10.106.93.23's password:
Connected to 10.106.93.23.
sftp> cd upgrade
sftp> pwd
Remote working directory: /upgrade
sftp> put UCSInstall_UCOS_10.0.1.11001-2.sgn.iso
```


4. Upload the ISO file or COP file. For example, enter `put UCSInstall_UCOS_10.0.x.xxx.sgn.iso`.

```
mkhan4 — ssh — 80x24
sftp>
sftp> ls
UCSInstall_UCOS_10.0.1.11001-2.sgn.iso  UCSInstall_UCOS_8.6.2.24900-17.sgn.iso
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
sftp>
```


5. Log into the PCD administration page.

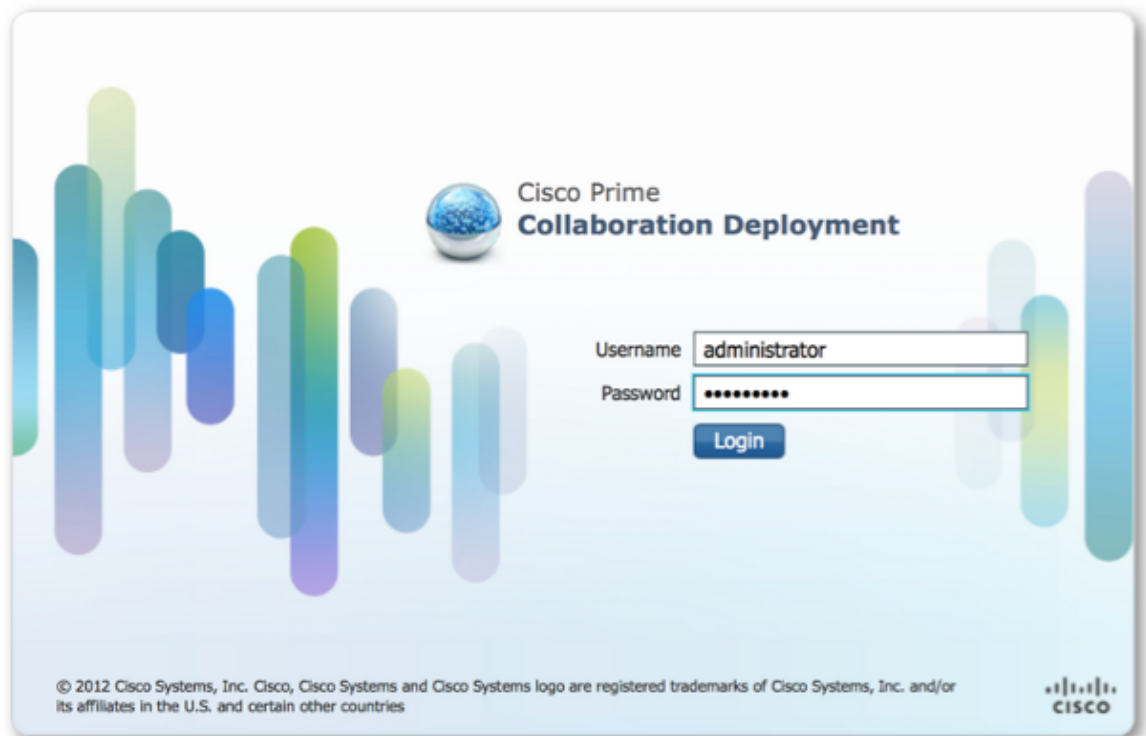

6. Choose **Inventory** > **Clusters** from the menu of the Cisco PCD application in order to access the Clusters page.

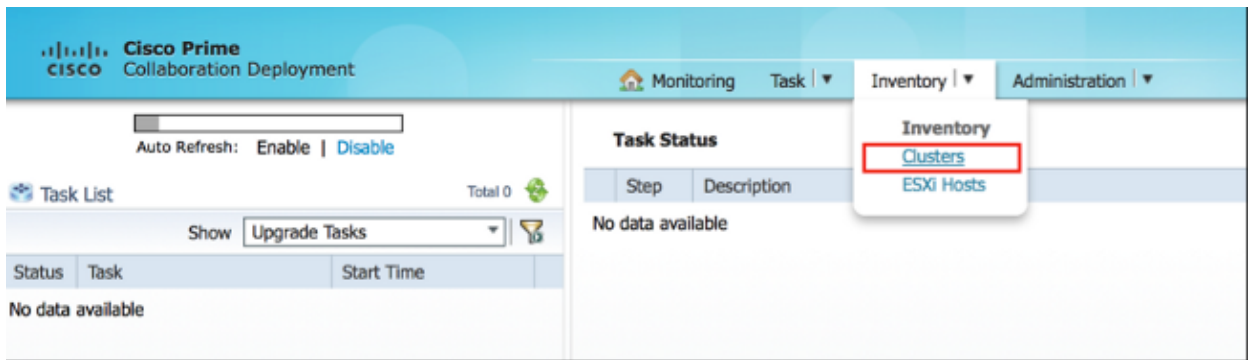


7. Click **Discover Cluster** at the top of the Clusters page in order to discover current clusters.

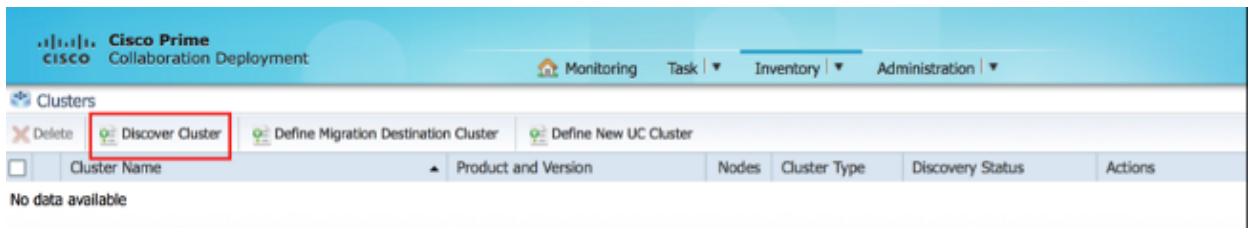

The Discover Cluster wizard appears.

8. Under Step 1 of the wizard, enter the required information and click **Next**.

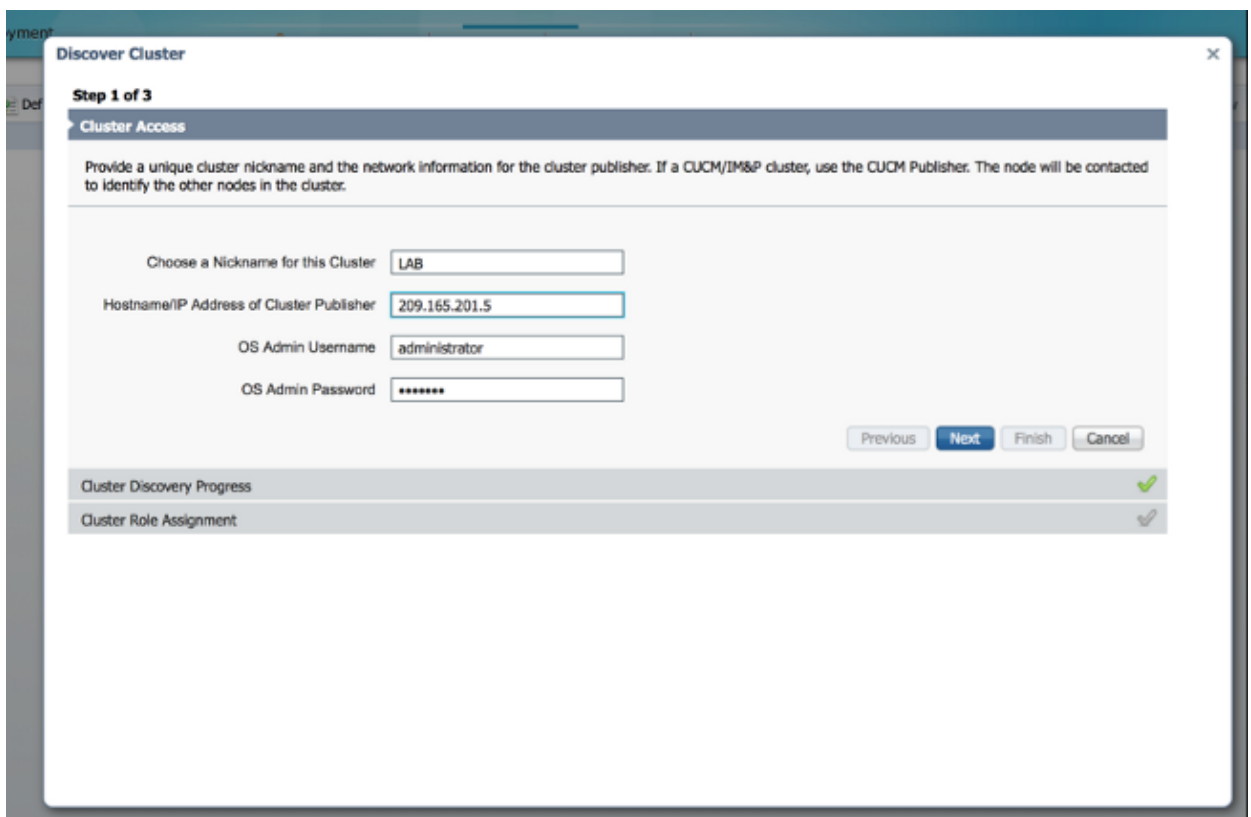


Note: For a cluster that has both CUCM and IM and Presence (IM/P) nodes, enter the CUCM publisher.


In the process of discovery, a COP file (ciscocm.ucmap_platformconfig.cop) is installed automatically on the active partition of all nodes in the cluster. This COP file is used strictly for the cluster discovery process and does not otherwise impact the call manager.

9. Under Step 2 of the wizard, Cisco PCD generates a list of cluster nodes from the publisher's server inventory. This might take several minutes to complete. Once the list has been completely generated,


the "**Cluster Discovery Process is complete.**" message appears. Once complete, click **Next** to move on to Step 3 of this wizard.

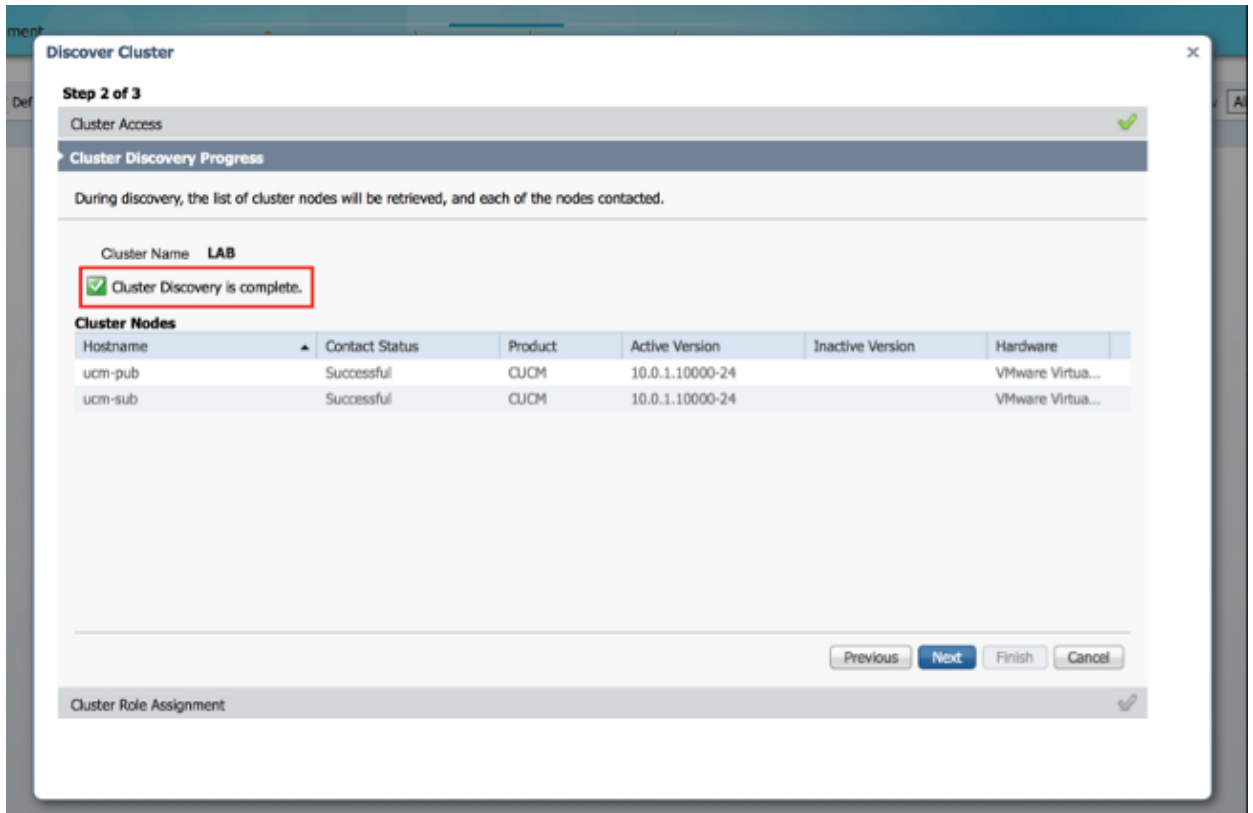


10. Click the **Assign Functions** button in order to assign functions (optional) to each of the cluster nodes. The Assign Functions dialog box appears. Once you have assigned all the functions you wish to assign, click **OK**.

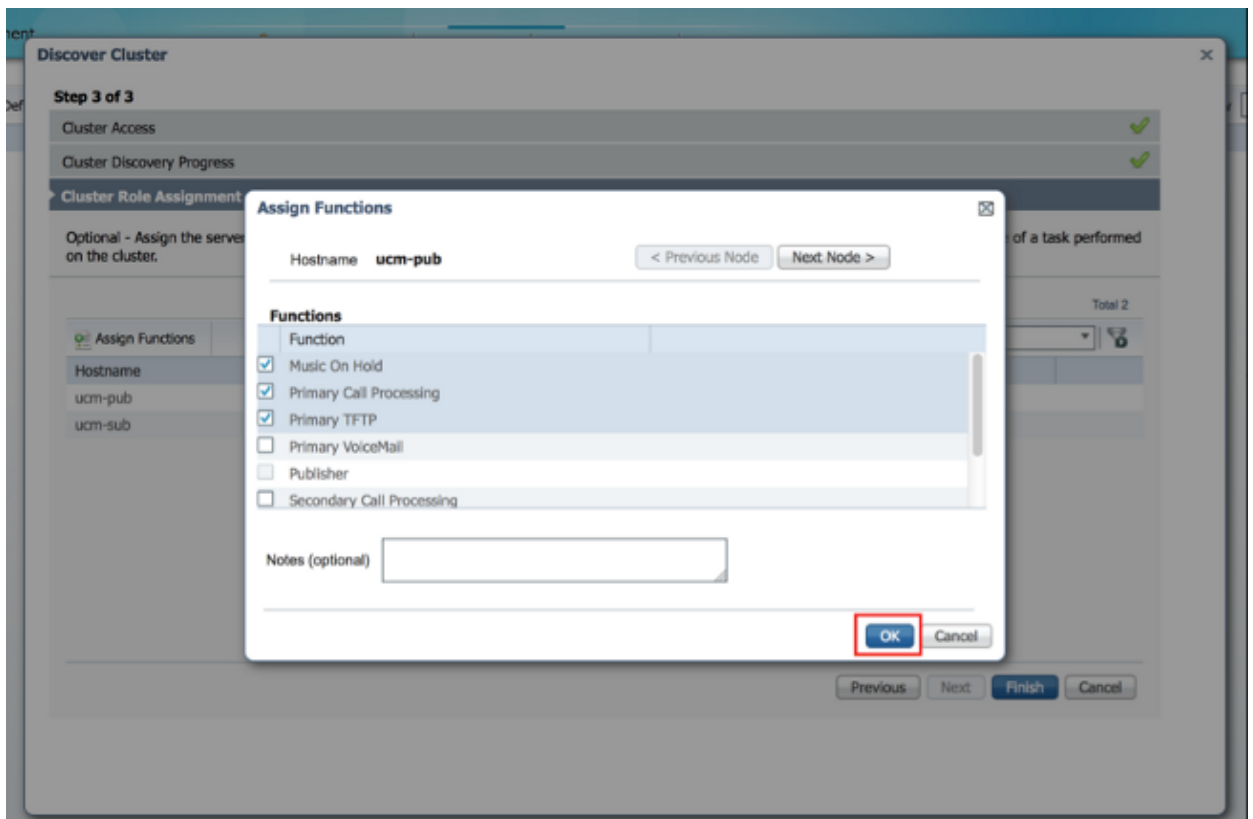


11. Click **Finish**.

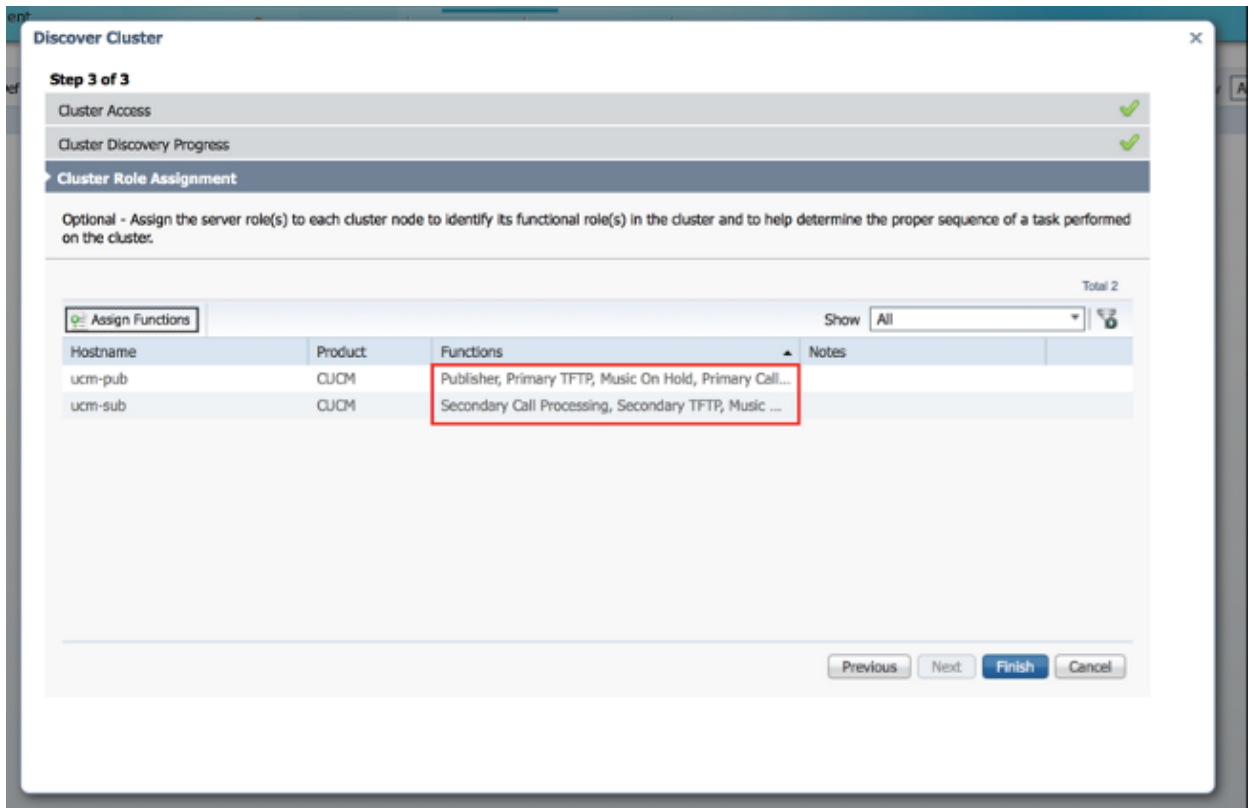


The cluster appears on the Clusters page, and shows the Cluster Name, Product and Version, and a Cluster Type of "Discovered". Discovery Status should list "Successful".

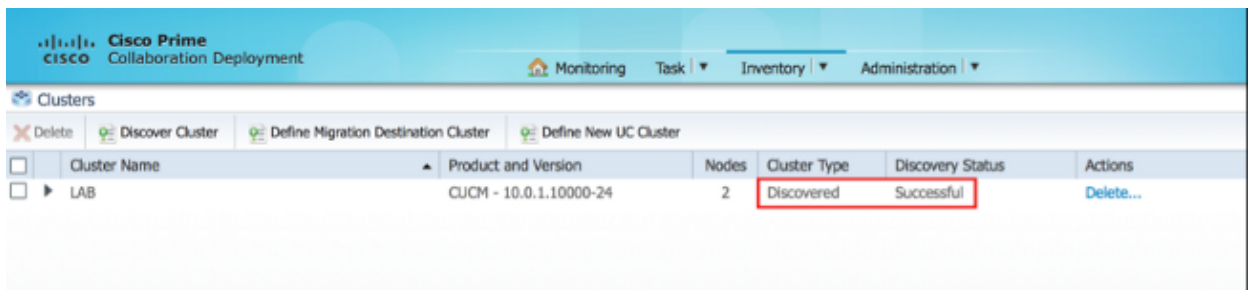

12. Choose **Tasks > Upgrade** from the main menu.

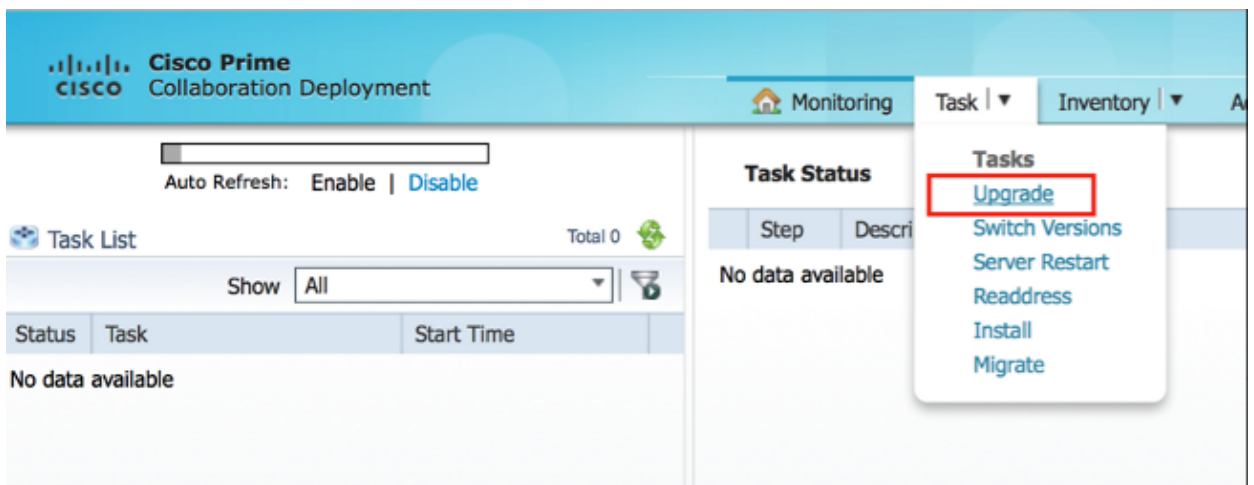


13. Click **Add Upgrade Task**.

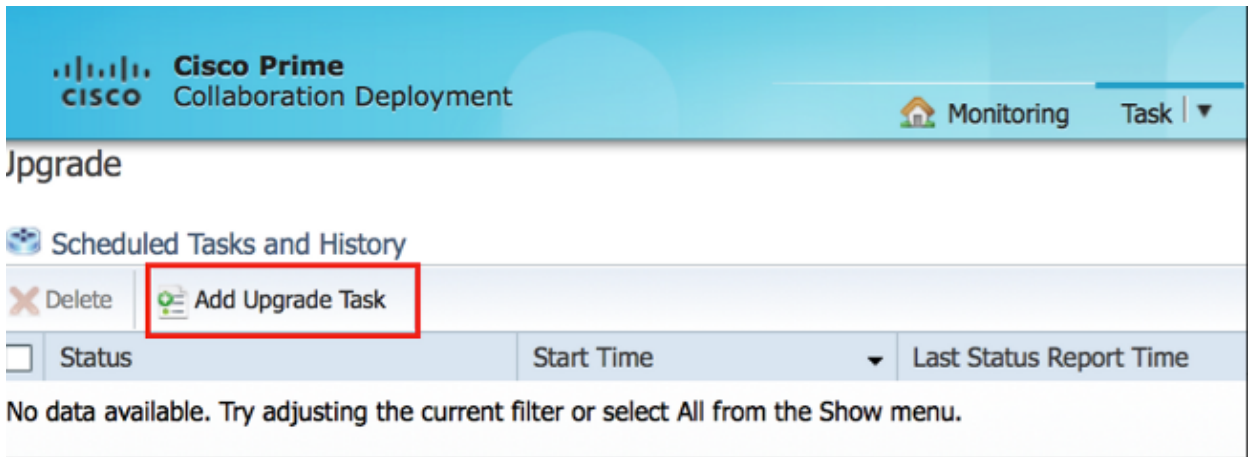


The Add Upgrade Task wizard displays.


14. From the **Cluster** drop-down list and the **Product** drop-down list, choose the cluster and product on which the nodes are to be upgraded. Check the Cluster Nodes check boxes that are part of the upgrade from the list of nodes. Click **Next**.

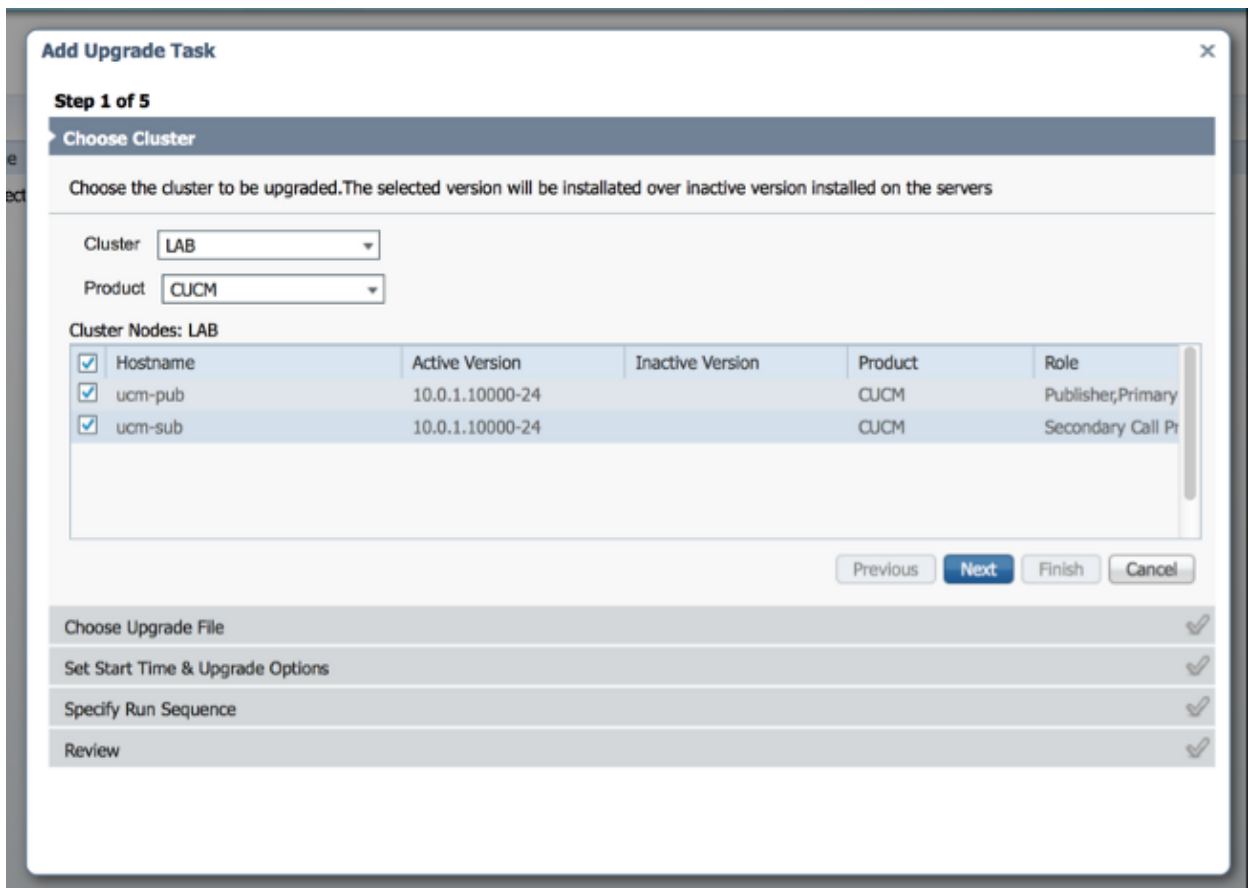

15. Click **Browse** in order to select the upgrade files from the file server.

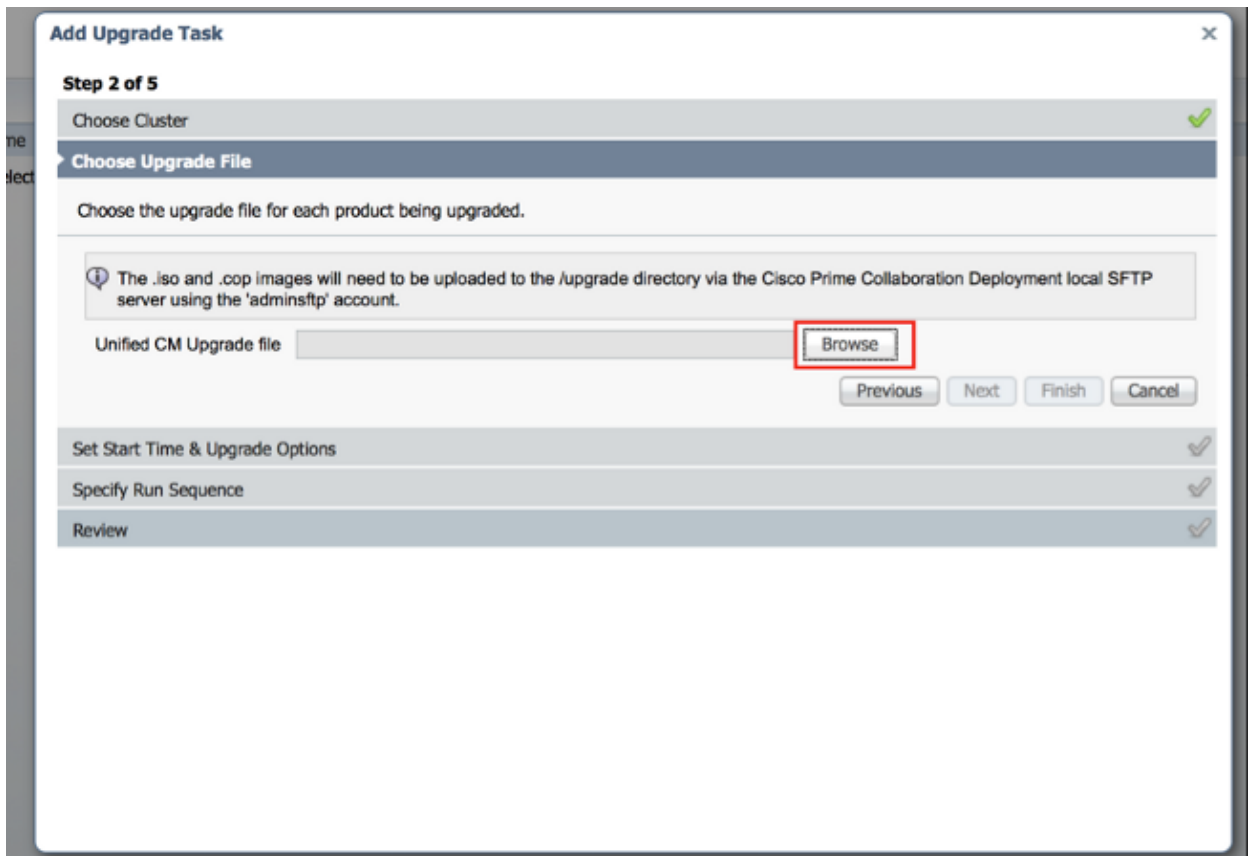

16. Click *Choose File* and Click *Next*.

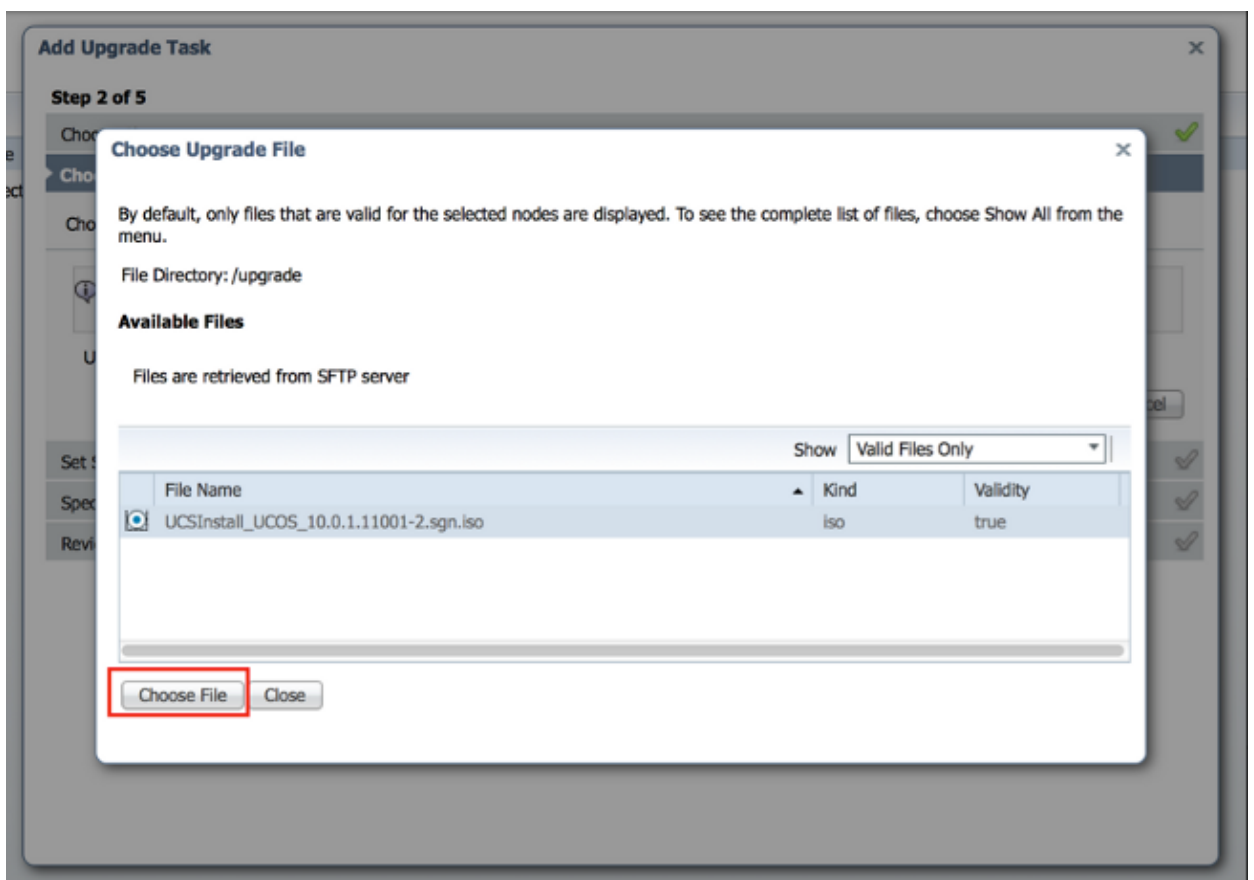

Note: The Next button is disabled if no valid upgrade files are selected.

17. You have several options to schedule upgrades. Click the radio button for the appropriate option. In this example, "Start task manually" was selected. Click *Next*.

Add Upgrade Task

Step 3 of 5

Choose Cluster ✓

Choose Upgrade File ✓

Set Start Time & Upgrade Options

Select a start time for the task and set upgrade options.

The time zone shown here corresponds to the time zone of this Cisco Prime Collaboration Deployment server and not necessarily that of the target servers or cluster.

Start Time

Schedule for a specific time [] (IST)

Start task manually

Start task immediately upon completion of this wizard

Upgrade Options

Automatically switch to new version after successful upgrade

Previous Next Finish Cancel

Specify Run Sequence ✓

Review ✓

Note: The "Automatically switch to new version after successful upgrade" option is not available on clusters which contain IM and Presence or Unity Connection nodes.

18. [Optional] Specify the sequence of steps to complete the task. If this is not specified, it uses the default option.
19. Click *Next*.

Add Upgrade Task ✕

Step 4 of 5

- Choose Cluster ✔
- Choose Upgrade File ✔
- Set Start Time & Upgrade Options ✔
- Specify Run Sequence**

Specify the sequence in which upgrade is processed by the servers. If there is an error during the process, the task will be stopped. You can optionally also pause the task when a step completes.


Step	Description	Upon Completion	Actions
▶ 1	Upgrade the CUCM Publisher: <small>ucm-pub</small>	Continue	✎
▶ 2	Upgrade the following node(s): <small>ucm-sub</small>	Continue	✎ ⏸

Previous
Next
Finish
Cancel


Review
✔

Note: The Next button remains enabled, which allows the user to click to be informed of any misconfiguration.

20. Use the **Review** section in order to verify the details of the task you created. You can add notes for the task if required. The notes are saved with the task and are visible if the task is edited before completion. Click **Finish** in order to schedule the task.

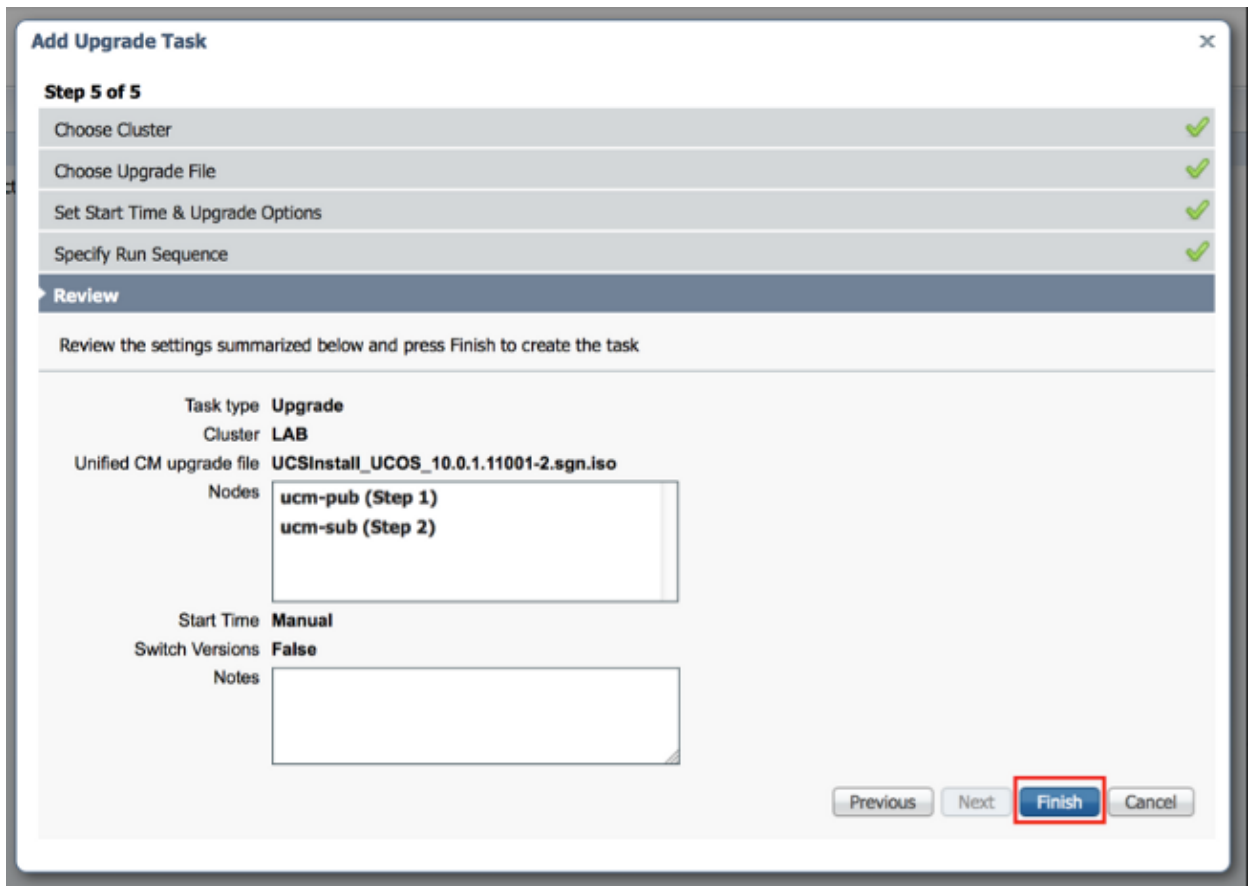


21. Click *Start task manually* in order to keep the task in a manual start.

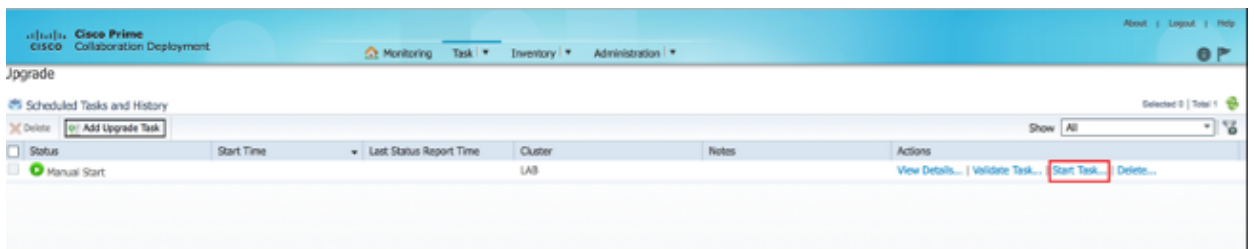


Verify

Use this section in order to confirm that your configuration works properly.

1. Click *Monitoring* on the main menu in order to view the Monitoring page.
2. Click *View Log*.

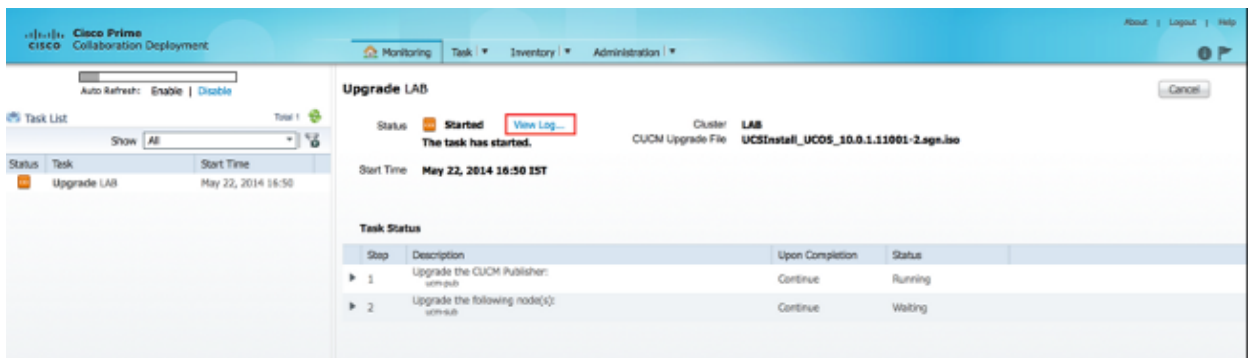

The View Task Log appears.

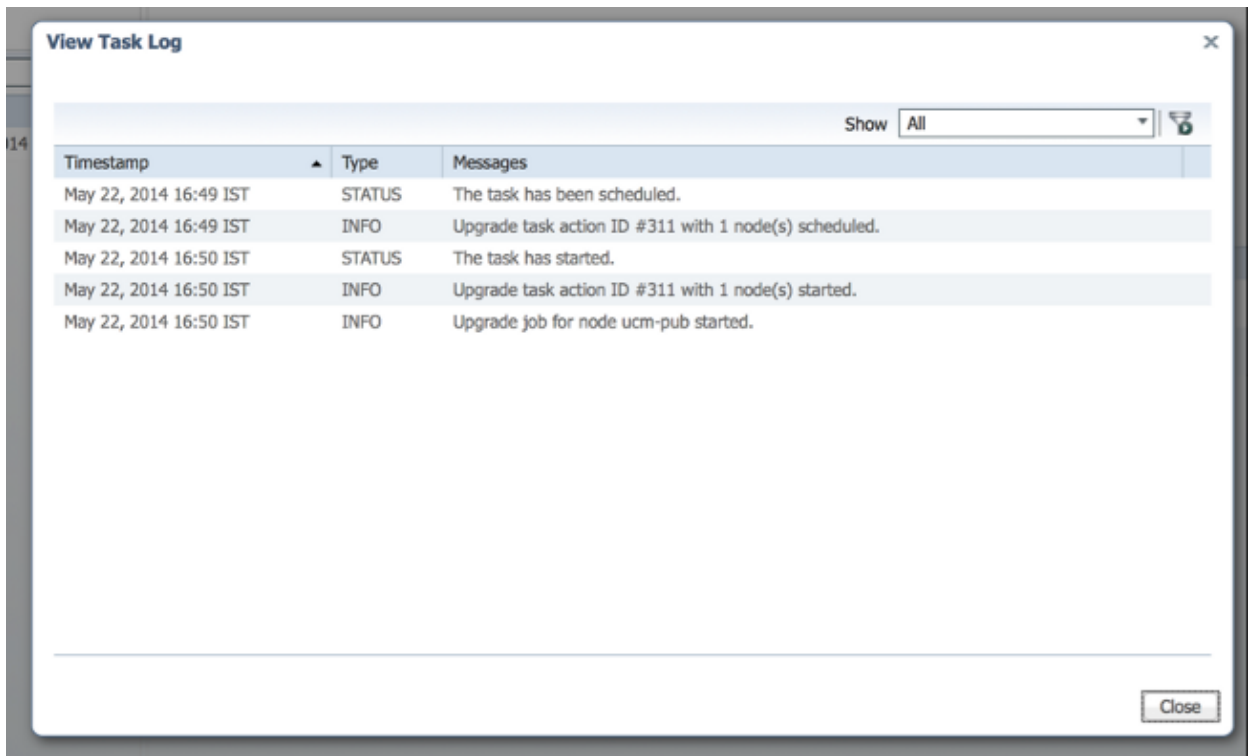

Troubleshoot

This section provides information you can use in order to troubleshoot your configuration.

The success or failure of each step in the upgrade task depends on the PCD server being able to receive a response from every server in the cluster in the upgrade process. In case the upgrade fails, verify the COP file installation status directly on the Unified Communications node. A further step ahead is to collect Install and upgrade logs and check the reason for failure.

The install logs can also be collected from the CLI with the *file get install /** command.

Additionally, you can obtain PCD Main Application logs with the *file get activelog tomcat/logs/ucmap/log4j/** command.