

Upgrade IP Phone Firmware Individually

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Configure](#)

[Verify](#)

[Troubleshoot](#)

Introduction

This document describes the procedure to upgrade Cisco IP phone firmware individually with Cisco Unified Communications Manager (CUCM) 10.x and later.

Prerequisites

Requirements

Cisco recommends that you have knowledge of these topics:

- CUCM 10.x and later
- Cisco Unified IP Phone



Note: Ensure that the Cisco IP phones are currently registered with CUCM.

Components Used

The information in this document is based on these software and hardware versions, but applicable to all CUCM releases and Cisco IP phone loads:

- CUCM 11.x
- Cisco Unified IP Phone


The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, ensure that you understand the potential impact of any command.

Configure

Perform these steps in order to upgrade the phone load for a single IP phone and other phones to use the old phone load that exists in your network environment. This situation arises when new firmware must be checked before you deploy it to the entire IP telephony network, or any single phone that requires a feature

supported by a particular firmware.

1. Download the required IP phone firmware from [Cisco IP Phone - Software Download](#) (registered customers only).
2. Before you proceed to upgrade the firmware, navigate to the Device menu, click Device Settings > Device Defaults and copy the **phone load name** that you currently use for the particular Cisco IP phone model which you plan to upgrade. Paste this file name in a notepad so that you can use the same file name in order to revert the default phone load name to the old firmware for all other phones.

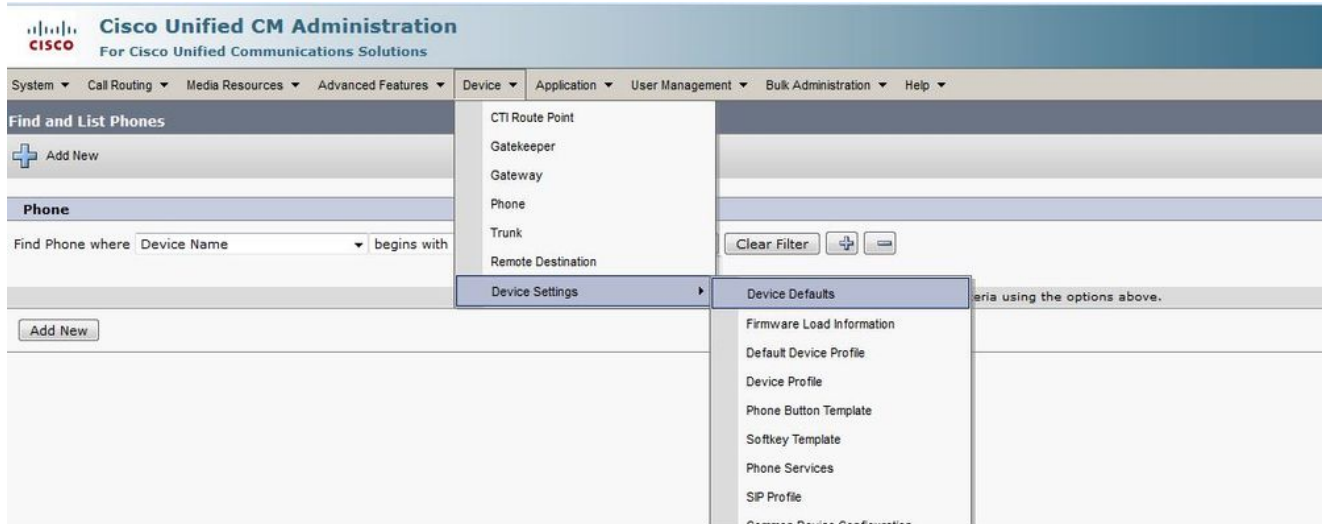

Device Type	Protocol	Load Information	Inactive Load Information	Device Pool	Phone Template	On-premise Onboarding Method
Cisco 7811	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7811 SIP	Auto Registration
Cisco 7821	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7821 SIP	Auto Registration
Cisco 7832	SIP	sip7832.14-1-1-0001-125		Default	Standard 7832 SIP	Auto Registration
Cisco 7841	SIP	sip78xx.14-1-1-0001-136		Default	Standard 7841 SIP	Auto Registration
Cisco 7861	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7861 SIP	Auto Registration

3. Run the upgrade patch file of the new IP phone load in CUCM. You can do this when you burn the patch file to a CD or DVD, or when you share it via SFTP.
 - Navigate to Cisco Unified OS Administration in the navigation menu at the top right of the web page. Log in with the platform administration credentials.
 - Navigate to Software Upgrades > Install/Upgrade.
 - Choose the appropriate options for DVD/CD or network source (SFTP Server), and provide details of where it can pull the file to download.
 - When the installation is complete, this automatically changes the Phone Load Name in the device defaults for the particular phone model.

The screenshot shows the 'Dual Bank Information' table with the following data:

Device Type	Protocol	Load Information	Inactive Load Information	Device Pool	Phone Template	On-premise Onboarding Method
Cisco 7811	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7811 SIP	Auto Registration
Cisco 7821	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7821 SIP	Auto Registration
Cisco 7832	SIP	sip7832.14-1-1-0001-125		Default	Standard 7832 SIP	Auto Registration
Cisco 7841	SIP	78xx.14-1-1-0001-136	78xx.14-1-1-0001-136	Default	Standard 7841 SIP	Auto Registration
Cisco 7861	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7861 SIP	Auto Registration

4. Copy this new load information from the Device Defaults and paste it into the notepad file.
5. In order to maintain the old load name for other phones in the network, replace the old load information from the notepad and repeat the procedure, Device > Device Settings > Device Defaults. Then, locate the phone model for which the firmware was upgraded, click Swap Loads, and then Save. This helps all other phones to maintain the old device default load information.

Device Type	Protocol	Load Information	Inactive Load Information	Device Pool	Phone Template	On-premise Onboarding Method
Cisco 7811	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7811 SIP	Auto Registration
Cisco 7821	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7821 SIP	Auto Registration
Cisco 7832	SIP	sip7832.14-1-1-0001-125		Default	Standard 7832 SIP	Auto Registration
Cisco 7841	SIP	sip78xx.14-2-1-0001-14	78xx.14-1-1-0001-136	Default	Standard 7841 SIP	Auto Registration
Cisco 7861	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7861 SIP	Auto Registration

Device Defaults Configuration						
Save						
Cisco 7821	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7821 SIP	Auto Registration
Cisco 7832	SIP	sip7832.14-1-1-0001-125		Default	Standard 7832 SIP	Auto Registration
Cisco 7841	SIP	sip78xx.14-1-1-0001-136	78xx.14-2-1-0001-14	Default	Standard 7841 SIP	Auto Registration
Cisco 7861	SIP	sip78xx.14-2-1-0001-14	sip78xx.14-1-1-0001-	Default	Standard 7861 SIP	Auto Registration
Cisco 8811	SIP	sip88xx.14-1-1-0001-125	sip88xx.11-5-1-18	Default	Standard 8811 SIP	Auto Registration

- Now, restart the TFTP service on the nodes where it runs. Navigate to Cisco Unified Serviceability, then to Tools > Control Center-Feature Services and restart the TFTP service.
- Navigate to Device Menu > Phone and choose the IP phone on which you want to perform the upgrade. Paste the new load information to the Phone Load Name field and click Save.

The screenshot shows the 'Phone Configuration' page for a phone. The 'Phone Load Name' field is highlighted with a red box and contains the value 'sip78xx.14-2-1-0001-14'. Other fields include 'Common Phone Profile' (Standard Common Phone Profile), 'Calling Search Space' (< None >), 'AAR Calling Search Space' (< None >), 'Media Resource Group List' (< None >), 'User Hold MOH Audio Source' (< None >), 'Network Hold MOH Audio Source' (< None >), 'Location*' (Hub_None), 'AAR Group' (< None >), 'User Locale' (< None >), 'Network Locale' (< None >), 'Built In Bridge*' (Default), 'Privacy*' (Default), 'Device Mobility Mode*' (Default), 'Owner' (User / Anonymous (Public/Shared Space)), 'Owner User ID' (< None >), 'Mobility User ID' (< None >), 'Phone Personalization*' (Default), 'Services Provisioning*' (Default), 'Use Trusted Relay Point*' (Default), 'BLF Audible Alert Setting (Phone Idle)*' (Default), 'BLF Audible Alert Setting (Phone Busy)*' (Default), 'Always Use Prime Line*' (Default), 'Always Use Prime Line for Voice Message*' (Default), 'Geolocation' (< None >), 'Ignore Presentation Indicators (internal calls only)' (unchecked), 'Allow Control of Device from CTI' (checked), and 'Round Into Hunt Group' (checked).

- Finally, click Apply Configuration and then Reset the Phone.

Verify

Use this section in order to confirm that your configuration works properly.

In order to verify that the phone has copied the new firmware image, use one of these methods:

- Find the IP address of the IP phone on which the upgrade is performed. Use the IP address in the browser in order to obtain the device information of the IP phone. Check for the version to see if the firmware has changed to the new one.
- Physically, press the Settings button on your IP phone. Scroll down to Model Information and click Select. Then, scroll down to Load File and verify that it is the same load file that is upgraded.

Troubleshoot

There is currently no specific troubleshooting information available for this configuration.