

Reset or Change CUCM OS Admin and Security Password

Contents

[Introduction](#)

[Prerequisites](#)

[Requirements](#)

[Components Used](#)

[Configure](#)

[To Change OS Admin Password](#)

[To Change Security Password](#)

[To Reset OS Admin or Security Password](#)

[Verify](#)

[Troubleshoot](#)

Introduction

This document describes how to reset or change OS admin password and security password.

Prerequisites

Requirements

Cisco recommends that you have knowledge of these topics:

- Cisco Unified Communications Manager (CUCM) version 10.5

Components Used

The information in this document is based on Cisco Call Manager version 10.5

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, ensure that you understand the potential impact of any command.

Configure

To Change OS Admin Password

```
admin> set password user admin
```

It asks you to enter the old password and new password. Once the system verifies the password, it is changed.

```
admin:set password user admin
Please enter the old password: *****
  Please enter the new password: *****
Reenter new password to confirm: *****
Please wait...
```

```
Password updated successfully.
admin:█
```

To Change Security Password

```
admin> set password user security
```

It asks you to enter the old password and new password. Once the system verifies the password, it is changed.

Please ensure that the security password on the publisher is changed first. The security password needs to be the same on all cluster nodes, or the publisher and subscriber(s) do not communicate. After the security password is changed on a cluster node, restart that node.

```
admin:set password user security
Please enter the old password: *****
  Please enter the new password: *****
Reenter new password to confirm: *****
WARNING:
Please make sure that the security password on the publisher is changed first.
The security password needs to be the same on all cluster nodes,
or the publisher and subscriber(s) will not communicate.
After changing the security password on a cluster node, please restart that node
.

Continue (y/n)?
admin:set password user security
Please enter the old password: *****
  Please enter the new password: *****
Reenter new password to confirm: *****
WARNING:
Please make sure that the security password on the publisher is changed first.
The security password needs to be the same on all cluster nodes,
or the publisher and subscriber(s) will not communicate.
After changing the security password on a cluster node, please restart that node
.

Continue (y/n)? █
```

```
Reenter new password to confirm: *****
WARNING:
Please make sure that the security password on the publisher is changed first.
The security password needs to be the same on all cluster nodes,
or the publisher and subscriber(s) will not communicate.
After changing the security password on a cluster node, please restart that node
.
Continue (y/n)?y
Please wait...

Password updated successfully.
admin:█
```

To Reset OS Admin or Security Password


Step 1. From Vsphere client, log in to CUCM console through this username and password: **pwrecovery/pwreset**. You get this screen, as shown in the image:

```
*****
**
** Welcome to Platform password reset
** Admin and Security password reset are possible
**
*****


-- VMware Installation: 4 vCPU@2GB Hz, 1 Disk(s), Disk 1:100 GB , 4096MB RAM
--
You will be required to remove, then insert any valid CD/DVD media through VMware
e-Sphere client.
To begin you will need to remove any media from the VMware client CD/DVD drive.
You may press Control-C at any time to abort.

NOTE: At any point when it requests insert CD/DVD media it should be mounted the
ough vSphere client for VMware server.
Please connect the CD/DVD Drive from VMware client and press any key when ready.
--
```

Step 2. In order to connect to cd/dvd drive, you can select any iso image from datastore. This does not re-image your CUCM, but this is just to check CUCM connectivity with vm client.

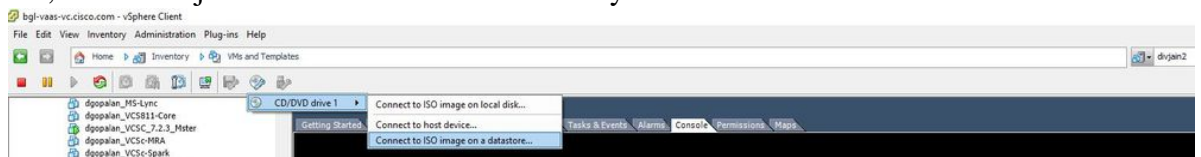

 Step 3. After the iso image is selected, it asks you to press any key. Once it is tested, then you get a prompt to remove the iso.



```

** Welcome to Platform password reset
** Admin and Security password reset are possible
**
*****
** VMware Installation: 4 vCpu@2600 Hz, 1 Disk(s), Disk 1:100 GB , 4096MB RAM
**

You will be required to remove, then insert any valid CD/DVD media through UMWare
e-Sphere client
To begin you will need to remove any media from the UMWare client CD/DVD drive.
You may press Control-C at any time to abort.

NOTE: At any point when it requests insert CD/DVD media it should be mounted throug
h vSphere client for UMWare server

Please connect the CD/DVD Drive from UMWare client and press any key when ready.
**
testing for removal of CD/DVD media

You must remove the CD/DVD media to continue.
Press any key when ready..._

```

Step 4. Press any **key** to continue. You get the option to reset OS Admin password (**enter a**) or Security password (**enter s**).

```

Enter a for admin password reset
Enter s for security password reset
Enter < to skip

```

Step 5. You can change the password accordingly for OS Admin or Security.

```


Enter a for admin password reset
Enter s for security password reset
Enter < to skip

***** The Security Password System is passworded on this
> server. The password for this server is: *****. It can
> only be changed by the administrator. To change it, use
> the command: set password. The value for security
> password is: *****. You must remove the CD/DVD media from
> drive (CD/DVD media) to continue.
*****

Please connect the CD/DVD Drive from UMWare client and press any key when ready.
**
testing for removal of CD/DVD media

You must remove the CD/DVD media to continue.
Press any key when ready..._

```

 **Note:** Take fresh backup after Security password is changed to avoid any backup/restore related issues.

Verify

- For OS Admin, you can log in on CLI or OS Admin page to verify if the password has changed or not.
- For Security password, ensure that all the nodes in the cluster are authenticated after password change through the command: **show network cluster**.

```

admin:show network cluster
10.106.97.146 divyaiimpl Subscriber cups DBPub authenticated using TCP since Fri Jun 8 15:24:00 2018
10.106.97.139 divyacucm4 Subscriber callmanager DBSub authenticated using TCP since Thu Jun 7 12:05:29 2018
10.106.97.137 divyacucm3.divya.com divyacucm3 Publisher callmanager DBPub authenticated

Server Table (processnode) Entries
-----
10.106.97.137
10.106.97.139
10.106.97.146
admin:
admin:
admin:

```

Troubleshoot

There is currently no specific information available to troubleshoot this configuration.