

# Connect a Wireless Adapter to a Cisco Small Business VoIP Router

---

## Contents

[Introduction](#)

[How do I connect a wireless adapter to a Cisco Small Business VoIP router?](#)

[Related Information](#)

---

## [Introduction](#)

This article is one in a series to assist in the setup, troubleshooting, and maintenance of Cisco Small Business products.

### [Q. How do I connect a wireless adapter to a Cisco Small Business VoIP router?](#) A.

This article assumes that your wireless adapter is already properly installed and/or enabled on the computer. Before you try to connect your wireless adapter to a Cisco Small Business wireless router, know the following: SSID, Wireless Security and/or Network Key. If you do not have these settings, click [here](#).

### **Configure your Wireless Adapter to Connect to a Cisco Small Business Wireless Router**

**Note:** These steps are for Windows XP with Service Pack 2.

#### **Step 1:**

Right-click the **Wireless Network Connection** icon at the bottom-right of the screen, and select **View Available Wireless Networks**.

#### **Step 2:**

Select your wireless network's name or SSID, and click **Connect**.

If **WEP** is enabled on the router:

If **WPA** is enabled on the router:

#### **Step 3:**

Click .

## Related Information

- [Technical Support & Documentation - Cisco Systems](#)