



# Unsetting the Boot Parameter Using IOS Command Line Interface

---

## Before You Begin

- Ensure that you have access to Cisco RF Gateway 10 Supervisor Engine 7-E through Management IP.

Effective with Cisco IOS-XE 3.2.3SQ, platform environment variables such as BootParam can be modified from the IOS Command Line Interface. This procedure can be performed using Telnet or Management IP, which is a convenient way to modify the variables.

The following are the boot parameter variables available:

- BootParam1
- BootParam2
- BootParam3
- BootParam4
- BootMode



### Important

You must perform this procedure on both active and standby Supervisor Engine 7-E card because this procedure is applicable only for the active Supervisor Engine 7-E. Hence you need to repeat this procedure on the standby Supervisor Engine 7-E card as well.

## Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> RFGW-10> <b>enable</b>	Enables privileged EXEC mode.

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 2</b>	<b>show platform environment variables</b>  <b>Example:</b> <pre>RFGW-10# show platform environment variables</pre>	Verify if boot parameter variables and BootMode environment variables are set.  The following is displayed if the boot parameter variables are set:  <pre>BootParam1="ip=::::nova:eth0:off rw disableautoreboot" BootParam2="BootMode=0" BootMode="0"</pre>
<b>Step 3</b>	<b>platform environment variables unset BootParamvariable</b>  <b>Example:</b> <pre>RFGW-10# platform environment variables unset BootParam1 RFGW-10# platform environment variables unset BootParam2 RFGW-10# platform environment variables unset BootParam3 RFGW-10# platform environment variables unset BootParam4</pre>	Unset the boot parameter variables. <ul style="list-style-type: none"> <li>• <i>BootParamvariable</i> - The boot parameter variables.</li> </ul> The following are the boot Parameter variables available: <ul style="list-style-type: none"> <li>◦ BootParam1</li> <li>◦ BootParam2</li> <li>◦ BootParam3</li> <li>◦ BootParam4</li> <li>◦ BootMode</li> </ul>
		<b>Note</b> Skip this step, if boot parameter variables are not set.
<b>Step 4</b>	<b>show platform environment variables</b>  <b>Example:</b> <pre>RFGW-10# show platform environment variables</pre>	Verify if the boot parameter variables are now unset.
<b>Step 5</b>	<b>reload</b>  <b>Example:</b> <pre>RFGW-10# reload</pre>	Reload the SUP7. <b>Note</b> Reload ensures that the boot parameter variables are unset.

The following is the example of the **show platform environment variables** command, if boot parameter variables are set.

```
PS1="rommon ! >" 
SupportedFeatures="1" 
SkipDiagsAlways="1" 
CodeSignDisable="1" 
BootParam1="ip=::::va:eth0:off rw disableautoreboot" 
BootParam2="BootMode=0" 
ConfigReg="0x2102" 
DiagMonitorAction="Normal" 
RommonVer="15.0(1r)SQ(315)" 
BOOT="slot0:rfgwk10-entservicesk9.03.03.01.SQ.150-2.SQB1.bin,12;bootflash:rfgwk10-entservicesk9.03.02.00.SQ.150-2.SQA.bin,12;"
```

```
RET_2_RTS="01:07:15 EST Tue Feb 4 2014"
BootedFileName="slot0:rfgwk10-entservicesk9.03.03.01.SQ.150-2.SQB1.bin"
ReqClearAutoboot="1"
BootStatus="Success"
RET_2_RCALTS=""
```

The following is the example of the **show platform environment variables** command if boot parameter variables are unset.

```
PS1="rommon ! >"
SupportedFeatures="1"
SkipDiagsAlways="1"
CodeSignDisable="1"
ConfigReg="0x2102"
DiagMonitorAction="Normal"
RommonVer="15.0(1r)SQ(315)"
BOOT="slot0:rfgwk10-entservicesk9.03.03.01.SQ.150-2.SQB1.bin,12;bootflash:rfgwk10-entservicesk9.03.02.00.SQ.150-2.SQA.bin,12;"
RET_2_RTS="01:07:15 EST Tue Feb 4 2014"
BootedFileName="slot0:rfgwk10-entservicesk9.03.03.01.SQ.150-2.SQB1.bin"
ReqClearAutoboot="1"
BootStatus="Success"
RET_2_RCALTS=""
```

### What to Do Next

This procedure unsets the boot parameter on a single Supervisor Engine 7-E card. So repeat this procedure on the other Supervisor Engine 7-E card.

