



# Cisco Network Insights Base 2.0.22 Installation

---

This chapter contains the following sections:

- [About Cisco Network Insights Base Application, on page 1](#)
- [Disabling Cisco Network Insights Base Application, on page 1](#)
- [Upgrading Cisco Network Insights Base Application, on page 2](#)

## About Cisco Network Insights Base Application

The Cisco Network Insights Base application is pre-installed and enabled with Cisco APIC, release 4.2(4). Cisco Network Insights Base allows the application to share environment specific data with Cisco when connected and claimed in the device connector.

For details on device connector, see [Setting Up the Device Connector](#).

## Disabling Cisco Network Insights Base Application

This section contains the steps required to disable the Cisco Network Insights Base application enabled with Cisco APIC, release 4.2(4).

### Before you begin

Before you begin installing a Cisco Network Insights Base application, make sure the following requirements are met:

- You must have administrator credentials to disable Cisco Network Insights Base application.

- 
- Step 1** Log in to the Cisco APIC GUI with admin privileges.
  - Step 2** Click the **Apps** tab on the top navigation bar. Then click **Open** from the Cisco Network Insights Base application dialog.
  - Step 3** The Cisco Network Insights Base application dialog appears.
  - Step 4** Click **Enable** in the Cisco Network Insights Base application dialog.
  - Step 5** Uncheck **Help Cisco Improve its products** option.
-

# Upgrading Cisco Network Insights Base Application

The Cisco Network Insights Base application is supported only on Cisco APIC, release 4.2(4). This application is not compatible with Cisco APIC, releases 4.0.x, 4.1.x, 4.2(1i), and 4.2(2e).