



# System Configuration

- [System Configuration Settings, on page 1](#)
- [System Alias and Banner, on page 1](#)


## System Configuration Settings

There is a number of global system settings that are available under **Admin > System Configuration**, which you can configure for your Multi-Site Orchestrator as described in the following sections.

## System Alias and Banner

This section describes how to configure an alias for your Nexus Dashboard Orchestrator as well as enable a custom GUI-wide banner to be displayed at the top of your screen, as shown in the following figure.

**Figure 1: System Banner Display**

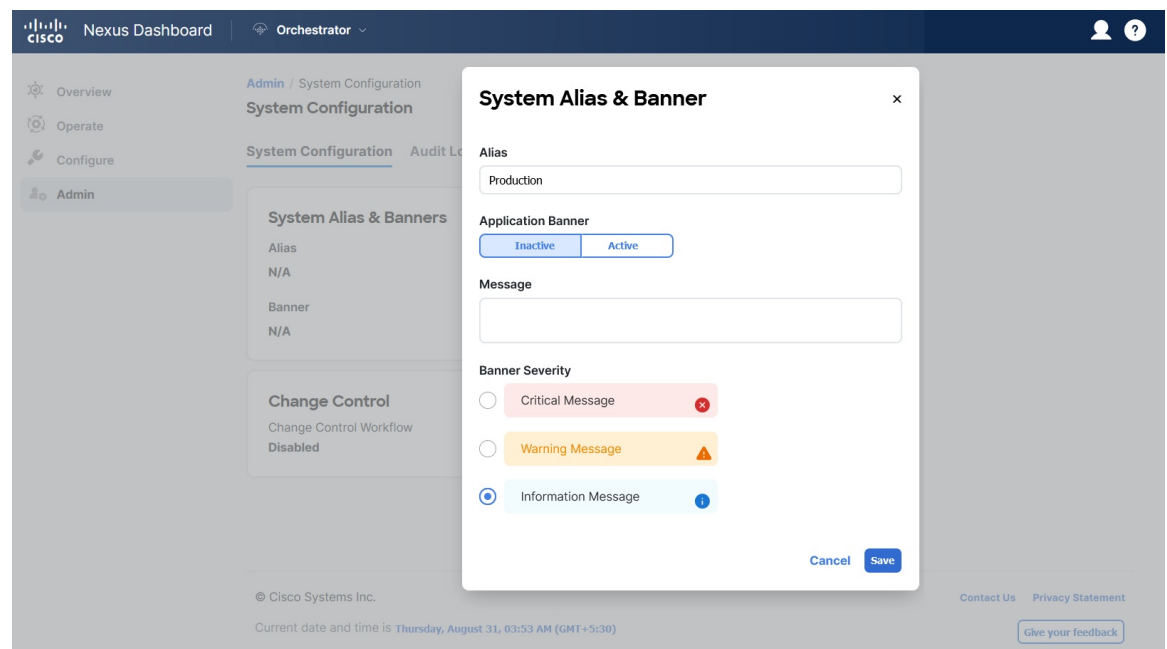

- 
- Step 1** Log in to your Orchestrator.
- Step 2** From the left navigation pane, select **Admin > System Configuration**.
- Step 3** Click the **Edit** icon to the right of the **System Alias & Banners** area.
- This opens the **System Alias & Banners** settings window.
- Step 4** In the **Alias** field, specify the system alias.
- Step 5** Choose whether you want to enable the GUI banner.
- Step 6** If you enable the banner, you must provide the message that will be displayed on it.
- Step 7** If you enable the banner, you must choose the severity, or color, for the banner.
- Step 8** Click **Save** to save the changes.
-