



Configuring Segment Routing

This chapter contains information on how to configure segment routing.

- [Configuring Segment Routing, on page 1](#)

Configuring Segment Routing

Configuring Segment Routing

Before you begin

Confirm that the following conditions are met before configuring segment routing.

- The **install feature-set mpls**, **feature-set mpls** and **feature mpls segment-routing** commands should be present before configuring the **segment-routing** command.
- If the global block is configured, the specified range is used. Otherwise, the default 16000 – 23999 range is used.
- BGP now uses both **set label-index <value>** configuration and the new **connected-prefix-sid-map** CLI. In case of a conflict, the configuration in SR-APP is preferred.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: <pre>switch# configure terminal switch(config) #</pre>	Enters global configuration mode.
Step 2	segment-routing Example: <pre>switch(config) # segment-routing switch(config-sr) # mpls switch(config-sr-mpls) #</pre>	Enables the MPLS segment routing functionality. The no form of this command disables the MPLS segment routing feature.

	Command or Action	Purpose
Step 3	connected-prefix-sid-map Example: switch(config-sr-mpls)# connected-prefix-sid-map switch(config-sr-mpls)#	Configures the connected prefix segment identifier mappings.
Step 4	global-block <min> <max> Example: switch(config-sr-mpls)# global-block <min> <max> switch(config-sr-mpls)#	Specifies the global block range for the segment routing bindings.
Step 5	connected-prefix-sid-map Example: switch(config-sr-mpls)# connected-prefix-sid-map switch(config-sr-mpls-conn-pfsid) #	Configures the connected prefix segment identifier mappings.
Step 6	address-family ipv4 Example: switch(config-sr-mpls-conn-pfsid) #address-family ipv4	Configures the IPv4 address family.
Step 7	<prefix>/<masklen> [index absolute] <label> Example: switch(config-sr-mpls)# 2.1.1.5/32 absolute 201101	The optional keywords index or absolute indicate whether the label value entered should be interpreted as an index into the SRGB or as an absolute value.

Example

See the following configuration examples of the show commands:

```
switch# show segment-routing mpls
Segment-Routing Global info

Service Name: segment-routing
State: Enabled
Process Id: 29123
Configured SRGB: 17000 - 24999
SRGB Allocation status: Alloc-Successful
Current SRGB: 17000 - 24999
Cleanup Interval: 60
Retry Interval: 180
```

The following CLI displays the clients that are registered with SR-APP. It lists the VRFs, for which the clients have registered interest.

```
switch# show segment-routing mpls clients
      Segment-Routing Mpls Client Info

Client: isis-1
    PIB index: 1      UUID: 0x41000118      PID: 29463      MTS SAP: 412
    TIBs registered:
        VRF: default Table: base

Client: bgp-1
    PIB index: 2      UUID: 0x11b      PID: 18546      MTS SAP: 62252
    TIBs registered:
        VRF: default Table: base

Total Clients: 2
```

In the **show segment-routing mpls ipv4 connected-prefix-sid-map** CLI command example, SRGB indicates whether the prefix SID is within the configured SRGB. The **Idx** field indicates that the configured label is an index into the global block. The **Abs** field indicates that the configured label is an absolute value.

If the SRGB field displays N, it means that the configured prefix SID is not within the SRGB range and it is not provided to the SR-APP clients. Only the prefix SIDs that fall into the SRGB range are given to the SR-APP clients.

```
switch# show segment-routing mpls ipv4 connected-prefix-sid-map
      Segment-Routing Prefix-SID Mappings
      Prefix-SID mappings for VRF default Table base
      Prefix          SID   Type Range SRGB
      13.11.2.0/24    713   Indx 1     Y
      30.7.7.7/32     730   Indx 1     Y
      59.3.24.0/30    759   Indx 1     Y
      150.101.1.0/24  801   Indx 1     Y
      150.101.1.1/32  802   Indx 1     Y
      150.101.2.0/24  803   Indx 1     Y
      1.1.1.1/32      16013 Abs   1     Y
```

The following CLI displays the **show running-config segment-routing** output.

```
switch# show running-config segment-routing ?
> Redirect it to a file
>> Redirect it to a file in append mode
all Show running config with defaults
| Pipe command output to filter

switch# show running-config segment-routing
switch# show running-config segment-routing

!Command: show running-config segment-routing
!Running configuration last done at: Thu Dec 12 19:39:52 2019
!Time: Thu Dec 12 20:06:07 2019

version 9.3(3) Bios:version 05.39
segment-routing
  mpls
    connected-prefix-sid-map
      address-family ipv4
```

```
2.1.1.1/32 absolute 100100
switch#
```

Enabling MPLS on an Interface

You can enable MPLS on an interface for use with segment routing.

Before you begin

You must install and enable the MPLS feature set using the **install feature-set mpls** and **feature-set mpls** commands.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	interface type slot/port Example: switch(config)# interface ethernet 2/2 switch(config-if)#	Enters the interface configuration mode for the specified interface.
Step 3	[no] mpls ip forwarding Example: switch(config-if)# mpls ip forwarding	Enables MPLS on the specified interface. The no form of this command disables MPLS on the specified interface.
Step 4	(Optional) copy running-config startup-config Example: switch(config-if)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring the Segment Routing Global Block

You can configure the beginning and ending MPLS labels in the segment routing global block (SRGB).

Before you begin

You must install and enable the MPLS feature set using the **install feature-set mpls** and **feature-set mpls** commands.

You must enable the MPLS segment routing feature.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config) #	Enters global configuration mode.
Step 2	[no] segment-routing Example: switch(config) # segment-routing switch(config-sr) # mpls	Enters the segment routing configuration mode and enables the default SRGB of 16000 to 23999. The no form of this command unallocates that block of labels. If the configured dynamic range cannot hold the default SRGB, an error message appears, and the default SRGB will not be allocated. If desired, you can configure a different SRGB in the next step.
Step 3	[no] global-block beginning-label ending-label Example: switch(config-sr-mpls) # global-block 16000 471804	Specifies the MPLS label range for the SRGB. Use this command if you want to change the default SRGB label range that is configured with the segment-routing command. The permissive values for the beginning MPLS label and the ending MPLS label are from 16000 to 471804. The mpls label range command permits 16 as the minimum label, but the SRGB can start only from 16000. Note The minimum value for the global-block command starts from 16000. If you upgrading from previous releases, you should modify the SRGB so that it falls within the supported range before triggering an upgrade.
Step 4	(Optional) show mpls label range Example: switch(config-sr-mpls) # show mpls label range	Displays the SRGB, only if the SRGB allocation is successful.
Step 5	show segment-routing	Displays the configured SRGB.
Step 6	show segment-routing mpls Example: switch(config-sr-mpls) # show segment-routing mpls	Displays the configured SRGB.
Step 7	(Optional) copy running-config startup-config Example:	Copies the running configuration to the startup configuration.

	Command or Action	Purpose
	switch(config-sr-mpls) # copy running-config startup-config	

Configuring the Label Index

You can set the label index for routes that match the **network** command. Doing so causes the BGP prefix SID to be advertised for local prefixes that are configured with a route map that includes the **set label-index** command, provided the route map is specified in the **network** command that specifies the local prefix. (For more information on the **network** command, see the "Configuring Basic BGP" chapter in the [Cisco Nexus 9000 Series NX-OS Unicast Routing Configuration Guide](#).)



Note Segment Routing Application (SR-APP) module is used to configure the segment routing functionality. BGP now uses both **set label-index <value>** configuration under route-map and the new **connected-prefix-sid-map** CLI for prefix SID configuration. In case of a conflict, the configuration in SR-APP is preferred.



Note Route-map label indexes are ignored when the route map is specified in a context other than the **network** command. Also, labels are allocated for prefixes with a route-map label index independent of whether the prefix has been configured by the **allocate-label route-map route-map-name** command.

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config) #	Enters global configuration mode.
Step 2	route-map map-name Example: switch(config) # route-map SRmap switch(config-route-map) #	Creates a route map or enters route-map configuration mode for an existing route map.
Step 3	[no] set label-index index Example: switch(config-route-map) # set label-index 10	Sets the label index for routes that match the network command. The range is from 0 to 471788. By default, a label index is not added to the route.
Step 4	exit Example: switch(config-route-map) # exit switch(config) #	Exits route-map configuration mode.

	Command or Action	Purpose
Step 5	router bgp <i>autonomous-system-number</i> Example: switch(config)# router bgp 64496 switch(config-router)#{br/>	Enables BGP and assigns the AS number to the local BGP speaker. The AS number can be a 16-bit integer or a 32-bit integer in the form of a higher 16-bit decimal number and a lower 16-bit decimal number in xx.xx format.
Step 6	Required: address-family ipv4 unicast Example: switch(config-router)# address-family ipv4 unicast switch(config-router-af)#{br/>	Enters global address family configuration mode for the IPv4 address family.
Step 7	network <i>ip-prefix</i> [<i>route-map map-name</i>] Example: switch(config-router-af)# network 10.10.10.10/32 route-map SRmap#{br/>	Specifies a network as local to this autonomous system and adds it to the BGP routing table.
Step 8	(Optional) show route-map [<i>map-name</i>] Example: switch(config-router-af)# show route-map#{br/>	Displays information about route maps, including the label index.
Step 9	(Optional) copy running-config startup-config Example: switch(config-router-af)# copy running-config startup-config#{br/>	Copies the running configuration to the startup configuration.

Configuration Examples for Segment Routing

The examples in this section show a common BGP prefix SID configuration between two routers.

This example shows how to advertise a BGP speaker configuration of 10.10.10.10/32 and 20.20.20.20/32 with a label index of 10 and 20, respectively. It uses the default segment routing global block (SRGB) range of 16000 to 23999.

```
hostname s1
install feature-set mpls
feature-set mpls

feature telnet
feature bash-shell
feature scp-server
feature bgp
feature mpls segment-routing

segment-routing
  mpls
    vlan 1
segment-routing
  mpls
    connected-prefix-sid-map
      address-family ipv4
        2.1.1.1/32 absolute 100100
```

Configuration Examples for Segment Routing

```

route-map label-index-10 permit 10
    set label-index 10
route-map label-index-20 permit 10
    set label-index 20

vrf context management
    ip route 0.0.0.0/0 10.30.108.1

interface Ethernet1/1
    no switchport
    ip address 10.1.1.1/24
    no shutdown

interface mgmt0
    ip address dhcp
    vrf member management

interface loopback1
    ip address 10.10.10.10/32

interface loopback2
    ip address 20.20.20.20/32

line console
line vty

router bgp 1
    address-family ipv4 unicast
        network 10.10.10.10/32 route-map label-index-10
        network 20.20.20.20/32 route-map label-index-20
        allocate-label all
    neighbor 10.1.1.2 remote-as 2
    address-family ipv4 labeled-unicast

```

This example shows how to receive the configuration from a BGP speaker.

```

hostname s2
install feature-set mpls
feature-set mpls

feature telnet
feature bash-shell
feature scp-server
feature bgp
feature mpls segment-routing

segment-routing mpls
vlan 1

vrf context management
    ip route 0.0.0.0/0 10.30.97.1
    ip route 0.0.0.0/0 10.30.108.1

interface Ethernet1/1
    no switchport
    ip address 10.1.1.2/24
    ipv6 address 10:1:1::2/64
    no shutdown

interface mgmt0
    ip address dhcp
    vrf member management

```

```

interface loopback1
  ip address 2.2.2.2/32
line console

line vty

router bgp 2
  address-family ipv4 unicast
    allocate-label all
  neighbor 10.1.1.1 remote-as 1
    address-family ipv4 labeled-unicast

```

This example shows how to display the configuration from a BGP speaker. The **show** command in this example displays the prefix 10.10.10.10 with label index 10 mapping to label 16010 in the SRGB range of 16000 to 23999.

```

switch# show bgp ipv4 labeled-unicast 10.10.10.10/32

BGP routing table information for VRF default, address family IPv4 Label Unicast
BGP routing table entry for 10.10.10.10/32, version 7
Paths: (1 available, best #1)
Flags: (0x20c001a) on xmit-list, is in urib, is best urib route, is in HW, , has label
      label af: version 8, (0x100002) on xmit-list
      local label: 16010

      Advertised path-id 1, Label AF advertised path-id 1
      Path type: external, path is valid, is best path, no labeled nexthop, in rib
      AS-Path: 1 , path sourced external to AS
        10.1.1.1 (metric 0) from 10.1.1.1 (10.10.10.10)
          Origin IGP, MED not set, localpref 100, weight 0
          Received label 0
          Prefix-SID Attribute: Length: 10
            Label Index TLV: Length 7, Flags 0x0 Label Index 10

      Path-id 1 not advertised to any peer
      Label AF advertisement
      Path-id 1 not advertised to any peer

```

This example shows how to configure egress peer engineering on a BGP speaker.

```

hostname epe-as-1
install feature-set mpls
feature-set mpls

feature telnet
feature bash-shell
feature scp-server
feature bgp
feature mpls segment-routing

segment-routing mpls
vlan 1

vrf context management
  ip route 0.0.0.0/0 10.30.97.1
  ip route 0.0.0.0/0 10.30.108.1

interface Ethernet1/1
  no switchport
  ip address 10.1.1.1/24
  no shutdown

interface Ethernet1/2

```

Configuration Examples for Segment Routing

```

no switchport
ip address 11.1.1.1/24
no shutdown

interface Ethernet1/3
no switchport
ip address 12.1.1.1/24
no shutdown

interface Ethernet1/4
no switchport
ip address 13.1.1.1/24
no shutdown

interface Ethernet1/5
no switchport
ip address 14.1.1.1/24
no shutdown

```

The following is an example of **show ip route vrf 2** command.

```

show ip route vrf 2
IP Route Table for VRF "2"
'*' denotes best ucast next-hop
'**' denotes best mcast next-hop
'[x/y]' denotes [preference/metric]
'%<string>' in via output denotes VRF <string>

41.11.2.0/24, ubest/mbest: 1/0
  *via 1.1.1.9%default, [20/0], 13:26:48, bgp-2, external, tag 11 (mpls-vpn)
42.11.2.0/24, ubest/mbest: 1/0, attached
  *via 42.11.2.1, Vlan2, [0/0], 13:40:52, direct
42.11.2.1/32, ubest/mbest: 1/0, attached
  *via 42.11.2.1, Vlan2, [0/0], 13:40:52, local

```

The following is an example of **show forwarding route vrf 2** command.

```

slot 1
=====
IPv4 routes for table 2/base

-----+-----+-----+-----+
Prefix | Next-hop | Interface | Labels
| Partial Install |           |           |
-----+-----+-----+-----+
0.0.0.0/32   Drop      Null0
127.0.0.0/8  Drop      Null0
255.255.255.255/32 Receive    sup-eth1
*41.11.2.0/24 27.1.31.4  Ethernet1/3    PUSH
  30002 492529
                27.1.32.4      Ethernet1/21  PUSH
  30002 492529
                27.1.33.4      port-channel23 PUSH
  30002 492529
                27.11.31.4     Ethernet1/3.11 PUSH
  30002 492529
                27.11.33.4     port-channel123.11 PUSH
  30002 492529

```

29002 492529	37.1.53.4	Ethernet1/53/1	PUSH
29002 492529	37.1.54.4	Ethernet1/54/1	PUSH
29002 492529	37.2.53.4	Ethernet1/53/2	PUSH
29002 492529	37.2.54.4	Ethernet1/54/2	PUSH
29002 492529	80.211.11.1	Vlan801	PUSH
30002 492529			

The following is an example of **show bgp l2vpn evpn summary** command.

```
show bgp l2vpn evpn summary
BGP summary information for VRF default, address family L2VPN EVPN
BGP router identifier 2.2.2.3, local AS number 2
BGP table version is 17370542, L2VPN EVPN config peers 4, capable peers 1
1428 network entries and 1428 paths using 268464 bytes of memory
BGP attribute entries [476/76160], BGP AS path entries [1/6]
BGP community entries [0/0], BGP clusterlist entries [0/0]
476 received paths for inbound soft reconfiguration
476 identical, 0 modified, 0 filtered received paths using 0 bytes

Neighbor      V     AS MsgRcvd MsgSent   TblVer  InQ OutQ Up/Down  State/PfxRcd
1.1.1.1        4     11      0       0          0       0    0  23:01:53 Shut (Admin)
1.1.1.9        4     11    4637     1836 17370542  0    0  23:01:40  476
1.1.1.10       4     11      0       0          0       0    0  23:01:53 Shut (Admin)
1.1.1.11       4     11      0       0          0       0    0  23:01:52 Shut (Admin)
```

The following is an example of **show bgp l2vpn evpn** command.

```
show bgp l2vpn evpn 41.11.2.0
BGP routing table information for VRF default, address family L2VPN EVPN
Route Distinguisher: 14.1.4.1:115
BGP routing table entry for [5]:[0]:[0]:[24]:[41.11.2.0]:[0.0.0.0]/224, version 17369591
Paths: (1 available, best #1)
Flags: (0x0000002) on xmit-list, is not in l2rib/evpn, is not in HW

Advertised path-id 1
Path type: external, path is valid, received and used, is best path
Imported to 2 destination(s)
AS-Path: 11 , path sourced external to AS
1.1.1.9 (metric 0) from 1.1.1.9 (14.1.4.1)
Origin incomplete, MED 0, localpref 100, weight 0
Received label 492529
Extcommunity: RT:2:20

Path-id 1 not advertised to any peer

Route Distinguisher: 2.2.2.3:113
BGP routing table entry for [5]:[0]:[0]:[24]:[41.11.2.0]:[0.0.0.0]/224, version 17369595
Paths: (1 available, best #1)
Flags: (0x0000002) on xmit-list, is not in l2rib/evpn, is not in HW

Advertised path-id 1
Path type: external, path is valid, is best path
Imported from 14.1.4.1:115:[5]:[0]:[0]:[24]:[41.11.2.0]:[0.0.0.0]/224
```

AS-Path: 11 , path sourced external to AS
1.1.1.9 (metric 0) from 1.1.1.9 (14.1.4.1)