



## Introduction

---

This document describes the commands used to configure LAN switching and multilayer switching features in Cisco IOS software.

The commands for configuring LAN Emulation (LANE) features are presented in the *Cisco IOS Asynchronous Transfer Mode Command Reference*.



**Note**

---

Prior to Cisco IOS Release 12.4, the commands for configuring LANE, LAN switching, and multilayer switching features were presented in the *Cisco IOS IP Switching Command Reference*.

---

| <b>For Guidelines About Configuring this Cisco IOS Feature</b> | <b>Refer to the Following Cisco IOS Configuration Guide</b> |
|--|---|
| LAN switching-related features                                 | <i>Cisco IOS LAN Switching Configuration Guide</i>          |

