



## Segment Routing Commands

---

This chapter describes the commands used to configure and use Segment Routing.



---

**Note** All commands applicable to the Cisco NCS 5500 Series Router are also supported on the Cisco NCS 540 Series Router that is introduced from Cisco IOS XR Release 6.3.2. References to earlier releases in Command History tables apply to only the Cisco NCS 5500 Series Router.

---



**Note**

- Starting with Cisco IOS XR Release 6.6.25, all commands applicable for the Cisco NCS 5500 Series Router are also supported on the Cisco NCS 560 Series Routers.
- Starting with Cisco IOS XR Release 6.3.2, all commands applicable for the Cisco NCS 5500 Series Router are also supported on the Cisco NCS 540 Series Router.
- References to releases before Cisco IOS XR Release 6.3.2 apply to only the Cisco NCS 5500 Series Router.
- Cisco IOS XR Software Release 7.0.1 specific updates are not applicable for the following variants of Cisco NCS 540 Series Routers:
  - N540-28Z4C-SYS-A
  - N540-28Z4C-SYS-D
  - N540X-16Z4G8Q2C-A
  - N540X-16Z4G8Q2C-D
  - N540X-16Z8Q2C-D
  - N540-12Z20G-SYS-A
  - N540-12Z20G-SYS-D
  - N540X-12Z16G-SYS-A
  - N540X-12Z16G-SYS-D

---

• [adjacency-sid](#), on page 4

- affinity (flexible algorithm), on page 6
- affinity flex-algo, on page 8
- apply-weight ecmp-only bandwidth, on page 10
- bgp auto-discovery segment-routing, on page 11
- bgp best-path sr-policy, on page 12
- clear segment-routing local-block discrepancy all, on page 13
- data-plane, on page 14
- explicit-path , on page 15
- distribute link-state (IS-IS), on page 16
- encapsulation l2-traffic, on page 17
- encapsulation l3-traffic, on page 19
- encapsulation-type srv6 relax-sid, on page 20
- evi (bridge-domain), on page 21
- fast-reroute per-prefix ti-lfa, on page 22
- generic-metric flex-algo, on page 24
- hw-module profile segment-routing srv6 mode, on page 25
- hw-module profile segment-routing srv6 mode base, on page 28
- hw-module profile segment routing srv6 mode base-and-micro-segment-f3216, on page 29
- hw-module profile segment routing srv6 mode micro-segment, on page 31
- hw-module profile segment-routing srv6 mode encapsulation traffic-class, on page 33
- hw-module profile segment-routing srv6 mode base encapsulation traffic-class propagate, on page 35
- hw-module profile sr-policy v6-null-label-autopush, on page 36
- hw-module profile stats enh-sr-policy, on page 37
- hw-module profile stats ingress-sr, on page 38
- hw-module profile stats tx-scale-enhanced ingress-sr, on page 39
- index, on page 40
- mdt, on page 42
- mdt data, on page 43
- metric-type generic, on page 45
- microloop avoidance rib-update-delay, on page 46
- microloop avoidance segment-routing, on page 48
- partition-detect, on page 50
- path-option, on page 51
- path-selection, on page 53
- pce segment-routing traffic-eng p2mp, on page 55
- performance-measurement interface, on page 57
- performance-measurement delay-measurement, on page 58
- performance-measurement delay-profile endpoint, on page 59
- performance-measurement delay-profile interfaces, on page 62
- performance-measurement delay-profile name, on page 65
- performance-measurement delay-profile, on page 67
- performance-measurement endpoint, on page 70
- performance-measurement liveness-detection , on page 72
- performance-measurement liveness-profile endpoint, on page 74
- performance-measurement liveness-profile, on page 76
- performance-measurement protocol twamp-light measurement delay, on page 78

- ping sr-mpls, on page 80
- prefix-sid, on page 83
- prefix-unreachable, on page 85
- summary-prefix, on page 87
- segment-routing global-block, on page 89
- segment-routing local-block, on page 91
- segment-routing mapping-server, on page 93
- segment-routing mpls, on page 95
- segment-routing prefix-sid-map advertise-local, on page 96
- segment-routing prefix-sid-map receive disable, on page 98
- segment-routing traffic-eng explicit, on page 100
- show isis segment-routing prefix-sid-map, on page 102
- show mvpn vrf, on page 104
- show mrrib nsf private, on page 107
- show ospf routes flex-algo, on page 109
- show ospf segment-routing prefix-sid-map, on page 115
- show pce lsp p2mp, on page 117
- show performance-measurement history, on page 120
- show pim vrf , on page 123
- show segment-routing mapping-server prefix-sid-map, on page 125
- show segment-routing srv6 sid, on page 127
- show segment-routing traffic-eng p2mp policy, on page 128
- show segment-routing local-block inconsistencies, on page 130
- srv6 mode base encapsulation, on page 131
- traceroute sr-mpls, on page 132
- UCMP Disable, on page 136

# adjacency-sid

To manually allocate an adjacency segment ID (Adj-SID) on an interface, use the **adjacency-sid** command in IS-IS interface address family configuration mode.

**adjacency-sid** {**index** *adj-sid-index* | **absolute** *adj-sid-value*} [**protected**]

**no adjacency-sid** {**index** *adj-sid-index* | **absolute** *adj-sid-value*} [**protected**]

| Syntax Description                   |   |
|--------------------------------------|---|
| <b>index</b> <i>adj-sid-index</i>    | Specifies the Adj-SID for each link based on the lower boundary of the SRLB + the index.  |
| <b>absolute</b> <i>adj-sid-value</i> | Specifies the specific Adj-SID for each link within the SRLB.   |
| <b>protected</b>                     | Specify if the Adj-SID is protected. For each primary path, if the Adj-SID is protected on the primary interface and a backup path is available, a backup path is installed. By default, manual Adj-SIDs are not protected. |

**Command Default** Adjacency SID is not protected.

**Command Modes** IS-IS interface address-family configuration

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.3.1 | This command was introduced. |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Segment routing must be configured on the ISIS instance before configuring adjacency SID value.

Manually allocated Adj-SIDs are supported on point-to-point (P2P) interfaces.

| Task ID | Task ID | Operations  |
|---------|---------|-------------|
|         | isis    | read, write |

## Examples

This example shows how to configure an Adj-SID.

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config)# router isis 100
RP/0/RSP0/CPU0:router(config-isis)# interface GigabitEthernet0/0/0/7
RP/0/RSP0/CPU0:router(config-isis-if)# point-to-point
RP/0/RSP0/CPU0:router(config-isis-if)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-if-af)# adjacency-sid index 10
```

**Related Commands**

| Command   | Description  |
|---|--|
| <a href="#">segment-routing local-block, on page 91</a> | Configures the segment routing local block (SRLB). |

## affinity (flexible algorithm)

To configure flexible algorithm definition to include or exclude links with a particular affinity, use the **affinity** command in flexible algorithm configuration mode.

```
router isis instance flex-algo algo affinity [reverse] { include-any | include-all | exclude-any } name1 , name2 ,...
```

```
router ospf process flex-algo algo affinity { include-any | include-all | exclude-any } name1 , name2 ,...
```

### Syntax Description

*instance* Name of the IS-IS routing process. Maximum number of characters is 40.

*process* Name that uniquely identifies an OSPF routing process. The process name is any alphanumeric string no longer than 40 characters without spaces.

*algo* Flex-algo value. An algorithm is a one octet value. Values from 128 to 255 are reserved for user defined values and are used for Flexible Algorithm representation.

**reverse** Specifies the IS-IS Flexible Algorithm link admin group (affinity) constraint to include link colors on links in the reverse direction toward the calculating router.

*name1* Name of affinity map.

### Command Default

No default behavior or values

### Command Modes

Flexible Algorithm configuration

### Command History

| Release        | Modification   |
|----------------|--|
| Releases 7.9.1 | The <b>reverse</b> keyword was added for IS-IS.                    |
| Release 7.1.1  | The <b>include-any</b> and <b>include-all</b> keywords were added. |
| Release 6.6.1  | This command was introduced.                                       |

### Example

The following example shows how to configure IS-IS Flex-Algo:

```
Router#configure
Router(config)#router isis 1
Router(config-isis)#flex-algo 128
Router(config-isis-flex-algo)#affinity exclude-any red
Router(config-isis-flex-algo)#affinity include-any blue
Router(config-isis-flex-algo)#exit
Router(config-isis)#flex-algo 129
Router(config-isis-flex-algo)#affinity exclude-any green
```

```
Router(config-isis-flex-algo)#affinity reverse exclude-any green
```

# affinity flex-algo

To advertise the affinity on an interface, use the **affinity flex-algo** command in the IS-IS interface configuration mode.

```
affinity flex-algo { name | [anomaly name] }
```

| <b>Syntax Description</b> | <i>name</i> Name of affinity map.  |         |              |               |                           |               |                              |
|---------------------------|--|---------|--------------|---------------|---------------------------|---------------|------------------------------|
|                           | <i>anomaly</i> Advertises flex-algo affinity on performance measurement anomaly.   |         |              |               |                           |               |                              |
| <b>Command Default</b>    | No default behavior or values  |         |              |               |                           |               |                              |
| <b>Command Modes</b>      | IS-IS interface configuration  |         |              |               |                           |               |                              |
| <b>Command History</b>    | <table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.8.1</td> <td>This command was modified</td> </tr> <tr> <td>Release 6.6.1</td> <td>This command was introduced.</td> </tr> </tbody> </table> | Release | Modification | Release 7.8.1 | This command was modified | Release 6.6.1 | This command was introduced. |
| Release                   | Modification   |         |              |               |                           |               |                              |
| Release 7.8.1             | This command was modified  |         |              |               |                           |               |                              |
| Release 6.6.1             | This command was introduced.   |         |              |               |                           |               |                              |

## Example

The following example shows how ISIS advertises affinity FOO for the adjacency over interface GigabitEthernet0/0/0/0.

```
RP/0/RSP0/CPU0:router#configure
RP/0/RSP0/CPU0:router(config)#router isis 1
RP/0/RSP0/CPU0:router(config-isis)#interface GigabitEthernet0/0/0/0
RP/0/RSP0/CPU0:router(config-isis-if)#affinity flex-algo FOO
```

With the IOS XR Release 7.8.1, the new optional keyword **anomaly** is introduced to the **interface** submode of **affinity flex-algo**. This keyword option helps to advertise flex-algo affinity on PM anomaly. The following command is used to associate the affinity with an interface:

```
router isis instance interface type interface-path-id affinity flex-algo anomaly name 1,
name 2, ...

router ospf process area area interface type interface-path-id affinity flex-algo anomaly
name 1, name 2, ...
```

*name* - name of the affinity-map

You can configure both normal and anomaly values. For the following example, the **blue** affinity is advertised. However, if a metric is received with the anomaly flag set, it will change to **red**:

```
Router# configure
Router(config)# router isis 1
Router(config-isis)#flex-algo 128
Router(config-isis-flex-algo)# interface GigabitEthernet0/0/0/2
```



```
Router(config-isis-flex-algo)# affinity flex-algo blue
Router(config-isis-flex-algo)# affinity flex-algo anomaly red
```

# apply-weight ecmp-only bandwidth

To enable Unequal Cost Multipath (UCMP) functionality locally between Equal Cost Multipath (ECMP) paths based on the bandwidth of the local links, use the **apply-weight ecmp-only bandwidth** command in IS-IS interface address family configuration mode.

## apply-weight ecmp-only bandwidth

|                           |   |
|---------------------------|---|
| <b>Syntax Description</b> | <b>bandwidth</b> Enables UCMP functionality locally between ECMP paths based on the bandwidth of the local links. |
|---------------------------|---|

|                        |       |
|------------------------|-------|
| <b>Command Default</b> | None. |
|------------------------|-------|

|                      |  |
|----------------------|--|
| <b>Command Modes</b> | IS-IS interface address-family configuration |
|----------------------|--|

| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|------------------------|----------------|------------------------------|
|                        | Release 6.3.1  | This command was introduced. |

|                         |   |
|-------------------------|---|
| <b>Usage Guidelines</b> | To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. |
|-------------------------|---|

Bandwidth-based local UCMP is performed for prefixes, segment routing Adjacency SIDs, and Segment Routing label cross-connects installed by IS-IS, and is supported on any physical or virtual interface that has a valid bandwidth.

Segment routing must be configured on the ISIS instance before configuring bandwidth-based local UCMP.

| <b>Task ID</b> | <b>Task ID</b> | <b>Operations</b> |
|----------------|----------------|-------------------|
|                | isis           | read, write       |

## Examples

This example shows how to configure bandwidth-based local UCMP.

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config)# router isis 100
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-af)# apply-weight ecmp-only bandwidth
```

## bgp auto-discovery segment-routing

To configure the BGP Auto-Discovery function for transporting IP VPN multicast traffic, use the **bgp auto-discovery segment-routing** command in multicast routing VRF address family configuration mode. To remove the configuration, use the **no** form of the command.

### **bgp auto-discovery segment-routing**

#### **Syntax Description**

This command has no keywords or arguments.

#### **Command Default**

The BGP Auto-Discovery function is not enabled.

#### **Command Modes**

Multicast routing VRF address family configuration

#### **Command History**

| <b>Release</b> | <b>Modification</b>          |
|----------------|------------------------------|
| Release 7.3.1  | This command was introduced. |

#### **Usage Guidelines**

The **bgp auto-discovery segment-routing** command must be enabled on the PE routers, for *default* MDT, *partitioned* MDT and *data* MDT configuration

#### **Example**

The following example shows how to enable the BGP MVPN Auto-Discovery function:

```
Router(config)# multicast-routing vrf cust1
Router(config-mcast-cust1)# address-family ipv4
Router(config-mcast-cust1-ipv4)# bgp auto-discovery segment-routing
Router(config-mcast-cust1-ipv4-bgp-ad)# commit
```

## bgp best-path sr-policy

To select the best path, backup, or multipath resolving over nexthop using SR policies, use the **bgp best-path sr-policy** command in BGP configuration mode. To remove the configuration, use the **no** form of the command.

```
bgp best-path sr-policy { force | prefer }
```

### Syntax Description

**force** When force mode is enabled, only SR policy paths are considered for best path calculation.

**prefer** When prefer mode is enabled, SR policy paths and eBGP non-color paths are eligible for best path calculation.

### Command Default

None.

### Command Modes

BGP configuration mode

### Command History

| Release       | Modification                 |
|---------------|------------------------------|
| Release 7.5.2 | This command was introduced. |

### Usage Guidelines

No specific guidelines impact the use of this command.

### Example

The following example shows how to enable the force mode:

```
Router(config)#router bgp 100
Router(config-bgp)#bgp router-id 10.1.1.2
Router(config-bgp)#bgp best-path sr-policy force
```

# clear segment-routing local-block discrepancy all

Clears segment routing local block (SRLB) label conflicts.

## clear segment-routing local-block discrepancy all

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** EXEC

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.3.1 | This command was introduced. |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you define a new SRLB range, there might be a label conflict (for example, if labels are already allocated, statically or dynamically, in the new SRLB range). In this case, the new SRLB range will be accepted, but not applied (pending). The previous SRLB range (active) will continue to be in use until one of the following occurs:

- Reload the router to release the currently allocated labels and allocate the new SRLB
- Use the **clear segment-routing local-block discrepancy all** command to clear the label conflicts

| Task ID | Task ID | Operation |
|---------|---------|-----------|
|         |         |           |

This example shows how to clear SRLB label conflicts.

```
RP/0/RSP0/CPU0:router(config)# clear segment-routing local-block discrepancy all
```

| Related Commands | Command   | Description                   |
|------------------|---|-------------------------------|
|                  | <a href="#">show segment-routing local-block inconsistencies, on page 130</a> | Displays SRLB label conflicts |
|                  | <a href="#">segment-routing local-block, on page 91</a>                       | Configures the SRLB           |

# data-plane

To enable participation of the Flexible Algorithm with segment routing (SR/SRv6) or IP data-planes, use the **data-plane** command in the IS-IS Flexible Algorithm configuration mode.

**data-plane segment-routing | ip**

| Syntax Description     |   |
|------------------------|---|
| <b>segment-routing</b> | Participates with the segment routing data-plane. |
| <b>ip</b>              | Participates with the IP data-plane.              |

**Command Default** Segment-routing data-plane is enabled.

**Command Modes** IS-IS Flexible Algorithm configuration (config-isis-flex-algo)

| Command History | Release              | Modification                 |
|-----------------|----------------------|------------------------------|
|                 | IOS XR Release 7.6.1 | This command was introduced. |

**Usage Guidelines** To use this command, you must specify a data-plane.



**Note** If you are enabling participation of the IP Flexible Algorithm, data-plane ip must be enabled.

This example shows how to enable IP data-plane to participate with a Flexible Algorithm:

```
Router(config)#router isis 1
Router(config-isis)#flex-algo 128
Router(config-isis-flex-algo)#data-plane ip
```

# explicit-path

Configures a fixed path through the network.

**explicit-path name** *path\_name*

|                           |   |
|---------------------------|---|
| <b>Syntax Description</b> | <i>path_name</i> Specifies a name for an explicit path. |
|---------------------------|---|

|                        |      |
|------------------------|------|
| <b>Command Default</b> | None |
|------------------------|------|

|                      |                           |
|----------------------|---------------------------|
| <b>Command Modes</b> | Global Configuration mode |
|----------------------|---------------------------|

| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|------------------------|----------------|------------------------------|
|                        | Release 6.1.2  | This command was introduced. |

|                         |   |
|-------------------------|---|
| <b>Usage Guidelines</b> | To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. |
|-------------------------|---|

| <b>Task ID</b> | <b>Task ID</b> | <b>Operation</b> |
|----------------|----------------|------------------|
|                | mpls-te        | read,<br>write   |

## Example

This example shows how to specify a path name and enter explicit-path configuration mode:

```
RP/0/RSP0/CPU0:router(config)# explicit-path name ABCD1_Nodes
RP/0/RSP0/CPU0:router(config-expl-path)#
```

| <b>Related Commands</b> | <b>Command</b> | <b>Description</b>    |
|-------------------------|----------------|-----------------------|
|                         |                | <a href="#">index</a> |

## distribute link-state (IS-IS)

To configure filters for IS-IS advertisements to BGP-LS, use the **distribute link-state** command in the IS-IS configuration mode.

**distribute link-state** [ **exclude-external** **exclude-interarea** **route-policy** *name* ]

*Table 1: Syntax Description:*

| Syntax                          | Description   |
|---------------------------------|---|
| <b>exclude-external</b>         | Sets filter to exclude information for external prefixes and specify a route-policy name to filter based on a set of destination prefixes.  |
| <b>exclude-interarea</b>        | Sets filter to exclude information for interarea prefixes and specify a route-policy name to filter based on a set of destination prefixes. |
| <b>route-policy</b> <i>name</i> | Distributes prefixes based on the route policy name set.  |

**Command Default** BGP-LS is disabled by default.

**Command Modes** IS-IS Configuration

| Command History | Release        | Modification  |
|-----------------|----------------|---|
|                 | Release 7.10.1 | New keywords under the command <b>distribute link-state</b> was introduced. |

### Example

This example shows how to configure filters for IS-IS advertisements to BGP-LS:

```
Router#config
Router(config)#router isis 1
Router(config-isis)#distribute link-state exclude-external
Router(config-isis)#commit
```

```
Router#config
Router(config)#router isis 1
Router(config-isis)#distribute link-state exclude-interarea
Router(config-isis)#commit
```

```
Router# config
Router(config)# router isis 1
Router(config-isis)#distribute link-state route-policy isis-rp-1
Router(config-isis)#commit
```



# encapsulation l2-traffic

To set the traffic-class on the IP header of the outgoing packet in an IPv6 network during L2VPN encapsulation, use the **encapsulation l2-traffic** command in XR Config mode. You must be in **hw-module profile segment-routing srv6 mode** to configure the **encapsulation l2-traffic**, for more information see the example.

```
encapsulation l2-traffic traffic-class [ { traffic-class value | propagate } ]
```

## Syntax Description

|                            |  |
|----------------------------|--|
| <b>traffic-class</b>       | Control traffic-class field of SRv6 IPv6 header for inner l2 traffic.  |
| <b>traffic-class value</b> | This specifies the traffic-class value. Range is from 0x0 to 0xff.<br>Traffic-class value must be specified as 2 hexadecimals. |
| <b>propagate</b>           | Propagate traffic-class from incoming packet or frame or use qos-group from input policy-map.                                  |

## Command Default

The default traffic-class value is 0x0.

## Command Modes

Global ConfigurationXR Config

## Command History

| Release       | Modification                 |
|---------------|------------------------------|
| Release 7.7.1 | This command was introduced. |

## Usage Guidelines

- Reload the line-cards for the following configuration changes.
- See the feature information table for the default mapping:  
VLAN Class of Service CoS Priority Code Point (PCP) to Traffic Class default mapping

| CoS value | TC value |
|-----------|----------|
| 0         | 0        |
| 1         | 32       |
| 2         | 64       |
| 3         | 96       |
| 4         | 128      |
| 5         | 160      |
| 6         | 192      |
| 7         | 224      |

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | system  | read and write |

### Example

The following example shows how to set the l2-traffic:

```
Router(config)# hw-module profile segment-routing srv6 mode micro-segment format f3216
Router(config-srv6)# encapsulation
Router(config-srv6-encap)# l2-traffic
Router(config-srv6-encap-l2)# traffic-class propagate
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all
line cards
```

# encapsulation l3-traffic

To set the traffic-class on the IP header of the outgoing packet in an IPv6 network during L3VPN encapsulation, use the **encapsulation l3-traffic** command in XR Config mode. You must be in **hw-module profile segment-routing srv6 mode** to configure the **encapsulation l3-traffic**, for more information see the example.

```
encapsulation l3-traffic traffic-class [ { traffic-class value | propagate | policy-map } ]
```

| Syntax Description | traffic-class       | Control traffic-class field of SRv6 IPv6 header for inner l3 traffic.  |
|--------------------|---------------------|--|
|                    | traffic-class value | This specifies the traffic-class value. Range is from 0x0 to 0xff.<br>Traffic-class value must be specified as 2 hexadecimals. |
|                    | propagate           | Propagate traffic-class from incoming packet or frame or use qos-group from input policy-map.                                  |
|                    | policy map          | Sets the traffic-class DSCP to qos-group that is selected by the input policy-map.   |

**Command Default** The default traffic-class value is 0x0.

**Command Modes** Global ConfigurationXR Config

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 7.7.1 | This command was introduced. |

**Usage Guidelines** Reload the line-cards for the following configuration changes.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | system  | read and write |

## Example

The following example shows how to set the l3-traffic:

```
Router(config)# hw-module profile segment-routing srv6 mode micro-segment format f3216
Router(config-srv6)# encapsulation
Router(config-srv6-encap)# l3-traffic
Router(config-srv6-encap-l3)# traffic-class policy-map
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all
line cards
```

# encapsulation-type srv6 relax-sid

To configure the BGP signaling for coexistence of IP routes with or without SRv6 SID over an SRv6-enabled core network use **encapsulation-type srv6 relax-sid** command in XR Config mode.

## encapsulation-type srv6 relax-sid

|                           |   |                              |
|---------------------------|---|------------------------------|
| <b>Syntax Description</b> | <b>encapsulation-type srv6 relax-sid</b> Enables coexistence of IP routes with or without SRv6 SID.                   |                              |
| <b>Syntax Description</b> | This command has no keywords or arguments.  |                              |
| <b>Command Default</b>    | The BGP signaling for coexistence of IP routes with or without SRv6 SID over an SRv6-enabled core network is enabled. |                              |
| <b>Command Modes</b>      | Multicast routing VRF address family configuration  |                              |
| <b>Command History</b>    | <b>Release</b>  | <b>Modification</b>          |
|                           | Release 24.3.1  | This command was introduced. |
| <b>Task ID</b>            | <b>Task ID</b>  | <b>Operation</b>             |
|                           | system  | read and write               |

## Example

The following example shows how to enable BGP signaling for coexistence of IP routes with or without SRv6 SID over an SRv6-enabled core network:

```
Router(config)# router bgp 2
Router(config-bgp)# neighbor-group srv6-core-relax
Router(config-bgp-nbr)# address-family ipv4 unicast
Router(config-bgp-nbr-af)# encapsulation-type srv6 relax-sid
Router(config-bgp-nbr-af)# exit
```

## evi (bridge-domain)

To associate an EVI instance with an L2VPN bridge domain or enable ELAN bridged unicast traffic over an SRv6 network, use the **evi** command in the L2VPN bridge domain configuration mode. To disable this feature, use the **no** form of this command.

**evi** *instance* [ **segment-routing srv6** ]

| <b>Syntax Description</b> | <i>instance</i> EVI instance that is associated with an L2VPN bridge domain.  |         |              |               |  |               |  |
|---------------------------|---|---------|--------------|---------------|--|---------------|--|
|                           | <b>segment-routing srv6</b> (Optional) Specifies that SRv6 is associated with the EVI instance.   |         |              |               |  |               |  |
| <b>Command Default</b>    | The EVI instance is not associated with an L2VPN bridge domain.   |         |              |               |  |               |  |
| <b>Command Modes</b>      | L2VPN bridge domain configuration.  |         |              |               |  |               |  |
| <b>Command History</b>    | <table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 6.2.2</td> <td>The <b>evi</b> command was introduced for MPLS bridging.</td> </tr> <tr> <td>Release 7.5.2</td> <td>The <b>segment-routing srv6</b> option was added to the command.</td> </tr> </tbody> </table> | Release | Modification | Release 6.2.2 | The <b>evi</b> command was introduced for MPLS bridging. | Release 7.5.2 | The <b>segment-routing srv6</b> option was added to the command. |
| Release                   | Modification  |         |              |               |  |               |  |
| Release 6.2.2             | The <b>evi</b> command was introduced for MPLS bridging.  |         |              |               |  |               |  |
| Release 7.5.2             | The <b>segment-routing srv6</b> option was added to the command.  |         |              |               |  |               |  |

### Examples

This example shows how to enable EVPN ELAN bridged unicast traffic over an SRv6 network:

```
Router # configure
Router(config)# l2vpn
Router(config-l2vpn)# bridge group bg1
Router(config-l2vpn-bg)# bridge-domain bd1
Router(config-l2vpn-bg-bd)# interface Hu0/0/0/0.1
Router(config-l2vpn-bg-bd-ac)# exit
Router(config-l2vpn-bg-bd)# evi 1 segment-routing srv6
Router(config-l2vpn-bg-bd-evi-srv6)# commit
```

## fast-reroute per-prefix ti-lfa

To enable Topology Independent Loop Free Alternate (TI-LFA) path for SR-TE policies using the IP Fast Reroute (FRR) mechanism, use the **fast-reroute per-prefix ti-lfa** command in interface configuration mode. To return to the default behavior, use the **no** form of this command.

```
fast-reroute per-prefix [ ti-lfa | tiebreaker { node-protecting | srlg-disjoint } index priority ]
no fast-reroute
```

| Syntax Description | per-prefix      | Specifies an alternate path for every prefix on the specified interface.               |
|--------------------|-----------------|--|
|                    | ti-lfa          | Enables link-protecting TI-LFA.  |
|                    | tiebreaker      | Enables fast reroute tie-breaker.  |
|                    | node-protecting | Enables node-protecting TI-LFA.  |
|                    | srlg-disjoint   | Enables SRLG-protecting TI-LFA.  |
|                    | index priority  | Specifies the priority of the configured tie-breaker. Priority range is from 1 to 255. |

| Command Default | FRR is disabled.<br>Link protection is disabled.<br>Node-protecting TI-LFA is disabled.<br>SRLG TI-LFA is disabled. |
|-----------------|---|
|-----------------|---|

| Command Modes | Interface configuration |
|---------------|-------------------------|
|---------------|-------------------------|

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.1.3 | This command was introduced. |

**Usage Guidelines** The goal of TI-LFA is to reduce the packet loss that results while routers converge after a topology change due to a link or node failure. Rapid failure repair (< 50 msec) is achieved through the use of pre-calculated backup paths that are loop-free and safe to use until the distributed network convergence process is completed. The optimal repair path is the path that the traffic will eventually follow after the IGP has converged.

TI-LFA supports the following protection:

- Link protection — The link is excluded during the post-convergence backup path calculation.
- Node protection — The neighbor node is excluded during the post convergence backup path calculation.
- Shared Risk Link Groups (SRLG) protection — SRLG refer to situations in which links in a network share a common fiber (or a common physical attribute). These links have a shared risk: when one link fails, other links in the group might also fail. TI-LFA SRLG protection attempts to find the

post-convergence backup path that excludes the SRLG of the protected link. All local links that share any SRLG with the protecting link are excluded.

If the priority associated with the specified tiebreaker is higher than any other tiebreakers, then the specified post-convergence backup path will be selected, if it is available.

| Task ID | Task ID | Operations |
|---------|---------|------------|
|         | isis    | read,      |
|         | ospf    | write      |

### Examples

The following example shows how to enable FRR on an interface:

```
RP/0/RSP0/CPU0:R1 (config)# router isis 1
RP/0/RSP0/CPU0:R1 (config-isis)# interface TenGigE0/0/0/2/1
RP/0/RSP0/CPU0:R1 (config-isis-if)# point-to-point
RP/0/RSP0/CPU0:R1 (config-isis-if)# address-family ipv4 unicast
RP/0/RSP0/CPU0:R1 (config-isis-if)# fast-reroute per-prefix
RP/0/RSP0/CPU0:R1 (config-isis-if)# fast-reroute per-prefix ti-lfa
RP/0/RSP0/CPU0:R1 (config-isis-if)# exit
```

The following example shows how to configure the SRLG-disjoint tiebreaker priority on an interface:

```
RP/0/RSP0/CPU0:R1 (config)# router isis 1
RP/0/RSP0/CPU0:R1 (config-isis)# interface TenGigE0/0/0/2/1
RP/0/RSP0/CPU0:R1 (config-isis-if)# point-to-point
RP/0/RSP0/CPU0:R1 (config-isis-if)# address-family ipv4 unicast
RP/0/RSP0/CPU0:R1 (config-isis-if)# fast-reroute per-prefix
RP/0/RSP0/CPU0:R1 (config-isis-if)# fast-reroute per-prefix ti-lfa
RP/0/RSP0/CPU0:R1 (config-isis-if)# fast-reroute per-prefix tiebreaker srlg-disjoint index
100
RP/0/RSP0/CPU0:R1 (config-isis-if)# exit
```

# generic-metric flex-algo

To configure an application-specific user-defined generic metric for IS-IS interfaces, use the **generic-metric flex-algo** command in the IS-IS interface address-family submode.

```
generic-metric flex-algo type type value
```

| Syntax Description |  |
|--------------------|--|
| <b>type</b> <type> | Specify the generic metric type. The range is 128–255.               |
| <value>            | Specify the flex-algo generic metric value. The range is 1–16777214. |

**Command Default** By default, the generic metric is not used.

**Command Modes** IS-IS interface address-family submode.

| Command History | Release        | Modification                 |
|-----------------|----------------|------------------------------|
|                 | Release 24.2.1 | This command was introduced. |

**Usage Guidelines** None.

| Task ID | Task ID | Operations     |
|---------|---------|----------------|
|         | isis    | read,<br>write |

## Example

The following example shows how to configure a user-defined application-specific generic metric for an interface:

```
Router(config)#router isis 1
Router(config-isis)#interface GigabitEthernet 0/2/0/7
Router(config-isis-if)#address-family ipv4 unicast
Router(config-isis-if-af)#generic-metric flex-algo type 128 100
Router(config-isis-if-af)#commit
```



# hw-module profile segment-routing srv6 mode

To enable Segment Routing over IPv6, use the **hw-module profile segment-routing srv6** command in XR Config mode.

```
hw-module profile segment-routing srv6 mode { base | micro-segment format 3216 [path-mtu] }
```

| Syntax Description | base                        | Micro-segment format 3216  | base-and-micro-segment-f3216   | path-mtu                                     |
|--------------------|-----------------------------|--|--|--|
|                    | Base/F1 (full-length SIDs). | Micro-segment format F3216 (represents 32-bit block and 16-bit IDs). | Enables migration of existing SRv6 SID format1 to SRv6 Micro-SIDs (f3216) formats. | Enables Path MTU discovery for SRv6 profile. |

**Command Default** None

**Command Modes** Global ConfigurationXR Config

| Command History | Release        | Modification  |
|-----------------|----------------|---|
|                 | Release 7.11.1 | The <b>path-mtu</b> keyword is introduced.                    |
|                 | Release 7.8.1  | The option <b>base-and-micro-segment-f3216</b> is introduced. |
|                 | Release 7.7.1  | <b>Mode</b> keyword is mandatory from release 7.7.1 onwards.  |
|                 | Release 6.6.1  | This command was introduced.                                  |

**Usage Guidelines** You must reload the router for the **hw-module profile segment-routing srv6** to be functional.

Use the mandatory keyword **mode** from Cisco IOS XR Software Release 7.7.1 onwards.

Do not use the keyword **mode** prior to release 7.7.1.

Starting from Release 7.10.1, the SRv6 mode is automatically set to **base-and-micro-segment-f3216 mode** (dual mode) even if you configure the **base** mode. The running configuration would still continue to reflect the user configured mode only.

You can verify the change using the following console log:

```
fia_driver[238]: %FABRIC-FIA_DRV6-6-HW_MOD_PROFILE_AUTO_CONVERTED :
Auto-converting SRv6 hw-module base profile to base-and-micro-segment-f3216 profile
```

For the **path-mtu** keyword, use the following guidelines:

- The SRv6 uSID (F3216) format supports the feature.
- The SRv6 Full-length SID format does not support Path MTU discovery.
- You must configure this feature on the ingress Provider Edge (PE) router.
- SRv6 encapsulation supports the following scenarios:

- IPv4/IPv6 over SRv6
  - SRv6-TE
  - H insert
  - TI-LFA for Single Carrier and Multi Carrier
- L2 services over SRv6 (L2VPN) do not support the feature.

| Task ID | Task ID | Operation   |
|---------|---------|-------------|
|         | system  | read, write |

### Example

The following example shows how to enable Segment Routing over IPv6 for base, from release 7.7.1 onwards:

```
Router(config)# hw-module profile segment-routing srv6 mode base
Router(config-srv6)# encapsulation
Router(config-srv6-encap)# l2-traffic
Router(config-srv6-encap-l2)# traffic-class propagate
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all
line cards
Router(config-srv6-encap-l2)#(config-srv6-encap-l2)# commit
```

The following example shows how to enable Segment Routing over IPv6 for micro-segment format, from release 7.7.1 onwards:

```
Router(config)# hw-module profile segment-routing srv6 mode micro-segment format f3216
Router(config-srv6)# encapsulation
Router(config-srv6-encap)# l3-traffic
Router(config-srv6-encap-l3)# traffic-class policy-map
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all
line cards
Router(config-srv6-encap-l2)#(config-srv6-encap-l2)# commit
```

The following example shows how to enable Segment Routing over IPv6, prior to release 7.7.1:

```
Router(config)# hw-module profile segment-routing srv6
Router(config-srv6)# encapsulation
Router(config-srv6-encap)# l2-traffic
Router(config-srv6-encap-l2)# traffic-class propagate
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all
line cards
Router(config-srv6-encap-l2)#(config-srv6-encap-l2)# commit
```

From IOS XR Release 7.8.1, the **hw-module profile segment-routing srv6 mode base-and-micro-segment-f3216** command is used for the in-migration state.

This example shows the in-migration state with SRv6 and configure locator:

```
Router(config)# segment-routing srv6
Router(config-srv6)# locators
Router(config-srv6-locators)# locator myLoc0
Router(config-srv6-locators)# prefix flbb:bbbb:bb00:0001::/64
```

```
Router(config-srv6-locators)# delayed-delete  
Router(config-srv6-locators)# locator myuLoc0  
Router(config-srv6-locators)# micro-segment behavior unode psp-usd  
Router(config-srv6-locators)# prefix fcbb:bb00:0001::/48
```

This example shows the in-migration state with SRv6 and IS-IS:

```
Router(config)# router isis 100  
Router(config-isis)# address-family ipv6 unicast  
Router(config-isis-af)# segment-routing srv6  
Router(config-isis-srv6)# locator myLoc0  
Router(config-isis-srv6)# locator myuLoc0
```

This example shows the in-migration state with SRv6 and BGP/EVPN:

```
Router(config)# router bgp 100  
Router(config-bgp)# bgp router-id 10  
Router(config-bgp)# segment-routing srv6  
Router(config-bgp-srv6)# locator myuLoc0
```

```
Router(config)# evpn  
Router(config-evpn)# segment-routing srv6  
Router(config-evpn-srv6)# locator myuLoc0
```

This example shows how to enable Path MTU for Segment Routing over IPv6, from release 7.11.1 onwards:

```
Router(config)#hw-module profile segment-routing srv6 mode micro-segment format f3216  
path-mtu  
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all  
line cards  
Router(config-srv6)#commit
```

## hw-module profile segment-routing srv6 mode base

To enable the segment routing over IPv6 (SRv6) Full-length SID on the router, use the **hw-module profile segment-routing srv6 mode base** command in XR Config mode.

**hw-module profile segment-routing srv6 mode base**

|                           |  |
|---------------------------|--|
| <b>Syntax Description</b> | This command has no keywords or arguments. |
|---------------------------|--|

|                        |      |
|------------------------|------|
| <b>Command Default</b> | None |
|------------------------|------|

|                      |                               |
|----------------------|-------------------------------|
| <b>Command Modes</b> | Global ConfigurationXR Config |
|----------------------|-------------------------------|

| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|------------------------|----------------|------------------------------|
|                        | Release 7.7.1  | This command was introduced. |

|                         |   |
|-------------------------|---|
| <b>Usage Guidelines</b> | You must reload the router after enabling this feature. |
|-------------------------|---|

| <b>Task ID</b> | <b>Task</b> | <b>Operation</b>      |
|----------------|-------------|-----------------------|
|                |             | system read,<br>write |

The following example shows how to enable the segment routing over IPv6 (SRv6) Full-length SID on the router.

```
Router# configure
Router(config)# hw-module profile segment-routing srv6 mode base
```

# hw-module profile segment routing srv6 mode base-and-micro-segment-f3216

To enable migration of existing SRv6 SID format1 to SRv6 Micro-SIDs (f3216) formats, use the **hw-module profile segment routing srv6 mode base-and-microsegment-f3216** command in XR Config mode.

**hw-module profile segment-routing srv6 mode base-and-micro-segment-f3216**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Global ConfigurationXR Config

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 7.8.1 | This command was introduced. |

## Usage Guidelines

- You must reload the router after enabling the command.
- From IOS XR Release 7.8.1, the **hw-module profile segment-routing srv6 mode base-and-micro-segment-f3216** command is used for the in-migration state.
- Starting from Release 7.10.1, the SRv6 mode is automatically set to **base-and-micro-segment-f3216 mode** (dual mode) even if you configure the **base** mode. The running configuration would still continue to reflect the user configured mode only.

You can verify the change using the following console log:

```
fia_driver[238]: %FABRIC-FIA_DRV6-6-HW_MOD_PROFILE_AUTO_CONVERTED :
Auto-converting SRv6 hw-module base profile to base-and-micro-segment-f3216 profile
```

| Task ID | Task ID | Operation   |
|---------|---------|-------------|
|         | system  | read, write |

## Example

This example shows the in-migration state with SRv6 and configure locator:

```
Router(config)# segment-routing srv6
Router(config-srv6)# locators
Router(config-srv6-locators)# locator myLoc0
Router(config-srv6-locators)# prefix f1bb:bbbb:bb00:0001::/64
Router(config-srv6-locators)# delayed-delete
Router(config-srv6-locators)# locator myuLoc0
Router(config-srv6-locators)# micro-segment behavior unode psp-usd
Router(config-srv6-locators)# prefix fcbb:bb00:0001::/48
```

This example shows the in-migration state with SRv6 and IS-IS:

```
Router(config)# router isis 100  
Router(config-isis)# address-family ipv6 unicast  
Router(config-isis-af)# segment-routing srv6  
Router(config-isis-srv6)# locator myLoc0  
Router(config-isis-srv6)# locator myuLoc0
```

This example shows the in-migration state with SRv6 and BGP/EVPN:

```
Router(config)# router bgp 100  
Router(config-bgp)# bgp router-id 10  
Router(config-bgp)# segment-routing srv6  
Router(config-bgp-srv6)# locator myuLoc0
```

```
Router(config)# evpn  
Router(config-evpn)# segment-routing srv6  
Router(config-evpn-srv6)# locator myuLoc0
```

# hw-module profile segment routing srv6 mode micro-segment

To use SRv6 Micro-SID (uSID) before configuring SRv6 on the Cisco NCS 5500 Series Routers, enter the **hw-module profile segment-routing srv6 mode micro-segment** command in XR Config mode.

## hw-module profile segment-routing srv6 mode micro-segment format f3216

|                           |                                   |   |
|---------------------------|-----------------------------------|---|
| <b>Syntax Description</b> | <b>micro-segment format f3216</b> | Enables the micro-segment format F3216 (represents 32-bit block and 16-bit IDs) for SRv6 profile. |
|                           | <b>path-mtu</b>                   | Enables Path MTU discovery for SRv6 profile.  |
| <b>Command Default</b>    | None                              |   |
| <b>Command Modes</b>      | Global ConfigurationXR Config     |   |
| <b>Command History</b>    | <b>Release</b>                    | <b>Modification</b>   |
|                           | Release 7.11.1                    | The <b>path-mtu</b> keyword is introduced.  |
|                           | Release 7.7.1                     | This command was introduced.  |

### Usage Guidelines

- You must reload the router after enabling the command.
- For the **path-mtu** keyword, use the following guidelines:
  - The SRv6 uSID (F3216) format supports the Path MTU discovery.
  - The SRv6 Full-length SID format does not support Path MTU discovery.
  - You must configure this feature on the ingress Provider Edge (PE) router.
  - SRv6 encapsulation supports the following scenarios:
    - IPv4/IPv6 over SRv6
    - SRv6-TE
    - H insert
    - TI-LFA for Single Carrier and Multi Carrier
- L2 services over SRv6 (L2VPN) do not support the feature.

|                |                |                  |
|----------------|----------------|------------------|
| <b>Task ID</b> | <b>Task ID</b> | <b>Operation</b> |
|                | system         | read,<br>write   |

## Example

The following example shows how to enable Segment Routing over IPv6 for micro-segment format.

```
Router(config)# hw-module profile segment-routing srv6 mode micro-segment format f3216
Router(config-srv6)# encapsulation
Router(config-srv6-encap)# 13-traffic
Router(config-srv6-encap-13)# traffic-class policy-map
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all
line cards
Router(config-srv6-encap-12)#(config-srv6-encap-12)# commit
```

This example shows how to enable Path MTU for Segment Routing over IPv6.

```
Router(config)#hw-module profile segment-routing srv6 mode micro-segment format f3216
path-mtu
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all
line cards
Router(config-srv6)#commit
```



# hw-module profile segment-routing srv6 mode encapsulation traffic-class

To set the traffic-class on the IP header of the outgoing packet in an IPv6 network during L3VPN encapsulation, use the **hw-module profile segment-routing srv6 mode encapsulation traffic-class** command in XR Config mode.

**hw-module profile segment-routing srv6 mode encapsulation traffic-class** [ [ { **encapsulation I2 traffic-class** | | **encapsulation I3 traffic-class** } ] ]

| Syntax Description | Parameter                  | Description   |
|--------------------|----------------------------|---|
|                    | <b>traffic-class</b>       | Controls traffic-class field of SRv6 IPv6 header for inner L2 and L3 traffic.   |
|                    | <i>traffic-class value</i> | Specifies the traffic-class value. This value, which is a hexadecimal number, ranges between <i>0x0</i> and <i>0xff</i> . |
|                    | <b>propagate</b>           | Propagates traffic-class from incoming packet or frame or use qos-group from input policy-map for L2 traffic.             |
|                    | <b>policy-map</b>          | Sets the topmost 3-bit traffic-class DSCP to qos-group that is selected by the input policy-map for L3 traffic.           |
|                    | <b>policy-map-extend</b>   | Sets the traffic-class DSCP marking to 6 bits for SRv6 for both the L2 and L3 traffic.                                    |

**Command Default** None

**Command Modes** Global ConfigurationXR Config

| Command History | Release        | Modification  |
|-----------------|----------------|---|
|                 | Release 6.6.1  | This command was introduced.  |
|                 | Release 7.7.1  | L2 and L3 EVPN QoS support was introduced.  |
|                 | Release 24.2.1 | The new parameter, <b>policy-map-extend</b> , was added to 6-bit DSCP traffic-class marking for both the L2 and L3 modes. |

**Usage Guidelines**

The default traffic-class value is 0.

The router must be reloaded for the # **hw-module profile segment-routing srv6 mode micro-segment format f3216 encapsulation** feature to be functional.

The **set qos-group** action can be used with the new parameter **policy-map-extend** in the **hw-module profile segment-routing srv6 mode encapsulation traffic class** command.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | system  | read,<br>write |

## Example

This example shows how to set the **traffic-class propagate** option for L2 mode:

```
RP/0/RSP0/CPU0:ios# configure
RP/0/RSP0/CPU0:ios(config)# hw-module profile segment-routing srv6 mode micro-segment format
f3216
RP/0/RSP0/CPU0:ios(config-srv6)# encapsulation
RP/0/RSP0/CPU0:ios(config-srv6-encap)# l2-traffic
RP/0/RSP0/CPU0:ios(config-srv6-encap-l2)# traffic-class propagate
```

This example shows how to set the **traffic-class policy-map** option for L3 mode.

```
RP/0/RSP0/CPU0:ios# configure
RP/0/RSP0/CPU0:ios(config)# hw-module profile segment-routing srv6 mode micro-segment format
f3216
RP/0/RSP0/CPU0:ios(config-srv6)# encapsulation
RP/0/RSP0/CPU0:ios(config-srv6-encap)# l3-traffic
RP/0/RSP0/CPU0:ios(config-srv6-encap-l3)# traffic-class policy-map
```

This example shows how to set the **traffic-class policy-map-extend** option for both the L2 and L3 mode.

```
RP/0/RSP0/CPU0:ios# configure
RP/0/RSP0/CPU0:ios(config)# hw-module profile segment-routing srv6 mode micro-segment format
f3216
RP/0/RSP0/CPU0:ios(config-srv6)# encapsulation
RP/0/RSP0/CPU0:ios(config-srv6-encap)# traffic-class policy-map-extend
```

# hw-module profile segment-routing srv6 mode base encapsulation traffic-class propagate

To propagate traffic-class from incoming packet or frame or use qos-group from input policy-map, use the **hw-module profile segment-routing srv6 mode base encapsulation traffic-class propagate** command in XR Config mode.

**hw-module profile segment-routing srv6 mode base encapsulation traffic-class propagate** | [ { encapsulation I2 traffic-class | | encapsulation I3 traffic-class } ]

| Syntax Description | Parameter                  | Description  |
|--------------------|----------------------------|--|
|                    | <b>traffic-class</b>       | Control traffic-class field of SRv6 IPv6 header for inner L2 and L3 traffic  |
|                    | <b>traffic-class value</b> | This specifies the traffic-class value. Range is from 0x0 to 0xff.<br>Traffic-class value must be specified as 2 hexadecimals. |
|                    | <b>propagate</b>           | Propagate traffic-class from incoming packet or frame or use qos-group from input policy-map.                                  |

**Command Default** None

**Command Modes** Global ConfigurationXR Config

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.6.1 | This command was introduced. |

**Usage Guidelines** After enabling this feature, you must reload the router for the configuration to take effect.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | system  | read,<br>write |

## Example

The following example shows how to enable the feature that propagates traffic-class from incoming packet or frame or use qos-group from input policy-map.

```
Router# configure
Router(config)# hw-module profile segment-routing srv6 mode base encapsulation traffic-class propagate
```

# hw-module profile sr-policy v6-null-label-autopush

To enable the V6 null label autopush over SR-policy, **hw-module profile sr-policy v6-null-label-autopush** command in XR Config mode.

## hw-module profile sr-policy v6-null-label-autopush

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Global ConfigurationXR Config

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.6.1 | This command was introduced. |

**Usage Guidelines** The router must be reloaded for the **hw-module profile sr-policy v6-null-label-autopush** feature to be functional.

This profile enables the IPv6 null label autopush over SR policy.

This profile is not supported with 6VPE (the IPv6 null label is pushed rather than 6VPE label).

DSCP preserve is disabled.

With this feature, we can use up to 12 labels for IPv6 .

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | system  | read,<br>write |

### Example

The following example shows how to enable the IPv6 null label autopush over SR policy:

```
Router# configure
Router(config)# hw-module profile sr-policy v6-null-label-autopush
```

# hw-module profile stats enh-sr-policy

To enable enhanced SR policy scale stats profile counter, use the **hw-module profile stats enh-sr-policy** command in XR Config mode.

## hw-module profile stats enh-sr-policy

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Global ConfigurationXR Config

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.6.1 | This command was introduced. |

## Usage Guidelines



**Note** This command is not supported on the NCS 540 series routers.

The router must be reloaded for the **hw-module profile stats enh-sr-policy** feature to be functional.

This command enables ingress SR counters and also increases the counters available in the egress pipeline.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | system  | read,<br>write |

## Example

The following example shows how to enable ingress SR counters:

```
Router# configure
Router(config)# hw-module profile stats enh-sr-policy
```

## hw-module profile stats ingress-sr

To enable per-label statistics at “ingress” for Segment Routing labels, use the **hw-module profile stats enh-sr-policy** command in XR Config mode.

### hw-module profile stats ingress-sr

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Global ConfigurationXR Config

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.6.1 | This command was introduced. |

**Usage Guidelines** The router must be reloaded for the **hw-module profile stats ingress-sr** feature to be functional. This command enables per-label statistics at ingress for SR labels within the configured SRGB and SRLB. When this profile is enabled, QoS Stats do not work for the same labeled packets.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | system  | read,<br>write |

### Example

The following example shows how to enable per-label statistics at ingress for Segment Routing labels:

```
Router# Configure
Router(config)# hw-module profile stats ingress-sr
```

# hw-module profile stats tx-scale-enhanced ingress-sr

To enable the ingress segment routing statistics for increasing the Tx scale, use the **hw-module profile stats tx-scale-enhanced ingress-sr** command in XR Config mode.

## hw-module profile stats tx-scaled-enhanced ingress-sr

|                           |   |                              |
|---------------------------|---|------------------------------|
| <b>Syntax Description</b> | This command has no keywords or arguments.  |                              |
| <b>Command Default</b>    | None  |                              |
| <b>Command Modes</b>      | Global ConfigurationXR Config   |                              |
| <b>Command History</b>    | <b>Release</b>  | <b>Modification</b>          |
|                           | Release 6.6.1   | This command was introduced. |
| <b>Usage Guidelines</b>   | The router must be reloaded for the <b>hw-module profile stats tx-scale-enhanced ingress-sr</b> feature to be functional. |                              |
| <b>Task ID</b>            | <b>Task ID</b>  | <b>Operation</b>             |
|                           | system  | read,<br>write               |

### Example

The following example shows how to enable the ingress segment routing statistics for increasing the Tx scale.

```
Router# configure
Router(config)# hw-module profile stats tx-scale-enhanced ingress-sr
```

# index

Marks an explicit path. The index determines the order of path selection.

```
index index_number [{exclude-address | exclude-srlg | next-address [loose | strict]}] ipv4
unicast ip_address} | {next-label label}
```

## Syntax Description

|                                       |  |
|---------------------------------------|--|
| <b><i>index_number</i></b>            | Defines priority for the path to be selected.<br>Ranges from 1 to 65535.                       |
| <b>exclude-address</b>                | Specifies the IP address to be excluded from the path.   |
| <b>exclude-srlg</b>                   | Specifies the IP address from which Shared Risk Link Groups (SRLGs) are derived for exclusion. |
| <b>next-address</b>                   | Specifies the next IP address in the path.   |
| <b>loose</b>                          | Specifies the next hop in the path as a flexible hop.  |
| <b>strict</b>                         | Specifies the next hop in the path as a fixed hop  |
| <b>ipv4 unicast</b> <i>ip_address</i> | Specifies the the IPv4 unicast address.  |
| <b>next-label</b> <i>label</i>        | Specifies the next label in the path.  |

## Command Default

None

## Command Modes

Explicit path configuration mode

## Command History

| Release       | Modification                 |
|---------------|------------------------------|
| Release 6.1.2 | This command was introduced. |

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

You can include multiple addresses, labels, or both. However, once you start configuring labels, you need to continue with labels. You cannot use addresses after you use labels.

## Task ID

| Task ID | Operation      |
|---------|----------------|
| mpls-te | read,<br>write |

This example shows how to insert the next-address and next-label for explicit path ABCD1\_Nodes:



```
RP/0/RSP0/CPU0:router(config)# explicit-path name ABCD1_Nodes
RP/0/RSP0/CPU0:router(config-expl-path)# index 10 next-address strict ipv4 unicast
192.168.0.2
RP/0/RSP0/CPU0:router(config-expl-path)# index 20 next-label 24012
```

**Related Commands**

| Command                       | Description                                  |
|-------------------------------|--|
| <a href="#">explicit-path</a> | Configures a fixed path through the network. |

# mdt

To configure a default or partitioned MVPN profile for transporting IP VPN multicast traffic using SR-TE, use the **mdt** command in multicast routing VRF address family configuration mode. To remove the configuration, use the **no** form of the command.

**mdt** { **default** | **partitioned** } **segment-routing mpls** [ **color** *value* ] [ **fast-reroute** *lfa* ]

| Syntax Description | default                        | Specifies that the MVPN profile is of the type <i>default</i> .  |
|--------------------|--------------------------------|--|
|                    | <b>partitioned</b>             | Specifies that the MVPN profile is of the type <i>partitioned</i> .  |
|                    | <b>segment-routing mpls</b>    | Specifies that the TE mechanism is Segment Routing, and data plane protocol is MPLS.   |
|                    | <b>color</b> <i>value</i>      | (Optional) Specifies the on-demand color value that defines TE constraints and optimizations applied to the SR multicast policy. |
|                    | <b>fast-reroute</b> <i>lfa</i> | (Optional) Enables the LFA FRR function for SR multicast policies that are created for the MDT.                                  |

**Command Default** An MVPN default or partitioned profile is not configured.

**Command Modes** Multicast routing VRF address family configuration.

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 7.3.1 | This command was introduced. |

**Usage Guidelines** The **mdt** configuration is enabled on all the VPN end-points, the PE routers used for MVPN peering.

## Example

The following example shows how to configure a *default* MDT MVPN Profile for SR multicast:

```
Router(config)# multicast-routing vrf cust1
Router(config-mcast-cust1)# address-family ipv4
Router(config-mcast-cust1-ipv4)# mdt default segment-routing mpls color 10
Router(config-mcast-cust1-ipv4)# commit
```

## Example

The following example shows how to configure a *partitioned* MDT MVPN Profile for SR multicast:

```
Router(config)# multicast-routing vrf cust1
Router(config-mcast-cust1)# address-family ipv4
Router(config-mcast-cust1-ipv4)# mdt partitioned segment-routing mpls color 10
Router(config-mcast-cust1-ipv4)# commit
```

## mdt data

To configure an MVPN *data* profile for transporting IP VPN multicast traffic using SR-TE, use the **mdt data** command in multicast routing VRF address family configuration mode. To remove the configuration, use the **no** form of the command.

```
mdt data segment-routing mpls max-mdt-nmr [ color value ] [ fast-reroute lfa ] [ route-policy name ] [ threshold value ] [ ACL ] [ immediate-switch ]
```

| Syntax Description                                |   |  |
|---|---|--|
| <b>segment-routing mpls</b><br><i>max-mdt-nmr</i> | Specifies the maximum number of SR multicast polices to be used for <i>data</i> MDTs.   |  |
| <b>color</b> <i>value</i>                         | (Optional) Specifies the on-demand SR policy color value. The TE constraints and optimizations are associated with the color value.   |  |
| <b>fast-reroute lfa</b>                           | (Optional) Enables the LFA FRR function for SR multicast policies that are created for <i>data</i> MDTs.  |  |
| <b>route-policy</b> <i>name</i>                   | (Optional) Specifies the route policy that dictates multicast flow-to-SR multicast policy mapping (with different colors).<br><br>The route policy option is an alternative to enabling the <b>color</b> <i>value</i> option. |  |
| <b>threshold</b> <i>value</i>                     | (Optional) The traffic rate threshold value in Kbps.<br><br>When the rate exceeds the specified value, multicast flow is switched to a <i>data</i> MDT.   |  |
| <i>ACL</i>  | (Optional) ACL that directs specific multicast flows to be switched to a <i>data</i> MDT.   |  |
| <b>immediate-switch</b>                           | (Optional) Specifies that the multicast flow be switched to a <i>data</i> MDT, without waiting for the threshold limit to be crossed.   |  |

**Command Default** An MVPN data profile is not configured.

**Command Modes** Multicast routing VRF address family configuration

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 7.3.1 | This command was introduced. |

**Usage Guidelines** The **mdt data** command has to be enabled on the ingress PEs where multicast flows need to be steered into the *data* MDT component for SR multicast processing. *Data* MDT can be configured for *default* and *partitioned* profiles.

### Example

The following example shows how to configure an MVPN *data* profile.

```
Router(config)# multicast-routing vrf cust1
Router(config-mcast-cust1)# address-family ipv4
Router(config-mcast-cust1-ipv4)# mdt data segment-routing mpls 2 color 10
Router(config-mcast-cust1-ipv4)# commit
```

## metric-type generic

To use the user-defined generic metrics as a metric for Flexible Algorithm Definition (FAD), use the **metric-type generic** command in the IS-IS flexible algorithm configuration mode.

```
metric-type generic type
```

|                           |   |                              |
|---------------------------|---|------------------------------|
| <b>Syntax Description</b> | < <i>type</i> > Specify the generic metric type. The range is 128–255.  |                              |
| <b>Command Default</b>    | By default, the generic metric is not used.   |                              |
| <b>Command Modes</b>      | IS-IS Flex Algo.  |                              |
| <b>Command History</b>    | <b>Release</b>  | <b>Modification</b>          |
|                           | Release 24.2.1  | This command was introduced. |
| <b>Usage Guidelines</b>   | If a user-defined generic metric is enabled, the router advertises and uses the metrics for flexible algorithm computation. |                              |
| <b>Task ID</b>            | <b>Task ID</b>  | <b>Operations</b>            |
|                           | isis  | read,<br>write               |

### Example

The following example shows how to associate or advertise the configured user-defined generic metric to a Flexible Algorithm Definition. The user-defined application-specific generic metric is configured for an interface using the **generic-metric flex-algo** command.

```
Router(config)#router isis 1
Router(config-isis)#flex-algo 128
Router(config-isis-flex-algo)#priority 254
Router(config-isis-flex-algo)#metric-type generic 177
Router(config-isis-flex-algo)#advertise-definition
```

# microloop avoidance rib-update-delay

To set the Routing Information Base (RIB) update delay value to avoid microloops in the network, use the **microloop avoidance rib-update-delay** command. To disable the RIB update delay, use the **no** form of this command.

**microloop avoidance rib-update-delay** *delay-time*

|                           |  |
|---------------------------|--|
| <b>Syntax Description</b> | <i>delay-time</i> Specifies the amount of time the node uses the microloop avoidance policy before updating its forwarding table. The <i>delay-time</i> is in milliseconds. The range is from 1-60000. |
|---------------------------|--|

|                        |   |
|------------------------|---|
| <b>Command Default</b> | The default value is 5000 milliseconds. |
|------------------------|---|

|                      |   |
|----------------------|---|
| <b>Command Modes</b> | IPv4 address family configuration<br>Router configuration |
|----------------------|---|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | Release 6.3.2  | This command was introduced. |

|                         |   |
|-------------------------|---|
| <b>Usage Guidelines</b> | To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. |
|-------------------------|---|

Use this command with the **microloop avoidance segment-routing** command to specify how long the SR-TE policy path to the destination is used. After the RIB update delay timer expires, the SR-TE policy is replaced with regular forwarding paths.

|                |             |                  |
|----------------|-------------|------------------|
| <b>Task ID</b> | <b>Task</b> | <b>Operation</b> |
|                | ospf        | read,            |
|                | isis        | write            |

## Example

This example shows how to set the Routing Information Base (RIB) update delay value for OSPF:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router ospf 1
RP/0/RSP0/CPU0:router(config-ospf)# microloop avoidance segment-routing
RP/0/RSP0/CPU0:router(config-ospf)# microloop avoidance rib-update-delay 3000
```

This example shows how to set the Routing Information Base (RIB) update delay value for IS-IS:

```
RP/0/RSP0/CPU0:router# configure
```

```
RP/0/RSP0/CPU0:router(config)# router isis 1  
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast  
RP/0/RSP0/CPU0:router(config-isis-af)# microloop avoidance segment-routing  
RP/0/RSP0/CPU0:router(config-isis-af)# microloop avoidance rib-update-delay 3000
```

# microloop avoidance segment-routing

To enable the segment routing microloop avoidance and set the Routing Information Base (RIB) update delay value, use the **microloop avoidance** command. To disable segment routing microloop avoidance, use the **no** form of this command.

**microloop avoidance segment-routing** [ **route-policy** *name* ]

|                           |   |
|---------------------------|---|
| <b>Syntax Description</b> | <b>route-policy</b> <i>name</i> Specifies the route policy for the destination prefixes for per-prefix filtering. |
|---------------------------|---|

|                        |           |
|------------------------|-----------|
| <b>Command Default</b> | Disabled. |
|------------------------|-----------|

|                      |  |
|----------------------|--|
| <b>Command Modes</b> | IS-IS IPv4 address family configuration<br>IS-IS IPv6 address family configuration<br>OSPF configuration |
|----------------------|--|

|                        |                |  |
|------------------------|----------------|--|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>  |
|                        | Release 6.3.2  | This command was introduced.                                   |
|                        | Release 7.11.1 | The <b>route-policy</b> <i>name</i> option is added for IS-IS. |

|                         |  |
|-------------------------|--|
| <b>Usage Guidelines</b> | The Segment Routing Microloop Avoidance feature detects if microloops are possible following a topology change. If a node computes that a microloop could occur on the new topology, the node creates a loop-free SR-TE policy path to the destination using a list of segments. After the RIB update delay timer expires, the SR-TE policy is replaced with regular forwarding paths. |
|-------------------------|--|

SR microloop avoidance per-prefix filtering uses route policies to identify the prefixes subjected to microloop avoidance. A route policy must be defined before it can be attached to the SR microloop avoidance configuration. Once a route policy is defined and attached to the SR microloop avoidance configuration, it cannot be modified or removed until the route policy is removed from the SR microloop avoidance configuration.

|                |                |                  |
|----------------|----------------|------------------|
| <b>Task ID</b> | <b>Task ID</b> | <b>Operation</b> |
|                | ospf           | read,<br>write   |
|                | isis           |                  |

## Example

This example shows how to enable Segment Routing Microloop Avoidance for OSPF:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router ospf 1
RP/0/RSP0/CPU0:router(config-ospf)# microloop avoidance segment-routing
```



```
RP/0/RSP0/CPU0:router(config-ospf)# microloop avoidance rib-update-delay 3000
```

This example shows how to enable Segment Routing Microloop Avoidance for IS-IS:

```
RP/0/RSP0/CPU0:router# configure  
RP/0/RSP0/CPU0:router(config)# router isis 1  
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast  
RP/0/RSP0/CPU0:router(config-isis-af)# microloop avoidance segment-routing  
RP/0/RSP0/CPU0:router(config-isis-af)# microloop avoidance rib-update-delay 3000
```

This example shows how to enable per-prefix filtering for a prefix set defined in "route policy FOO2":

```
RP/0/RSP0/CPU0:router# configure  
RP/0/RSP0/CPU0:router(config)# router isis 1  
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast  
RP/0/RSP0/CPU0:router(config-isis-af)# microloop avoidance segment-routing route-policy  
FOO2
```

# partition-detect

Use **partition-detect** command for an area or domain partition detection. It is a new command under IS-IS address-family sub-mode.

**partition-detect** { **track** *IPv4 address / IPv6 address [external-id IPv4 -address / IPv6 address ]*

| Syntax Description | Keyword   | Details  |
|--------------------|---|--|
|                    | <b>track</b> <i>IPv4 address / IPv6 address [external-id IPv4 -address / IPv6 address ]</i> | Tracks the reachability of the specific ABR or ASBR. This command is under the partition-detect sub-mode. <ul style="list-style-type: none"> <li>• Only IPv4 address is allowed under IPv4 address-family sub-mode and only IPv6 address is allowed under IPv6 address-family sub-mode.</li> <li>• external-id is only used for ASBR tracking. External-id is the address of the ASBR, in other domain.</li> </ul> |

**Command Default** None.

**Command Modes** IS-IS interface address-family configuration

| Command History | Release        | Modification                 |
|-----------------|----------------|------------------------------|
|                 | Release 7.10.1 | This command was introduced. |

| Task ID | Task ID | Operations  |
|---------|---------|-------------|
|         | IS-IS   | read, write |

**Examples** This example shows how to configure partition-detect.

```
Router(config)#router isis 1
Router(config-isis)#address-family ipv6 unicast
Router(config-isis-af)#router-id 2001:DB8:4::4
Router(config-isis-af)#partition-detect
Router(config-isis-af)#track 2001:DB8:1::1
Router(config-isis-af)#commit
```

# path-option

To configure a path option for an SR-TE policy, use the **path-option** command in tunnel-te interface configuration mode. To return to the default behavior, use the **no** form of this command.

```
path-option path_preference_value {dynamic [attribute-set | isis | lockdown |
ospf | pce | protected-by] | explicit {identifier path-number | name path-name}
[attribute-set | isis | lockdown | ospf | protected-by | verbatim]}
segment-routing
```

## Syntax Description

|  |   |
|--|---|
| <i>path_preference_value</i>   | Specifies the preference for an LSP.<br>Range is from 1 to 1000.  |
| <b>dynamic</b> [ <b>attribute-set</b>   <b>isis</b>   <b>lockdown</b>   <b>ospf</b>   <b>pce</b>   <b>protected-by</b> ]   | Configures a dynamically allocated path based on the configured options.<br>See the <b>attribute-set</b> statement for a description of all the attributes.   |
| <b>explicit</b> { <b>identifier</b> <i>path-number</i>   <b>name</b> <i>path-name</i> } [ <b>attribute-set</b>   <b>isis</b>   <b>lockdown</b>   <b>ospf</b>   <b>protected-by</b>   <b>verbatim</b> ] | Configures a preset path, based on the configured options.<br>The <b>verbatim</b> option is required for disabling loop detection on the path. When you configure this option, the topology database is not referred by the source router while configuring the preset path.<br>See the <b>attribute-set</b> statement for a description of all the attributes. |
| <b>segment-routing</b>   | Configures a segment routing path, based on the configured options.   |

## Command Default

None

## Command Modes

Tunnel-te interface configuration

## Command History

| Release       | Modification                 |
|---------------|------------------------------|
| Release 6.1.2 | This command was introduced. |

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

## Task ID

| Task ID | Operation      |
|---------|----------------|
| mpls-te | read,<br>write |

### Example

This example shows how to configure the tunnel to use an explicit path for segment routing:

```
RP/0/RSP0/CPU0:router(config)# interface tunnel-te22
RP/0/RSP0/CPU0:router(config-if)# ipv4 unnumbered loopback0
RP/0/RSP0/CPU0:router(config-if)# destination 192.168.0.2
RP/0/RSP0/CPU0:router(config-if)# path-selection segment-routing adjacency protected
RP/0/RSP0/CPU0:router(config-if)# path-option 1 explicit name ABCD1_Nodes segment-routing
```

### Related Commands

| Command               | Description                              |
|-----------------------|--|
| attribute-set         | Configures the attribute set for an LSP. |
| <a href="#">index</a> | Determines the order of path selection.  |

# path-selection

Configures the LSP to be selected for the SR-TE tunnel.

```
path-selection [cost-limit limit | hop-limit limit | invalidation timer [tear | drop] | metric
[igp | te] segment-routing adjacency [protected | unprotected] | tiebreaker [max-fill |
min-fill | random] ]
```

| Syntax Description   |   |  |
|--|---|--|
| <b>cost-limit</b> <i>limit</i>                             |   | Configures the cost limit for the LSP.<br>Ranges from 1 to 4294967295.   |
| <b>hop-limit</b> <i>limit</i>                              |   | Configures the hop limit for the LSP.<br>Ranges from 1 to 255.   |
| <b>invalidation</b> <i>timer</i> [tear   drop]             |   | Configures the path invalidation timer.<br>When the timer expires, the path is either torn down or just the segment labeled data is dropped.<br>Ranges from 0 to 60000.  |
| <b>metric</b> [igp   te]                                   |   | Configures the type of metric to be used for the LSP.  |
| <b>segment-routing adjacency</b> [protected   unprotected] |   | Configures the type of adjacency for segment routing.  |
| <b>tiebreaker</b> [max-fill   min-fill   random]           |   | Configures the tie breaker for path calculation of equal cost multiple paths. <b>Max-fill</b> selects the path with the most-utilized links. <b>Min-fill</b> selects the path with the least-utilized links. Random selects the path with randomly utilized links. |
| <b>Command Default</b>                                     | None  |  |
| <b>Command Modes</b>                                       | Tunnel interface configuration mode   |  |
| <b>Command History</b>                                     | <b>Release</b>  | <b>Modification</b>  |
|  | Release 6.1.2   | This command was introduced.   |
| <b>Usage Guidelines</b>                                    | To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. |  |
| <b>Task ID</b>   | <b>Task ID</b>  | <b>Operation</b>   |
|  | mpls-te   | read,<br>write   |

This example shows how to set the path-selection for segment routing adjacency protection.

```
RP/0/RSP0/CPU0:router(config)# interface tunnel-te22  
RP/0/RSP0/CPU0:router(config-if)# path-selection segment-routing adjacency protected
```

## pce segment-routing traffic-eng p2mp

To configure the SR-PCE server for managing multicast traffic flows, use the **pce segment-routing traffic-eng p2mp** command in global configuration mode. To remove the configuration, use the **no** form of the command.

```
pce segment-routing traffic-eng p2mp [ policy name [ candidate-paths [ constraints [ affinity {
include-any | include-all | exclude-any } name ] | [ sid-algorithm algo ] ] ] ] [ fast-reroute lfa |
frr-node-set { from | to } [ ipv4 address ] ] | [ label-range min value max value ] | [multipath-disable]
```

| Syntax Description   |  |  |
|--|--|--|
| <b>policy name</b>   | (Optional) Specifies the static or dynamic SR multicast policy for which LFA FRR is enabled.   |  |
| <b>constraints</b>   | Configures constraints.  |  |
| <b>affinity {include-all   include-any   exclude-any} name</b> | Configures the affinity constraints and the affinity name.   |  |
| <b>sid-algorithm algo</b>                                      | Flex-algo value. An algorithm is a one octet value. Values from 128 to 255 are reserved for user defined values and are used for Flexible Algorithm representation.  |  |
| <b>fast-reroute lfa</b>  | Specifies that LFA FRR be enabled on all multicast routers of the SR multicast tree.   |  |
| <b>frr-node-set {from to} [ipv4 address]</b>                   | Specifies the ( <i>from</i> and <i>to</i> ) paths on multicast routers that requires FRR protection.<br><br>The PCE server applies the LFA FRR function for traffic <i>from</i> a specific IP address, sent <i>to</i> specific IP address(es). |  |
| <b>label-range min value max value</b>                         | Specifies the label range to be used for the multicast traffic LSPs.   |  |
| <b>multipath-disable</b>                                       | Disables load balancing of SR multicast traffic across ECMP paths.   |  |

**Command Default** The SR-PCE server parameters are disabled.

**Command Modes** Global configuration (config)

| Command History | Release        | Modification  |
|-----------------|----------------|---|
|                 | Release 7.11.1 | The <b>sid-algorithm algo</b> options are introduced. |
|                 | Release 7.3.1  | This command was introduced.                          |

### Example

The following example shows how to configure SR-PCE server parameters.

#### Label Range Configuration

The configuration specifies that labels between 30000 and 60000 be used for multicast traffic LSPs.

```
Router(config)# pce segment-routing traffic-eng p2mp label-range min 30000 max 60000
Router(config)# commit
```

### FRR Configuration

The LFA FRR function is configured for all SR policies.

```
Router(config)# pce segment-routing traffic-eng p2mp fast-reroute lfa
```

The LFA FRR function is configured for the SR policy *tree1*.

```
Router(config)# pce segment-routing traffic-eng p2mp policy tree1 fast-reroute lfa
```

FRR protection is configured for traffic from the interface with IP address 192.168.0.3, and traffic being sent to the interface with IP address 192.168.0.4.

```
Router(config)# pce segment-routing traffic-eng p2mp frr-node-set from ipv4 192.168.0.3
Router(config)# pce segment-routing traffic-eng p2mp frr-node-set to ipv4 192.168.0.4
Router(config)# commit
```

### Disable Load Balancing

To disable ECMP load splitting of different trees on the SR-PCE server, configure the **multipath-disable** command.

```
Router(config)# pce segment-routing traffic-eng p2mp multipath-disable
Router(config)# commit
```

### Flexible Algorithm

The following example shows how to configure a P2MP policy with Flex-Algo constraint:

```
Router(config)# pce
Router(config-pce)# segment-routing traffic-eng
Router(config-pce-sr-te)# p2mp
Router(config-pce-sr-te-p2mp)# policy FOO
Router(config-pce-p2mp-policy)# candidate-paths
Router(config-pce-p2mp-policy-path)# constraints
Router(config-pce-p2mp-path-const)# sid-algorithm 128
Router(config-pce-p2mp-path-const)#
```



# performance-measurement interface

This command helps you configure the target interface with probe packets that transit Interface ID within a network.

```
performance-measurement interface GigE 0/1/0/1
{ path-tracing { { interface-id {1-4095} } } }
```

|                           |   |
|---------------------------|---|
| <b>Syntax Description</b> | <b>path-tracing</b> Enables path-tracing for the interface for tracing short timestamp, interface-id and interface load on source, midpoint and sink nodes in PT probes.      |
|                           | <b>interface-id</b> Enter interface ID that is between 1-4095.<br>Default value is none. Interface ID value 0 is used internally to indicate PT is disabled on the interface. |

|                        |  |
|------------------------|--|
| <b>Command Default</b> | Path tracing is disabled by default.<br>The default value for Interface ID is set to None. |
|------------------------|--|

|                      |                               |
|----------------------|-------------------------------|
| <b>Command Modes</b> | Global ConfigurationXR Config |
|----------------------|-------------------------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | Release 7.8.1  | This command was introduced. |

|                         |  |
|-------------------------|--|
| <b>Usage Guidelines</b> | Enable path-tracing for the interface for tracing interface-id and interface load on source, midpoint and sink nodes in PT probes. |
|-------------------------|--|

**Examples** This example shows how to configure Path Tracing midpoint with InterfaceID:

```
Router(config)# performance-measurement
Router(config-pm)# interface FourHundredGigE0/0/0/1
Router(config-pm-interf)# path-tracing
Router(config-pm-interf-interf-id)# interface-id 200
Router(config-pm-interf-time)# exit
```

# performance-measurement delay-measurement

To apply an SR performance measurement delay profile to an SR-TE policy, use the **performance-measurement delay-measurement** command in the SR-TE policy configuration mode. To disassociate the profile from the SR-TE policy, use the **no** form of the command.

```
performance-measurement delay-measurement [ delay-profile name profile ]
no performance-measurement delay-measurement [ delay-profile ]
```

## Syntax Description

**delay-profile name** *profile* (Optional) Specifies the delay profile that is to be associated with the SR-TE policy.

## Command Default

The Default performance measurement delay profile is associated with an SR-TE policy.

## Command Modes

SR-TE policy configuration (config-sr-te-policy)  
On-Demand SR-TE policy configuration (config-sr-te-color)

## Command History

| Release       | Modification                 |
|---------------|------------------------------|
| Release 7.3.1 | This command was introduced. |

## Usage Guidelines

The **performance-measurement** command is also available in global configuration mode. Amongst other configurations, you can use it for creating a Segment Routing performance measurement delay and liveness profiles.

## Example

This example shows how to associate a delay profile to an SR-TE policy:

```
Router(config)# segment-routing traffic-eng
Router(config-sr-te)# policy TEST
Router(config-sr-te-policy)# color 4 end-point ipv4 10.10.10.10
Router(config-sr-te-policy)# performance-measurement delay-measurement delay-profile name
profile2
Router(config-sr-te-policy-perf-meas)# commit
```

```
Router(config-sr-te)# on-demand color 20
Router(config-sr-te-color)# performance-measurement delay-measurement delay-profile name
profile2
Router(config-sr-te-color)# commit
```

## performance-measurement delay-profile endpoint

To detect the delay of an endpoint, use the **performance-measurement delay-profile endpoint** command in global configuration. To disable the delay-profile, use the **no** form of the command.

```
performance-measurement delay-profile endpoint { default | name name } { advertisement
accelerated { minimum-change value | threshold value } | logging delay-exceeded | periodic
{ disabled | interval value | minimum-change value | threshold value } | threshold-check {
average-delay | maximum-delay | minimum-delay } | probe { burst-interval interval | tx-interval
interval | computation-interval interval | measurement-mode { one-way | two-way | loopback } |
timestamp-format NTP | tos dscp value | flow-label { explicit value | from value to
value increment value } } }
```

### Syntax Description

|   |  |
|---|--|
| <b>advertisement</b>  | Enter interface delay profile advertisement submenu  |
| <b>accelerated</b>  | Enter interface delay profile advertisement accelerated submenu  |
| <b>minimum change</b> <i>microseconds</i>   | The range is from 0 to 100000 microseconds.  |
| <b>threshold</b> <i>percent</i>   | Checks the minimum-delay metric change for threshold crossing for accelerated advertisement. The range is from 0 to 100 percent. |
| <b>logging delay-exceeded</b>   | Sends syslog when the delay exceeds the threshold.   |
| <b>periodic</b>   | Enter periodic advertisement configuration submenu.  |
| <b>disabled</b>   | Disables periodic advertisement.   |
| <b>interval</b> <i>seconds</i>  | Periodic advertisement and metric aggregation interval. The interval range is from 30 to 3600 seconds.                           |
| <b>minimum-change</b> <i>microseconds</i>   | The range is from 0 to 100000 microseconds.  |
| <b>threshold</b> <i>percent</i>   | Checks the minimum-delay metric change for threshold crossing for periodic advertisement. The range is from 0 to 100 percent.    |
| <b>threshold-check</b> { <b>average-delay</b>   <b>maximum-delay</b>   <b>minimum-delay</b> } | max = default  |
| <b>probe</b>  | Enter probe configuration submenu.   |
| <b>burst-interval</b> <i>microseconds</i>   | Specify the interval for sending probe packet. The range is from 30 to 15000 milliseconds.                                       |
| <b>tx-interval</b> <i>microseconds</i>  | Specify the transmission interval. The allowed range is from 30000 to 15000000 micro seconds.                                    |
| <b>computation-interval</b> <i>seconds</i>  | Specify the interval for metric computation. The range is from 1 to 3600 seconds.  |
| <b>measurement-mode</b> { <b>one-way</b>   <b>two-way</b>   <b>loopback</b> }                 | Specify the delay measurement mode.  |

|   |  |
|---|--|
| <b>tos dscp</b> <i>value</i>  | Type of Service DSCP. The range is from 0 to 63.                             |
| <b>flow-label</b> <b>explicit</b> <i>value</i>                          | Specify explicit list of flow labels. The range is from 1 to 28 flow labels. |
| <b>flow-label</b> <b>from</b> <i>value to value</i><br><b>increment</b> | Specify the flow labels range. The range is from 1 to 28 flow labels.        |
| <b>timestamp-format</b> <b>NTP</b>                                      | Specify the software timestamp as NTP.                                       |

**Command Default**

The default advertisement accelerated minimum change is 500 microseconds.  
 The default advertisement accelerated threshold is 20 percent.  
 The default advertisement periodic interval is 120 seconds.  
 The default advertisement periodic minimum-change is 500 microseconds.  
 The default advertisement periodic threshold is 10 percent.  
 The default advertisement threshold-check is **maximum-delay**.  
 The default burst-interval is 3000 microseconds.  
 The default computation-interval is 30 seconds.  
 The default measurement-mode is **one-way**.  
 The default ToS DSCP value is 48 for IP/UDP.

**Command Modes**

Global ConfigurationXR Config

**Command History**

| Release        | Modification  |
|----------------|---|
| Release 7.4.1  | This command was introduced.  |
| Release 7.6.1  | The <b>name name</b> keyword was deprecated. Use the <b>performance-measurement delay-profile name</b> command to create a named profile. |
| Release 7.10.1 | The <b>burst-interval interval</b> keyword was deprecated.  |



**Note** Loopback is not supported on IOS-XR software releases 7.10.x and 7.11.x.

**Example**

```
Router(config)# performance-measurement
Router(config-perf-meas)# delay-profile endpoint default
Router(config-pm-dm-ep)# probe
Router(config-pm-dm-ep-probe)# measurement-mode one-way
```

The following example shows how to configure flow label for delay profile.

```
RP/0/RSP0/CPU0:ios#configure
```

```
RP/0/RSP0/CPU0:ios (config) #performance-measurement  
RP/0/RSP0/CPU0:ios (config-perf-meas) #delay-profile endpoint default  
RP/0/RSP0/CPU0:ios (config-pm-dm-ep) #probe  
RP/0/RSP0/CPU0:ios (config-pm-dm-ep-probe) #flow-label explicit 100 200 300
```

## performance-measurement delay-profile interfaces

```
performance-measurement delay-profile interfaces { default | name name } { advertisement
{ accelerated { minimum-change value | threshold value } | anomaly-check upper-bound
upper_bound lower-bound lower_bound | logging delay-exceeded | periodic { disabled | interval
value | minimum-change value | threshold value } } | probe { burst-interval value | tx-interval
interval | computation-interval value | measurement-mode { one-way | two-way } | timestamp-format
NTP | protocol { pm-mpls | twamp-light } | tos dscp value } }
```

### Syntax Description

|   |  |
|---|--|
| <b>advertisement</b>  | Enter interface delay profile advertisement submode.   |
| <b>accelerated</b>  | Enter interface delay profile advertisement accelerated submode.   |
| <b>minimum change</b> <i>microseconds</i>   | The range is from 0 to 100000 microseconds.  |
| <b>threshold</b> <i>percent</i>   | Checks the minimum-delay metric change for threshold crossing for accelerated advertisement. The range is from 0 to 100 percent.   |
| <b>anomaly-check upper-bound</b><br><i>upper_bound</i> <b>lower-bound</b><br><i>lower_bound</i> | Specify the upper and lower bounds of the interface delay profile advertisement anomaly check. The range for <i>upper_bound</i> and <i>lower_bound</i> is from 1 to 200000 microseconds. |
| <b>logging delay-exceeded</b>   | Sends syslog when the delay exceeds the threshold.   |
| <b>periodic</b>   | Enter periodic advertisement configuration submode.  |
| <b>disabled</b>   | Disables periodic advertisement.   |
| <b>interval</b> <i>seconds</i>  | Periodic advertisement and metric aggregation interval. The interval range is from 30 to 3600 seconds.   |
| <b>minimum-change</b> <i>microseconds</i>   | The range is from 0 to 100000 microseconds.  |
| <b>threshold</b> <i>percent</i>   | Checks the minimum-delay metric change for threshold crossing for periodic advertisement. The range is from 0 to 100 percent.  |
| <b>probe</b>  | Enter probe configuration submode.   |
| <b>burst-interval</b> <i>microseconds</i>   | Specify the interval for sending probe packet. The range is from 30 to 15000 milliseconds.   |
| <b>tx-interval</b> <i>value</i>   | Specify the transmission interval. The allowed range is from 30000 to 15000000 micro seconds.  |
| <b>computation-interval</b> <i>seconds</i>  | Specify the interval for metric computation. The range is from 1 to 3600 seconds.  |
| <b>measurement-mode</b> { <b>one-way</b>   <b>two-way</b> }                                     | Specify the delay measurement mode.  |
| <b>protocol</b> { <b>pm-mpls</b>   <b>twamp-light</b> }   |  |
| <b>tos dscp</b> <i>value</i>  | Type of Service DSCP. The range is from 0 to 63.   |

---

|                             |  |
|-----------------------------|--|
| <b>timestamp-format</b> NTP | Specify the software timestamp as NTP. |
|-----------------------------|--|

---

**Command Default**

The default advertisement accelerated minimum change is 500 microseconds.  
 Default measurement-mode for interfaces is two-way whereas others is one-way.  
 The default advertisement accelerated threshold is 20 percent.  
 The default advertisement periodic interval is 120 seconds.  
 The default advertisement periodic minimum-change is 500 microseconds.  
 The default advertisement periodic threshold is 10 percent.  
 The default burst-interval is 3000 microseconds.  
 The default computation-interval is 30 seconds.  
 The default measurement-mode is **two-way**.  
 The default protocol is TWAMP-light.  
 The default ToS DSCP value is 48 for IP/UDP.

**Command Modes**

Global ConfigurationXR Config

**Command History**

| Release        | Modification  |
|----------------|---|
| Release 7.3.1  | This command was introduced.  |
| Release 7.4.1  | The <b>anomaly-check upper-bound</b> <i>upper_bound</i> <b>lower-bound</b> <i>lower_bound</i> command is introduced.                                    |
| Release 7.6.1  | The <b>name</b> <i>name</i> keyword was deprecated. Use the <b>performance-measurement delay-profile</b> <b>name</b> command to create a named profile. |
| Release 7.10.1 | The <b>burst-interval</b> <i>interval</i> keyword was deprecated.   |

**Usage Guidelines****Example**

This example shows how to configure performance-measurement functionalities for link delay as a global default profile.

```
RP/0/0/CPU0:router(config)# performance-measurement delay-profile interfaces default
RP/0/0/CPU0:router(config-pm-dm-intf)# probe
RP/0/0/CPU0:router(config-pm-dm-intf-probe)# measurement-mode one-way
RP/0/0/CPU0:router(config-pm-dm-intf-probe)# burst-interval 60
RP/0/0/CPU0:router(config-pm-dm-intf-probe)# computation-interval 60
RP/0/0/CPU0:router(config-pm-dm-intf-probe)# exit
RP/0/0/CPU0:router(config-pm-dm-intf)# advertisement periodic
RP/0/0/CPU0:router(config-pm-dm-intf-adv-per)# interval 120
RP/0/0/CPU0:router(config-pm-dm-intf-adv-per)# threshold 20
RP/0/0/CPU0:router(config-pm-dm-intf-adv-per)# minimum-change 1000
RP/0/0/CPU0:router(config-pm-dm-intf-adv-per)# exit
RP/0/0/CPU0:router(config-pm-dm-intf)# advertisement accelerated
RP/0/0/CPU0:router(config-pm-dm-intf-adv-acc)# threshold 30
RP/0/0/CPU0:router(config-pm-dm-intf-adv-acc)# minimum-change 1000
```

```
RP/0/0/CPU0:router(config-pm-dm-intf-adv-per)# exit
```

This example shows how to define thresholds above which delay and loss are considered “anomalous.”

```
RP/0/0/CPU0:router(config)# performance-measurement delay-profile interfaces default  
RP/0/0/CPU0:router(config-pm-dm-intf)# advertisement  
RP/0/0/CPU0:router(config-pm-dm-intf-adv)# anomaly-check upper-bound 5000 lower-bound 1000  
RP/0/0/CPU0:router(config-pm-dm-intf-adv)# interval 120  
RP/0/0/CPU0:router(config-pm-dm-intf-adv)# threshold 20  
RP/0/0/CPU0:router(config-pm-dm-intf-adv)# minimum-change 1000  
RP/0/0/CPU0:router(config-pm-dm-intf-adv)# exit
```



# performance-measurement delay-profile name

To detect the delay of an name, use the **performance-measurement delay-profile name** command in global configuration. To disable the delay-profile, use the **no** form of the command.

```
performance-measurement delay-profile name value probe [ flow-label { explicit value
|from value to value increment value } | measurement-mode { one-way | two-way |
loopback } | sweep destination ipv4 ip-address range range-value | tos { dscp value | traffic-class
value } | tx-interval value ]
```

## Syntax Description

|   |  |
|---|--|
| <b>flow-label</b> { <b>explicit</b> <i>value</i>   <b>from</b> <i>value</i> <b>to</b> <i>value</i> <b>increment</b> } | Specify explicit list of flow labels or specify the range. The range is from 1 to 28 flow labels.  |
| <b>measurement-mode</b> { <b>one-way</b>   <b>two-way</b>   <b>loopback</b> }   | Specify the delay measurement mode. There are three options:<br>one-way: Measures the one way delay with timestamp 1 and 2.<br>two-way: Measures the one way delay with timestamp 1, 2, 3 and 4 without clock synchronization.<br>loopback: Measures the delay in loopback mode. |
| <b>sweep destination</b><br><b>ipv4</b> <i>ip-address</i> <b>range</b> <i>value</i>                                   | Specify the sweep IP destination addresses to perform ECMP hashing.<br>The IPv4 address range is 0 to 128.   |
| <b>tos</b> { <b>dscp</b> <i>value</i>   <b>tos</b> <b>traffic-class</b> <i>value</i> }                                | Specify the delay probe type of service. The allowed range for DSCP is 0 to 63.<br>specify the traffic class value to indicate the TOS level used by protocol PM MPLS. The range is from 0 to 7.   |
| <b>tx-interval</b> <i>value</i>   | Specify the transmission interval. The allowed range is from 30000 to 15000000 micro seconds.<br>From release Release 24.2.1 onwards, the allowed range is from 15000 to 15000000 micro seconds.   |
| <b>probe</b>  | Enter probe configuration submode.   |
| <b>timestamp-format</b> <b>NTP</b>  | Specify the software timestamp as NTP.   |

## Command Default

The default measurement-mode is **one-way**.  
The default ToS DSCP value is 48 for IP/UDP.

## Command Modes

Global ConfigurationXR Config

## Command History

| Release       | Modification   |
|---------------|--|
| Release 7.4.1 | This command was introduced.   |
| Release 7.6.1 | The <b>name</b> <i>name</i> keyword was deprecated. Use the <b>performance-measurement delay-profile name</b> command to create a named profile. |

| Release        | Modification  |
|----------------|---|
| Release 24.2.1 | The command is modified to include the <b>flow-label</b> keyword.<br>The modified range for <b>tX interval value</b> is from 15000 to 15000000 micro seconds. |

### Example

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

```
Router(config)# performance-measurement
Router(config-perf-meas)# delay-profile endpoint default
Router(config-pm-dm-ep)# probe
Router(config-pm-dm-ep-probe)# measurement-mode one-way
```

The following example shows how to configure flow label for delay profile.

```
RP/0/RSP0/CPU0:ios#configure
RP/0/RSP0/CPU0:ios(config)#performance-measurement
RP/0/RSP0/CPU0:ios(config-perf-meas)#delay-profile endpoint default
RP/0/RSP0/CPU0:ios(config-pm-dm-ep)#probe
RP/0/RSP0/CPU0:ios(config-pm-dm-ep-probe)#flow-label explicit 100 200 300
```

## performance-measurement delay-profile

To create a unique Segment Routing performance measurement delay profile, use the **performance-measurement delay-profile** command in global configuration mode.

```
performance-measurement delay-profile { sr-policy default } { endpoint default } { interface default }
{ name string name } advertisement { anomaly-loss } { anomaly-check } upper-bound <1-99>
lower-bound <number lower than the upper bound (0-98)>
```



**Note** Synthetic Loss Measurement is an inbuilt feature of delay measurement. To get the packet loss information for delay-measurement sessions, you only need to configure the delay sessions. No additional configuration is required for Synthetic Loss Measurement.

### Syntax Description

|                                |   |
|--------------------------------|---|
| <b>name</b> <i>string name</i> | (Optional) Specifies the Segment Routing performance measurement delay profile name.  |
| <b>sr-policy default</b>       | (Optional) Specifies the Segment Routing performance measurement default sr-policy name.  |
| <b>endpoint default</b>        | (Optional) Specifies the Segment Routing performance measurement default endpoint name.   |
| <b>interface default</b>       | (Optional) Specifies the Segment Routing performance measurement default interface.   |
| <b>advertisement</b>           | Specifies the Segment Routing performance measurement advertisement you want to configure.  |
| <b>anomaly-check</b>           | (optional) It checks the delay metrics, for example if the min delay changes exceed the configured threshold, it advertises ANOM-MIN-DYN; if you configured the anomaly-check and the static delay, and the configured static delay exceed the threshold, it advertises ANOM-MIN-STA. |

You can configure the anomaly loss with **upper-bound** and **lower-bound** values.

- **upper-bound** specifies the upper limit for the anomaly check. It must be between 2-200000
- **lower-bound** specifies the lower limit for the anomaly check. It must be between 1-199999 and lower than the **upper-bound** value.

**anomaly-loss** (optional) Once the packet loss exceed the configured threshold, it advertises ANOM-PKT-LOSS.

You can configure the anomaly loss with **upper-bound** and **lower-bound** values.

- **upper-bound** specifies the upper limit for the anomaly loss. It must be between 1-99
- **lower-bound** specifies the lower limit for the anomaly loss. It must be between 0-98 and lower than the **upper-bound** value.

If both **anomaly-check** and **anomaly-loss** are triggered, then it advertises for anomaly-check, because it has a higher priority than anomaly-loss

- min delay changes = current min delay - previous min delay
- packet loss = (expected packet number - received packet number) / expect packet number \* 100%

**Command Default** No user created performance measurement delay profile exists.

**Command Modes** Global configuration (config)

**Command History**

| Release        | Modification  |
|----------------|---|
| Release 24.1.1 | The <b>anomaly-loss</b> keyword was introduced.   |
| Release 7.6.1  | This command was deprecated and replaced with the <b>performance-measurement delay-profile</b> command. |
| Release 7.3.1  | This command was introduced.  |

**Task ID**

| Task ID                 | Operation  |
|-------------------------|------------|
| performance-measurement | write/read |

**Usage Guidelines**

The **performance-measurement** command is also available in SR-TE specific configuration.

**Example**

This example shows how to create a unique Segment Routing performance measurement delay profile:

```
Router(config)# performance-measurement delay-profile sr-policy name profile1
Router(config)# commit
```

This example shows the example of anomaly-loss:

```
Router(config)#performance-measurement
Router(config-perf-meas)#delay-profile sr-policy default
Router(config-pm-dm-srpolicy)#advertisement
Router(config-pm-dm-srpolicy-adv)#anomaly-loss
```

```
Router(config-pm-dm-srpolicy-adv-anom-loss)#upper-bound 30 lower-bound 20
Router(config-pm-dm-srpolicy-adv-anom-loss)#commit
```

This example shows the example of anomaly-check:

```
Router(config)#performance-measurement
Router(config-perf-meas)#delay-profile sr-policy default
Router(config-pm-dm-srpolicy)#advertisement
Router(config-pm-dm-srpolicy-adv)#anomaly-check
Router(config-pm-dm-srpolicy-adv-anom-loss)#upper-bound 2000 lower-bound 20
Router(config-pm-dm-srpolicy-adv-anom-loss)#commit
```

## performance-measurement endpoint

To enable endpoint for the performance measurement, use the **performance-measurement endpoint** command in global configuration mode. To disable the endpoint, use the **no** form of the command.

```
performance-measurement endpoint ipv4 | ipv6 endpoint_ip_addr [ vrf name ] [
delay-measurement [ delay-profile name profile_name ] | description description |
liveness-detection [ liveness-profile name profile_name ] | segment-list name sidlist_name |
source-address ipv4 | ipv6 source_ip_addr ]
```

| Syntax Description                               |  |  |
|--|--|--|
| <i>endpoint_ip_addr</i>                          |  | IPv4 and IPv6 address of the endpoint.     |
| <i>vrf name</i>                                  |  | The name of the VRF instance.              |
| <b>delay-measurement</b>                         |  | Enable delay-measurement on the endpoint.  |
| <b>delay-profile name</b> <i>profile_name</i>    |  | Specify an optional delay profile name.    |
| <b>description</b> <i>description</i>            |  | Specify a description for the endpoint.    |
| <b>liveness-detection</b>                        |  | Enable liveness-detection on the endpoint. |
| <b>liveness-profile name</b> <i>profile_name</i> |  | Specify an optional liveness profile name. |
| <b>segment-list name</b> <i>sidlist_name</i>     |  | Specify a segment list for the endpoint.   |
| <b>source-address ipv4</b> <i>source_ip_addr</i> |  | IPv4 address of the sender.                |
| <b>source-address ipv6</b> <i>source_ip_addr</i> |  | IPv6 address of the sender.                |

**Command Default** None

**Command Modes** Global ConfigurationXR Config

| Command History | Release        | Modification                                       |
|-----------------|----------------|--|
|                 | Release 24.2.1 | The command was modified to include IPv6 endpoint. |
|                 | Release 7.4.1  | This command was introduced.                       |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The following example show how to enable IPv4 endpoint for the delay measurement.

```
Router(config)# performance-measurement
Router(config-perf-meas)# endpoint ipv4 10.10.1.5
Router(config-pm-ep)# source-address ipv4 10.10.1.1
Router(config-pm-ep)# delay-measurement
```

The following example show how to configure IPv6 endpoint for liveness.

```
Router(config)#performance-measurement  
Router(config-perf-meas)#source-address ipv6 FCBB:0:1::  
Router(config-perf-meas)#endpoint ipv6 FCBB:0:5::  
Router(config-pm-ep)#exit  
Router(config-perf-meas)#liveness-profile endpoint default
```

# performance-measurement liveness-detection

To apply an SR performance measurement liveness profile to an SR-TE or an SRv6-TE policy, use the **performance-measurement liveness-detection** command in the SR-TE policy configuration mode. To disassociate the profile from the SR-TE policy, use the **no** form of the command.

```
performance-measurement liveness-detection [ liveness-profile [backup] name profile |
validation-cp minimum-active segment-lists [ 1-128 | all ] ]
```

| Syntax Description   |  |  |
|--|--|--|
| <b>liveness-profile</b> [backup]<br><b>name</b> <i>profile</i> | (Optional) Specifies the liveness profile that is to be associated with the SR-TE policy.                  |  |
|  |  | The <b>name profile</b> command form specifies the liveness profile, and the <b>backup name profile</b> command form specifies the backup liveness profile.  |
| <b>validation-cp</b><br><b>minimum-active</b>                  | (Optional) Validates the activeness of the candidate-path based on minimum number of active segment-lists. |  |
| <b>segment-lists</b>   | Indicates the number of active segment-lists.  |  |
| <i>1-128</i>   <b>all</b>                                      |  | <ul style="list-style-type: none"> <li>1-128: Indicates the minimum number of segment-lists to have the PM liveness session up.</li> <li>all: Indicates that all the segment-lists should be active to have the PM liveness session up.</li> </ul> |

**Command Default** The Default performance measurement liveness profile is associated with an SR-TE policy.

**Command Modes** SR-TE policy configuration (config-sr-te-policy)  
On-Demand SR-TE policy configuration (config-sr-te-color)

| Command History | Release        | Modification  |
|-----------------|----------------|---|
|                 | Release 7.11.1 | The validation-cp minimum-active segment-lists option was introduced. |
|                 | Release 7.4.2  | The <b>backup</b> keyword was added to the command.                   |
|                 | Release 7.3.1  | This command was introduced.  |

**Usage Guidelines** Path protection policies do not fully support PCE reporting of the standby LSP.

## Example

This example shows how to associate a liveness profile to an SR-TE policy:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#policy TRST2
Router(config-sr-te-policy)#color 40 end-point ipv4 20.20.20.20
Router(config-sr-te-policy)#performance-measurement liveness-detection liveness-profile
name profile3
```



```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#on-demand color 30
Router(config-sr-te-color)#performance-measurement liveness-detection liveness-profile name
profile3
Router(config-sr-te-color)#commit
```

This example shows how to associate a backup liveness profile to an SR-TE policy:

```
RP/0/RSP0/CPU0:ios# configure
RP/0/RSP0/CPU0:ios(config)#segment-routing traffic-eng
RP/0/RSP0/CPU0:ios(config-sr-te)#policy foo
RP/0/RSP0/CPU0:ios(config-sr-te-policy)# color 10 end-point ipv4 192.168.0.3
RP/0/RSP0/CPU0:ios(config-sr-te-policy)# performance-measurement
RP/0/RSP0/CPU0:ios(config-sr-te-policy-perf-meas)# liveness-detection
RP/0/RSP0/CPU0:ios(config-sr-te-policy-live-detect)# liveness-profile name profile-WORKING

RP/0/RSP0/CPU0:ios(config-sr-te-policy-live-detect)# liveness-profile backup name
profile-PROTECT
RP/0/RSP0/CPU0:ios(config-sr-te-policy-live-detect)# commit
```

This example shows how to activate two segment-lists to have the PM liveness session up:

```
Router(config)#segment-routing
Router(config-sr)#traffic-eng
Router(config-sr-te)#policy po-103
Router(config-sr-te-policy)#performance-measurement
Router(config-sr-te-policy-perf-meas)#liveness-detection
Router(config-sr-te-policy-live-detect)#validation-cp minimum-active segment-lists 2
```

# performance-measurement liveness-profile endpoint

```
performance-measurement liveness-profile endpoint { default | name name } {
liveness-detection { logging state-change detected | multiplier value } | probe { burst-interval
value | tx-interval interval | tos dscp value } }
```

| Syntax Description                    |  |   |
|---------------------------------------|--|---|
| <b>default</b>                        |  | The default profile.  |
| <b>name</b> <i>name</i>               |  | The name of profile.  |
| <b>liveness-detection</b>             |  | Enter endpoint liveness detection submode.  |
| <b>logging state-change detected</b>  |  | Display a syslog when the liveness state change detected.   |
| <b>multiplier</b> <i>value</i>        |  | Specify the number of probe packets sent before the head-end node assumes the candidate path is down. |
| <b>probe</b>                          |  | Enter endpoint liveness detection probe submode.  |
| <b>burst-interval</b> <i>interval</i> |  | Specify the interval for sending probe packet. The range is from 30 to 15000 milliseconds.            |
| <b>tx-interval</b> <i>value</i>       |  | Specify the transmission interval. The allowed range is from 30000 to 15000000 micro seconds.         |
| <b>tos dscp</b> <i>value</i>          |  | Type of Service DSCP. The range is from 0 to 63.  |

**Command Default** Default burst interval is 3000 milliseconds (3 seconds).  
Default ToC DSCP value is 48.

**Command Modes** Global ConfigurationXR Config

| Command History | Release        | Modification  |
|-----------------|----------------|---|
|                 | Release 7.4.1  | This command was introduced.  |
|                 | Release 7.6.1  | The <b>name</b> <i>name</i> keyword was deprecated. Use the <b>performance-measurement liveness-profile name</b> command to create a named profile. |
|                 | Release 7.10.1 | The <b>burst-interval</b> <i>interval</i> keyword was deprecated.   |

**Usage Guidelines** Liveness-detection and delay-measurement aren't supported together

## Example

```
Router(config)# performance-measurement
Router(config-perf-meas)# liveness-profile endpoint default
Router(config-pm-ld-ep)# liveness-detection
Router(config-pm-ld-ep-ld)# multiplier 3
```

```
Router(config-pm-ld-ep-ld)# exit  
Router(config-pm-ld-ep)# probe  
Router(config-pm-ld-ep-probe)# measurement-mode loopback
```

# performance-measurement liveness-profile

To create a unique Segment Routing performance measurement liveness profile, use the **performance-measurement liveness-profile** command in global configuration mode. To remove the profile, use the **no** form of the command.

```
performance-measurement liveness-profile [ name [ name npu-offload enable ] | probe
flow-label [ explicit | from ] tx-interval value ] [ sr-policy default [ npu-offload enable ] |
probe flow-label [ explicit | from ] tx-interval value ]
```

Table 2: Syntax Description

| Syntax                          | Description   |
|---------------------------------|---|
| <b>name</b> <i>name</i>         | Specifies the Segment Routing performance measurement liveness profile name.  |
| <b>sr-policy default</b>        | Specifies the Segment Routing performance measurement liveness policy default.  |
| <b>npu-offload</b>              | Enables performance measurement liveness hardware (NPU) offload feature in SR.  |
| <b>probe</b>                    | Enter the liveness detection probe sub mode.  |
| <b>flow-label</b>               | Indicates the flow labels associated with SRv6 header.  |
| <b>explicit   from</b>          | Specify explicit flow label values or enter a range of flow labels that you want to configure. You can configure flow labels in the 0 to 1048575 range.   |
| <b>tx-interval</b> <i>value</i> | Specify the transmission interval. The allowed range for <ul style="list-style-type: none"> <li>• NPU sessions is from 3300 to 15000000 micro seconds.</li> <li>• CPU sessions is from 30000 to 15000000 micro seconds.</li> </ul> <p>From Release 24.2.1 onwards, the allowed range for CPU sessions is from 15000 to 15000000 micro seconds.</p> <p><b>Note</b> The modified range is applicable to both the <b>liveness-profile sr-policy default</b> and <b>liveness-profile name</b> CLI commands.</p> |

**Command Default** No user created performance measurement liveness profile exists.

**Command Modes** Global configuration (config)

| Command History | Release        | Modification   |
|-----------------|----------------|--|
|                 | Release 24.2.1 | The modified range for CPU sessions <b>tx-interval</b> <i>value</i> is from 15000 to 15000000 micro seconds.   |
|                 | Release 7.11.1 | The <b>flow-label</b> keyword was introduced.  |
|                 | Release 7.10.1 | <b>npu-offload</b> was introduced.<br>Use <b>performance-measurement liveness-profile name</b> <i>liveness profile name</i> .  |
|                 | <b>Note</b>    | <ul style="list-style-type: none"> <li>• <b>performance-measurement liveness-profile name</b> <i>name</i> (named profile) and <b>performance-measurement liveness-profile sr-policy</b> <i>default</i> (default profile) are supported.</li> <li>• <b>performance-measurement liveness-profile sr-policy</b> <i>name</i> is deprecated.</li> </ul> |
|                 | Release 7.6.1  | This <b>performance-measurement liveness-profile sr-policy</b> was introduced.   |

## Usage Guidelines

The **performance-measurement** command is also available in SR-TE specific configuration.

### Example

This example shows how to create a unique Segment Routing performance measurement liveness profile:

```
Router(config)# performance-measurement liveness-profile name profile1
Router(config)# commit
```

This example shows how to configure a range of flow labels in the SRv6 header:

```
Router#configure
Router(config)#performance-measurement
Router(config-perf-meas)#liveness-profile name name1
Router(config-pm-ld-profile)# probe flow-label from 0 to 1000000 increment 10
Routerconfig-pm-ld-profile)#commit
```

This example shows how to explicitly configure flow labels in the SRv6 header:

```
Router#configure
Router(config)#performance-measurement
Router(config-perf-meas)#liveness-profile name name1
Router(config-pm-ld-profile)# probe flow-label explicit 100 200 300 400 500
Routerconfig-pm-ld-profile)#commit
```

# performance-measurement protocol twamp-light measurement delay

To configure the querier or responder nodes to accept packets from specific IP addresses on the network, use the **performance-measurement protocol twamp-light measurement delay** command in the global configuration mode. To remove the IP addresses, use the **no** form of the command.

```
performance-measurement protocol twamp-light measurement delay { querier allow
responder address { ipv4 | ipv6 } | responder allow querier address { ipv4 | ipv6 } |
unauthenticated { ipv4 | ipv6 | querier-dst-port | querier-src-port } }
```

| Syntax Description      |   |   |
|-------------------------|---|---|
| <b>querier</b>          | Enter the querier submode to configure the IP addresses on a querier node.  |   |
| <b>responder</b>        | Enter the responder submode to configure the IP address on a responder node.  |   |
| <b>allow responder</b>  | Specifies the allowed responder address on the querier node. The configuration is applicable to delay measurement sessions.   |   |
| <b>allow querier</b>    | Specifies the allowed querier addresses on the responder node. The configuration is applicable to delay measurement sessions. |   |
| <b>address</b>          | Specifies the querier or responder IP addresses that are configured.  |   |
| <b>{ ipv4   ipv6 }</b>  | Configure the allowed querier or responder ipv4 or ipv6 addresses.<br>You can specify the prefix for the IP addresses.        |   |
| <b>unauthenticated</b>  | Enter the unauthenticated submode to configure the IP address timestamp or the source and destination UDP ports.              |   |
| <b>ipv4   ipv6</b>      | Configure the timestamp for ipv4 or ipv6 addresses.   |   |
| <b>querier-dst-port</b> | Configure the UDP port to process queries. By default, the TWAMP reserved UDP destination port is 862.                        |   |
| <b>querier-src-port</b> | UDP port on Route Processor used as source port in queries.   |   |
| <b>Command Default</b>  | None.   |   |
| <b>Command Modes</b>    | Global Configuration  |   |
| <b>Command History</b>  | <b>Release</b>  | <b>Modification</b>   |
|                         | Release 7.11.1  | The <b>querier</b> and <b>responder</b> keywords were introduced. |
|                         | Release 7.0.1   | This command was introduced.                                      |

---

**Usage Guidelines**

None.

This example shows how to configure the IP address of a querier on a responder node for delay measurement.

```
Router#configure
Router(config)#performance-measurement
Router(config-perf-meas)#protocol twamp-light
Router(config-pm-protocol)#measurement delay
Router(config-pm-proto-meas)#responder
Router(config-pm-proto-responder)#allow-querier
Router(config-pm-allowed-querier)#address ipv4 10.10.10.1
Router(config-sr-te-color)#commit
```

## ping sr-mpls

To check the connectivity of segment routing control plane, use the **ping sr-mpls** command in XR EXEC mode.

```
ping sr-mpls { ipv4-address/mask | ipv6-address/mask [ fec-type { bgp | generic | igp {
ospf | isis } } ] | nil-fec | dataplane-only { labels { label1 [ , label2... ] ipv4-address/mask
| ipv6-address/mask | policy } } { output { interface interface-path-id } } | { nexthop
next-hop-ip-address } }
```

| Syntax Description |  |   |
|--------------------|--|---|
|                    | <i>ipv4-address/mask</i> or <i>ipv6-address/mask</i> | Address prefix of the target and number of bits in the target address network mask.   |
|                    | <b>fec-type</b>                                      | (Optional) Specifies FEC type to be used. Default FEC type is generic.<br><br><b>bgp</b><br>Use FEC type as BGP.<br><br><b>generic</b><br>Use FEC type as generic<br><br><b>igp</b><br>Use FEC type as OSPF or IS-IS. |
|                    | <b>labels</b> <i>label1, label2...</i>               | Specifies the label stack. Use commas to separate each label.   |
|                    | <b>dataplane-only</b>                                | Specifies data plane validation without running actual traffic over LSPs.   |
|                    | <b>output interface</b> <i>interface-path-id</i>     | Specifies the output interface where echo request packets are sent.   |
|                    | <b>nexthop</b> <i>next-hop-ip-address</i>            | Causes packets to go through the specified IPv4 or IPv6 next-hop address.   |

**Command Default**    **fec-type** : generic

**Command Modes**    XR EXEC mode

| Command History | Release        | Modification  |
|-----------------|----------------|---|
|                 | Release 24.2.1 | The <b>dataplane-only</b> keyword was introduced.<br>Support for IPv6 next-hop address was added. |
|                 | Release 6.3.1  | This command was introduced.  |



**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

**Task ID****Task Operations ID**

mpls-te read,  
write

**Example**

These examples show how to use segment routing ping to test the connectivity of segment routing control plane. In the first example, FEC type is not specified. You can also specify the FEC type as shown in the second example.

```
RP/0/RP0/CPU0:router# ping sr-mpls 10.1.1.2/32
```

```
Sending 5, 100-byte MPLS Echos to 10.1.1.2/32,
  timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/5 ms
```

```
RP/0/RP0/CPU0:router# ping sr-mpls 10.1.1.2/32 fec-type igp ospf
```

```
Sending 5, 100-byte MPLS Echos to 10.1.1.2/32,
  timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/1/2 ms
```

The following example shows how to use segment routing ping to validate SR-MPLS over IPv6-based LSPs:

```
Router#ping sr-mpls dataplane-only 2001:DB8::1/32
```

```
Tue Jan 16 15:05:19.120 EST
```

```
Sending 5, 100-byte MPLS Echos with Nil FEC to 2001:DB8::1/32,
  timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

!!!!

Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/8 ms

The following example shows how to use segment routing ping for SR-TE policies with IPv6-based LSPs:

```
Router#ping sr-mpls nil-fec policy name srte_c_40_ep_2001:DB8::1
Tue Feb  6 12:08:28.277 EST
```

```
Sending 5, 100-byte MPLS Echos with Nil FEC for SR-TE Policy srte_c_40_ep_2001:DB8::1,
timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

!!!!

Success rate is 100 percent (5/5), round-trip min/avg/max = 2/2/3 ms

The following example shows how to use segment routing ping with labels using IPv6 LSPs:

```
Router#ping sr-mpls labels 18004 lsp-end-point 2001:DB8::1
Tue Feb  6 12:11:05.349 EST
```

```
Sending 5, 100-byte MPLS Echos with NIL FEC with lsp end point 2001:DB8::1, SID Label(s)
[18004],
timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

!!!!

Success rate is 100 percent (5/5), round-trip min/avg/max = 2/2/4 ms

# prefix-sid

To specify or advertise prefix (node) segment ID (SID) on all routers, use the **prefix-sid** command in IS-IS interface address family or OSPF interface configuration mode. To stop advertising prefix SID, use the **no** form of this command.

```
prefix-sid [ strict-spf ] { index sid-index | absolute sid-value } [ n-flag-clear ] [ explicit-null ]
```

```
no prefix-sid [ strict-spf ] { index sid-index | absolute sid-value } [ n-flag-clear ] [ explicit-null ]
```

## Syntax Description

|                                  |  |
|----------------------------------|--|
| <b>strict-spf</b>                | Specifies that the prefix-SID should use the SPF path instead of the SR-TE policy.   |
| <b>index</b> <i>sid-index</i>    | Specifies the prefix SID based on the lower boundary of the SRGB + the index.  |
| <b>absolute</b> <i>sid-value</i> | Specifies the specific prefix SID value within the SRGB.   |
| <b>n-flag-clear</b>              | Specifies that the prefix-SID is not a node-SID by setting the N flag in the prefix-SID sub Type Length Value (TLV) to 0.  |
| <b>explicit-null</b>             | Adds an explicit-Null label by setting the E flag in the prefix-SID sub TLV to 1. Automatically disables penultimate-hop-popping (PHP) by setting the P flag (IS-IS) or NP flag (OSPF) to 1. |

## Command Default

Prefix SID is a node SID (N-flag is set to 1).  
Explicit-Null label is not set (E-flag is set to 0).

## Command Modes

IS-IS interface address-family configuration  
OSPF interface configuration

## Command History

| Release       | Modification                                       |
|---------------|--|
| Release 6.1.2 | This command was introduced.                       |
| Release 6.2.1 | The <b>strict-spf</b> keyword was added for IS-IS. |

## Usage Guidelines

Segment routing must be configured on the ISIS instance or on the OSPF process, area, or interface before configuring prefix SID value.

Strict-SPF SIDs are used to forward traffic strictly along the SPF path. Strict-SPF SIDs are not forwarded to SR-TE policies. IS-IS advertises the SR Algorithm sub Type Length Value (TLV) (in the SR Router Capability SubTLV) to include both algorithm 0 (SPF) and algorithm 1 (Strict-SPF). When the IS-IS area or level is Strict-SPF TE-capable, Strict-SPF SIDs are used to build the SR-TE Strict-SPF policies. Strict-SPF SIDs are also used to program the backup paths for prefixes, node SIDs, and adjacency SIDs.



**Note** The same SRGB is used for both regular SIDs and strict-SPF SIDs.

| Task ID | Task ID | Operations  |
|---------|---------|-------------|
|         | isis    | read, write |
|         | ospf    |             |

### Examples

This example shows how to configure a prefix SID.

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config)# router isis 100
RP/0/RSP0/CPU0:router(config-isis)# interface loopback0
RP/0/RSP0/CPU0:router(config-isis-if)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-if-af)# prefix-sid index 1001
```

This example shows how to configure an absolute prefix SID on an OSPF interface.

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config)# router ospf 1
RP/0/RSP0/CPU0:router(config-ospf)# router area 0
RP/0/RSP0/CPU0:router(config-ospf-ar)# interface loopback0
RP/0/RSP0/CPU0:router(config-ospf-ar-if)# prefix-sid absolute 16041
```

### Related Commands

| Command                                      | Description   |
|--|---|
| <a href="#">segment-routing global-block</a> | Configures the segment routing global block (SRGB). |

# prefix-unreachable

Use this command for UPA advertisements by enabling individual control parameters.

The new **prefix-unreachable** command under IS-IS address-family submode includes several command-options that control various parameters for UPAs originated by the router.

```
prefix-unreachable { adv-lifetime <value> | adv-metric <value> | adv-maximum <value> | rx-process-enable }
```

| Syntax Description | Keyword                   | Details   |
|--------------------|---------------------------|---|
|                    | <b>prefix-unreachable</b> | Lists the control options of UPA.   |
|                    | <b>adv-lifetime</b>       | <ul style="list-style-type: none"> <li>This command is optional.</li> <li>Amount of time the UPA will be advertised after the prefix becomes unreachable.<br/>Range of values is 30–65535 seconds.</li> <li>Default value is 180 seconds.</li> </ul>  |
|                    | <b>adv-metric</b>         | <ul style="list-style-type: none"> <li>This command is optional.</li> <li>Metric used when advertising UPA.<br/>Range of values is 4261412865–4294967294 (0xFE000001 to 0xFFFFFFF0).</li> <li>Default value is 4261412865 (0xFE000001).</li> </ul>  |
|                    | <b>adv-maximum</b>        | <ul style="list-style-type: none"> <li>This command is optional.</li> <li>UPAs that are leaked or propagated are not counted against this limit.</li> <li>Maximum number of UPAs that the router is allowed to generate to any of its attached areas or domains. UPAs that are leaked, propagate, or redistributed are not counted against this limit.<br/>Range of values is 1–65535.</li> <li>Default value is 32.</li> </ul> |
|                    | <b>rx-process-enable</b>  | <ul style="list-style-type: none"> <li>This command is optional.</li> <li>If enabled, the UPA received by the router is sent to RIB and is used to trigger the BGP PIC.</li> <li>It is disabled by default.</li> </ul>  |

## prefix-unreachable

**Command Default** None.

**Command Modes** IS-IS interface address-family configuration

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 7.8.1 | This command was introduced. |

| Task ID | Task ID | Operations  |
|---------|---------|-------------|
|         | IS-IS   | read, write |

### Examples

This example shows how to configure UPA.

```
Router(config)#router isis 1
Router(config-isis)#address-family ipv6 un
Router(config-isis-af)#prefix-unreachable
Router(config-isis-prefix-unreachable)#adv-lifetime 500
Router(config-isis-prefix-unreachable)#adv-metric 4261412866
Router(config-isis-prefix-unreachable)#adv-maximum 77
Router(config-isis-prefix-unreachable)#rx-process-enable
Router(config-isis-prefix-unreachable)#commit
```

# summary-prefix

Use the exiting **summary-prefix** command for UPA advertisement.

```
summary-prefix prefix/mask level 1 or 2 [ tag value ] [ adv-unreachable { unreachable-component-tag value partition-repair } ]
```

| Syntax Description | Keyword                                       | Details  |
|--------------------|---|--|
|                    | <b>level</b> <i>1 or 2</i>                    | Enter the border router values 1 or 2. To set the border router level for UPA.   |
|                    | <b>tag</b> <i>value</i>                       | Enter the tag value for which you want to enable the UPA.  |
|                    | <b>adv-unreachable</b>                        | The new keyword <b>adv-unreachable</b> controls the UPA advertisement for the components of the summary.<br><br>The new <b>adv-unreachable</b> keyword is optional and disabled by default.  |
|                    | <b>unreachable-component-tag</b> <i>value</i> | The <b>unreachable-component-tag</b> is used to limit UPAs to those components of the summary that are advertised with a specific tag value.<br><br>The <b>unreachable-component-tag</b> keyword is disabled by default and UPA is generated for all components of the summary if enabled by the <b>adv-unreachable</b> keyword. |
|                    | <b>partition-repair</b>                       | In case the area (domain) partition is detected, the summary is suppressed, and more specific prefixes are advertised.   |

**Command Default** None.

**Command Modes** IS-IS address-family configuration

| Command History | Release        | Modification  |
|-----------------|----------------|---|
|                 | Release 7.10.1 | The <b>partition-repair</b> keyword was introduced. |
|                 | Release 7.8.1  | This command was introduced.                        |

**Usage Guidelines** New commands are added under the exiting IS-IS address-family sub-mode **summary-prefix** command.

| Task ID | Task ID | Operations  |
|---------|---------|-------------|
|         | IS-IS   | read, write |

### Examples

This example shows how to configure Summary-Prefix for UPA.

```
Router(config)#router isis 1
Router(config)#router isis 1
Router(config-isis)#address-family ipv6 unicast
Router(config-isis-af)#router-id 2001:DB8:4::4
Router(config-isis-af)#summary-prefix 2001:DB8::/32 level 2 partition-repair
Router(config-isis-af)#summary-prefix 2001:DB9::/32 level 2 algorithm 128 partition-repair
```



# segment-routing global-block

To configure the segment routing global block (SRGB), use the **segment-routing global-block** command.

**segment-routing global-block** *starting\_value ending\_value*

| <b>Syntax Description</b> | <i>starting_value ending_value</i> Specifies the block of segment routing IDs that are allocated for the routers in the network. Ranges from 16000 to 1048574.                          |         |              |               |                              |
|---------------------------|---|---------|--------------|---------------|------------------------------|
| <b>Command Default</b>    | Default SRGB range is 16000 to 23999.   |         |              |               |                              |
| <b>Command Modes</b>      | Global Configuration mode   |         |              |               |                              |
| <b>Command History</b>    | <table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 6.1.2</td> <td>This command was introduced.</td> </tr> </tbody> </table> | Release | Modification | Release 6.1.2 | This command was introduced. |
| Release                   | Modification  |         |              |               |                              |
| Release 6.1.2             | This command was introduced.  |         |              |               |                              |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

To keep the segment routing configuration simple and to make it easier to troubleshoot segment routing issues, we recommend that you use the default SRGB range on each node in the domain. However, there are instances when you might need to define a different range:

- The nodes of another vendor support a label range that is different from the default SRGB, and you want to use the same SRGB on all nodes.
- The default range is too small.
- To specify separate SRGBs for IS-IS and OSPF protocols, as long as the ranges do not overlap.

Because the values assigned from the range have domain-wide significance, we recommend that all routers within the domain be configured with the same range of values.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | mpls-te | read,<br>write |

## Example

This example shows how to configure the SRGB range:

```
RP/0/RSP0/CPU0:router(config)# segment-routing global-block 17000 20000
```

**Related Commands**

| Command                    | Description                      |
|----------------------------|----------------------------------|
| <a href="#">prefix-sid</a> | Configures the segment ID (SID). |

# segment-routing local-block

To configure the segment routing local block (SRLB), use the **segment-routing local-block** command.

**segment-routing local-block** *starting\_value ending\_value*

|                           |   |
|---------------------------|---|
| <b>Syntax Description</b> | <i>starting_value ending_value</i> Specifies the block of labels that are reserved for manual allocation of adjacency segment IDs (Adj-SIDs). Ranges from 15000 to 1048574. |
|---------------------------|---|

|                        |                                       |
|------------------------|---------------------------------------|
| <b>Command Default</b> | Default SRLB range is 15000 to 15999. |
|------------------------|---------------------------------------|

|                      |                           |
|----------------------|---------------------------|
| <b>Command Modes</b> | Global Configuration mode |
|----------------------|---------------------------|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | Release 6.3.1  | This command was introduced. |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When you define a new SRLB range, there might be a label conflict (for example, if labels are already allocated, statically or dynamically, in the new SRLB range). In this case, the new SRLB range will be accepted, but not applied (pending). The previous SRLB range (active) will continue to be in use until one of the following occurs:

- Reload the router to release the currently allocated labels and allocate the new SRLB
- Use the **clear segment-routing local-block discrepancy all** command to clear the label conflicts

The SRLB size cannot be more than 262,143.

To keep the segment routing configuration simple and to make it easier to troubleshoot segment routing issues, we recommend that you use the default SRLB range on each node in the domain. However, there are instances when you might need to define a different range:

- The nodes of another vendor support a label range that is different from the default SRLB, and you want to use the same SRLB on all nodes.
- The default range is too small.

Because the values assigned from the range have domain-wide significance, we recommend that all routers within the domain be configured with the same range of values.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | mpls-te | read,<br>write |

This example shows how to configure the SRLB range:

```
RP/0/RSP0/CPU0:router(config)# segment-routing local-block 18000 19999
```

#### Related Commands

| Command   | Description                   |
|---|-------------------------------|
| <a href="#">clear segment-routing local-block discrepancy all, on page 13</a> | Clears SRLB label conflicts   |
| <a href="#">show segment-routing local-block inconsistencies, on page 130</a> | Displays SRLB label conflicts |

# segment-routing mapping-server

To configure the segment routing mapping server (SRMS), use the **segment-routing mapping-server** command.

```
segment-routing mapping-server prefix-sid-map address-family { ipv4 | ipv6 } ip_address/subnet_mask
SID_start_value range range
```

| Syntax Description | Parameter   | Description                                  |
|--------------------|---|--|
|                    | <b>address-family</b> { <b>ipv4</b>   <b>ipv6</b> } | Configures the address family for IS-IS.     |
|                    | <i>ip_address/subnet_mask</i>                       | Specifies the prefix and mask.               |
|                    | <i>SID_start_value</i>                              | Specifies the first prefix SID in the range. |
|                    | <b>range</b> <i>range</i>                           | Specifies the size of the range.             |

**Command Default** None

**Command Modes** Global Configuration mode

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.3.2 | This command was introduced. |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The position of the mapping server in the network is not important. However, since the mapping advertisements are distributed in IGP using the regular IGP advertisement mechanism, the mapping server needs an IGP adjacency to the network.

The role of the mapping server is crucial. For redundancy purposes, you should configure multiple mapping servers in the networks.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | mpls-te | read,<br>write |

## Example

This example shows how to configure the mapping server and add prefix-SID mapping entries in the active local mapping policy:

```
RP/0/RSP0/CPU0:router (config) # segment-routing mapping-server prefix-sid-map address-family
```

```
ipv4 10.1.1.1/32 17000 range 100
```

**Related Commands**

| Command  | Description   |
|--|---|
| <a href="#">segment-routing prefix-sid-map advertise-local</a>     | Enables the router to advertise the SRMS entries that are locally configured. |
| <a href="#">segment-routing prefix-sid-map receive disable</a>     | Disables mapping client functionality.  |
| <a href="#">show isis segment-routing prefix-sid-map</a>           | Displays the active and backup prefix-to-SID mappings for IS-IS.              |
| <a href="#">show ospf segment-routing prefix-sid-map</a>           | Displays the active and backup prefix-to-SID mappings for OSPF.               |
| <a href="#">show segment-routing mapping-server prefix-sid-map</a> | Displays the locally configured prefix-to-SID mappings.                       |

## segment-routing mpls

To enable segment routing for IPv4 addresses with MPLS data plane, use the **segment-routing mpls** command in IPv4 address family configuration mode. To disable segment routing, use the **no** form of this command.

### segment-routing mpls

| <b>Syntax Description</b> | <b>mpls</b> Enables segment routing for IPv4 addresses with MPLS data plane.  |         |              |               |                              |
|---------------------------|---|---------|--------------|---------------|------------------------------|
| <b>Command Default</b>    | No default behavior or values.  |         |              |               |                              |
| <b>Command Modes</b>      | IPv4 address family configuration<br>Router configuration<br>Area configuration   |         |              |               |                              |
| <b>Command History</b>    | <table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 6.1.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>   | Release | Modification | Release 6.1.2 | This command was introduced. |
| Release                   | Modification  |         |              |               |                              |
| Release 6.1.2             | This command was introduced.  |         |              |               |                              |
| <b>Usage Guidelines</b>   | To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. |         |              |               |                              |
| <b>Task ID</b>            | <table border="1"> <thead> <tr> <th>Task ID</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>mpls-te</td> <td>read,<br/>write</td> </tr> </tbody> </table>   | Task ID | Operation    | mpls-te       | read,<br>write               |
| Task ID                   | Operation   |         |              |               |                              |
| mpls-te                   | read,<br>write  |         |              |               |                              |

### Example

This example shows how to enable segment routing with MPLS data plane.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router isis 100
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-af)# segment-routing mpls
```

# segment-routing prefix-sid-map advertise-local

To enable the router to advertise the segment routing mapping server (SRMS) entries that are locally configured, use the **segment-routing prefix-sid-map advertise-local** command. In addition to advertising these local SRMS entries, these mapping entries are also used to calculate segment ID (SID).

## segment-routing prefix-sid-map advertise-local

|                           |   |
|---------------------------|---|
| <b>Syntax Description</b> | <b>advertise-local</b> Advertises the SRMS mapping entries that are locally configured. |
|---------------------------|---|

|                        |           |
|------------------------|-----------|
| <b>Command Default</b> | Disabled. |
|------------------------|-----------|

|                      |   |
|----------------------|---|
| <b>Command Modes</b> | IPv4 address family configuration<br>Router configuration |
|----------------------|---|

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | Release 6.3.2  | This command was introduced. |

|                         |   |
|-------------------------|---|
| <b>Usage Guidelines</b> | To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance. |
|-------------------------|---|

|                |                |                  |
|----------------|----------------|------------------|
| <b>Task ID</b> | <b>Task ID</b> | <b>Operation</b> |
|                | ospf           | read,<br>write   |
|                | isis           |                  |

### Example

This example shows how to enable the router to advertise the locally configured SRMS entries:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router ospf 1
RP/0/RSP0/CPU0:router(config-ospf)# segment-routing prefix-sid-map advertise-local
```

|                         |  |   |
|-------------------------|--|---|
| <b>Related Commands</b> | <b>Command</b>   | <b>Description</b>                                    |
|                         | <a href="#">segment-routing mapping-server, on page 93</a>     | Configures the segment routing mapping server (SRMS). |
|                         | <a href="#">segment-routing prefix-sid-map receive disable</a> | Disables mapping client functionality.                |



| Command  | Description  |
|--|--|
| <a href="#">show isis segment-routing prefix-sid-map</a>           | Displays the active and backup prefix-to-SID mappings for IS-IS. |
| <a href="#">show ospf segment-routing prefix-sid-map</a>           | Displays the active and backup prefix-to-SID mappings for OSPF.  |
| <a href="#">show segment-routing mapping-server prefix-sid-map</a> | Displays the locally configured prefix-to-SID mappings.          |

# segment-routing prefix-sid-map receive disable

To disable mapping client functionality, use the **segment-routing prefix-sid-map receive disable** command. To reenale client functionality, use the **segment-routing prefix-sid-map receive** command.

**segment-routing prefix-sid-map receive** [ **disable** ]

| Syntax Description |  |
|--------------------|--|
| <b>receive</b>     | Only remote SRMS mapping entries are used for SID calculation. |
| <b>disable</b>     | Disable remote SRMS mapping entries received by flooding.      |

**Command Default** Enabled.

**Command Modes** IPv4 address family configuration  
Router configuration

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.3.2 | This command was introduced. |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The mapping client functionality is enabled by default. When you disable client functionality, the SRMS active policy is calculated without remote SRMS entries.

You can use this command with the **segment-routing prefix-sid-map advertise-local** command simultaneously.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | ospf    | read,<br>write |
|         | isis    |                |

## Example

This example shows how to disable the mapping server client functionality:

```
RP/0/RSP0/CPU0:router(config)# router isis 1
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-af)# segment-routing prefix-sid-map receive disable
```

| Related Commands | Command  | Description   |
|------------------|--|---|
|                  | <a href="#">segment-routing mapping-server, on page 93</a>         | Configures the segment routing mapping server (SRMS).                         |
|                  | <a href="#">segment-routing prefix-sid-map advertise-local</a>     | Enables the router to advertise the SRMS entries that are locally configured. |
|                  | <a href="#">show isis segment-routing prefix-sid-map</a>           | Displays the active and backup prefix-to-SID mappings for IS-IS.              |
|                  | <a href="#">show ospf segment-routing prefix-sid-map</a>           | Displays the active and backup prefix-to-SID mappings for OSPF.               |
|                  | <a href="#">show segment-routing mapping-server prefix-sid-map</a> | Displays the locally configured prefix-to-SID mappings.                       |

## segment-routing traffic-eng explicit

To detect the liveness of the reverse path of the segment list and the configure the segment list, use the **segment-routing traffic-eng explicit** command in performance measurement configuration mode. To disable the reverse path, use the **no** form of the command.

```
segment-routing traffic-eng explicit { reverse-path segment-list name segment-list-name
| segment-list name segment-list-name reverse-path segment-list name segment-list-name }
```

|                           |  |  |
|---------------------------|--|--|
| <b>Syntax Description</b> | <b>reverse-path</b>                              | Specifies the return path on the endpoint for liveness detection.            |
|                           | <b>segment-listname</b> <i>segment-list-name</i> | Specifies the segment list on the endpoint for liveness detection and delay. |
| <b>Command Default</b>    | None   |  |
| <b>Command Modes</b>      | Performance measurement endpoint submode         |  |
| <b>Command History</b>    | <b>Release</b>                                   | <b>Modification</b>  |
|                           | Release 24.1.1                                   | This command was introduced.   |

### Usage Guidelines

The default reverse path configured under endpoint submode is only used for sessions with segment list. The endpoint session without a segment list does not support reverse path configuration and will not use this reverse path.

The **reverse-path** under the **performance-measurement endpoint** is used as the default reverse path if there are no reverse paths configured under a segment list.

Use the **reverse-path** under the **performance-measurement endpoint segment-routing traffic-eng explicit segment-list name fwd-path** to configure reverse path under a segment list.

The reverse type must be the same as the forward path. Using different types for forward and reverse paths is not supported. For example, uSID forward path and uSID reverse path; MPLS forward path and MPLS reverse path.

User-configured segment-list can also represent the reverse path (reflector to sender) when probe is configured in liveness detection mode. Up to 128 segment-lists can be configured under a probe. An additional PM session is created for each segment-list. Segment-lists are configured under **segment-routing traffic-eng segment-list** submode. See [SR-TE Policy with Explicit Path](#) for details about configuring segment lists.

The following example shows how to configure liveness of the reverse path of the segment list:

The following example shows how to configure liveness reverse path under segment list and under endpoint:

```
Router(config)#performance-measurement
Router(config-perf-meas)#endpoint ipv6 ff::2

/* Configure reverse path segment-list with forward segment-list*
Router(config-pm-ep)#segment-routing traffic-eng explicit segment-list name fwd-path
```

```
Router(config-pm-ep-sl)#reverse-path segment-list name rev-path
Router(config-pm-ep-sl)#exit

/* Configure reverse-path segment list on the endpoint*\
Router(config-pm-ep)# segment-routing traffic-eng explicit reverse-path segment-list name
rev-path-name
```

# show isis segment-routing prefix-sid-map

To verify the active and backup prefix-to-SID mappings for IS-IS, use the **show isis segment-routing prefix-sid-map** command.

**show isis segment-routing prefix-sid-map** [**active-policy** | **backup-policy**]

|                           |  |
|---------------------------|--|
| <b>Syntax Description</b> | <b>active-policy</b> (Optional) Specifies the active mapping policy. |
|                           | <b>backup-policy</b> (Optional) Specifies the backup mapping policy. |

**Command Default** None

**Command Modes** EXEC

| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|------------------------|----------------|------------------------------|
|                        | Release 6.3.2  | This command was introduced. |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

| <b>Task ID</b> | <b>Task ID</b> | <b>Operation</b> |
|----------------|----------------|------------------|
|                | isis           | read             |

## Example

The example shows how to verify the active mapping policy on IS-IS:

```
RP/0/0/CPU0:router# show isis segment-routing prefix-sid-map active-policy
```

```
IS-IS 1 active policy
Prefix          SID Index  Range  Flags
1.1.1.100/32    100       20
1.1.1.150/32    150       10
```

Number of mapping entries: 2

The example shows how to verify the backup mapping policy on IS-IS:

```
RP/0/0/CPU0:router# show isis segment-routing prefix-sid-map backup-policy
```

```
IS-IS 1 backup policy
Prefix          SID Index  Range  Flags
1.1.1.100/32    100       20
1.1.1.150/32    150       10
```

Number of mapping entries: 2

| Related Commands | Command  | Description   |
|------------------|--|---|
|                  | <a href="#">segment-routing mapping-server, on page 93</a>         | Configures the segment routing mapping server (SRMS).                         |
|                  | <a href="#">segment-routing prefix-sid-map advertise-local</a>     | Enables the router to advertise the SRMS entries that are locally configured. |
|                  | <a href="#">segment-routing prefix-sid-map receive disable</a>     | Disables mapping client functionality.  |
|                  | <a href="#">show ospf segment-routing prefix-sid-map</a>           | Displays the active and backup prefix-to-SID mappings for OSPF.               |
|                  | <a href="#">show segment-routing mapping-server prefix-sid-map</a> | Displays the locally configured prefix-to-SID mappings.                       |

# show mvpn vrf

To view BGP MVPN configuration information for a VRF, use the **show mvpn vrf** command in EXEC mode.

```
show mvpn vrf name { context [ detail ] | database segment-routing | pe [ address ] }
```

| Syntax Description              |  |   |
|---------------------------------|--|---|
| <b>vrf <i>name</i></b>          |  | Specifies the VRF for which BGP MVPN information is displayed.  |
| <b>context [ detail ]</b>       |  | Specifies that MVPN information including MDT, Route Distinguisher and Route Target details be displayed. |
| <b>database segment-routing</b> |  | Specifies that MDT database information be displayed.   |
| <b>pe [ <i>address</i> ]</b>    |  | Specifies the ingress or egress PE router for which MVPN information is to be displayed.                  |

**Command Default** None

**Command Modes** EXEC

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 7.3.1 | This command was introduced. |

## Example

### View Default MDT Configuration Information

This command displays SR multicast tree information, including the MDT details (of *Default* type, etc), and customer VRF information (route target, route distinguisher, etc).

```
Router# show mvpn vrf vpn1 context
```

```
MVPN context information for VRF vpn1 (0x9541cf0)
```

```
RD: 1:10 (Valid, IID 0x1), VPN-ID: 0:0
```

```
Import Route-targets : 2
```

```
  RT:192.168.0.4:0, BGP-AD
```

```
  RT:192.168.0.4:17, BGP-AD
```

```
BGP Auto-Discovery Enabled (I-PMSI added)
```

```
SR P2MP Core-tree data:
```

```
MDT Name: TRmdtvpn1, Handle: 0x4150, idb: 0x956fc30
```

```
MTU: 1376, MaxAggr: 255, SW_Int: 30, AN_Int: 60
```

```
RPF-ID: 3, C:0, O:1, D:0, CP:0
```

```
Static Type : - / -
```

```
Def MDT ID: 524289 (0x93993f0), added: 1, HLI: 0x80001, Cfg: 1/0
```

```
Part MDT ID: 0 (0x0), added: 0, HLI: 0x00000, Cfg: 0/0
```

```
Ctrl Trees : 0/0/0, Ctrl ID: 0 (0x0), Ctrl HLI: 0x00000
```

### View Partitioned MDT Configuration Information

This command displays SR multicast tree information, including the MDT details (of *Partitioned* type, etc), and customer VRF information (route target, route distinguisher, etc).



```

Router# show mvpn vrf vpn1 context

MVPN context information for VRF vpn1 (0x9541cf0)

RD: 1:10 (Valid, IID 0x1), VPN-ID: 0:0
Import Route-targets : 2
  RT:192.168.0.4:0, BGP-AD
  RT:192.168.0.4:17, BGP-AD
BGP Auto-Discovery Enabled (I-PMSI added) , MS-PMSI sent
SR P2MP Core-tree data:
  MDT Name: TRmdtvpn1, Handle: 0x4210, idb: 0x956fc30
  MTU: 1376, MaxAggr: 255, SW_Int: 30, AN_Int: 60
  RPF-ID: 1, C:0, O:1, D:0, CP:0
  Static Type : - / -
  Def MDT ID: 0 (0x0), added: 0, HLI: 0x00000, Cfg: 0/0
Part MDT ID: 524292 (0x9399318), added: 1, HLI: 0x80004, Cfg: 1/0
  Ctrl Trees : 0/0/0, Ctrl ID: 0 (0x0), Ctrl HLI: 0x00000

```

### View MDT Configuration Information On The Ingress PE Router

This command displays SR multicast tree information on the PE router that receives the multicast traffic on the SP network. The information includes PE router details, MDT details, Tree-SID details, and the specified customer VRF information.

```

Router# show mvpn vrf vpn1 pe

MVPN Provider Edge Router information

VRF : vpn1

PE Address : 192.168.0.3 (0x9570240)
  RD: 0:0:0 (null), RIB HLI 0, RPF-ID 13, Remote RPF-ID 0, State: 0, S-PMSI: 2
  PMPM_LABEL: 0, MS_PMSI_HLI: 0x00000, Bidir_PMSI_HLI: 0x00000, MLDP-added: [RD 0, ID 0,
Bidir ID 0, Remote Bidir ID 0], Counts (SHR/SRC/DM/DEF-MD): 0, 0, 0, 0, Bidir: GRE RP Count
0, MPLS RP Count ORSV-P-TE added: [Leg 0, Ctrl Leg 0, Part tail 0 Def Tail 0, IR added:
[Def Leg 0, Ctrl Leg 0, Part Leg 0, Part tail 0, Part IR Tail Label 0
Tree-SID Added: [Def/Part Leaf 1, Def Egress 0, Part Egress 0, Ctrl Leaf 0]
  bgp_i_pmsi: 1,0/0 , bgp_ms_pmsi/Leaf-ad: 1/1, bgp_bidir_pmsi: 0, remote_bgp_bidir_pmsi:
0, PMSIs: I 0x9570378, 0x0, MS 0x94e29d0, Bidir Local: 0x0, Remote: 0x0, BSR/Leaf-ad 0x0/0,
Autorp-disc/Leaf-ad 0x0/0, Autorp-ann/Leaf-ad 0x0/0
  IIDs: I/6: 0x1/0x0, B/R: 0x0/0x0, MS: 0x1, B/A/A: 0x0/0x0/0x0

  Bidir RPF-ID: 14, Remote Bidir RPF-ID: 0
  I-PMSI: Unknown/None (0x9570378)
  I-PMSI rem: (0x0)
MS-PMSI: Tree-SID [524290, 192.168.0.3] (0x94e29d0)
  Bidir-PMSI: (0x0)
  Remote Bidir-PMSI: (0x0)
  BSR-PMSI: (0x0)
  A-Disc-PMSI: (0x0)
  A-Ann-PMSI: (0x0)
  RIB Dependency List: 0x0
  Bidir RIB Dependency List: 0x0
  Sources: 0, RPs: 0, Bidir RPs: 0

```

### View MDT Configuration Information On The Egress PE Router

This command displays SR multicast tree information on the MVPN egress PE router that sends multicast traffic from the SP network towards multicast receivers. The information includes PE router, Tree-SID, MDT, and the specified customer VRF details.

```

Router# show mvpn vrf vpn1 pe

MVPN Provider Edge Router information

```

```

PE Address : 192.168.0.4 (0x9fa38f8)
RD: 1:10 (valid), RIB_HLI 0, RPF-ID 15, Remote RPF-ID 0, State: 1, S-PMSI: 2
PPMP_LABEL: 0, MS_PMSI_HLI: 0x00000, Bidir_PMSI_HLI: 0x00000, MLDLP-added: [RD 0, ID 0,
Bidir ID 0, Remote Bidir ID 0], Counts(SHR/SRC/DM/DEF-MD): 1, 1, 0, 0, Bidir: GRE RP Count
0, MPLS RP Count ORSVP-TE added: [Leg 0, Ctrl Leg 0, Part tail 0 Def Tail 0, IR added:
[Def Leg 0, Ctrl Leg 0, Part Leg 0, Part tail 0, Part IR Tail Label 0
Tree-SID Added: [Def/Part Leaf 0, Def Egress 0, Part Egress 1, Ctrl Leaf 0]
  bgp_i_pmsi: 1,0/0 , bgp_ms_pmsi/Leaf-ad: 1/0, bgp_bidir_pmsi: 0, remote_bgp_bidir_pmsi:
0, PMSIs: I 0x9f77388, 0x0, MS 0x9fa2f98, Bidir Local: 0x0, Remote: 0x0, BSR/Leaf-ad 0x0/0,
Autorp-disc/Leaf-ad 0x0/0, Autorp-ann/Leaf-ad 0x0/0
IIDs: I/6: 0x1/0x0, B/R: 0x0/0x0, MS: 0x1, B/A/A: 0x0/0x0/0x0

Bidir RPF-ID: 16, Remote Bidir RPF-ID: 0
I-PMSI:   Unknown/None (0x9f77388)
I-PMSI rem:   (0x0)
MS-PMSI:   Tree-SID [524292, 192.168.0.4] (0x9fa2f98)
Bidir-PMSI: (0x0)
Remote Bidir-PMSI: (0x0)
BSR-PMSI: (0x0)
A-Disc-PMSI: (0x0)
A-Ann-PMSI: (0x0)
RIB Dependency List: 0x9f81370
Bidir RIB Dependency List: 0x0
Sources: 1, RPs: 1, Bidir RPs: 0

```

### View Default or Partitioned MDT Database

```
Router# show mvpn vrf vpn1 database segment-routing
```

| Core Type    | Core Source | Tree Core Information | State | On-demand Color |
|--------------|-------------|-----------------------|-------|-----------------|
| Default      | 0.0.0.0     | 0 (0x00000)           | Down  | 10              |
| Part         | 192.168.0.4 | 524292 (0x80004)      | Up    | 10              |
| Leaf AD Leg: | 192.168.0.3 |                       |       |                 |
| Control      | 192.168.0.4 | 0 (0x00000)           | Down  | 10              |

# show mrib nsf private

To display the state of nonstop forwarding (NSF) operation in the Multicast Routing Information Base (MRIB), use the **show mrib nsf private** command in the appropriate mode.

**show mrib nsf private**

|                           |   |
|---------------------------|---|
| <b>Syntax Description</b> | <b>show mrib nsf private</b> Displays the state of NSF operation in the MRIB. |
|---------------------------|---|

|                        |      |
|------------------------|------|
| <b>Command Default</b> | None |
|------------------------|------|

|                      |              |
|----------------------|--------------|
| <b>Command Modes</b> | XR EXEC mode |
|----------------------|--------------|

*Table 3: Release History*

| Release        | Modification               |
|----------------|----------------------------|
| Release 7.10.1 | This command was modified. |

## Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show mrib nsf** command displays the current multicast NSF state for the MRIB. The state may be normal or activated for NSF. The activated state indicates that recovery is in progress due to a failure in MRIB or Protocol Independent Multicast (PIM). The total NSF timeout and time remaining are displayed until NSF expiration.

*Table 4: Task ID*

| Release   | Modification |
|-----------|--------------|
| multicast | read         |

## Example

The example shows how to verify the Non Stop Forwarding:

```
Router#show mrib nsf private
Mon Jul 31 13:27:05.056 UTC
IP MRIB Non-Stop Forwarding Status:
Multicast routing state: Normal
NSF Lifetime:          00:03:00
Respawn Count: 6
Last NSF On triggered: Tue Jul 25 13:20:49 2023, 6d00h
Last NSF Off triggered: Tue Jul 25 13:22:49 2023, 6d00h
Last NSF ICD Notification sent: Tue Jul 25 13:22:49 2023, 6d00h
Last Remote NSF On triggered: Tue Jul 25 13:10:18 2023, 6d00h
Last Remote NSF Off triggered: Tue Jul 25 13:10:27 2023, 6d00h
Last Label TE NSF On triggered: Tue Jul 25 13:10:18 2023, 6d00h
Last Label TE NSF Off triggered: Tue Jul 25 13:10:27 2023, 6d00h
```

```
show mrib nsf private
```

```
Last Label mLDP NSF On triggered: Tue Jul 25 13:10:18 2023, 6d00h
Last Label mLDP NSF Off triggered: Tue Jul 25 13:10:27 2023, 6d00h
Last Label PIM NSF On triggered: Tue Jul 25 13:20:49 2023, 6d00h
Last Label PIM NSF Off triggered: Tue Jul 25 13:22:49 2023, 6d00h
Last Label PIM6 NSF On triggered: Tue Jul 25 13:31:22 2023, 5d23h
Last Label PIM6 NSF Off triggered: Tue Jul 25 13:33:22 2023, 5d23h
Last Label XTC NSF On triggered: Tue Jul 25 13:41:51 2023, 5d23h
Last Label XTC NSF Off triggered: Tue Jul 25 13:41:52 2023, 5d23h
```

```
IP NSF :- Active: N, Assume N
MRIB connect timer: Inactive
NSF statistics:
  Enabled Cnt - 4, Disabled Cnt - 4
  Last Enabled: 6d00h, Last Disabled: 6d00h
Multicast COFO routing state: Normal
Current LMRIB clients: LDP RSVP_TE PIM PIM6 XTC
LMRIB NSF clients: LDP RSVP_TE PIM PIM6 XTC
Converged LMRIB clients: LDP RSVP_TE PIM PIM6 XTC
RP/0/RSP0/CPU0:tb8-R2#
```

# show ospf routes flex-algo

To display the OSPF routing table for flexible algorithm, use the **show ospf routes flex-algo** command in the EXEC mode.

```
show ospf routes flex-algo [number] [ IP prefix / prefix_len | route-type { external | inter
| intra } ] [backup-path] [detail]
```

| Syntax Description          |  |  |
|-----------------------------|--|--|
| <b>number</b>               | Specifies the flexible algorithm number. The range is from 128 to 255. |  |
| <b>IP prefix/prefix_len</b> | Specifies IP address along with the subnet mask.                       |  |
| <b>backup-path</b>          | Displays the backup-path information of the OSPF routes.               |  |
| <b>detail</b>               | Displays the detailed information of the OSPF routes.                  |  |
| <b>route-typeexternal</b>   | Displays OSPF external routes.   |  |
| <b>route-typeinter</b>      | Display OSPF inter area routes.  |  |
| <b>route-typeintra</b>      | Displays OSPF intra area routes.                                       |  |

**Command Default** None

**Command Modes** EXEC mode

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 7.5.1 | This command was introduced. |

**Usage Guidelines** Use the **show ospf routes flex-algo** command to display the OSPF private routing table for flexible algorithm (which contains only flexible algorithm routes calculated by OSPF). If there is something wrong with a route in the MPLS forwarding table and RIB, then it is useful to check the OSPF copy of the route to determine if it matches the RIB and MPLS forwarding entries. If it does not match, there is a synchronization problem between OSPF and the MPLS. If the routes match and the route is incorrect, OSPF has made an error in its routing calculation.

## Example

This following show output displays the external route type configured:

```
Router#show ospf routes flex-algo 240 route-type external detail
Route Table of ospf-1 with router ID 192.168.0.2 (VRF default)

Algorithm 240

Route entry for 192.168.4.3/32, Metric 220, SID 536, Label 16536
Priority : Medium

Route type : Extern Type 1
```

## show ospf routes flex-algo

```

Last updated : Apr 25 14:30:12.718
Flags: Inuse

Prefix Contrib Algo 240 SID 536
From 192.168.0.4 Route-type 5
Total Metric : 220 Base metric 20 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2
Out Label : 16536
Weight : 0
Area : 0

Path: 10.1.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3
Out Label : 16536
Weight : 0
Area : 0

Path: 10.2.1.5, from 192.168.0.4, via GigabitEthernet0/2/0/4
Out Label : 16536
Weight : 0
Area : 0

Route entry for 192.168.4.5/32, Metric 120, SID 556, Label 16556
Priority : Medium

Route type : Extern Type 1
Last updated : Apr 25 14:30:12.724
Flags: Inuse

Prefix Contrib Algo 240 SID 556
From 192.168.0.3 Route-type 5
Total Metric : 120 Base metric 1 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2
Out Label : 16556
Weight : 0
Area : 0

Path: 10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3
Out Label : 16556
Weight : 0
Area : 0

```

The following show output displays label information for flexible algorithm and its corresponding metric as added in RIB:

```

RP/0/RP0/CPU0:ios# show route 192.168.0.2/32 detail
Wed Apr 6 16:24:46.021 IST

Routing entry for 192.168.0.2/32
Known via "ospf 1", distance 110, metric 2, labeled SR, type intra area
Installed Apr 6 15:51:57.973 for 00:32:48
Routing Descriptor Blocks
 10.10.10.2, from 192.168.0.2, via GigabitEthernet0/2/0/0, Protected
Route metric is 2
Label: 0x3 (3)
Tunnel ID: None
Binding Label: None
Extended communities count: 0
Path id:1 Path ref count:0

```

```

    NHID:0x1(Ref:1)
    Backup path id:65
    OSPF area: 1
10.11.11.2, from 192.168.0.2, via GigabitEthernet0/2/0/1, Backup (Local-LFA)
    Route metric is 6
    Label: 0x3 (3)
    Tunnel ID: None
    Binding Label: None
    Extended communities count: 0
    Path id:65          Path ref count:1
    NHID:0x2(Ref:1)
    OSPF area:
Route version is 0x12 (18)
Local Label: 0x3ee6 (16102)
Local Label Algo Set (ID, Label, Metric): (1, 16202, 0), (128, 17282, 2)
IP Precedence: Not Set
QoS Group ID: Not Set
Flow-tag: Not Set
Fwd-class: Not Set
Route Priority: RIB_PRIORITY_NON_RECURSIVE_MEDIUM (7) SVD Type RIB_SVD_TYPE_LOCAL
Download Priority 1, Download Version 38
No advertising protos.

```

The following example shows the backup path for each path:

```
Router#show ospf routes flex-algo 240 route-type external backup-path
```

```
Route Table of ospf-1 with router ID 192.168.0.2 (VRF default)
```

```

Algorithm 240

192.168.4.3/32, Metric 220, SID 536, Label 16536
  10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2
    Backup path:
      10.23.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3,
      Out Label: 16536
      Attributes: Metric: 220, Primary , Downstream, Interface Disjoint, SRLG
Disjoint
  10.1.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3
    Backup path:
      10.23.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2,
      Out Label: 16536
      Attributes: Metric: 220, Primary , Downstream, Interface Disjoint, SRLG
Disjoint
  10.1.1.5, from 192.168.0.4, via GigabitEthernet0/2/0/4
    Backup path:
      10.23.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2,
      Out Label: 16536
      Attributes: Metric: 220, Primary , Downstream, Node Protect, Interface Disjoint,
SRLG Disjoint
192.168.4.5/32, Metric 120, SID 556, Label 16556
  10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2
    Backup path:
      10.23.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3,
      Out Label: 16556
      Attributes: Metric: 120, Primary , Downstream, Interface Disjoint, SRLG
Disjoint
  10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3
    Backup path:
      10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2,
      Out Label: 16556
      Attributes: Metric: 120, Primary , Downstream, Interface Disjoint, SRLG
Disjoint

```

The following example shows details of the route, but not the backup paths:

```
Router#show ospf routes flex-algo 240 route-type external detail

Route Table of ospf-1 with router ID 192.168.0.2 (VRF default)

Algorithm 240

Route entry for 192.168.4.3/32, Metric 220, SID 536, Label 16536
Priority : Medium

Route type : Extern Type 1
Last updated : Apr 25 14:30:12.718
Flags: Inuse

Prefix Contrib Algo 240 SID 536
From 192.168.0.4 Route-type 5
Total Metric : 220 Base metric 20 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2
Out Label : 16536
Weight : 0
Area : 0

Path: 10.1.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3
Out Label : 16536
Weight : 0
Area : 0

Path: 10.2.1.5, from 192.168.0.4, via GigabitEthernet0/2/0/4
Out Label : 16536
Weight : 0
Area : 0

Route entry for 192.168.4.5/32, Metric 120, SID 556, Label 16556
Priority : Medium

Route type : Extern Type 1
Last updated : Apr 25 14:30:12.724
Flags: Inuse

Prefix Contrib Algo 240 SID 556
From 192.168.0.3 Route-type 5
Total Metric : 120 Base metric 1 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2
Out Label : 16556
Weight : 0
Area : 0

Path: 10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3
Out Label : 16556
Weight : 0
Area : 0
```

The following example shows details of the route and backup paths:

```
Router#show ospf routes flex-algo 240 route-type external backup-path detail
```



Route Table of ospf-1 with router ID 192.168.0.2 (VRF default)

Algorithm 240

Route entry for 192.168.4.3/32, Metric 220, SID 536, Label 16536  
Priority : Medium

Route type : Extern Type 1  
Last updated : Apr 25 14:30:12.718  
Flags: Inuse

Prefix Contrib Algo 240 SID 536  
From 192.168.0.4 Route-type 5  
Total Metric : 220 Base metric 20 FAPM 20  
Contrib Flags : Inuse, Reachable  
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2  
Out Label : 16536  
Weight : 0  
Area : 0

Backup path:

10.1.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3,  
Out Label: 16536

Attributes: Metric: 220, Primary , Downstream, Interface Disjoint, SRLG

Disjoint

Path: 23.23.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3  
Out Label : 16536  
Weight : 0  
Area : 0

Backup path:

10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2,  
Out Label: 16536

Attributes: Metric: 220, Primary , Downstream, Interface Disjoint, SRLG

Disjoint

Path: 25.25.1.5, from 192.168.0.4, via GigabitEthernet0/2/0/4  
Out Label : 16536  
Weight : 0  
Area : 0

Backup path:

10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2,  
Out Label: 16536

Attributes: Metric: 220, Primary , Downstream, Node Protect, Interface Disjoint,  
SRLG Disjoint

Route entry for 192.168.4.5/32, Metric 120, SID 556, Label 16556  
Priority : Medium

Route type : Extern Type 1  
Last updated : Apr 25 14:30:12.724  
Flags: Inuse

Prefix Contrib Algo 240 SID 556  
From 192.168.0.3 Route-type 5  
Total Metric : 120 Base metric 1 FAPM 20  
Contrib Flags : Inuse, Reachable  
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2

```
show ospf routes flex-algo
```

```
Out Label : 16556
Weight    : 0
Area      : 0

Backup path:
  10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3,
  Out Label: 16556
  Attributes: Metric: 120, Primary , Downstream, Interface Disjoint, SRLG
Disjoint

Path: 10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3
Out Label : 16556
Weight    : 0
Area      : 0

Backup path:
  10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2,
  Out Label: 16556
  Attributes: Metric: 120, Primary , Downstream, Interface Disjoint, SRLG
Disjoint
```

# show ospf segment-routing prefix-sid-map

To verify the active and backup prefix-to-SID mappings for OSPF, use the **show ospf segment-routing prefix-sid-map** command.

```
show ospf segment-routing prefix-sid-map [active-policy | backup-policy]
```

| <b>Syntax Description</b> | <b>active-policy</b> (Optional) Specifies the active mapping policy.  |         |              |               |                              |
|---------------------------|---|---------|--------------|---------------|------------------------------|
|                           | <b>backup-policy</b> (Optional) Specifies the backup mapping policy.  |         |              |               |                              |
| <b>Command Default</b>    | None  |         |              |               |                              |
| <b>Command Modes</b>      | EXEC  |         |              |               |                              |
| <b>Command History</b>    | <table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 6.3.2</td> <td>This command was introduced.</td> </tr> </tbody> </table> | Release | Modification | Release 6.3.2 | This command was introduced. |
| Release                   | Modification  |         |              |               |                              |
| Release 6.3.2             | This command was introduced.  |         |              |               |                              |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

| Task ID | Task ID | Operation |
|---------|---------|-----------|
|         | ospf    | read      |

## Example

The example shows how to verify the active mapping policy on OSPF:

```
RP/0/0/CPU0:router# show ospf segment-routing prefix-sid-map active-policy

      SRMS active policy for Process ID 1

Prefix          SID Index   Range      Flags
1.1.1.100/32    100         20
1.1.1.150/32    150         10

Number of mapping entries: 2
```

The example shows how to verify the backup mapping policy on OSPF:

```
RP/0/0/CPU0:router# show ospf segment-routing prefix-sid-map backup-policy

      SRMS backup policy for Process ID 1

Prefix          SID Index   Range      Flags
```

**show ospf segment-routing prefix-sid-map**

```

1.1.1.100/32      100      20
1.1.1.150/32     150      10

```

Number of mapping entries: 2

**Related Commands**

| Command  | Description   |
|--|---|
| <a href="#">segment-routing mapping-server, on page 93</a>         | Configures the segment routing mapping server (SRMS).                         |
| <a href="#">segment-routing prefix-sid-map advertise-local</a>     | Enables the router to advertise the SRMS entries that are locally configured. |
| <a href="#">segment-routing prefix-sid-map receive disable</a>     | Disables mapping client functionality.  |
| <a href="#">show isis segment-routing prefix-sid-map</a>           | Displays the active and backup prefix-to-SID mappings for IS-IS.              |
| <a href="#">show segment-routing mapping-server prefix-sid-map</a> | Displays the locally configured prefix-to-SID mappings.                       |

## show pce lsp p2mp

To view IP VPN multicast traffic details (such as LSP details) on the SR-PCE server, use the **show pce lsp p2mp** command in EXEC mode.

```
show pce lsp p2mp [ root ipv4 address ] [ tree-ID ]
```

| <b>Syntax Description</b> | <b>root ipv4 address</b> (Optional) The multicast tree's root router IP address. Information will be displayed for the specified router.   |         |              |               |                              |
|---------------------------|--|---------|--------------|---------------|------------------------------|
|                           | <b>tree-ID</b> (Optional) Multicast tree SID used (by multicast routers and the SR-PCE server) for transporting the IP VPN multicast traffic.<br>Information will be displayed for the specified Tree-SID. |         |              |               |                              |
| <b>Command Default</b>    | None   |         |              |               |                              |
| <b>Command Modes</b>      | EXEC   |         |              |               |                              |
| <b>Command History</b>    | <table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.3.1</td> <td>This command was introduced.</td> </tr> </tbody> </table>                    | Release | Modification | Release 7.3.1 | This command was introduced. |
| Release                   | Modification   |         |              |               |                              |
| Release 7.3.1             | This command was introduced.   |         |              |               |                              |

### Example

The following example shows how to view IP VPN multicast traffic details on the SR-PCE server. The routes are created and managed by the SR-PCE server.

#### View SR-PCE Multicast Tree Configuration Information

```
Router# show pce lsp p2mp

Tree: sr_p2mp_root_192.168.0.1_tree_id_524290
Label: 18000 Operational: up Admin: up
Metric Type: TE
Transition count: 3
Uptime: 00:00:03 (since Fri Jan 24 14:57:51 PST 2020)
Source: 192.168.0.1
Destinations: 192.168.0.4
Nodes:
Node[0]: 192.168.0.2 (rtrM)
Role: Transit
Hops:
Incoming: 18000 CC-ID: 4
Outgoing: 18000 CC-ID: 4 (17.17.17.4) [rtrR]
Node[1]: 192.168.0.1 (rtrL1)
Role: Ingress
Hops:
Incoming: 18000 CC-ID: 5
Outgoing: 18000 CC-ID: 5 (12.12.12.2) [rtrM]
Node[2]: 192.168.0.4 (rtrR)
Role: Egress
Hops:
Incoming: 18000 CC-ID: 6
```

For dynamic SR multicast trees created for MVPN, the **show** command has filters to view root multicast router and Tree-ID information. When the root router is specified, all multicast trees from that root are displayed. When root and Tree-ID are specified, only the specified tree information is displayed.

```
Router# show pce lsp p2mp root ipv4 1.1.1.1 524289

Tree: sr_p2mp_root_1.1.1.1_tree_id_524289, Root: 1.1.1.1 ID: 524289
Label: 20000 Operational: up Admin: up
PCC: 1.1.1.1

Local LFA FRR: Disabled
Metric Type: TE
Transition count: 11
Uptime: 00:03:37 (since Mon May 11 12:53:33 PDT 2020)
Destinations: 1.1.1.3, 1.1.1.4, 1.1.1.5
Nodes:
Node[0]: 1.1.1.1 (root1)
  Role: Ingress
  Hops:
    Incoming: 20000 CC-ID: 26
    Outgoing: 20000 CC-ID: 26 (192.168.114.4) [mid-4]
    Outgoing: 20000 CC-ID: 26 (192.168.112.2) [mid-2]
Node[1]: 1.1.1.4 (mid-4)
  Role: Egress
  Hops:
    Incoming: 20000 CC-ID: 27
Node[2]: 1.1.1.2 (mid-2)
  Role: Transit
  Hops:
    Incoming: 20000 CC-ID: 28
    Outgoing: 20000 CC-ID: 28 (192.168.123.3) [leaf-3]
    Outgoing: 20000 CC-ID: 28 (192.168.125.5) [leaf-5]
Node[3]: 1.1.1.3 (leaf-3)
  Role: Egress
  Hops:
    Incoming: 20000 CC-ID: 29
Node[4]: 1.1.1.5 (leaf-5)
  Role: Egress
  Hops:
    Incoming: 20000 CC-ID: 30
```

The following output shows that LFA FRR is enabled on the hop from rtrR to rtrM. Unlike typical multicast replication where the address displayed is the remote address on the link to a downstream router, the IP address 192.168.0.3 (displayed with an exclamation mark) is the router-ID of the downstream router rtrM. The output also displays the LFA FRR state for the multicast tree.

```
Router# show pce lsp p2mp

Tree: sr_p2mp_root_192.168.0.4_tree_id_524290
Label: 18000 Operational: up Admin: up
LFA FRR: Enabled
Metric Type: TE
Transition count: 1
Uptime: 3d19h (since Thu Feb 13 13:43:40 PST 2020)
Source: 192.168.0.4
Destinations: 192.168.0.1, 192.168.0.2
Nodes:
Node[0]: 192.168.0.3 (rtrM)
  Role: Transit
  Hops:
    Incoming: 18000 CC-ID: 1
    Outgoing: 18000 CC-ID: 1 (12.12.12.1) [rtrL1]
```

```
    Outgoing: 18000 CC-ID: 1 (15.15.15.2) [rtrL2]
Node[1]: 192.168.0.4 (rtrR)
Role: Ingress
Hops:
    Incoming: 18000 CC-ID: 2
    Outgoing: 18000 CC-ID: 2 (192.168.0.3!) [rtrM]
Node[2]: 192.168.0.1 (rtrL1)
Role: Egress
Hops:
    Incoming: 18000 CC-ID: 3
Node[3]: 192.168.0.2 (rtrL2)
Role: Egress
Hops:
    Incoming: 18000 CC-ID: 4
```

# show performance-measurement history

To display the history for delay-measurement, use the **performance-measurement history** show command in XR EXEC mode.

```
show performance-measurement history { probe-computation | advertisement | aggregation } {
interfaces | endpoint | rsvp-te | sr-policy }
```

## Syntax Description

|                          |   |
|--------------------------|---|
| <b>probe-computation</b> | (Optional) Displays information for the delay metric computation result within each probe interval.             |
| <b>advertisement</b>     | (Optional) Displays information for the delay metric computation result within each advertisement interval.     |
| <b>aggregation</b>       | (Optional) Displays information for the delay metric computation result within each aggregation interval.       |
| <b>interface</b>         | (Optional) Displays information on the specified interface.   |
| <b>endpoint</b>          | (Optional) Displays information on the specified endpoint.  |
| <b>rsvp-te</b>           | (Optional) Displays information on the specified Resource Reservation Protocol - Traffic Engineering (RSVP-TE). |
| <b>sr-policy</b>         | (Optional) Displays information on the specified sr-policy.   |

## Command Default

No default

## Command Modes

XR EXEC

## Command History

| Release        | Modification  |
|----------------|---|
| Release 24.1.1 | This command was updated with synthetic and anomaly loss information. |
| Release 7.3.1  | This command was introduced.  |

## Task ID

| Task ID                 | Operation  |
|-------------------------|------------|
| performance-measurement | write/read |

```
Router# show performance-measurement history probe-computation interfaces
Interface Name: GigabitEthernet0/2/0/0 (ifh: 0x1000020)
Delay-Measurement history (uSec):
  Probe Start Timestamp      Pkt(TX/RX)   Average      Min      Max
  Aug 01 2023 08:04:15.230   10/10        704         651     779
```

```
Router# show performance-measurement history probe-computation endpoint
Endpoint name: IPv4-192.168.0.4-vrf-default
...
```



```

Segment-List          : None
Delay-Measurement history (uSec):
  Probe Start Timestamp   Pkt(TX/RX)   Average   Min   Max
  Aug 01 2023 08:26:48.823 10/10      3399    2962 3808

```

**Router# show performance-measurement history aggregation rsvp-te**

...

```

Delay-Measurement history (uSec):
  Aggregation Timestamp   Pkt(TX/RX)   Average   Min   Max
  Aug 01 2023 08:37:23.702 40/40      3372    3172 4109

```

**Router# show performance-measurement history advertisement sr-policy**

...

```

Delay-Measurement history (uSec):
  Advertisement Timestamp   Pkt(TX/RX)   Average   Min   Max   Reason
  Aug 01 2023 10:05:14.072 24/24      3408    3408 3408  ACCEL-MAX

```

**Table 5: This table gives show performance-measurement history field descriptions:**

| Field   | Description   |
|---------|---|
| TX      | Number of packets sent.                                   |
| RX      | Number of packets received.                               |
| Average | Average delay of all the delay measures within one probe. |
| Max     | Maximum delay of all the delay measures within one probe. |
| Min     | Minimum delay of all the delay measures within one probe. |

|        |   |
|--------|---|
| Reason | <p>Provides the reason for the delay in packets:"</p> <ul style="list-style-type: none"> <li>• NONE : No advertisements occurred</li> <li>• PER-AVG : Periodic timer, average delay threshold crossed</li> <li>• PER-MIN : Periodic timer, min delay threshold crossed</li> <li>• PER-MAX : Periodic timer, max delay threshold crossed</li> <li>• ACCEL-AVG : Accelerated threshold crossed, average delay threshold crossed</li> <li>• ACCEL-MIN : Accelerated threshold crossed, min delay threshold crossed</li> <li>• ACCEL-MAX : Accelerated threshold crossed, max delay threshold crossed</li> <li>• ACCEL-UP-AVG : Accelerated threshold crossed, average delay upper-bound crossed</li> <li>• ACCEL-UP-MIN : Accelerated threshold crossed, min delay upper-bound crossed</li> <li>• ACCEL-UP-MAX : Accelerated threshold crossed, max delay upper-bound crossed</li> <li>• ANOM-MIN-DYN : Min delay A flag toggled and dynamic delay is in effect</li> <li>• ANOM-MIN-STA : Min delay A flag toggled and static delay is in effect</li> <li>• FIRST : First advertisement</li> <li>• NEW-SESSION : New child session</li> <li>• ENABLE : Advertisement enabled</li> <li>• DISABLE : Advertisement disabled</li> <li>• DELETE : Session deleted</li> <li>• EXEC-CLEAR : Cleared through exec command</li> <li>• ADV-CFG : Advertise delay config</li> <li>• ADV-UNCFG : Advertise delay unconfig</li> <li>• ERROR : Control code error</li> <li>• LINK-DOWN : Link state changed to down</li> <li>• SESSION-ERROR : Performance measurement session error</li> <li>• DYN-DM : Dynamic delay advertisement is in effect</li> <li>• PT-CFG : Path tracing config</li> <li>• PT-UNCFG : Path tracing unconfig</li> <li>• PT-INTF_READY : Path tracing interface ready</li> <li>• PKT-LOSS : Packet loss detected</li> <li>• ANOM-PKT-LOSS : PM session anomaly due to packet loss</li> <li>• N/A : Invalid advertisement reason</li> </ul> |
|--------|---|

# show pim vrf

To view SR multicast tree information for *data* MDTs, including cache, router-local, and remote MDT information, use the **show pim vrf** command in EXEC mode.

```
show pim vrf name mdt sr-p2mp { local tree-id value | remote | cache [ core-src-ip-add [
cust-src-ip-add cust-grp-ip-add ] ] }
```

| Syntax Description   |  |   |
|--|--|---|
| <b>vrf name</b>  |  | VRF for which information is to be displayed.   |
| <b>mdt sr-p2mp</b>   |  | Specifies that the multicast traffic is transported using SR multicast. The MDT-specific information that is to be displayed, has to be provided from the subsequent choices. Based on the chosen option, information is displayed. |
| <b>local tree-id value</b>                                       |  | Specifies a locally assigned Tree-SID of the <i>data</i> MDT core tree.   |
| <b>remote</b>  |  | Specifies a Tree-SID of the <i>data</i> MDT tree that is learnt from remote PE routers.   |
| <b>cache</b> [core-src-ip-add [cust-src-ip-add cust-grp-ip-add]] |  | Specifies data MDT cache information.   |

**Command Default** None

**Command Modes** EXEC

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 7.3.1 | This command was introduced. |

## Example

You can view SR multicast tree information for *data* MDTs, including cache, router-local, and remote MDT information, with these commands.

### View Data MDT Cache Information

```
Router# show pim vrf vpn1 mdt cache
```

```
Core Source          Cust (Source, Group)          Core Data          Expires
192.168.0.3          (26.3.233.1, 232.0.0.1)      [tree-id 524292]  never
192.168.0.4          (27.3.233.6, 232.0.0.1)      [tree-id 524290]  never
  Leaf AD: 192.168.0.3
```

### View Local MDT information

```
Router# show pim vrf vpn1 mdt sr-p2mp local
```

```
Tree Identifier      MDT Source          Cache DIP Local VRF Routes  Ondemand
[tree-id 524290 (0x80002)] 192.168.0.4      1    N    Y    1    10
  Tree-SID Leaf: 192.168.0.3
```

**Remote MDT information**

```
Router # show pim vrf vpn1 mdt sr-p2mp remote
```

| Tree Identifier            | MDT Source  | Cache Count | DIP | Local Entry | VRF Using | Routes Cache | On-demand Color |
|----------------------------|-------------|-------------|-----|-------------|-----------|--------------|-----------------|
| [tree-id 524290 (0x80002)] | 192.168.0.4 | 1           | N   | N           | 1         |              | 0               |

# show segment-routing mapping-server prefix-sid-map

To verify the locally configured prefix-to-SID mappings, use the **show segment-routing mapping-server prefix-sid-map** command.

```
show segment-routing mapping-server prefix-sid-map [ipv4 | ipv6] [prefix] [detail]
```

| Syntax Description |   |
|--------------------|---|
| <b>ipv4</b>        | (Optional) Specifies an IPv4 address family.                            |
| <b>ipv6</b>        | (Optional) Specifies an IPv6 address family.                            |
| <i>prefix</i>      | (Optional) Specifies a prefix.  |
| <b>detail</b>      | (Optional) Displays detailed information on the prefix-to-SID mappings. |

**Command Default** None

**Command Modes** EXEC

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.3.2 | This command was introduced. |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

| Task ID | Task ID | Operation |
|---------|---------|-----------|
|         |         | read      |

## Example

The example shows how to verify the IPv4 prefix-to-SID mappings:

```
RP/0/0/CPU0:router# show segment-routing mapping-server prefix-sid-map ipv4
Prefix          SID Index  Range  Flags
20.1.1.0/24     400        300
10.1.1.1/32     10         200
Number of mapping entries: 2
```

The example shows how to display detailed information on the IPv4 prefix-to-SID mappings:

```
RP/0/0/CPU0:router# show segment-routing mapping-server prefix-sid-map ipv4 detail
Prefix
20.1.1.0/24
  SID Index:      400
```

**show segment-routing mapping-server prefix-sid-map**

```

Range:          300
Last Prefix:    20.2.44.0/24
Last SID Index: 699
Flags:
10.1.1.1/32
SID Index:      10
Range:          200
Last Prefix:    10.1.1.200/32
Last SID Index: 209
Flags:
Number of mapping entries: 2

```

**Related Commands**

| Command  | Description   |
|--|---|
| <a href="#">segment-routing mapping-server, on page 93</a>     | Configures the segment routing mapping server (SRMS).                         |
| <a href="#">segment-routing prefix-sid-map advertise-local</a> | Enables the router to advertise the SRMS entries that are locally configured. |
| <a href="#">segment-routing prefix-sid-map receive disable</a> | Disables mapping client functionality.  |
| <a href="#">show isis segment-routing prefix-sid-map</a>       | Displays the active and backup prefix-to-SID mappings for IS-IS.              |
| <a href="#">show ospf segment-routing prefix-sid-map</a>       | Displays the active and backup prefix-to-SID mappings for OSPF.               |

# show segment-routing srv6 sid

You can use the **show segment-routing srv6 sid** command to verify the SRv6 global and locator configuration.

**show segment-routing srv6 sid**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** XR EXEC mode

| Command History | Release                      | Modification                      |
|-----------------|------------------------------|-----------------------------------|
|                 | Release 7.8.1                | This command output was modified. |
| Release 7.0.12  | This command was introduced. |                                   |

**Usage Guidelines** The command displays SID information across locators. By default, only “active” (i.e. non-stale) SIDs are displayed.

From IOS XR Release 7.8.1, IOS XR nodes with SRv6 Micro-SID F3216 format will accept and allow service SIDs received from non-IOS XR node peers with SRv6 base F128. Non-IOS XR node peers can be without SID Struct TLV (SSTLV), or with an incompatible SSTLV having an SID that is F3216 compatible. This allows for interoperability without any IETF extension or configuration changes on the Non-IOS XR peer node.

The following example shows how to display detailed information on the remote side, with the allocation type:

```
Router# show segment-routing srv6 locator usid sid fccc:ccc1:1:e00f::
Mon Dec 13 15:58:53.640 EST
SID                               Behavior      Context      Owner
      State  RW
-----  ----  --
fccc:ccc1:1:e00f::                uDT46        '**iid'
rib_lib_test_xtf      InUse  Y
  SID Function: 0xe00f
  SID context: { '**iid' }
  App data: [0000000000000000]
  Locator: 'usid'
  Allocation type: Dynamic | Explicit
```

# show segment-routing traffic-eng p2mp policy

To view SR-TE multicast policy information that is used for transporting IP VPN multicast traffic, use the **show segment-routing traffic-eng p2mp policy** command in EXEC mode.

**show segment-routing traffic-eng p2mp policy** [ **name** *policy* | **root ipv4** *address* [ *tree-ID* ] ]

|                           |   |  |
|---------------------------|---|--|
| <b>Syntax Description</b> | <b>name</b> <i>policy</i>                             | Policy for which information is to be displayed.   |
|                           | <b>root ipv4</b> <i>address</i><br>[ <i>tree-ID</i> ] | Specifies that information be displayed for the specified multicast tree root router and the Tree-SID. |
| <b>Command Default</b>    | None  |  |
| <b>Command Modes</b>      | EXEC  |  |
| <b>Command History</b>    | <b>Release</b>  | <b>Modification</b>  |
|                           | Release 7.3.1   | This command was introduced.   |

## Example

The following example shows how to view SR-TE multicast policy information.

### Multicast Tree Information on Routers

```
Router# show segment-routing traffic-eng p2mp policy

SR-TE P2MP policy database:
-----
! - Replications with Fast Re-route

Policy: sr_p2mp_root_192.168.0.1_tree_id_524290  LSM-ID: 0x2
Role: Leaf
Replication:
  Incoming label: 18001 CC-ID: 6

Policy: sr_p2mp_root_192.168.0.4_tree_id_524290  LSM-ID: 0x80002 (PCC-initiated)
Color: 0
LFA FRR: Disabled
Role: Root
Replication:
  Incoming label: 18000 CC-ID: 2
  Interface: None [192.168.0.3!]  Outgoing label: 18000 CC-ID: 2
Endpoints:
  192.168.0.1, 192.168.0.2
```

For SR multicast policies originated locally on the router (root router of a dynamic MVPN multicast policy) additional policy information is displayed. The information includes color, end points, and whether LFA FRR is requested by the local application. When the SR-PCE server enables LFA FRR on a specific hop, the outgoing information shows the address of the next router with an exclamation mark and None is displayed for the outgoing interface.



For dynamic SR multicast trees created for MVPN, the **show** command has filters for displaying root multicast router and Tree-ID information. When the root router is specified, all multicast trees for that root are displayed. When root and Tree-ID are specified, only the specified tree information is displayed.

```
Router# show segment-routing traffic-eng p2mp policy root ipv4 1.1.1$

SR-TE P2MP policy database:
-----
! - Replications with Fast Re-route, * - Stale dynamic policies/endpoints

Policy: sr_p2mp_root_1.1.1.1_tree_id_524289 LSM-ID: 0x691
Root: 1.1.1.1, ID: 524289
Role: Transit
Replication:
  Incoming label: 20000 CC-ID: 28
  Interface: Bundle-Ether23 [192.168.123.3] Outgoing label: 20000 CC-ID: 28
  Interface: Bundle-Ether25 [192.168.125.5] Outgoing label: 20000 CC-ID: 28

Policy: sr_p2mp_root_1.1.1.1_tree_id_524290 LSM-ID: 0x692
Root: 1.1.1.1, ID: 524290
Role: Transit
Replication:
  Incoming label: 19999 CC-ID: 28
  Interface: Bundle-Ether23 [192.168.123.3] Outgoing label: 19999 CC-ID: 28
  Interface: Bundle-Ether25 [192.168.125.5] Outgoing label: 19999 CC-ID: 28
```

# show segment-routing local-block inconsistencies

Displays any segment routing local block (SRLB) label inconsistencies.

**show segment-routing local-block inconsistencies**

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** EXEC

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 6.3.1 | This command was introduced. |

**Usage Guidelines** To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

When a new SRLB range is defined, there might be a label conflict (for example, if labels are already allocated, statically or dynamically, in the new SRLB range). In this case, the new SRLB range will be accepted, but not applied (pending). The previous SRLB range (active) will continue to be in use until one of the following occurs:

- Reload the router to release the currently allocated labels and allocate the new SRLB
- Use the **clear segment-routing local-block discrepancy all** command to clear the label conflicts

| Task ID | Task ID | Operation |
|---------|---------|-----------|
|         |         |           |

## Example

This example shows how to display the SRGB inconsistencies:

```
RP/0/RSP0/CPU0:router(config)# show segment-routing local-block inconsistencies
Tue Aug 15 13:53:30.555 EDT
SRLB inconsistencies range: Start/End: 30000/30009
```

## Related Commands

| Command   | Description                 |
|---|-----------------------------|
| <a href="#">clear segment-routing local-block discrepancy all, on page 13</a> | Clears SRLB label conflicts |
| <a href="#">segment-routing local-block, on page 91</a>                       | Configures the SRLB         |

# srv6 mode base encapsulation

To enter the SRv6 encapsulation submode, use the **encapsulation** command in the SRv6 base configuration mode.

## hw-module profile segment-routing srv6 mode base encapsulation

**Syntax Description** This command has no keywords or arguments.

**Command Default** None

**Command Modes** Segment routing base mode configuration

| Command History | Release       | Modification                 |
|-----------------|---------------|------------------------------|
|                 | Release 7.3.1 | This command was introduced. |

**Usage Guidelines** You must reload the router after enabling this feature.

| Task ID | Task ID | Operation      |
|---------|---------|----------------|
|         | system  | read,<br>write |

The following example shows how to enter the SRv6 encapsulation submode.

```
Router# configure
Router(config)# hw-module profile segment-routing srv6 mode base encapsulation
```

## traceroute sr-mpls

To trace the routes to a destination in a segment routing network, use the **traceroute sr-mpls** command in XR EXEC mode.

```
traceroute sr-mpls { ipv4-address/mask | ipv6-address/mask [ fec-type { bgp | generic | igp { ospf | isis } } ] | multipath { ipv4-address/mask | ipv6-address/mask [ fec-type { bgp | generic | igp { ospf | isis } } } | nil-fec | dataplane-only { labels { label1 [ , label2... ] ipv4-address/mask | ipv6-address/mask | policy } } } { output { interface interface-path-id } } } { nexthop next-hop-ip-address } }
```

| Syntax Description |  |   |
|--------------------|--|---|
|                    | <i>ipv4 address/mask</i> or <i>ipv6 address/mask</i> | Address prefix of the target and number of bits in the target address network mask.   |
|                    | <b>fec-type</b>                                      | (Optional) Specifies FEC type to be used. Default FEC type is generic.<br><br><b>bgp</b><br>Use FEC type as BGP.<br><br><b>generic</b><br>Use FEC type as generic.<br><br><b>igp</b><br>Use FEC type as OSPF or ISIS. |
|                    | <b>labels</b> <i>label,label...</i>                  | Specifies the label stack. Use commas to separate each label.   |
|                    | <b>dataplane-only</b>                                | Specifies data plane validation without running actual traffic over LSPs.   |
|                    | <b>output interface</b> <i>interface-path-id</i>     | Specifies the output interface where echo request packets are sent.   |
|                    | <b>nexthop</b> <i>next-hop-ip-address</i>            | Causes packets to go through the specified IPv4 or IPv6 next-hop address.   |

**Command Default**    **fec-type** : generic

**Command Modes**    XR EXEC mode

| Command History | Release        | Modification  |
|-----------------|----------------|---|
|                 | Release 24.2.1 | The <b>dataplane-only</b> keyword was introduced.<br>Support for IPv6 next-hop address was added. |
|                 | Release 6.3.1  | This command was introduced.  |

**Usage Guidelines**

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

For SR-TE policies, provide a valid LSP endpoint for non-Nil-FEC traceroute operation.

**Task ID****Task Operations ID**

```
mpls-te read,
write
```

**Example**

These examples show how to use segment routing traceroute to trace the LSP for a specified IPv4 prefix segment routing id (SID). In the first example, FEC type is not specified. You can also specify the FEC type as shown in the second example. The third example uses multipath traceroute to discover all the possible paths for a IPv4 prefix SID.

```
RP/0/RP0/CPU0:router# traceroute sr-mpls 10.1.1.2/32
```

```
Tracing MPLS Label Switched Path to 10.1.1.2/32, timeout is 2 seconds
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
 0 10.12.12.1 MRU 1500 [Labels: implicit-null Exp: 0]
! 1 10.12.12.2 3 ms
```

```
RP/0/RP0/CPU0:router# traceroute sr-mpls 10.1.1.2/32 fec-type igp ospf
```

```
Tracing MPLS Label Switched Path to 10.1.1.2/32, timeout is 2 seconds
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
 0 10.12.12.1 MRU 1500 [Labels: implicit-null Exp: 0]
! 1 10.12.12.2 2 ms
```

```
RP/0/RP0/CPU0:router# traceroute sr-mpls multipath 10.1.1.2/32
```

```
Starting LSP Path Discovery for 10.1.1.2/32
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
```

```
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
!
Path 0 found,
  output interface GigabitEthernet0/0/0/2 nexthop 10.13.13.2
source 10.13.13.1 destination 127.0.0.0
!
Path 1 found,
  output interface Bundle-Ether1 nexthop 10.12.12.2
source 10.12.12.1 destination 127.0.0.0

Paths (found/broken/unexplored) (2/0/0)
Echo Request (sent/fail) (2/0)
Echo Reply (received/timeout) (2/0)
Total Time Elapsed 14 ms
```

The following example shows how to use segment routing traceroute to validate SR-MPLS over IPv6-based LSPs:

```
Router#tracroute sr-mps dataplane-only 2001:DB8::1/32
Tue Jan 16 15:08:54.681 EST

Tracing MPLS Label Switched Path with Nil FEC to 2001:DB8::1/32, timeout is 2 seconds

Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
 0 11:11:11::1 MRU 1500 [Labels: 18004/explicit-null Exp: 0/0]
L 1 11:11:11::2 MRU 1500 [Labels: implicit-null/explicit-null Exp: 0/0] 3 ms
! 2 15:15:15::4 3 ms
```

The following example shows how to use segment routing traceroute for SR-TE policies with IPv6-based LSPs:

```
Router#tracroute sr-mps nil-fec policy name srte_c_40_ep_2001:DB8::1
Tue Feb  6 12:07:38.295 EST

Tracing MPLS Label Switched Path with Nil FEC for SR-TE Policy srte_c_40_ep_2001:DB8::1,
timeout is 2 seconds

Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
 0 12:12:12::1 MRU 1500 [Labels: 26134/explicit-null Exp: 0/0]
L 1 12:12:12::3 MRU 1500 [Labels: implicit-null/explicit-null Exp: 0/0] 16 ms
! 2 16:16:16::4 16 ms
```

The following example shows how to use segment routing traceroute with labels using IPv6 LSPs:

```
Router#traceroute sr-mpls labels 18004 lsp-end-point 2001:DB8::1
Tue Feb  6 12:10:41.928 EST

Tracing MPLS Label Switched Path to NIL FEC with lsp end point 2001:DB8::1, SID Label(s)
[18004], timeout is 2 seconds

Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
        'L' - labeled output interface, 'B' - unlabeled output interface,
        'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
        'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
        'P' - no rx intf label prot, 'p' - premature termination of LSP,
        'R' - transit router, 'I' - unknown upstream index,
        'X' - unknown return code, 'x' - return code 0

Type escape sequence to abort.

 0 11:11:11::1 MRU 1500 [Labels: 18004/explicit-null Exp: 0/0]
L 1 11:11:11::2 MRU 1500 [Labels: implicit-null/explicit-null Exp: 0/0] 7 ms
! 2 15:15:15::4 3 ms
```

# UCMP Disable

To disable Unequal-Cost Multiple Path (UCMP) for specific Flexible Algorithm use this command in ISIS Address Family submode.

## UCMP Disable

|                           |                     |                              |
|---------------------------|---------------------|------------------------------|
| <b>Syntax Description</b> | <b>UCMP Disable</b> | Disables UCMP functionality. |
|---------------------------|---------------------|------------------------------|

**Command Default** None.

**Command Modes** IS-IS interface address-family configuration

|                        |                |                              |
|------------------------|----------------|------------------------------|
| <b>Command History</b> | <b>Release</b> | <b>Modification</b>          |
|                        | Release 24.1.1 | This command was introduced. |

**Usage Guidelines** UCMP must be configured at the ISIS Address Family instance.

|                |                |                   |
|----------------|----------------|-------------------|
| <b>Task ID</b> | <b>Task ID</b> | <b>Operations</b> |
|                | isis           | read, write       |

## Examples

Example configuration to disable UCMP of specific Flexible Algorithm. Here, it is Flex-algo 128

```
Router(config)# router isis 1
Router(config-isis-flex-algo)# flex-algo 128
Router(config-isis-flex-algo)# ucmp disable
```