



Cisco Wi-Fi Interface Module (WIM)

This chapter contains the following sections:

- [Cisco Wi-Fi Interface Module \(WIM\) Overview](#), on page 1
- [Cisco IoT Operations Dashboard \(OD\) Support to Configure and Manage the WP-WIFI6-x Module](#), on page 1

Cisco Wi-Fi Interface Module (WIM) Overview

This chapter of the configuration guide has been turned into a stand-alone book called [Cisco Wi-Fi Interface Module \(WIM\) Configuration Guide](#) to provide more details on the configuration of the WIM.

Cisco IoT Operations Dashboard (OD) Support to Configure and Manage the WP-WIFI6-x Module

Cisco IOS XE release 17.11.1a provides additional capabilities to the Cisco Wi-Fi Interface Module (WIM).

This section contains the following:

