

Configuring IP SLAs DNS Operations

This module describes how to configure the IP Service Level Agreements (SLAs) Domain Name System (DNS) operation to measure the difference between the time taken to send a DNS request and receive a reply. This module also demonstrates how the results of the DNS operation can be displayed and analyzed to determine the DNS lookup time which is a critical element for determining the performance of a DNS or web server.

- Information About IP SLAs DNS Operations, on page 1
- How to Configure IP SLAs DNS Operations, on page 2
- Configuration Examples for IP SLAs DNS Operations, on page 8
- Additional References, on page 9
- Feature Information for Configuring IP SLAs DNS Operation, on page 9


Information About IP SLAs DNS Operations

DNS Operation

The DNS operation measures the difference between the time taken to send a DNS request and receive a reply. DNS is used in the Internet for translating names of network nodes into addresses. The IP SLAs DNS operation queries for an IP address if you specify a host name, or queries for a host name if you specify an IP address.

In the figure below Device B is configured as the source IP SLAs device and a DNS operation is configured with the DNS server as the destination device.

Figure 1: DNS Operation

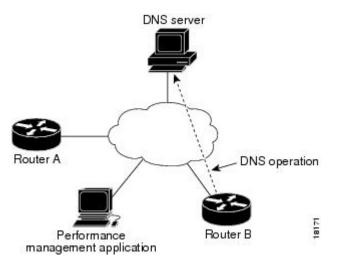

Connection response time is computed by measuring the difference between the time taken to send a request to the DNS server and the time a reply is received by Device B. The resulting DNS lookup time can help you analyze your DNS performance. Faster DNS lookup times translate to a faster web server access experience.

How to Configure IP SLAs DNS Operations

Configuring an IP SLAs DNS Operation on the Source Device

Note There is no need to configure an IP SLAs responder on the destination device.

Perform one of the following tasks:

Configuring a Basic DNS Operation on the Source Device

SUMMARY STEPS

- 1. enable
- **2**. configure terminal
- 3. ip sla operation-number
- **4. dns** {*destination-ip-address* | *destination-hostname*} **name-server** *ip-address* [**source-ip** {*ip-address* | *hostname*} **source-port** *port-number*]
- **5.** frequency seconds
- 6. end

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ip sla operation-number	Begins configuration for an IP SLAs operation and enters
	Example:	IP SLA configuration mode.
	Device(config)# ip sla 10	
Step 4	dns {destination-ip-address destination-hostname} name-server ip-address [source-ip {ip-address hostname} source-port port-number]	Defines a DNS operation and enters IP SLA DNS configuration mode.
	Example:	
	Device(config-ip-sla)# dns host1 name-server 172.20.2.132	
Step 5	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs
	Example:	operation repeats.
	<pre>Device(config-ip-sla-dns)# frequency 60</pre>	
Step 6	end	Exits to privileged EXEC mode.
	Example:	
	Device(config-ip-sla-dns)# end	

Configuring a DNS Operation with Optional Parameters on the Source Device

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- **3. ip sla** *operation-number*
- **4. dns** {*destination-ip-address* | *destination-hostname*} **name-server** *ip-address* [**source-ip** {*ip-address* | *hostname*} **source-port** *port-number*]
- 5. history buckets-kept size

- 6. history distributions-of-statistics-kept size
- 7. history enhanced [interval seconds] [buckets number-of-buckets]
- 8. history filter {none | all | overThreshold | failures}
- **9. frequency** seconds
- 10. history hours-of-statistics-kept hours
- 11. history lives-kept lives
- **12.** owner owner-id
- 13. history statistics-distribution-interval milliseconds
- 14. tag text
- 15. threshold milliseconds
- **16.** timeout *milliseconds*
- 17. end

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	ip sla operation-number	Begins configuration for an IP SLAs operation and enters
	Example:	IP SLA configuration mode.
	Device(config)# ip sla 10	
Step 4	dns { <i>destination-ip-address</i> <i>destination-hostname</i> }	Defines a DNS operation and enters IP SLA DNS
	name-server <i>ip-address</i> [source-ip { <i>ip-address</i> <i>hostname</i> } source-port <i>port-number</i>]	configuration mode.
	Example:	
	Device(config-ip-sla)# dns host1 name-server 172.20.2.132	
Step 5	history buckets-kept size	(Optional) Sets the number of history buckets that are kep
	Example:	during the lifetime of an IP SLAs operation.
	Device(config-ip-sla-dns)# history buckets-kept 25	

I

	Command or Action	Purpose	
Step 6	history distributions-of-statistics-kept size Example:	(Optional) Sets the number of statistics distributions kept per hop during an IP SLAs operation.	
	Device(config-ip-sla-dns)# history distributions-of-statistics-kept 5		
Step 7	history enhanced [interval seconds] [buckets number-of-buckets]	(Optional) Enables enhanced history gathering for an IP SLAs operation.	
	Example:		
	Device(config-ip-sla-dns)# history enhanced interval 900 buckets 100		
Step 8	history filter {none all overThreshold failures} Example:	(Optional) Defines the type of information kept in the history table for an IP SLAs operation.	
	Device(config-ip-sla-dns)# history filter failures	5	
Step 9	frequency seconds	(Optional) Sets the rate at which a specified IP SLAs operation repeats.	
	Example:		
	Device(config-ip-sla-dns)# frequency 30		
Step 10	history hours-of-statistics-kept hours Example:	(Optional) Sets the number of hours for which statistics are maintained for an IP SLAs operation.	
	Device(config-ip-sla-dns)# history hours-of-statistics-kept 4		
Step 11	history lives-kept lives	(Optional) Sets the number of lives maintained in the history table for an IP SLAs operation.	
	Example:	instory table for an IT SLAS operation.	
	Device(config-ip-sla-dns)# history lives-kept 5		
Step 12	owner owner-id	(Optional) Configures the Simple Network Management Protocol (SNMP) owner of an IP SLAs operation.	
	<pre>Example: Device(config-ip-sla-dns)# owner admin</pre>	、 <i>´</i>	
Step 13	history statistics-distribution-interval milliseconds	(Optional) Sets the time interval for each statistics	
	Example:	distribution kept for an IP SLAs operation.	
	Device(config-ip-sla-dns)# history statistics-distribution-interval 10		
Step 14	tag text	(Optional) Creates a user-specified identifier for an IP	
	Example:	SLAs operation.	

	Command or Action	Purpose
	Device(config-ip-sla-dns)# tag TelnetPollServer1	
Step 15	threshold milliseconds Example:	(Optional) Sets the upper threshold value for calculating network monitoring statistics created by an IP SLAs operation.
	Device(config-ip-sla-dns)# threshold 10000	
Step 16	timeout milliseconds	(Optional) Sets the amount of time an IP SLAs operation
	Example:	waits for a response from its request packet.
	Device(config-ip-sla-dns)# timeout 10000	
Step 17	end	Exits to privileged EXEC mode.
	Example:	
	Device(config-ip-sla-dns)# end	

Scheduling IP SLAs Operations

Before you begin

- All IP Service Level Agreements (SLAs) operations to be scheduled must be already configured.
- The frequency of all operations scheduled in a multioperation group must be the same.
- The list of one or more operation ID numbers to be added to a multioperation group must be limited to a maximum of 125 characters in length, including commas (,).

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- **3.** Enter one of the following commands:
 - ip sla schedule *operation-number* [life {forever | *seconds*}] [start-time {[*hh:mm:ss*] [month day | day month] | pending | now | after *hh:mm:ss*}] [ageout *seconds*] [recurring]
 - ip sla group schedule *group-operation-number operation-id-numbers* {schedule-period *schedule-period-range* | schedule-together} [ageout *seconds*] frequency *group-operation-frequency* [life {forever | *seconds*}] [start-time {*hh:mm* [:ss] [month day | day month] | pending | now | after *hh:mm* [:ss]}]
- 4. end
- 5. show ip sla group schedule
- 6. show ip sla configuration

DETAILED STEPS

Procedure

Command or Action	Purpose
enable	Enables privileged EXEC mode.
Example:	• Enter your password if prompted.
Device> enable	
configure terminal	Enters global configuration mode.
Example:	
Device# configure terminal	
 Enter one of the following commands: ip sla schedule operation-number [life {forever seconds}] [start-time {[hh:mm:ss] [month day day month] pending now after hh:mm:ss}] [ageout seconds] [recurring] ip sla group schedule group-operation-number operation-id-numbers {schedule-period schedule-period schedule-period-range schedule-together} [ageout seconds] frequency group-operation-frequency [life {forever seconds}] [start-time {hh:mm [:ss] [month day day month] pending now after hh:mm [:ss]}] Example: Device (config) # ip sla schedule 10 life forever start-time now 	 Configures the scheduling parameters for an individual IP SLAs operation. Specifies an IP SLAs operation group number and the range of operation numbers for a multioperation scheduler.
Device(config)# ip sla group schedule 10 schedule-period frequency Device(config)# ip sla group schedule 1 3,4,6-9 life forever start-time now Device(config)# ip sla schedule 1 3,4,6-9 schedule-period 50 frequency range 80-100	
end	Exits global configuration mode and returns to privileged
Example:	EXEC mode.
Device(config)# end	
show ip sla group schedule	(Optional) Displays IP SLAs group schedule details.
show ip sia group schedule	(optional) Displays it SET is group senedule details.
Example:	
	<pre>enable Example: Device> enable Configure terminal Example: Device# configure terminal Enter one of the following commands:</pre>

	Command or Action	Purpose
Step 6	show ip sla configuration	(Optional) Displays IP SLAs configuration details.
	Example:	
	Device# show ip sla configuration	

Troubleshooting Tips

- If the IP Service Level Agreements (SLAs) operation is not running and not generating statistics, add the **verify-data** command to the configuration (while configuring in IP SLA configuration mode) to enable data verification. When data verification is enabled, each operation response is checked for corruption. Use the **verify-data** command with caution during normal operations because it generates unnecessary overhead.
- Use the **debug ip sla trace** and **debug ip sla error** commands to help troubleshoot issues with an IP SLAs operation.

What to Do Next

To add proactive threshold conditions and reactive triggering for generating traps (or for starting another operation) to an IP Service Level Agreements (SLAs) operation, see the "Configuring Proactive Threshold Monitoring" section.

Configuration Examples for IP SLAs DNS Operations

Example Configuring a DNS Operation

The following example shows how to configure a DNS operation from Device B to the DNS server (IP address 172.20.2.132) as shown in the "DNS Operation" figure in the "DNS Operation" section. The operation is scheduled to start immediately. In this example, the target address is a hostname and the DNS operation will query the DNS server for the IP address associated with the hostname host1. No configuration is required at the DNS server.

Device B Configuration

```
ip sla 11
  dns host1 name-server 172.20.2.132
  frequency 50
  timeout 8000
  tag DNS-Test
  ip sla schedule 11 start-time now
```

Additional References

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Commands List, All Releases
Cisco IOS IP SLAs commands	Cisco IOS IP SLAs Command Reference, All Releases
Cisco IOS IP SLAs: general information	"Cisco IOS IP SLAs Overview" module of the <i>Cisco IOS IP</i> SLAs Configuration Guide.
Multioperation scheduling for IP SLAs	"Configuring Multioperation Scheduling of IP SLAs Operations" module of the <i>Cisco IOS P SLAs Configuration Guide</i>
Proactive threshold monitoring for IP SLAs	"Configuring Proactive Threshold Monitoring of IP SLAs Operations" module of the <i>Cisco IOS IP SLAs Configuration</i> <i>Guide</i>

MIBs

MIBs	MIBs Link
CISCO-RTTMON-MIB	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	

Feature Information for Configuring IP SLAs DNS Operation

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Feature Name	Releases	Feature Information
IP SLAs - DNS	12.2(31)SB2	The IP SLAs Domain Name System (DNS) Operation feature allows you to measure the difference between the time taken to send a DNS request and receive a reply.
Operation	12.2(33)SRB1	
	12.2(33)SXH	
	12.3(14)T	
	Cisco IOS XE Release 2.1	
	15.0(1)S	
	Cisco IOS XE 3.1.0SG	
IPSLA 4.0 - IP v6	15.2(3)T	Support was added for operability in IPv6 networks
phase2	Cisco IOS XE Release 3.7S	The following commands are introduced or modified: dns (IP SLA), show ip sla configuration, show ip
	15.1(2)SG	sla summary.
	Cisco IOS XE Release 3.4SG	
IP SLAs VRF Aware	12.4(2)T	Support was added for IP SLAs VRF-aware
2.0	15.1(1)S	capabilities for TCP connect, FTP, HTTP and DNS client operation types.
	15.1(1)SY	
	Cisco IOS XE Release 3.8S	