



# Configuring Precision Time Protocol (PTP)

PTP configuration is supported from Cisco IOS XE Release 17.7.x.

- [Information About Precision Time Protocol, on page 1](#)
- [Configuring GMC Mode, on page 18](#)
- [Configuring PTP Default Profile, on page 20](#)
- [Configuring PTP Power Profile, on page 24](#)
- [Configuring 802.1AS Profile, on page 28](#)
- [Disable PTP, on page 30](#)
- [PTP Multidomain, on page 31](#)
- [Verifying the Configuration, on page 31](#)

## Information About Precision Time Protocol

Precision Time Protocol (PTP) is defined in IEEE 1588 as Precision Clock Synchronization for Networked Measurements and Control Systems, and was developed to synchronize the clocks in packet-based networks that include distributed device clocks of varying precision and stability. PTP is designed specifically for industrial, networked measurement and control systems, and is optimal for use in distributed systems because it requires minimal bandwidth and little processing overhead.

A Network Advantage license is required to enable the PTP feature or to execute the CLIs on the router.

To configure the license level to network-advantage, use the following CLI:

### **license boot level network-advantage**

```
Router#config terminal  
Router(config)#license boot level network-advantage  
Do you want to accept terms? Y
```

## Why PTP?

Smart grid power automation applications such as peak-hour billing, virtual power generators, and outage monitoring and management, require extremely precise time accuracy and stability. Timing precision improves network monitoring accuracy and troubleshooting ability.

In addition to providing time accuracy and synchronization, the PTP message-based protocol can be implemented on packet-based networks, such as Ethernet networks. The benefits of using PTP in an Ethernet network include:

- Low cost and easy setup in existing Ethernet networks
- Limited bandwidth is required for PTP data packets

## Message-Based Synchronization

To ensure clock synchronization, PTP requires an accurate measurement of the communication path delay between time source (grandmaster clock) and the time recipient. PTP sends messages between the time source and time recipient to determine the delay measurement. Then, PTP measures the exact message transmit and receive times and uses these times to calculate the communication path delay. PTP then adjusts current time information contained in network data for the calculated delay, resulting in more accurate time information.

This delay measurement principle determines path delay between devices on the network, and the local clocks are adjusted for this delay using a series of messages sent between time source and time recipient devices. The one-way delay time is calculated by averaging the path delay of the transmit and receive messages. This calculation assumes a symmetrical communication path; however, switched networks do not necessarily have symmetrical communication paths, due to the buffering process.

PTP provides a method, using transparent clocks, to measure and account for the delay in a time-interval field in network timing packets, making the switches temporarily transparent to the time source and time recipient nodes on the network. An end-to-end transparent clock forwards all messages on the network in the same way that a switch does.



---


**Note** Cisco PTP supports multicast PTP messages only.

---

To read a detailed description of synchronization messages, refer to [PTP Event Message Sequences, on page 3](#). To learn more about how transparent clocks calculate network delays, refer to [Transparent Clock, on page 7](#).

The following figure shows a typical 1588 PTP network that includes grandmaster clocks, switches in boundary clock mode, and Intelligent Electronic Device (IEDs) such as a digital relays or protection devices. In this diagram, Time Source 1 is the grandmaster clock. If Time Source 1 becomes unavailable, the time recipient boundary clocks switch to Time Source 2 for synchronization.

Figure 1: PTP Network

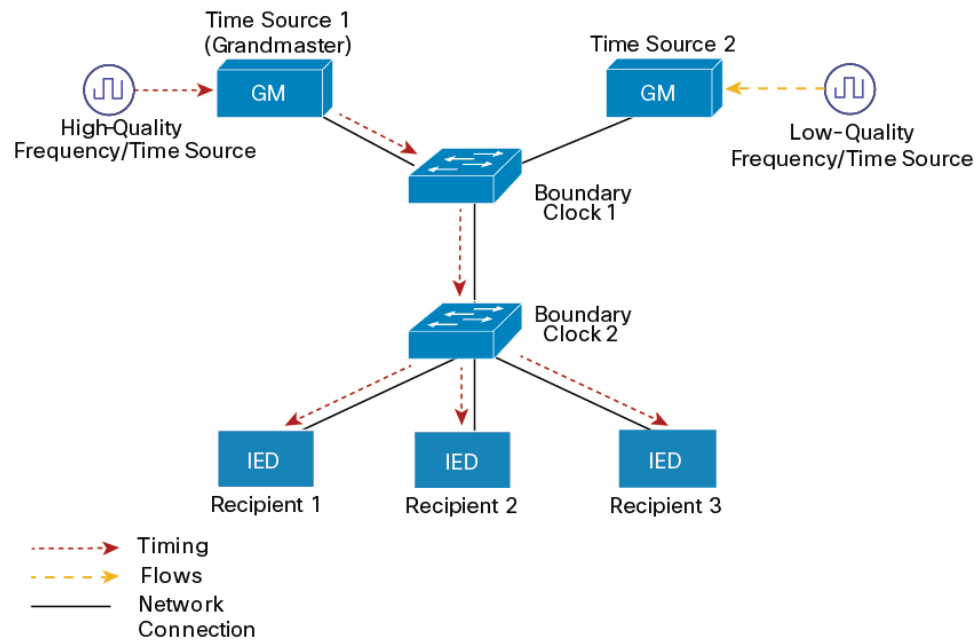

## PTP Event Message Sequences

This section describes the PTP event message sequences that occur during synchronization.

### Synchronizing with Boundary Clocks

The ordinary and boundary clocks configured for the delay request-response mechanism use the following event messages to generate and communicate timing information:

- Sync
- Delay\_Req
- Follow\_Up
- Delay\_Resp


These messages are sent in the following sequence:

1. The time source sends a Sync message to the time recipient and notes the time ( $t_1$ ) at which it was sent.
2. The time recipient receives the Sync message and notes the time of reception ( $t_2$ ).
3. The time source conveys to the time recipient the timestamp  $t_1$  by embedding the timestamp  $t_1$  in a Follow\_Up message.
4. The time recipient sends a Delay\_Req message to the time source and notes the time ( $t_3$ ) at which it was sent.
5. The time source receives the Delay\_Req message and notes the time of reception ( $t_4$ ).
6. The time source conveys to the time recipient the timestamp  $t_4$  by embedding it in a Delay\_Resp message.

After this sequence, the time recipient possesses all four timestamps. These timestamps can be used to compute the offset of the time recipient clock relative to the time source, and the mean propagation time of messages between the two clocks.

The offset calculation is based on the assumption that the time for the message to propagate from time source to time recipient is the same as the time required from time recipient to time source. This assumption is not always valid on an Ethernet network due to asymmetrical packet delay times.

**Figure 2: Detailed Steps—Boundary Clock Synchronization**

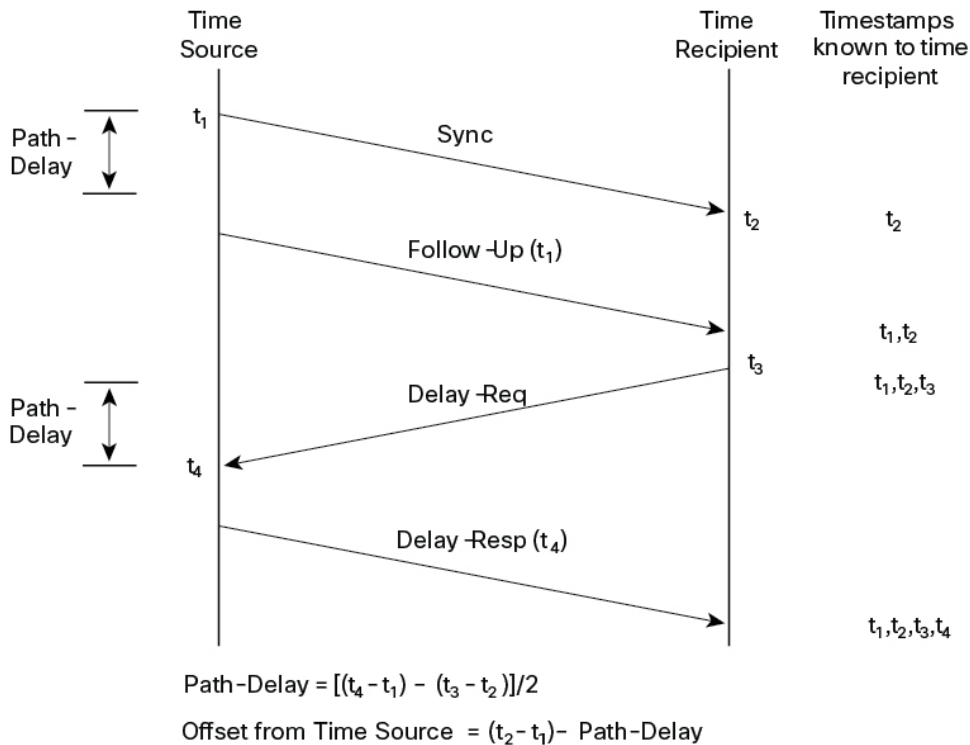

## Synchronizing with Peer-to-Peer Transparent Clocks

When the network includes multiple levels of boundary clocks in the hierarchy, with non-PTP enabled devices between them, synchronization accuracy decreases.

The round-trip time is assumed to be equal to  $\text{mean\_path\_delay}/2$ , however this is not always valid for Ethernet networks. To improve accuracy, the resident time of each intermediary clock is added to the offset in the end-to-end transparent clock. Resident time, however, does not take into consideration the link delay between peers, which is handled by peer-to-peer transparent clocks.

Peer-to-peer transparent clocks measure the link delay between two clock ports implementing the peer delay mechanism. The link delay is used to correct timing information in Sync and Follow\_Up messages.


Peer-to-peer transparent clocks use the following event messages:

- Pdelay\_Req
- Pdelay\_Resp
- Pdelay\_Resp\_Follow\_Up

These messages are sent in the following sequence:

1. Port 1 generates timestamp  $t_1$  for a Pdelay\_Req message.
2. Port 2 receives and generates timestamp  $t_2$  for this message.
3. Port 2 returns and generates timestamp  $t_3$  for a Pdelay\_Resp message.  
To minimize errors due to any frequency offset between the two ports, Port 2 returns the Pdelay\_Resp message as quickly as possible after the receipt of the Pdelay\_Req message.
4. Port 2 returns timestamps  $t_2$  and  $t_3$  in the Pdelay\_Resp and Pdelay\_Resp\_Follow\_Up messages respectively.
5. Port 1 generates timestamp  $t_4$  after receiving the Pdelay\_Resp message. Port 1 then uses the four timestamps ( $t_1$ ,  $t_2$ ,  $t_3$ , and  $t_4$ ) to calculate the mean link delay.

**Figure 3: Detailed Steps—Peer-to-Peer Transparent Clock Synchronization**

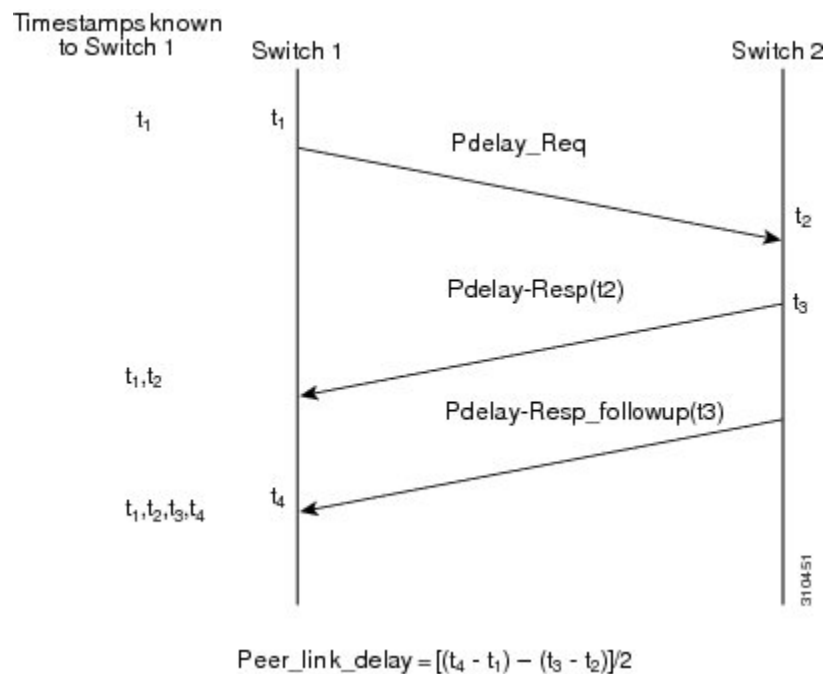

## Synchronizing the Local Clock

In an ideal PTP network, the time source and time recipient clocks operate at the same frequency. However, *drift* can occur on the network. Drift is the frequency difference between the time source and time recipient clocks. You can compensate for drift by using the time stamp information in the device hardware and follow-up messages (intercepted by the switch) to adjust the frequency of the local clock to match the frequency of the time source clock.

## Best Master Clock Algorithm

The Best Master Clock Algorithm (BMCA) is the basis of PTP functionality. The BMCA specifies how each clock on the network determines the best time source clock in its subdomain of all the clocks it can see,

including itself. The BMCA runs on the network continuously and quickly adjusts for changes in network configuration.

The BMCA uses the following criteria to determine the best time source clock in the subdomain:

- Clock quality (for example, GPS is considered the highest quality)
- Clock accuracy of the clock's time base.
- Stability of the local oscillator
- Closest clock to the grandmaster

In addition to identifying the best time source clock, the BMCA also ensures that clock conflicts do not occur on the PTP network by ensuring that:

- Clocks do not have to negotiate with one another
- There is no misconfiguration, such as two time source clocks or no time source clocks, as a result of the time source clock identification process

## PTP Clocks

A PTP network is made up of PTP-enabled devices and devices that are not using PTP. The PTP-enabled devices typically consist of the following clock types.

### Grandmaster Clock

The grandmaster clock is a network device physically attached to the server time source. All clocks are synchronized to the grandmaster clock.

Within a PTP domain, the grandmaster clock is the primary source of time for clock synchronization using PTP. The grandmaster clock usually has a very precise time source, such as a GPS or atomic clock. When the network does not require any external time reference and only needs to be synchronized internally, the grandmaster clock can free run.

### Ordinary Clock

An ordinary clock is a 1588 clock with a single PTP port that can operate in one of the following modes:

- Server mode—Distributes timing information over the network to one or more client clocks, thus allowing the client to synchronize its clock to the server.
- Client mode—Synchronizes its clock to a server clock. You can enable the client mode on up to two interfaces simultaneously in order to connect to two different server clocks.

Ordinary clocks are the most common clock type on a PTP network because they are used as end nodes on a network that is connected to devices requiring synchronization.

### Boundary Clock

A boundary clock in a PTP network operates in place of a standard network switch or router. Boundary clocks have more than one PTP port, and each port provides access to a separate PTP communication path. Boundary clocks provide an interface between PTP domains. They intercept and process all PTP messages, and pass all other network traffic. The boundary clock uses the BMCA to select the best clock seen by any port. The

selected port is then set to non-master mode. The master port synchronizes the clocks connected downstream, while the non-master port synchronizes with the upstream master clock.

## Transparent Clock

The role of transparent clocks in a PTP network is to update the time-interval field that is part of the PTP event message. This update compensates for switch delay and has an accuracy of within one picosecond.

There are two types of transparent clocks:

**End-to-end (E2E) transparent clocks** measure the PTP event message transit time (also known as *resident time*) for SYNC and DELAY\_REQUEST messages. This measured transit time is added to a data field (correction field) in the corresponding messages:

- The measured transit time of a SYNC message is added to the correction field of the corresponding SYNC or the FOLLOW\_UP message.
- The measured transit time of a DELAY\_REQUEST message is added to the correction field of the corresponding DELAY\_RESPONSE message.


The time recipient uses this information when determining the offset between the time recipient's and the time source's time. E2E transparent clocks do not provide correction for the propagation delay of the link itself.

**Peer-to-peer (P2P) transparent clocks** measure PTP event message transit time in the same way E2E transparent clocks do, as described above. In addition, P2P transparent clocks measure the upstream link delay. The upstream link delay is the estimated packet propagation delay between the upstream neighbor P2P transparent clock and the P2P transparent clock under consideration.

These two times (message transit time and upstream link delay time) are both added to the correction field of the PTP event message, and the correction field of the message received by the time recipient contains the sum of all link delays. In theory, this is the total end-to-end delay (from time source to time recipient) of the SYNC packet.

The following figure illustrates PTP clocks in a time source-time recipient hierarchy within a PTP network.

**Figure 4: PTP Clock Hierarchy**

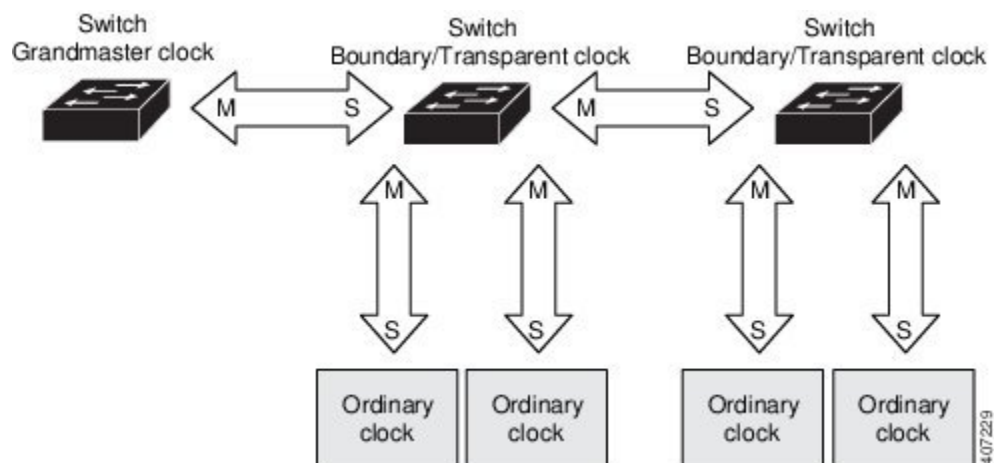

## PTP Profiles

This section describes the following PTP profiles available on the router:

- Default Profile
- Power Profile
- 802.1AS Profile

Cisco IOS-XE Release 17.7.1 supports Power Profile-2011. It is defined in PC37.238-2011 - IEEE Draft Standard Profile for Use of IEEE 1588 Precision Time Protocol in Power System Applications. This documentation uses the terms Power Profile mode and Default Profile mode when referring to this IEEE 1588 profile and its associated configuration values.

Beginning in Cisco IOS-XE Release 17.8.1, two Power Profiles are supported: Power Profile-2011 and Power Profile-2017. Power Profile-2017 is defined in IEEE Standard C37.238™-2017 (Revision of IEEE Std C37.238-2011) for use of IEEE 1588 Precision Time Protocol in Power System Applications.

The IEEE 1588 definition of a PTP profile is *the set of allowed PTP features applicable to a device*. A PTP profile is usually specific to a particular type of application or environment and defines the following values:

- Best master clock algorithm options
- Configuration management options
- Path delay mechanisms (peer delay or delay request-response)
- Range and default values of all PTP configurable attributes and data set members
- Transport mechanisms that are required, permitted, or prohibited
- Node types that are required, permitted, or prohibited
- Options that are required, permitted, or prohibited

### Default Profile Mode

The default PTP profile mode on the router is Default Profile mode. In this mode:

- IR8340 supports ordinary clock (OC)- slave, boundary clock (BC), and transparent clock (TC) on default profile.
- IR8340 doesn't support OC-master.
- All PTP profiles over bundles or port-channels are not supported on IR8340.

### Power Profile Mode

The IEEE Power Profile defines specific or allowed values for PTP networks used in power substations. The defined values include the optimum physical layer, the higher level protocol for PTP messages, and the preferred best master clock algorithm. The Power Profile values ensure consistent and reliable network time distribution within substations, between substations, and across wide geographic areas.

The router is optimized for PTP in these ways:

- Hardware—The router uses FPGA and PHY for the PTP function. The PHY time stamps the Fast Ethernet and Gigabit Ethernet ports.



- Software—In Power Profile mode, the router uses the configuration values defined in the IEEE 1588 Power Profile standard.

The following table lists the configuration values defined by the IEEE 1588 Power Profile and the values that the router uses for each PTP profile mode.

**Table 1: Configuration Values for the IEEE PTP Power Profile and Router Modes**

PTP Field	Router Configuration Value	
	Power Profile Mode	Default Profile Mode
Message transmission	<p><b>Access Ports</b>—Untagged Layer 2 packets.</p> <p><b>Trunk Ports</b>—802.1Q tagged Layer 2 packets. PTP packets are tagged with the PTP VLAN. If the PTP VLAN is not configured, packets go untagged over the native VLAN.</p>	Layer 3 packets. By default, 802.1q tagging is disabled.
<b>MAC address</b> — Non-peer delay messages	01-00-5e-00-01-81.	Default profile uses L3 transport multicast address 224.0.1.129 for all PTP messages. Equivalent mac address is 01-00-5e-00-01-81
<b>MAC address</b> — Peer delay messages	01-80-C2-00-00-0E.	Not applicable to this mode.
Domain number	0.	0.
Path delay calculation	Peer-to-peer transparent clocks using the peer_delay mechanism.	End-to-end transparent clocks using the delay_request mechanism.
BMCA	Enabled.	Enabled.
Clock type	Two-step.	Two-step.
Time scale	Epoch.	Epoch.
Grandmaster ID and local time determination	PTP-specific TLV to indicate Grandmaster ID.	PTP-specific type, length, and value to indicate Grandmaster ID.
Time accuracy over network hops	Over 16 hops, slave device synchronization accuracy is within 1 usec (1 microsecond).	Not applicable in this mode.

## 802.1AS Profile

The IEEE 802.1AS standard "Timing and Synchronization for Time-Sensitive Applications in Bridged Local Area Networks" specifies the protocol and procedures used to ensure that synchronization requirements are met for time-sensitive applications across bridged and virtual bridged local area networks.

802.1AS specifies the use of IEEE 1588 (PTP) specifications where applicable in the context of IEEE Std 802.1D-2004 and IEEE Std 802.1Q-2005.1. The 802.1AS standard is one of three 802.1 AVB draft standards. 802.1AS over Ethernet (802.3) qualifies as a Profile of IEEE 1588-2008. It simplifies IEEE 1588 and defines synchronization over different types of media.



**Note** 802.1 AS can be configured with domain 0 only on IR8340 platform.

Key characteristics of 802.1AS are:

- For Ethernet full-duplex links, it uses the peer delay mechanism.
- All devices in the domain need to be 802.1AS capable.
- Transportation of 802.1AS packets is L2 multicast only, with no VLAN tag.
- It requires two-step processing (use of Follow\_Up and Pdelay\_Resp\_Follow\_Up messages to communicate timestamps).
- There is only a single active grandmaster in a time-aware network. That is, there is only a single 802.1AS domain.
- The BMCA (Best Master Clock Algorithm) is same as that used in IEEE 1588 with the following exceptions:
  - Announce messages received on a time recipient port that were not sent by the receiving time-aware system are used immediately; that is, there is no foreign-time source qualification.
  - A port that the BMCA determines should be a time source port enters the time source state immediately; that is, there is no pre-time source state.
  - The uncalibrated state is not needed and therefore not used.
  - All time-aware systems are required to participate in best master selection (even if the system is not grandmaster capable).

802.1AS is used in the Time Sensitive Network (TSN) feature. However, as a precise timing distribution mechanism, 802.1AS runs by itself without TSN configuration or inputs. The 802.1AS feature software implementation is based on the existing time stamping functionality of FPGA and has no new requirement on hardware beyond other PTP profiles.

The end-to-end time-synchronization performance of 802.1AS is as follows:

- Any two time-aware systems separated by six or fewer time-aware systems (that is, seven or fewer hops) will be synchronized to within 1  $\mu$ s peak-to-peak of each other during steady-state operation.
- Performance beyond 7 hops is not defined.

## PTP Profile Comparison

*Table 2: Comparison of PTP Profiles on IE Switches*

Profile	Default (*)	Power Profile-2011	Power Profile-2017	802.1AS
Standard	IEEE1588 v2 (J.3)	IEEE C37.238-2011	IEEE C37.238-2017	IEEE802.1AS

Profile	Default (*)		Power Profile-2011		Power Profile-2017	802.1AS
Mode	Boundary	End-to-End transparent	Boundary	Peer-to-Peer transparent	Peer-to-Peer transparent	**
Path Delay	Delay req/res	Delay req/res	Peer delay req/res	Peer delay req/res	Peer delay req/res	Peer delay req/res
Non-PTP device allowed in PTP domain	Yes	Yes	No	No	No	No
Transport	UDP over IP (multicast)		L2 Multicast		L2 Multicast	L2 Multicast

\* Delay Request-Response Default PTP profile (as defined in IEEE1588 J.3).

\*\* There is no mode setting for 802.1AS. Mathematically it is equivalent to P2P transparent, but it works differently from a transparent clock.

## Tagging Behavior for PTP Packets

The following table describes the switch tagging behavior in Power Profile and Default Profile modes.

**Table 3: Tagging Behavior for PTP Packets**

Switch Port Mode	Configuration	Power Profile Mode		Default Profile Mode	
		Behavior	Priority	Behavior	Priority
Trunk Port	<b>vlan dot1q tag native</b> enabled	Switch tags packets	7	Switch tags packets	7
Trunk Port	<b>vlan dot1q tag native</b> disabled	PTP software tags packets	4	Untagged	None
Access Port	N/A	Untagged	None	Untagged	None

## PTP Clock Modes Supported on the IR8340 Router

PTP synchronization behavior depends on the PTP clock mode that you configure on the router. You can configure the router for one of the following global modes.

See [Guidelines and Limitations, on page 16](#) for guidelines for configuring each of the clock modes.

IR8340 supports the following PTP device types:

- OC-slave , boundary clock, and transparent clock on Default Profile/IEEE 1588.
- Boundary clock and transparent clock on Power profile.
- Boundary clock on Dot1as profile.




---

**Note** Currently all above profiles support two-step mode and don't support one-step mode on IR8340.

---

## Configurable Boundary Clock Synchronization Algorithm

You can configure the BC synchronization algorithm to accommodate various PTP use cases, depending on whether you need to prioritize filtering of input time errors or faster convergence. A PTP algorithm that filters packet delay variation (PDV) converges more slowly than a PTP algorithm that does not.

By default, the BC uses a linear feedback controller (that is, a servo) to set the BC's time output to the next clock. The linear servo provides a small amount of PDV filtering and converges in an average amount of time. For improved convergence time, BCs can use the TC feedforward algorithm to measure the delay added by the network elements forwarding plane (the disturbance) and use that measured delay to control the time output.

While the feedforward BC dramatically speeds up the boundary clock, the feedforward BC does not filter any PDV. The adaptive PDV filter provides high quality time synchronization in the presence of PDV over wireless access points (APs) and enterprise switches that do not support PTP and that add significant PDV.

Three options are available for BC synchronization (all are compliant with IEEE 1588-2008):

- Feedforward—For very fast and accurate convergence; no PDV filtering.
- Adaptive—Filters as much PDV as possible, given a set of assumptions about the PDV characteristics, the hardware configuration, and the environmental conditions.




---

**Note** With the adaptive filter, the switch does not meet the time performance requirements specified in ITU-T G.8261.

---

- Linear—Provides simple linear filtering (the default).

Adaptive mode (**ptp transfer filter adaptive**) is not available in Power Profile mode.


## NTP to PTP Time Conversion

NTP to PTP Time Conversion allows you to use Network Time Protocol (NTP) as a time source for PTP. Customers who use PTP for very precise synchronization within a site can use NTP across sites, where precise synchronization is not required.

NTP is the traditional method of synchronizing clocks across packet based networks. NTP uses a two-way time transfer mechanism, between a time source and an end device. NTP is capable of synchronizing a device within a few 100 milliseconds across the Internet, and within a few milliseconds in a tightly controlled LAN. The ability to use NTP as a time source for PTP allows customers to correlate data generated in their PTP network with data in their enterprise data centers running NTP.

The following figure shows an example of an industrial network based on the Industrial Automation and Control System Reference Model. The enterprise zone and demilitarized zone run NTP, and the manufacturing zone and cell/area zone run PTP with NTP as the time source. The switch with the NTP to PTP conversion feature can be either the Layer 2 Switch or the Distribution Switch in the Cell/Area Zone.

Figure 5: Industrial Network with NTP and PTP

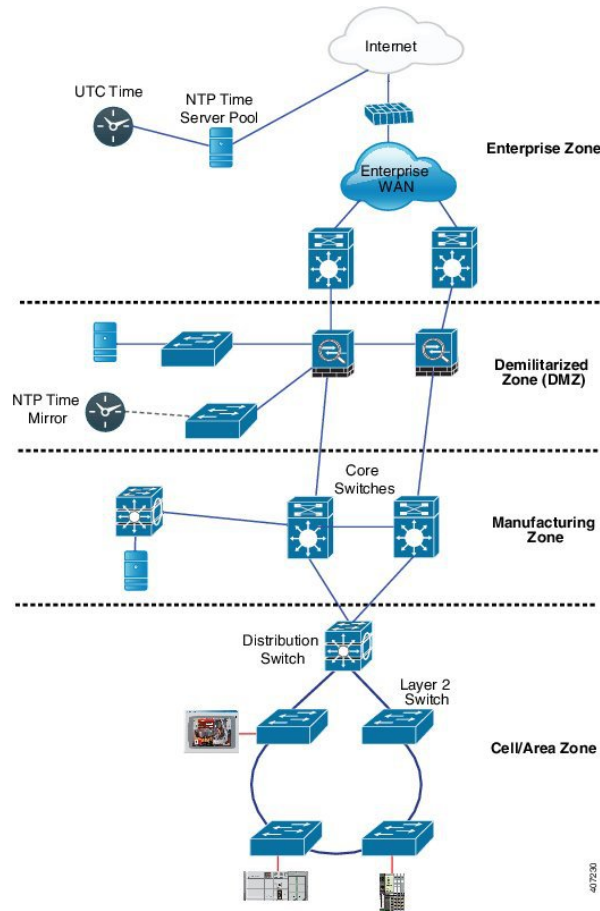

## Clock Manager

The clock manager is the component in the Cisco NTP to PTP software architecture that keeps track of the various time services and selects the clock that actively provides time. The clock manager notifies the time services of important changes, such as state changes, leap seconds, or daylight saving time.

The clock manager selects the NTP or manually-set clock first, followed by PTP and the real-time clock if NTP is not active. The following table shows the results of the clock selection process.

Table 4: Time Service Selection

NTP (Active) or Manually Set	PTP (Active)	Real-Time Clock	Selected Output
True	Don't care	Don't care	NTP or Manually Set
False	True	Don't care	PTP
False	False	True	Real-Time Clock

In general, the clock manager ensures that the time displayed in the Cisco IOS commands `show ptp lan clock` and `show clock` match. The `show clock` command always follows this priority, but there are two corner cases where the `show ptp lan clock` time may differ:

- The router is either a TC or a BC, and there is no other active reference on the network. To preserve backwards compatibility, the TC and BC never take their time from the clock manager, only from the network's PTP GMC. If there is no active PTP GMC, then the time displayed in the `show clock` and the `show ptp lan clock` command output may differ.
- The router is a synchronizing TC, a BC with a slave port, or a GMC-BC with slave port, and the time provided by the PTP GMC does not match the time provided by NTP or the user (that is, manually set). In this case, the PTP clock must forward the time from the PTP GMC. If the PTP clock does not follow the PTP GMC, then the PTP network will end up with two different time bases, which would break any control loops or sequence of event applications using PTP.

The following table shows how the Cisco IOS and PTP clocks behave given the various configurations. Most of the time, the two clocks match. Occasionally, the two clocks are different; those configurations are highlighted in the table.

**Table 5: Expected Time Flow**

IOS Clock Configuration	PTP Clock Configuration	IOS Clock Source	PTP Clock Source
Calendar	PTP BC, E2E TC, or GMC-BC in BC Mode	PTP	PTP
Manual	PTP BC, E2E TC, or GMC-BC in BC Mode	Manual	PTP
NTP	PTP BC, E2E TC, or GMC-BC in BC Mode	NTP	PTP
Calendar	GMC-BC in GM Mode	Calendar	Calendar
Manual	GMC-BC in GM Mode	Manual	Manual
NTP	GMC-BC in GM Mode	NTP	NTP

## GMC Block


GMC Block protects an existing network from any rogue GMC that might try to synchronize with the devices inside the network. This feature is supported for all PTP clock modes except Forward mode. After the feature is enabled on an interface, only the egress Announce, Sync, and Followup PTP packets are allowed and all ingress Announce, Sync, and Followup packets are dropped on this interface. This prevents the port state transition to time recipient.

Information about a rogue GMC is retrieved from the packets before dropping them. However, egress PTP packets are still allowed from this interface, so it can act as a GMC. To identify the rogue device, details such as IP address and clock ID are stored and displayed for the interface. Two Syslog messages are also generated to notify the presence and clearance of rogue devices.

You can configure PTP `gmc-block` on multiple ports, if you suspect multiple foreign networks are connected to your existing system. Per-port Syslog messages are displayed after an interval of 30 seconds of receiving rogue packets and after 180 -240 seconds when packets stop coming. Relay minor alarms and SNMP traps are also generated to notify of the presence of foreign rogue devices.

### Packet Flow

The following figure shows an example of a PTP network topology with the GMC Block feature configured on an interface.

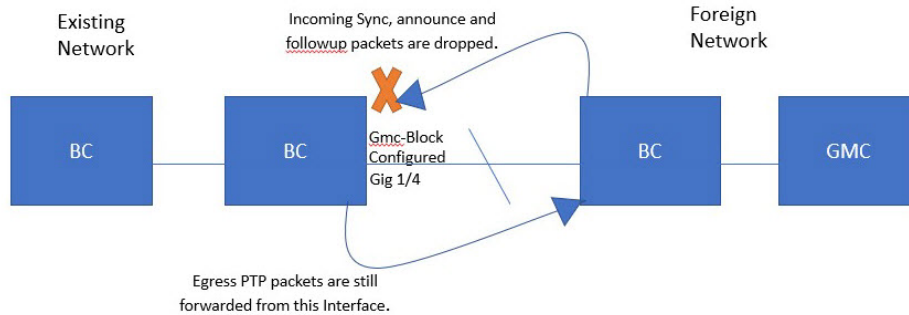


PTP packets originate in the GMC of the foreign network in an attempt to sync with the existing network. When the PTP packets reach the port configured with GMC Block, the packets are dropped after the system retrieves the required information from them.

Because packets from the foreign network are restricted, the system syncs with the local GMC present in the existing system. PTP packets originated on the port configured with GMC Block are still allowed to egress from this interface, which allows devices in the existing network to be GMC.

### Packet Flow

The following figure shows an example of a PTP network topology with the GMC Block feature configured on an interface.

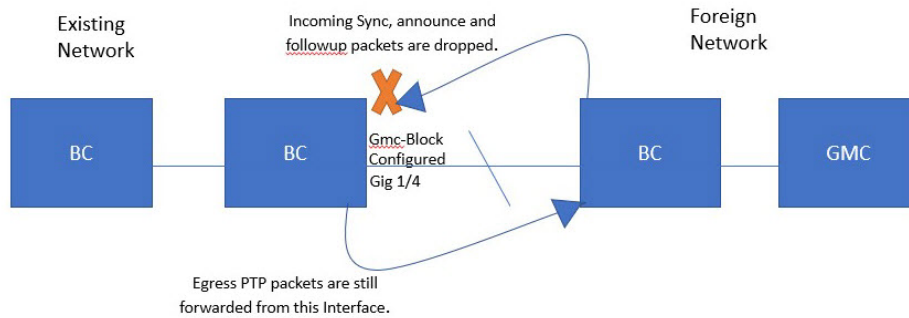

PTP packets originate in the GMC of the foreign network in an attempt to sync with the existing network. When the PTP packets reach the port configured with GMC Block, the packets are dropped after the system retrieves the required information from them.

Because packets from the foreign network are restricted, the system syncs with the local GMC present in the existing system. PTP packets originated on the port configured with GMC Block are still allowed to egress from this interface, which allows devices in the existing network to be GMC.

## Guidelines and Limitations

### PTP Messages

- The Cisco PTP implementation supports only the two-step clock and not the one-step clock.
- Cisco PTP supports multicast PTP messages only.

### PTP Mode and Profile

- The router and the grandmaster clock must be in the same PTP domain.
- When Power Profile mode is enabled, the router drops the PTP announce messages that do not include these two Types, Length, Value (TLV) message extensions: *Organization\_extension* and *Alternate\_timescale*.

If the grandmaster clock is not compliant with PTP and sends announce messages without these TLVs, configure the router to process the announce message by entering the following command:

```
ptp clock boundary domain 1 profile power
allow-without-tlv
```

- When the router is in Power Profile mode, only the peer\_delay mechanism is supported.

To enable power profile boundary mode and associate interfaces using the clock-port suboption, enter the following command:

```
ptp clock boundary domain 1 profile power
clock-port 1
transport ethernet multicast interface gi0/1/1
```

- To disable power profile transparent mode, enter the following command, which returns the router to forward mode.

```
no ptp clock transparent domain x profile power
```

- To enable the E2E transparent clock, use the following command:

```
ptp clock transparent domain x profile default
```

- In Default Profile mode, only the delay\_request mechanism is supported.

To enable default profile boundary clock mode and interfaces associated with clock-port suboption, enter the following command:

```
ptp clock boundary domain 1 profile default
clock-port 1
transport ipv4 multicast interface gi0/1/1
```

- The 802.1AS profile does not have a clock mode setting.

### Packet Format

- The packet format for PTP messages can be 802.1q tagged packets or untagged packets.
- The router does not support 802.1q QinQ tunneling.
- In Power Profile mode:



- When the PTP interface is configured as an access port, PTP messages are sent as untagged, Layer 2 packets.
- When the PTP interface is configured as a trunk port, PTP packets are sent as 802.1q tagged Layer 2 packets over the port native VLAN.
- Time recipient IEDs must support tagged and untagged packets.
- When PTP packets are sent on the native VLAN in E2E Transparent Clock Mode, they are sent as untagged packets. To configure the switch to send them as tagged packets, enter the global **vlan dot1q tag native** command.

## VLAN Configuration

- Sets the PTP VLAN on a trunk port. The range is from 1 to 4094. The default is the native VLAN of the trunk port.
- In boundary mode, only PTP packets in PTP VLAN will be processed, PTP packets from other VLANs will be dropped.
- Before configuring the PTP VLAN on an interface, the PTP VLAN must be created and allowed on the trunk port.
- Most grandmaster clocks use the default VLAN 0. In Power Profile mode, the router default VLAN is VLAN 1 and VLAN 0 is reserved. When you change the default grandmaster clock VLAN, it must be changed to a VLAN other than 0.
- When VLAN is disabled on the grandmaster clock, the PTP interface must be configured as an access port.

## Clock Configuration

- All PHY PTP clocks are synchronized to the grandmaster clock. The router system clock is not synchronized as part of PTP configuration and processes.
- When VLAN is enabled on the grandmaster clock, it must be in the same VLAN as the native VLAN of the PTP port on the router.
- Grandmaster clocks can drop untagged PTP messages when a VLAN is configured on the grandmaster clock. To force the router to send tagged packets to the grandmaster clock, enter the global **vlan dot1q tag native** command.

## PTP Interaction with Other Features

- IR8340 does not support PTP over Port Channels.
- The following PTP clock modes only operate on a single VLAN:
  - e2transparent
  - p2pttransparent

## NTP to PTP Conversion

- The NTP to PTP feature supports the Default E2E Profile and Power Profile.

## Default Settings

- PTP is enabled on the router by default.
- By default, the router uses configuration values defined in the Default Profile (Default Profile mode is enabled).
- The router default PTP clock mode is E2E Transparent Clock Mode.
- The default BC synchronization algorithm is linear filter.

## Configuring GMC Mode

The following sections provide steps for configuring GMC mode for default and power profiles.

### Configuring GMC Mode for a Default Profile

Follow these steps to configure GMC mode for a default profile:

#### SUMMARY STEPS

1. **ptp clock boundary domain** *domain-number* **profile default**
2. **gmc-bc default**
3. **clock-port** *port-name*
4. **transport ipv4 multicast** *interface-type interface-number*

#### DETAILED STEPS

##### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>ptp clock boundary domain</b> <i>domain-number</i> <b>profile default</b>  <b>Example:</b> <code>router(config)# ptp clock boundary domain 0 profile default</code>	Enable the default profile boundary mode.
<b>Step 2</b>	<b>gmc-bc default</b>  <b>Example:</b> <code>router(config-ptp-clk)# gmc-bc default</code>	Enable the GMC boundary clock.

	Command or Action	Purpose
Step 3	<b>clock-port</b> <i>port-name</i> <b>Example:</b> <code>router(config-ptp-clk)# clock-port port1</code>	Define a new clock port.
Step 4	<b>transport ipv4 multicast</b> <i>interface-type interface-number</i> <b>Example:</b> <code>router(config-ptp-port)# transport ipv4 multicast interface Gi0/1/1</code>	Specify the transport mechanism for clocking traffic.

## Configuring GMC Mode for a Power Profile

Complete the steps in this section to configure GMC mode for a power profile.

### SUMMARY STEPS

1. **ptp clock boundary domain** *domain-number profile power*
2. **gmc-bc default**
3. **clock-port** *port-name*
4. **transport ethernet multicast** *interface-type interface-number*

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
Step 1	<b>ptp clock boundary domain</b> <i>domain-number profile power</i> <b>Example:</b> <code>router(config)# ptp clock boundary domain 0 profile power</code>	Enable the power profile boundary mode.
Step 2	<b>gmc-bc default</b> <b>Example:</b> <code>router(config-ptp-clk)# gmc-bc default</code>	Enable the GMC boundary clock.
Step 3	<b>clock-port</b> <i>port-name</i> <b>Example:</b> <code>router(config-ptp-clk)# clock-port port1</code>	Defines a new clock port.
Step 4	<b>transport ethernet multicast</b> <i>interface-type interface-number</i> <b>Example:</b> <code>router(config-ptp-port)# transport ethernet multicast interface gi0/1/1</code>	Specifies the transport mechanism for clocking traffic.

# Configuring PTP Default Profile

This section describes how to configure the router to operate in Default Profile mode.

## Configuring an Ordinary Clock Client

Follow these steps to configure the router as an ordinary clock client:

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ptp clock ordinary domain *domain-number* profile default**
4. **clock-port *port-name* {master | slave}**
5. **transport ipv4 multicast interface *interface-type interface-number***
6. (Optional) **vlan *vlan-id***

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b> <b>Example:</b> Router> <b>enable</b>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> Router# <b>configure terminal</b>	Enters configuration mode.
<b>Step 3</b>	<b>ptp clock ordinary domain <i>domain-number</i> profile default</b> <b>Example:</b> Router(config)# <b>ptp clock ordinary domain 0 profile default</b>	Configures the PTP clock. You can create the following clock types: <ul style="list-style-type: none"> <li>• ordinary—A 1588 clock with a single PTP port that can operate in Server or Client mode.</li> <li>• boundary—Terminates PTP session from Grandmaster and acts as PTP Server or Client clocks downstream.</li> <li>• transparent—Updates the PTP time correction field to account for the delay in forwarding the traffic. This helps improve the accuracy of 1588 clock at client.</li> </ul>
<b>Step 4</b>	<b>clock-port <i>port-name</i> {master   slave}</b> <b>Example:</b> Router(config-ptp-clk)# <b>clock-port slave slave</b>	Defines a new clock port and sets the port to PTP Server or Client mode; in client mode, the port exchanges timing packets with a PTP server clock.

	Command or Action	Purpose
Step 5	<b>transport ipv4 multicast interface</b> <i>interface-type</i> <i>interface-number</i> <b>Example:</b> <pre>Router(config-ptp-port)# transport ipv4 multicast interface Gi0/1/11</pre>	Specifies the transport mechanism for clocking traffic.
Step 6	(Optional) <b>vlan</b> <i>vlan-id</i> <b>Example:</b> <pre>vlan 100</pre>	Configure VLAN for tagged packets.

**Example****Example of Untagged**

```
ptp clock ordinary domain 0 profile default
clock-port slave slave
transport ipv4 multicast interface Gi0/1/11
```

**Example of Tagged**

```
ptp clock ordinary domain 0 profile default
clock-port slave slave
transport ipv4 multicast interface Gi0/1/11
vlan 100
```

## Configuring a Boundary Clock

If an interface is not added as part of BC clock, it will be in forward mode exchanging PTP packets, which will cause instability in PTP operation. To avoid this, it is recommended to disable PTP on all such interfaces using the **no ptp enable** command.

Follow these steps to configure the router as a boundary clock:

**SUMMARY STEPS**

1. **enable**
2. **configure terminal**
3. **ptp clock boundary domain** *domain-number* **profile default**
4. **clock-port** *port-name*
5. **transport ipv4 multicast interface** *interface-type* *interface-number*
6. (Optional) **vlan** *vlan-id*

**DETAILED STEPS****Procedure**

	Command or Action	Purpose
Step 1	<b>enable</b>	Enables privileged EXEC mode.

	Command or Action	Purpose
	<b>Example:</b> Router> <b>enable</b>	<ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> Router# <b>configure terminal</b>	Enters configuration mode.
<b>Step 3</b>	<b>ptp clock boundary domain <i>domain-number</i> profile default</b> <b>Example:</b> Router(config)# <b>ptp clock boundary domain 0 profile default</b>	Configures the PTP clock. You can create the following clock types: <ul style="list-style-type: none"> <li>• ordinary—A 1588 clock with a single PTP port that can operate in Server or Client mode.</li> <li>• boundary—Terminates PTP session from Grandmaster and acts as PTP Server or Client clocks downstream.</li> <li>• transparent—Updates the PTP time correction field to account for the delay in forwarding the traffic. This helps improve the accuracy of 1588 clock at client.</li> </ul>
<b>Step 4</b>	<b>clock-port <i>port-name</i></b> <b>Example:</b> Router(config-ptp-clk)# <b>clock-port dyn1</b>	Defines a new clock port.
<b>Step 5</b>	<b>transport ipv4 multicast interface <i>interface-type interface-number</i></b> <b>Example:</b> Router(config-ptp-port)# <b>transport ipv4 multicast interface Gi0/1/0</b>	Specifies the transport mechanism for clocking traffic.
<b>Step 6</b>	(Optional) <b>vlan <i>vlan-id</i></b> <b>Example:</b> vlan 100	Configure VLAN for tagged packets.

### Example

#### Example of Untagged

```
ptp clock boundary domain 0 profile default
clock-port dyn1
transport ipv4 multicast interface Gi0/1/0
clock-port dyn2
transport ipv4 multicast interface Gi0/1/2
```

#### Example of Tagged

```
ptp clock boundary domain 0 profile default
clock-port dyn1
transport ipv4 multicast interface Gi0/1/0
vlan 100
clock-port dyn2
```

```
transport ipv4 multicast interface Gi0/1/2
vlan 200
```

## Configuring a Transparent Clock

All interfaces will be part of TC mode once configured.

Follow these steps to configure the router as a transparent clock.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ptp clock transparent domain *domain-number* profile default**
4. (Optional) **vlan *vlan-id***

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
Step 1	<b>enable</b> <b>Example:</b> Router> <b>enable</b>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b> <b>Example:</b> Router# <b>configure terminal</b>	Enters configuration mode.
Step 3	<b>ptp clock transparent domain <i>domain-number</i> profile default</b> <b>Example:</b> Router(config)# <b>ptp clock transparent domain 0 profile default</b>	Configures the PTP clock. You can create the following clock types: <ul style="list-style-type: none"> <li>• ordinary—A 1588 clock with a single PTP port that can operate in Server or Client mode.</li> <li>• boundary—Terminates PTP session from Grandmaster and acts as PTP Server or Client clocks downstream.</li> <li>• transparent—Updates the PTP time correction field to account for the delay in forwarding the traffic. This helps improve the accuracy of 1588 clock at client.</li> </ul>
Step 4	(Optional) <b>vlan <i>vlan-id</i></b> <b>Example:</b> vlan 100	Configure VLAN for tagged packets.

**Example****Example of Untagged**

```
ptp clock transparent domain 0 profile default
```

**Example of Tagged**

```
ptp clock transparent domain 0 profile default
vlan 100
```

**Example of not Including TLV Extensions: Power Profile-2011**

```
ptp clock transparent domain 0 profile power
allow-without-tlv
```

**Example of not Including TLV Extensions: Power Profile-2017**

```
ptp clock transparent domain 0 profile power-2017
allow-without-tlv
```

## Configuring PTP Power Profile

This section describes how to configure the router to use the PTP Power Profile.

The Power Profile defines a subset of PTP which is intended to run over layer 2 networks, that is, Ethernet, but no Internet Protocol.




---

**Note** Power Profile-2017 is supported only in Transparent Clock mode.

---

## Configuring an Ordinary Clock

Follow these steps to configure the router as an ordinary clock:

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ptp clock ordinary domain *domain-number* profile power**
4. **clock-port *port-name* {master | slave}**
5. **transport ipv4 multicast interface *interface-type interface-number***
6. (Optional) **vlan *vlan-id***

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.



	Command or Action	Purpose
	<b>Example:</b> Router> <b>enable</b>	<ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> Router# <b>configure terminal</b>	Enters configuration mode.
<b>Step 3</b>	<b>ptp clock ordinary domain <i>domain-number</i> profile power</b> <b>Example:</b> Router(config)# <b>ptp clock ordinary domain 0 profile power</b>	Configures the PTP clock. You can create the following clock types: <ul style="list-style-type: none"> <li>• ordinary—A 1588 clock with a single PTP port that can operate in Server or Client mode.</li> <li>• boundary—Terminates PTP session from Grandmaster and acts as PTP Server or Client clocks downstream.</li> <li>• transparent—Updates the PTP time correction field to account for the delay in forwarding the traffic. This helps improve the accuracy of 1588 clock at client.</li> </ul>
<b>Step 4</b>	<b>clock-port <i>port-name</i> {master   slave}</b> <b>Example:</b> Router(config-ptp-clk)# <b>clock-port slave slave</b>	Defines a new clock port and sets the port to PTP Server or Client mode; in client mode, the port exchanges timing packets with a PTP server clock.
<b>Step 5</b>	<b>transport ipv4 multicast interface <i>interface-type interface-number</i></b> <b>Example:</b> Router(config-ptp-port)# <b>transport ipv4 multicast interface Gi0/1/11</b>	Specifies the transport mechanism for clocking traffic.
<b>Step 6</b>	(Optional) <b>vlan <i>vlan-id</i></b> <b>Example:</b> vlan 100	Configure VLAN for tagged packets.

### Example

#### Example of Untagged

```
ptp clock ordinary domain 0 profile power
clock-port slave slave
transport ipv4 multicast interface Gi0/1/11
```

#### Example of Tagged

```
ptp clock ordinary domain 0 profile power
clock-port slave slave
transport ipv4 multicast interface Gi0/1/11
vlan 100
```

## Configuring a Boundary Clock

If an interface is not added as part of BC clock, it will be in forward mode exchanging PTP packets, which will cause instability in PTP operation. To avoid this, it is recommended to disable PTP on all such interfaces using the **no ptp enable** command.

Follow these steps to configure the router as a boundary clock:

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ptp clock boundary domain** *domain-number* **profile power**
4. **clock-port** *port-name*
5. **transport ethernet multicast interface** *interface-type interface-number*
6. (Optional) **vlan** *vlan-id*

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b> <b>Example:</b> Router> <b>enable</b>	Enables privileged EXEC mode. <ul style="list-style-type: none"><li>• Enter your password if prompted.</li></ul>
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> Router# <b>configure terminal</b>	Enters configuration mode.
<b>Step 3</b>	<b>ptp clock boundary domain</b> <i>domain-number</i> <b>profile power</b> <b>Example:</b> Router(config)# <b>ptp clock boundary domain 0 profile default</b>	Configures the PTP clock. You can create the following clock types: <ul style="list-style-type: none"><li>• boundary—Terminates PTP session from Grandmaster and acts as PTP Server or Client clocks downstream.</li><li>• transparent—Updates the PTP time correction field to account for the delay in forwarding the traffic. This helps improve the accuracy of 1588 clock at client.</li></ul>
<b>Step 4</b>	<b>clock-port</b> <i>port-name</i> <b>Example:</b> Router(config-ptp-clk)# <b>clock-port dyn1</b>	Defines a new clock port.
<b>Step 5</b>	<b>transport ethernet multicast interface</b> <i>interface-type interface-number</i> <b>Example:</b>	Specifies the transport mechanism for clocking traffic.

	Command or Action	Purpose
	Router(config-ptp-port)# <b>transport ethernet multicast interface</b> Gi0/1/0	
<b>Step 6</b>	(Optional) <b>vlan</b> <i>vlan-id</i>  <b>Example:</b> vlan 100	Configure VLAN for tagged packets.

### Example

#### Example of Untagged

```
ptp clock boundary domain 0 profile power
clock-port dyn1
  transport ethernet multicast interface Gi0/1/0
clock-port dyn2
  transport ethernet multicast interface Gi0/1/2
```

#### Example of Tagged

```
ptp clock boundary domain 0 profile power
clock-port dyn1
  transport ethernet multicast interface Gi0/1/0
  vlan 100
clock-port dyn2
  transport ethernet multicast interface Gi0/1/2
  vlan 100
```

## Configuring a Transparent Clock

Follow these steps to configure the router as a transparent clock.

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ptp clock transparent domain** *domain-number* **profile power**
4. (Optional) **vlan** *vlan-id*

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Router> <b>enable</b>	Enables privileged EXEC mode.  • Enter your password if prompted.
<b>Step 2</b>	<b>configure terminal</b>  <b>Example:</b>	Enters configuration mode.

	Command or Action	Purpose
	Router# <code>configure terminal</code>	
<b>Step 3</b>	<p><b>ptp clock transparent domain <i>domain-number</i> profile power</b></p> <p><b>Example:</b></p> <pre>Router(config)# ptp clock transparent domain 0 profile power</pre>	<p>Configures the PTP clock. You can create the following clock types:</p> <ul style="list-style-type: none"> <li>• boundary—Terminates PTP session from Grandmaster and acts as PTP Server or Client clocks downstream.</li> <li>• transparent—Updates the PTP time correction field to account for the delay in forwarding the traffic. This helps improve the accuracy of 1588 clock at client.</li> </ul>
<b>Step 4</b>	<p>(Optional) <code>vlan <i>vlan-id</i></code></p> <p><b>Example:</b></p> <pre>vlan 100</pre>	Configure VLAN for tagged packets.

### Example

#### Example of Untagged

```
ptp clock transparent domain 0 profile power
```

#### Example of Tagged

```
ptp clock transparent domain 0 profile power
vlan 100
```

#### Example of not Including TLV Extensions: Power Profile-2011

```
ptp clock transparent domain 0 profile power
allow-without-tlv
```

#### Example of not Including TLV Extensions: Power Profile-2017

```
ptp clock transparent domain 0 profile power-2017
allow-without-tlv
```

## Configuring 802.1AS Profile

This section describes how to configure the router to use the 802.1AS Profile.

Generalized Precision Time Protocol (gPTP) is an IEEE 802.1AS standard, which provides a mechanism to synchronize clocks of the bridges and end point devices in an AVB network. It defines the mechanism to elect the grandmaster clock (BMCA) among the time-aware bridges and talker and listener. The grandmaster is the root of the timing hierarchy that gets established in the time-aware network and distributes time to nodes below to enable synchronization.

A gPTP domain, hereafter referred to as simply a domain, consists of one or more time-aware systems and links that meet the requirements of this standard and communicate with each other as defined by the IEEE 802.1AS protocol. A gPTP domain defines the scope of gPTP message communication, state, operations, data sets, and timescale.

The domain number of a gPTP domain shall be 0.

There are two types of time-aware systems used in a gPTP domain, as follows:

- time-aware end station
- time-aware Bridge



**Note** Dot1as profile supports BC type only. It does not support TC and OC-slave.



**Note** Dot1as profile is not supported when GNSS is enabled on the device.

## Configuring a Boundary Clock

If an interface is not added as part of BC clock, it will be in forward mode exchanging PTP packets, which will cause instability in PTP operation. To avoid this, it is recommended to disable PTP on all such interfaces using the **no ptp enable** command.

Follow these steps to configure the router as a boundary clock:

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ptp clock boundary domain** *domain-number* **profile dot1as**
4. **clock-port** *port-name*
5. **transport ethernet multicast interface** *interface-type interface-number*

### DETAILED STEPS

#### Procedure

	Command or Action	Purpose
Step 1	<b>enable</b> <b>Example:</b> Router> <b>enable</b>	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<b>configure terminal</b> <b>Example:</b> Router# <b>configure terminal</b>	Enters configuration mode.
Step 3	<b>ptp clock boundary domain</b> <i>domain-number</i> <b>profile dot1as</b> <b>Example:</b> Router(config)# <b>ptp clock boundary domain 0 profile dot1as</b>	Configures the PTP clock. You can create the following clock type: <ul style="list-style-type: none"> <li>• <b>boundary</b>—Terminates PTP session from Grandmaster and acts as PTP Server or Client clocks downstream.</li> </ul>

	Command or Action	Purpose
<b>Step 4</b>	<b>clock-port</b> <i>port-name</i>  <b>Example:</b> Router(config-ptp-clk)# <b>clock-port dyn1</b>	Defines a new clock port.
<b>Step 5</b>	<b>transport ethernet multicast interface</b> <i>interface-type</i> <i>interface-number</i>  <b>Example:</b> Router(config-ptp-port)# <b>transport ethernet multicast interface Gi0/1/0</b>	Specifies the transport mechanism for clocking traffic.

**Example**

```
ptp clock boundary domain 0 profile dotlas
clock-port dyn1
transport ethernet multicast interface Gi0/1/0
clock-port dyn2
transport ethernet multicast interface Gi0/1/2
```

## Disable PTP

Complete the steps in this section to disable PTP on an interface.



**Note** The following procedure applies to both default and power modes.

**SUMMARY STEPS**

1. **interface** *interface-id*
2. **no ptp enable**

**DETAILED STEPS****Procedure**

	Command or Action	Purpose
<b>Step 1</b>	<b>interface</b> <i>interface-id</i>  <b>Example:</b> router(config)# <b>interface gi0/1/1</b>	Enter interface configuration mode.
<b>Step 2</b>	<b>no ptp enable</b>	Disable PTP on the interface.

## PTP Multidomain

IR8340 can configure up to 4 different clock domains. All domains can be of different profiles and roles. There is a restriction of supporting only one TC at a time, but you can have multiple BC/OC domains.

```
DUT1#show run | sec ptp
ntp clock boundary domain 1 profile default
  clock-port 1
  transport ipv4 multicast interface Gi0/1/0
ntp clock boundary domain 2 profile power
  clock-port mas
  transport ethernet multicast interface Gi0/1/1
ntp clock ordinary domain 3 profile default
  clock-port sl slave
  transport ipv4 multicast interface Gi0/1/2
ntp clock transparent domain 4 profile power
```

### GMC COMMANDS:

```
ntp clock boundary domain 2 profile power|default
Gmc-bc source 0 ntp or Gmc-bc source 0 ptp domain 1 --- we can specifically mention sources
Gmc-bc default --- This command will take NTP|Handset based on availability and class value.
```

## Verifying the Configuration

You can use the following commands to verify the PTP configuration:

- show ptp clock dataset parent
- show ptp clock dataset current
- show ptp clock dataset time-properties
- show ptp clock dataset default
- show ptp clock running
- show ptp port dataset port
- show ptp lan clock
- show ptp lan port counters messages
- show ptp lan port counters errors
- show ptp lan foreign-master-record
- show ptp lan rogue-master-record
- show ptp lan histogram ?
  - delay—Show PTP histogram of mean path delay
  - offset—Show PTP histogram of offset
  - time-error—Show PTP history of time error (last 15 days)

- show ptp lan history ?

delay—Show PTP history of mean path delay (last 15 days)

offset—Show PTP history of offset (last 15 days)

time-error—Show PTP history of time error (last 15 days)

The following example shows the Default Profile configuration:

```
DUT1#show ptp lan clock running
                PTP Boundary Clock [Domain 0] [Profile: default]
State          Ports          Pkts sent    Pkts rcvd    Redundancy Mode
PHASE_ALIGNED 1                7340         13877        Hot standby

                PORT SUMMARY

Name Tx Mode      Role          Transport    State        Sessions    PTP Master
1    mcast       negotiated    Gi0/1/0     Slave        1           UNKNOWN
DUT1#
```

The following example shows the Power Profile configuration:

```
DUT1#show ptp clock running
                PTP Boundary Clock [Domain 0] [Profile: power]
State          Ports          Pkts sent    Pkts rcvd    Redundancy Mode
PHASE_ALIGNED 1                193          46           Hot standby

                PORT SUMMARY

Name Tx Mode      Role          Transport    State        Sessions    PTP Master
1    mcast       negotiated    Ethernet     Slave        1           UNKNOWN
DUT1#
```

The following example shows the 802.1AS Profile configuration:

```
DUT1#show ptp clock running
                PTP Boundary Clock [Domain 0] [Profile: dot1as]
State          Ports          Pkts sent    Pkts rcvd    Redundancy Mode
PHASE_ALIGNED 1                1193         1146         Hot standby

                PORT SUMMARY

Name Tx Mode      Role          Transport    State        Sessions    PTP Master
1    mcast       negotiated    Ethernet     Slave        1           UNKNOWN
DUT1#
```