



Priority Shutdown Commands

This chapter provides details of the commands used for assigning priorities to the line cards for shutdown.

- [power-mgmt progressive location, on page 2](#)
- [priority location, on page 3](#)

power-mgmt progressive location

To enable the LC priority shutdown feature on the chassis, use the **power-mgmt progressive location** command in the global configuration mode.

power-mgmt progressive location *rack-id*

Syntax Description	<i>rack-id</i> The ID of the rack.
---------------------------	------------------------------------

Command Default	None
------------------------	------

Command Modes	Global configuration
----------------------	----------------------

Command History	Release	Modification
	Release 6.5.31	This command was introduced.

Usage Guidelines	None
-------------------------	------

Example

The following example enables the LC priority shutdown on the chassis specified.

```
RP/0/RP0:hostname (config)#power-mgmt progressive location L0
```

priority location

To configure the shutdown priority to the line card specified, use the **priority location** command in the power-mgmt progressive configuration mode.

priority location *line-card-location card-priority*

Syntax Description	<i>line-card-location</i>	The ID of the rack and slot.
	<i>card-priority</i>	The shutdown priority.
Command Default	None	
Command Modes	Power-mgmt progressive configuration mode.	
Command History	Release	Modification
	Release 6.5.31	This command was introduced.
Usage Guidelines	None	

Example

The following example configures the shutdown priority to the line card specified.

```
RP/0/RP0:hostname (config-location-L0)#priority location 0/9 6
```

priority location