



Secondary IP and Source Interface Commands

- [system settings wan secondary](#), on page 2
- [system settings source-interface](#) , on page 3

system settings wan secondary

To configure secondary IP on the WAN interface, use the **system settings wan secondary** command in global configuration mode.

system settings wan secondary *ip address*

Syntax Description	<i>ip address</i> Specifies the IP address.
Command Default	None
Command Modes	Global configuration mode
Command History	<p>Release Modification</p> <p>3.5.1 This command was introduced.</p>

Example

The following example configures the secondary WAN.

```
nfvis(config)# system settings wan secondary ip address 1.1.2.3 255.255.255.0
```

system settings source-interface

To configure source interface, use the **system settings source-interface** command in global configuration mode.

system settings source-interface *ip address*

Syntax Description	<i>ip address</i> Specifies the IP address.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release Modification
	3.5.1 This command was introduced.

Example

The following example configures the source interface.

```
nfvis(config)# system settings source-interface 1.1.2.3
```

system settings source-interface