



NFVIS Integration with Docker Container Lifecycle

Docker container lifecycle infrastructure is developed in NFVIS for Cisco SD-WAN Cloud OnRamp for Colocation solution. Container lifecycle APIs are developed to bring up docker containers.

- [Cisco Colo Manager, on page 1](#)

Cisco Colo Manager

Cisco colo manager (CCM) is a software stack managing switches in colo. In the Cisco SD-WAN Cloud OnRamp for Colocation solution, CCM is hosted on NFVIS software in a Docker container. CCM is hosted on the CSP devices along with VNFs and there are no dedicated CSP devices for hosting CCM. CCM is used to configure and provision PNFs (switches) in this solution.

Cisco colo manager (CCM) is bundled along with the Cisco NFVIS software which is used as the base virtualization infrastructure software running on the compute platform. The NFVIS software provides programmable Rest and netconf APIs and an orchestrator can use these APIs to configure and monitor the system, instantiate virtual network functions and configure the VNF networks and service chains. As part of colo provisioning for the orchestrator, vManage selects one device in the colo and sends netconf action command to bring up the CCM container. The CCM container is connected to the colo management network. This management network is used to transfer files and images into and out of the systems. This network will not be used for the normal customer data traffic.

CCM State Transitions from the Host Side

vManage brings up CCM on one of the CSP devices in the Cloud OnRamp for Colocation solution. CCM state transitions are seen on the host side, using the container life-cycle model's state operation.

The CCM state on the host side has the following states:

- **Starting** : when CCM has been brought up and health check script has not been run. During this phase, vManage waits for CSP state to change to Healthy.
- **Healthy** : when the health check script has been run and it has passed the checks. This state implies that the operational model for configuration status can be queried or configuration can be pushed. During this phase, if CCM is in INIT state, vManage pushes the device list. If CCM is not in INIT state, Cloud OnRamp for Colocation may be in degraded state and recovery flow must happen.

- **Unhealthy** : If the CCM does not boot properly, the CCM container is not usable and needs to be recovered. CCM in unhealthy state can be due to docker daemon not running, CCM is not configured with correct management IP address, gateway or CCM cannot respond to ping.

The starting state can only be seen when the container is brought up or re-spun. Healthy and unhealthy states can transition to each other during the lifetime of the container. A notification is also sent whenever the CCM state changes.



Note The CCM container state is tracked through container life-cycle model as one of the containers. This is not CCM-state or CCM-status oper. The state for container named ColoMgr is used for CCM state transitions.

State	Action/config can be pushed	config status queried	oper model on host	notification for CCM state
Starting	No	No	Yes	Yes
Unhealthy	No	No	Yes	Yes
Healthy	Yes	Yes	Yes	Yes

PNF device list is sent from vManage to the NFVIS hosting CCM when CCM is in healthy state.

To verify CCM state, when Colo Manager crashes on a CSP device use **support show container** command:

```
CSP# support show container
Possible completions:
  docker-container-ls  Lists all containers
  docker-info         Lists docker daemon info
  docker-inspect      Inspect container or volume
  docker-volume-ls    Lists all volumes
  dump                Dumps all container related info
```

CCM Notifications

CCM health check sends CCM state transitions to vManage notification stream.

You can view the CCM event notifications using the **show notification stream vmanageEvent** command.

Event Type	Notification Trigger	Notification Output Example
ccmEvent - CCM-STATUS (init, in-progress, success, failure)		<pre>notification eventTime 2018-06-29T01:58:55.767142+00:00 ccmEvent severity-level minor host-name ccm user-id nso_user config-change false transaction-id 0 status SUCCESS status-code 0 status-message INIT details CCM status :INIT event-type CCM-STATUS !</pre>

CCM Recovery

When CCM is up, the Catalyst 9000 series switches are onboard successfully and CCM is restarted on the same or different CSP, the CCM recovery is initiated.

vManage brings down CCM and then brings it up again. vManage sends the device list with passwords for the switches along with all the service configurations. CCM then uses these configurations to sync with the device.

Recovery flag for device action list - false for day0, true for recovery (mandatory).

Static IP change for device action list - IP addresses for devices is sent all the time - day0 and recovery.

Support Commands

To verify the CCM version use **support show ccm-version** :

```
CSP# support show ccm-version
Cisco Colo Manager (CCM)
Version 0.0.1-150
Build date Tue 06 Nov 2018 09:09:28 AM UTC
```

To verify the firewall state use **support show firewall** :

```
CSP# support show firewall
```

Possible completions:

```
list-forward-ports  Lists all port forwarding rules
state               Lists firewalld daemon status
```

To display information about OVS switch use **support ovs vsctl show** :

```
CSP# support ovs vsctl show
```

Possible completions:

```
| <cr>
```

```
CSP2# support ovs vsctl show
```

```
107a6588-62f1-411f-b5da-fa0fd39f2500
  Bridge ovs-data-br
    Port bond-bond_data
      tag: 1
      Interface "eth2-3"
      Interface "eth2-4"
    Port ovs-data-br
      Interface ovs-data-br
        type: internal
  Bridge ovs-ha-br
    Port bond-bond_ha
      tag: 1
      Interface "eth2-2"
      Interface "eth2-1"
    Port ovs-ha-br
      Interface ovs-ha-br
        type: internal
  Bridge int-mgmt-net-br
    Port colo-mgmt
      Interface colo-mgmt
        type: internal
    Port mgmt-bond
      Interface "eth0-2"
      Interface "eth0-1"
    Port int-mgmt-net-br
      Interface int-mgmt-net-br
        type: internal
  ovs_version: "2.5.2"
```

To display the list of NFVIS system settings use **show system:system settings-native** :

```
system:system settings-native mgmt ip-info interface colo-mgmt
system:system settings-native mgmt ip-info ipv4_address 192.168.30.163
system:system settings-native mgmt ip-info netmask 255.255.255.0
system:system settings-native mgmt ip-info link-local ipv6 address ::
system:system settings-native mgmt ip-info link-local ipv6 prefixlen 0
system:system settings-native mgmt ip-info global ipv6 address ::
system:system settings-native mgmt ip-info global ipv6 prefixlen 0
system:system settings-native mgmt ip-info mac_address b2:5d:28:aa:f1:96
system:system settings-native mgmt ip-info mtu 1500
system:system settings-native mgmt ip-info txqueuelen 1000
system:system settings-native mgmt stats rx_packets 7140693
system:system settings-native mgmt stats rx_bytes 767558248
system:system settings-native mgmt stats rx_errors 0
system:system settings-native mgmt stats rx_dropped 2
system:system settings-native mgmt stats rx_overruns 0
system:system settings-native mgmt stats rx_frame 0
system:system settings-native mgmt stats tx_packets 5259073
system:system settings-native mgmt stats tx_bytes 1008512311
system:system settings-native mgmt stats tx_errors 0
system:system settings-native mgmt stats tx_dropped 0
system:system settings-native mgmt stats tx_overruns 0
system:system settings-native mgmt stats tx_carrier 0
```

```

system:system settings-native mgmt stats tx_collisions 0
system:system settings-native domain NA
system:system settings-native dns nameserver1 0.0.0.0
system:system settings-native dns nameserver2 0.0.0.0
system:system settings-native dns nameserver3 0.0.0.0
system:system settings-native hostname CSP2
system:system settings-native gateway ipv4_address 192.168.30.1
system:system settings-native gateway interface colo-mgmt
system:system settings-native gateway-ipv6 ipv6_address ::
system:system settings-native gateway-ipv6 interface NA
system:system settings-native trusted-source [ "not set" ]
system:system settings-native source-interface 0.0.0.0

```

To display information about a bond use **support ovs appctl bond-show mgmt-bond**

```

CSP2# support ovs appctl bond-show mgmt-bond
---- mgmt-bond ----
bond_mode: balance-slb
bond may use recirculation: no, Recirc-ID : -1
bond-hash-basis: 0
updelay: 0 ms
downdelay: 0 ms
next rebalance: 252 ms
lacp_status: negotiated
active slave mac: 00:fc:ba:d7:39:86(eth0-1)

slave eth0-1: enabled
    active slave
    may_enable: true
    hash 242: 8 kB load

slave eth0-2: enabled
    may_enable: true

```

To display the IP routing statistics use **support show route** :

```

CSP# support show route
Kernel IP routing table
Destination      Gateway          Genmask         Flags   MSS Window  irtt Iface
default          gateway         0.0.0.0         UG      0 0        0 colo-mgmt
172.16.255.22   127.0.1.254    255.255.255.255 UGH     0 0        0 tun_0_0
192.168.30.0    0.0.0.0        255.255.255.0  U      0 0        0 colo-mgmt

```

