



Preface

This preface describes the audience, and provides information about how to obtain related documentation.

- [Audience, on page i](#)
- [Related Documentation, on page i](#)
- [Obtaining Documentation and Submitting a Service Request, on page i](#)

Audience



Note The documentation set for this product strives to use bias-free language. For purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on standards documentation, or language that is used by a referenced third-party product.

This guide is intended for Cisco equipment providers and service persons who are technically knowledgeable and familiar with Cisco hardware devices. This guide identifies certain procedures that should be performed only by trained and qualified personnel.

Related Documentation

- [Cisco Enterprise Network Function Virtualization Infrastructure Software \(NFVIS\) Configuration Guide](#)
- [API Reference for Cisco Enterprise Network Function Virtualization Infrastructure Software](#)

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see [What's New in Cisco Product Documentation](#).

To receive new and revised Cisco technical content directly to your desktop, you can subscribe to the [What's New in Cisco Product Documentation RSS feed](#). RSS feeds are a free service.

