



# Frame-Relay-Native Commands

- [frame-relay lmi-type , on page 1](#)
- [frame-relay intf-type, on page 2](#)
- [frame-relay interface-dlci, on page 3](#)
- [frame-relay multilink bandwidth-class, on page 4](#)
- [interface, on page 5](#)
- [interface MFR, on page 8](#)
- [ip address, on page 9](#)
- [encapsulation frame-relay, on page 10](#)

## frame-relay lmi-type

To select the Local Management Interface (LMI) type, use the **frame-relay lmi-type** command in interface configuration mode. To return to the default LMI type, use the **no** form of this command.

```
frame-relay lmi-type { ansi }
no frame-relay lmi-type { ansi }
```

<b>Syntax Description</b>	<b>ansi</b> Annex D defined by American National Standards Institute (ANSI) standard T1.617.
---------------------------	--

<b>Command Default</b>	LMI autosense is active and determines the LMI type by communicating with the switch.
------------------------	---

<b>Command Modes</b>	Interface configuration (config-if)
----------------------	-------------------------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Catalyst SD-WAN Release 17.3.1a	Command qualified for use in Cisco SD-WAN Manager CLI templates.

<b>Usage Guidelines</b>	For usage guidelines, see the Cisco IOS XE <a href="#">frame-relay lmi-type</a> command.
-------------------------	--

<b>Examples</b>	The following is an example of the commands you might enter to configure an interface for the ANSI Annex D LMI type:
-----------------	--

**frame-relay intf-type**

```
interface Serial 0/1/0
encapsulation frame-relay
frame-relay lmi-type ansi
```

## frame-relay intf-type

To configure a Frame Relay switch type, use the **frame-relay intf-type** command in interface configuration mode. To disable the switch, use the **no** form of this command.

```
frame-relay intf-type [ dce | dte ]
no frame-relay intf-type [ dce | dte ]
```

<b>Syntax Description</b>	<table border="1"> <tr> <td><b>dce</b></td><td>(Optional) Router or access server functions as a switch connected to a router.</td></tr> <tr> <td><b>dte</b></td><td>(Optional) Router or access server is connected to a Frame Relay network.</td></tr> </table>	<b>dce</b>	(Optional) Router or access server functions as a switch connected to a router.	<b>dte</b>	(Optional) Router or access server is connected to a Frame Relay network.
<b>dce</b>	(Optional) Router or access server functions as a switch connected to a router.				
<b>dte</b>	(Optional) Router or access server is connected to a Frame Relay network.				

**Command Default** The router or access server is connected to a Frame Relay network.

**Command Modes** Interface configuration (config-if)

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Catalyst SD-WAN Release 17.3.1a	Command qualified for use in Cisco SD-WAN Manager CLI templates.

**Usage Guidelines** For usage guidelines, see the Cisco IOS XE [frame-relay intf-type](#) command.

**Examples** The following example configures a DTE switch type:

```
interface Serial 0/1/0
frame-relay intf-type dte
```

**Examples** The following example configures a DCE switch type on interface serial 0/0/1:5:

```
interface Serial 0/0/1:5
frame-relay intf-type dce
```

**Examples** The following example configures a DTE switch type on MFR interface 1:

```
interface MFR1
frame-relay intf-type dte
```

# frame-relay interface-dlci

To assign a data-link connection identifier (DLCI) to a specified Frame Relay subinterface on the router or access server, to assign a specific permanent virtual circuit (PVC) to a DLCI, use the **frame-relay interface-dlci** command in interface configuration mode. To remove this assignment, use the **no** form of this command.

```
frame-relay interface-dlci dlci
no frame-relay interface-dlci dlci
```

<b>Syntax Description</b>	<i>dlci</i> DLCI number to be used on the specified subinterface. Range: 16-1007
---------------------------	---

**Command Default** No DLCI is assigned.

**Command Modes** Interface configuration (config-if)  
Subinterface configuration (config-subif)

Command History	Release	Modification
	Cisco IOS XE Catalyst SD-WAN Release 17.3.1a	Command qualified for use in Cisco SD-WAN Manager CLI templates.

**Usage Guidelines** For usage guidelines, see the Cisco IOS XE [frame-relay interface-dlci](#) command.

**Examples** The following example assigns DLCI 80 to the main interface and then removes it.

```
Router(config)# interface Serial 0/1/0
Router(config-if)# frame-relay interface-dlci 80
Router(config-fr-dlci)# exit
Router(config-if)# interface Serial 0/1/0
Router(config-if)# no frame-relay interface-dlci 80
```

The following example assigns DLCI 100 to a point-to-point serial interface.

```
Router(config)# interface Serial 0/1/0.2
Router(config-if)# encapsulation frame-relay ietf
Router(config-if)# frame-relay interface-dlci 100
```

The following example assigns DLCI 100 on MFR interface 1:

```
Router(config)# interface MFR1
Router(config-if)# frame-relay interface-dlci 100
```

**frame-relay multilink bandwidth-class**

## frame-relay multilink bandwidth-class

To specify the criterion used to activate or deactivate a Frame Relay bundle, use the **frame-relay multilink bandwidth-class** command in interface configuration mode. To reset the bandwidth class to the default, use the **no** form of this command.

```
frame-relay multilink bandwidth-class { a | b | c }
no frame-relay multilink bandwidth-class
```

Syntax Description	<p><b>a</b> Bandwidth class A (single link) criterion will be used to activate or deactivate the Frame Relay bundle. This is the default.</p> <ul style="list-style-type: none"> <li>Criterion for activation--One or more bundle links indicate (by issuing a BL_ACTIVATE message) that operational bandwidth is available. When this occurs, the bundle emulates a physical link by issuing a PH_ACTIVATE message to the data-link layer.</li> <li>Criterion for deactivation--All bundle links are down and issue a BL_DEACTIVATE message, which triggers a PH_DEACTIVATE message to be sent to the data-link layer, indicating that the Frame Relay bundle cannot accept frames.</li> </ul> <p><b>b</b> Bandwidth class B (all links) criterion will be used to activate or deactivate the Frame Relay bundle.</p> <ul style="list-style-type: none"> <li>Criterion for activation--All bundle links indicate (by issuing a BL_ACTIVATE message) that operational bandwidth is available. When this occurs, the bundle emulates a physical link by issuing a PH_ACTIVATE message to the data-link layer.</li> <li>Criterion for deactivation--Any bundle link is down and issues a BL_DEACTIVATE message, which triggers a PH_DEACTIVATE message to be sent to the data-link layer, indicating that the Frame Relay bundle cannot accept frames.</li> </ul> <p><b>c</b> Bandwidth class C (threshold) criterion will be used to activate or deactivate the Frame Relay bundle.</p> <ul style="list-style-type: none"> <li>Criterion for activation--The minimum number of links in the configured bundle issue a BL_ACTIVATE message. When this occurs, the bundle emulates a physical link by issuing a PH_ACTIVATE message to the data-link layer.</li> <li>Criterion for deactivation--The number of bundle links issuing a BL_ACTIVATE message falls below the configured <i>threshold</i> value. When this occurs, a PH_DEACTIVATE message is sent to the data-link layer, which indicates that the Frame Relay bundle cannot accept frames.</li> </ul>
--------------------	--

**Command Default** Frame Relay bundles use bandwidth class A (single link).

**Command Modes** Interface configuration (config-if)

Command History	Release	Modification
	Cisco IOS XE Catalyst SD-WAN Release 17.3.1a	Command qualified for use in Cisco SD-WAN Manager CLI templates.

**Usage Guidelines**

For usage guidelines, see the Cisco IOS XE [frame-relay multilink bandwidth-class](#) command.

**Examples**

The following example shows how to specify the class A (single link) bandwidth class to trigger activation or deactivation of the Frame Relay bundle on MFR interface 1:

```
interface MFR1
  frame-relay multilink bandwidth-class a
```

The following example shows how to specify the class B (all links) bandwidth class to trigger activation or deactivation of the Frame Relay bundle on MFR interface 1:

```
interface MFR1
  frame-relay multilink bandwidth-class b
```

The following example shows how to specify the class C (threshold) bandwidth class to trigger activation or deactivation of the Frame Relay bundle on MFR interface 1:

```
interface MFR1
  frame-relay multilink bandwidth-class c
```

# interface

To configure an interface type and to enter interface configuration mode, use the **interface** command in the global configuration mode.

**interface** *type number . subinterface-number*

**interface** *type slot / subslot / port . subinterface-number [point-to-point]*

**no interface** *type number . subinterface-number*

**no interface** *type slot / subslot / port . subinterface-number [point-to-point]*

**Syntax Description**

<i>type</i>	Type of interface to be configured. See the table below.
<i>number</i>	Port, connector, or interface card number. The numbers are assigned at the factory at the time of installation or when added to a system; they can be displayed with the <b>showinterfaces</b> command.
<i>slot</i>	Chassis slot number. Refer to the appropriate hardware manual for slot information. For SIPs, refer to the platform-specific SPA hardware installation guide or the corresponding "Identifying Slots and Subslots for SIPs and SPAs" topic in the platform-specific SPA software configuration guide.
<i>/ subslot</i>	Secondary slot number on a SIP where a SPA is installed. The slash (/) is required. Refer to the platform-specific SPA hardware installation guide and the corresponding "Specifying the Interface Address on a SPA" topic in the platform-specific SPA software configuration guide for subslot information.

<i>/ port</i>	Port or interface number. The slash (/) is required. Refer to the appropriate hardware manual for port information. For SPAs, refer to the corresponding “Specifying the Interface Address on a SPA” topics in the platform-specific SPA software configuration guide.
<i>. subinterface-number</i>	Subinterface number in the range 1 to 4294967293. The number that precedes the period (.) must match the number to which this subinterface belongs.
<b>point-to-point</b>	(Optional) Specifies a point-to-point subinterface.

**Command Default** No interface types are configured.

**Command Modes** Global configuration (config)

Command History	<b>Release</b>	<b>Modification</b>
	Cisco IOS XE Release Amsterdam 17.2.1v	Commands of the following form were qualified for use in Cisco vManage CLI templates: <ul style="list-style-type: none"> <li>• <b>interface ATM 0/3/0</b></li> <li>• <b>interface ATM 0/3/0.1 point-to-point</b></li> <li>• <b>interface Dialer 1</b></li> <li>• <b>interface GigabitEthernet 1</b></li> <li>• <b>interface GigabitEthernet 1.101</b></li> <li>• <b>interface Loopback 100</b></li> <li>• <b>interface Tunnel 10</b></li> <li>• <b>interface VirtualPortGroup 0</b></li> <li>• <b>interface Vlan 1</b></li> </ul>
	Cisco IOS XE Release Amsterdam 17.3.1	Commands of the following form were qualified for use in Cisco vManage CLI templates: <ul style="list-style-type: none"> <li>• <b>interface Serial 2/0</b></li> <li>• <b>interface Serial 0/1/0</b></li> <li>• <b>interface Serial 0/1/0.2 point-to-point</b></li> </ul>

**Usage Guidelines** The table below displays the keywords that represent the types of interfaces that can be configured with the **interface** command. Replace the *type* argument with the appropriate keyword from the table.

**Usage Guidelines** Starting from Cisco IOS XE Catalyst SD-WAN Release 17.15.1a, size limit for interface is within the range 1 to 31 for interface commands.

**Usage Guidelines****Table 1: Interface Type Keywords**

<b>Keyword</b>	<b>Interface Type</b>
<b>ATM</b>	ATM interface.
<b>Dialer</b>	Dialer interface.
<b>GigabitEthernet</b>	1000-Mbps Ethernet interface.
<b>Loopback</b>	Software-only loopback interface that emulates an interface that is always up. It is a virtual interface supported on all platforms. The <i>number</i> argument is the number of the loopback interface that you want to create or configure. There is no limit on the number of loopback interfaces that you can create.
<b>Serial</b>	Serial interface.
<b>Tunnel</b>	Tunnel interface; a virtual interface. The <i>number</i> argument is the number of the tunnel interface that you want to create or configure. There is no limit on the number of tunnel interfaces that you can create.
<b>Vlan</b>	VLAN interface.
<b>VirtualPortGroup</b>	Virtual Port Group interface.

For more usage guidelines, see [interface](#).

**ATM Interface**

```
Device(config)# interface ATM 0/3/0
Device(config-if)#
Device(config)# interface ATM 0/3/0.1 point-to-point
Device(config-if)#
```

**Dialer Interface**

```
Device(config)# interface Dialer 1
Device(config-if)#

```

**GigabitEthernet Interface**

```
Device(config)# interface GigabitEthernet 1
Device(config-if)#
Device(config)# interface GigabitEthernet 1.101
Device(config-if)#

```

**Loopback Interface**

```
Router(config)# interface Loopback 100
Router(config-if)#

```

**interface MFR****Serial Interface**

```
Router(config)# interface Serial 2/0
Router(config-if)#
Router(config)# interface Serial 0/1/0
Router(config-if)#
Router(config)# interface Serial 0/1/0.2 point-to-point
Router(config-if)#
Router(config)# interface Serial 0/0/1:5
Router(config-if)#

```

**Tunnel Interface**

```
Router(config)# interface Tunnel 10
Router(config-if)#

```

**Virtual Port Group Interface**

```
Router(config)# interface VirtualPortGroup 0
Router(config-if)#

```

**VLAN Interface**

```
Router(config)# interface Vlan 1
Router(config-if)#

```

# **interface MFR**

To configure a multilink Frame Relay bundle interface, use the **interface MFR** command in global configuration mode. To remove the bundle interface, use the **no** form of this command.

```
interface MFR number
no interface MFR number
```

<b>Syntax Description</b>	<i>number</i>	Number that will uniquely identify this bundle interface. Range: 0 to 2147483647.
<b>Command Default</b>		A Frame Relay bundle interface is not configured.
<b>Command Modes</b>		Global configuration (config)

Command History	Release	Modification
	Cisco IOS XE Catalyst SD-WAN Release 17.3.1a	Command qualified for use in Cisco SD-WAN Manager CLI templates.

**Usage Guidelines** For usage guidelines, see the Cisco IOS XE [interface MFR](#) command.

**Examples** The following example shows the configuration of a bundle interface called “MFR 1.”

```
interface MFR1
```

## ip address

To set a primary or secondary IP address for an interface, use the **ip address** command in interface or sub-interface configuration mode. To remove an IP address or disable IP processing, use the **no** form of this command.

```
ip address ip-address [mask]
no ip address [ip-address] [mask]
```

<b>Syntax Description</b>	<table border="1"> <tr> <td><i>ip-address</i></td><td>IP address.</td></tr> <tr> <td><i>mask</i></td><td>(Optional) Mask for the associated IP subnet.</td></tr> </table>	<i>ip-address</i>	IP address.	<i>mask</i>	(Optional) Mask for the associated IP subnet.
<i>ip-address</i>	IP address.				
<i>mask</i>	(Optional) Mask for the associated IP subnet.				

**Command Default** No IP address is defined for the interface.

**Command Modes** Interface configuration (config-if)  
Sub-interface configuration (config-subif)

Command History	Release	Modification
	Cisco IOS XE Catalyst SD-WAN Release 17.2.1v	Qualified for use in Cisco vManage CLI templates.

**Usage Guidelines** For the usage guidelines, see the Cisco IOS XE [ip address](#) command.

**Examples**

```
Device(config)# interface ATM 0/3/0.1 point-to-point
Device(config-if)# ip address 192.10.6.5
Device(config)# interface ATM 0/3/0.1
Device(config-subif)# ip address 10.0.0.0 255.255.255.252
Device(config)# interface Serial 0/1/0.2
Device(config-if)# ip address 10.1.1.1 255.255.255.0
```

**encapsulation frame-relay**

```
Device(config)# interface Serial 0/0/1:5
Device(config-if)# ip address 10.1.1.1 255.255.255.0
Device(config)# interface MFR1
Device(config-if)# ip address 10.4.4.4 255.255.255.0
```

## encapsulation frame-relay

To enable Frame Relay encapsulation, use the **encapsulation frame-relay** command in interface configuration mode. To disable Frame Relay encapsulation, use the **no** form of this command.

```
encapsulation frame-relay [ ietf ]
no encapsulation frame-relay [ ietf ]
```

<b>Syntax Description</b>	<b>ietf</b> (Optional) Sets the encapsulation method to comply with the Internet Engineering Task Force (IETF) standard (RFC 1490). Use this keyword when connecting to another vendor's equipment across a Frame Relay network.				
<b>Command Default</b>	The default is the encapsulation of Cisco.				
<b>Command Modes</b>	Interface configuration (config-if)				
<b>Command History</b>	<table border="1"> <thead> <tr> <th><b>Release</b></th><th><b>Modification</b></th></tr> </thead> <tbody> <tr> <td>Cisco IOS XE Catalyst SD-WAN Release 17.3.1a</td><td>Command qualified for use in Cisco SD-WAN Manager CLI templates.</td></tr> </tbody> </table>	<b>Release</b>	<b>Modification</b>	Cisco IOS XE Catalyst SD-WAN Release 17.3.1a	Command qualified for use in Cisco SD-WAN Manager CLI templates.
<b>Release</b>	<b>Modification</b>				
Cisco IOS XE Catalyst SD-WAN Release 17.3.1a	Command qualified for use in Cisco SD-WAN Manager CLI templates.				
<b>Usage Guidelines</b>	For usage guidelines, see the Cisco IOS XE <a href="#">encapsulation frame-relay</a> command.				

<b>Examples</b>	In the following example, use the <b>ietf</b> keyword if your router or access server is connected to another vendor's equipment across a Frame Relay network to confirm with RFC 1490:
	<pre>interface Serial 0/1/0 encapsulation frame-relay ietf</pre>

The following example configures Cisco Frame Relay encapsulation on interface serial 0/0/1:5:

```
interface Serial 0/0/1:5
encapsulation frame-relay
```