



Install the Software

If you cannot or do not want to upgrade to Version 6.4, you can freshly install major releases. This is also called *reimaging*. We do not provide installation packages for patches. To run a particular patch, install the appropriate major release, then apply the patch.

- [Installation Guidelines, on page 1](#)
- [Installation Guides, on page 3](#)

Installation Guidelines

These guidelines can prevent common reimage issues, but are not comprehensive. For detailed checklists and procedures, see the appropriate installation guide.

Reimaging Version 5.x Hardware to Version 6.3+

The renamed installation packages in Version 6.3+ cause issues with reimaging older hardware: FMC 750, 1500, 2000, 3500, and 4000, as well as 7000/8000 series devices and AMP models. If you are currently running Version 5.x and want to reimage to Version 6.4, rename the installation package to the "old" name after you download it.

After you reimage an FMC (Defense Center) from Version 5.x to a more recent version, it cannot manage its older devices. You should also reimage those devices, then re-add them to the FMC. Note that Series 2 devices are EOL and cannot run Firepower software past Version 5.4.0.x. You must replace them.

Backups

Before you reimage, we *strongly* recommend you back up to a secure remote location and verify transfer success. Reimaging returns most settings to factory defaults, including the system password. It deletes any backups left on the appliance.



Note If you want to reimage so that you don't have to upgrade, due to version restrictions you cannot use a backup to import your old configurations. You must recreate your configurations manually.

Appliance Access

If you do not have physical access to an appliance, reimaging to the current major or maintenance release lets you keep management network settings. This allows you to connect to the appliance after you reimage to perform the initial configuration. Note that if you delete network settings or if you reimage to an earlier release, you must have physical access to the appliance. You cannot use Lights-Out Management (LOM).

For devices, make sure traffic from your location does not have to traverse the device itself to access the device's management interface. In FMC deployments, you should also be able to access the FMC's management interface without traversing the device.

Unregistering from Smart Software Manager

Before you reimage any appliance or switch device management, you may need to unregister from the Cisco Smart Software Manager (CSSM). This is to avoid accruing orphan entitlements, which can prevent you from reregistering.

Unregistering removes an appliance from your virtual account, unregisters it from the cloud and cloud services, and releases associated licenses so they can be reassigned. When you unregister an appliance, it enters Enforcement mode. Its current configuration and policies continue to work as-is, but you cannot make or deploy any changes.

If you plan to restore from backup, do not unregister before you reimage and do not remove devices from the FMC. Instead, manually revert any licensing changes made since you took the backup. After the restore completes, reconfigure licensing. If you notice licensing conflicts or orphan entitlements, contact Cisco TAC.

Table 1: Scenarios for Unregistering from CSSM (Not Restoring from Backup)

Scenario	Action
Reimage the FMC.	Unregister manually.
Model migration for the FMC.	Unregister manually, before you shut down the source FMC.
Reimage FTD with FMC.	Unregister automatically, by removing the device from the FMC.
Reimage FTD with FDM.	Unregister manually.
Switch FTD from FMC to FDM.	Unregister automatically, by removing the device from the FMC.
Switch FTD from device manager to FMC.	Unregister manually.

Removing Devices from the FMC

In FMC deployments, if you plan to manually configure the reimaged appliance, remove devices from the FMC before you reimage either. If you plan to restore from backup, you do not need to do this.

Table 2: Scenarios for Removing Devices from the FMC (Not Restoring from Backup)

Scenario	Action
Reimage the FMC.	Remove all devices from management.

Scenario	Action
Reimage FTD.	Remove the one device from management.
Switch FTD from FMC to FDM.	Remove the one device from management.

Fully Reimaging FTD Hardware to Downgrade FXOS

For FTD hardware models that use the FXOS operating system, reimaging to an earlier software version may require a full reimage, regardless of whether FXOS is bundled with the software or upgraded separately.

Table 3: Scenarios for Full Reimages

Model	Details
Firepower 1000 series Firepower 2100 series	If you use the erase configuration method to reimage, FXOS may not downgrade along with the software. This can cause failures, especially in high availability deployments. We recommend that you perform full reimages of these devices.
Firepower 4100/9300	Reverting FTD does not downgrade FXOS. For the Firepower 4100/9300, major FTD versions have a specially qualified and recommended companion FXOS version. After you return to the earlier version of FTD, you may be running a non-recommended version of FXOS (too new). Although newer versions of FXOS are backwards compatible with older FTD versions, we do perform enhanced testing for the recommended combinations. You cannot manually downgrade FXOS, so if you find yourself in this situation and you want to run a recommended combination, you will need a full reimage.

Installation Guides

Table 4: Installation Guides

Platform	Guide
FMC	
FMC 1600, 2600, 4600	Cisco Firepower Management Center 1600, 2600, and 4600 Getting Started Guide
FMC 1000, 2500, 4500	Cisco Firepower Management Center 1000, 2500, and 4500 Getting Started Guide
FMC 750, 1500, 2000, 3500, 4000	Cisco Firepower Management Center 750, 1500, 2000, 3500 and 4000 Getting Started Guide
FMCv	Cisco Secure Firewall Management Center Virtual Getting Started Guide
FTD	

Platform	Guide
Firepower 1000/2100 series	Cisco Secure Firewall ASA and Secure Firewall Threat Defense Reimage Guide Cisco FXOS Troubleshooting Guide for the Firepower 1000/2100 and Secure Firewall 3100/4200 with Firepower Threat Defense
Firepower 4100/9300	Cisco Firepower 4100/9300 FXOS Configuration Guides: <i>Image Management</i> chapters Cisco Firepower 4100 Getting Started Guide Cisco Firepower 9300 Getting Started Guide
ASA 5500-X series	Cisco Secure Firewall ASA and Secure Firewall Threat Defense Reimage Guide
ISA 3000	Cisco Secure Firewall ASA and Secure Firewall Threat Defense Reimage Guide
FTDv	Cisco Secure Firewall Threat Defense Virtual Getting Started Guide
ASA FirePOWER/NGIPSv	
Firepower 7000/8000 series	Cisco Firepower 7000 Series Getting Started Guide Cisco Firepower 8000 Series Getting Started Guide
ASA FirePOWER	Cisco Secure Firewall ASA and Secure Firewall Threat Defense Reimage Guide ASDM Book 2: Cisco ASA Series Firewall ASDM Configuration Guide
NGIPSv	Cisco Firepower NGIPSv Quick Start Guide for VMware