



<b>Preface</b>	iii
Audience	iii
Organization	iii
Related Documentation	iii
<b>Introduction to Cisco Firepower eXtensible Operating System Faults</b>	<b>1-1</b>
Overview of Faults	1-1
About Faults in FXOS	1-1
Fault Severities	1-2
Fault Types	1-2
Properties of Faults	1-3
Lifecycle of Faults	1-4
Fault Collection Policy	1-4
Faults in Cisco Firepower eXtensible Operating System	1-5
Overview of the Finite State Machine	1-5
About the Finite State Machine in Cisco Firepower eXtensible Operating System	1-5
FSM Stage Names	1-6
FSM in Cisco Firepower eXtensible Operating System	1-6
<b>FXOS Faults</b>	<b>2-1</b>
<b>FSM Faults</b>	<b>3-1</b>
<b>Troubleshooting Transient Faults</b>	<b>4-1</b>
Initial Setup and Discovery Faults	4-1
Virtual Machine Startup Faults	4-5
<b>Introduction to System Event Log Messages</b>	<b>5-1</b>
Information about System Event Log Messages	5-1
SEL File	5-1
SEL Policy	5-2
<b>Baseboard Management Controller Messages</b>	<b>6-1</b>
SEL Device	6-1
SEL Event Record Format	6-1
Sensor Initialization Agent	6-2

- Sensor Data Record Device **6-2**
  - SDR Repository Interface **6-2**
  - Modal and Nonmodal SDR Repositories **6-2**
- Event Receiver Device **6-3**
- BMC Commands **6-3**
  - SEL Device Commands **6-3**
  - SDR Repository Device Commands **6-5**
  - Event Receiver Commands **6-7**
- SEL Record Examples **6-8**
  - Device Presence Changes **6-8**
  - LED Color Changes **6-9**
  - Voltage Changes **6-9**
  - Temperature Changes **6-9**