



## INDEX

### A

access privileges **1-3**

admin password

    reset **2-5**

attach

    RP from CMP **3-1**

reset **2-5**

commands

    attach rp **3-1**

    boot **2-5**

    boot tftp **3-4**

    copy **3-2**

    hw-module cmp **3-2**

    interface cmpmgmt **2-2**

    ip address **2-2**

    ip default-gateway **2-2**

    passwd reset **2-5**

    priv **2-5**

    reload **2-4, 2-5, 3-3**

    reload route-processor **3-2**

    reload rp **3-2**

    show interface cmpmgmt **2-4**

    show interface loopback **2-4**

    show kernel upgrade **2-4**

    show line console **1-2**

    show running-config **2-4**

    show system reset-reason **3-2**

    show version **2-4**

    switchto vdc **2-4**

    Telnet server **1-4**

    telnet server enable **1-4**

    upgrade **2-4**

    upgrade kernel file **2-4**

    write **2-5**

components **1-1**

connecting

    from RP **1-1**

    network **1-3**

connectors

### B

baud rate

    display **1-2**

boot

    reboot CMP from CMP **3-3**

    reboot CMP from RP **3-2**

    reboot RP **3-2**

### C

CMP

    components **1-1**

    connections **1-1**

    functions **1-1**

    power domain **1-1**

    rebooting **3-2**

    reloading **3-3**

cmp-management interface

    displaying cmp management **2-4**

    displaying loopback **2-4**

CMPMGMT Ethernet port **1-3**

CMPMGMT ETH port. *See* CMP management Ethernet port

CMP password

RJ45 console **1-2**

RJ45 management **1-2**

console output

displaying **2-2**

logging functions **2-2**

---

## D

data bits

display **1-2**

default settings **2-6**

default gateway **2-6**

IP address **2-6**

SSH server **2-6**

Telnet server **2-6**

displaying logged output **2-2**

---

## E

enabling the Telnet server **1-4**

---

## F

file size, logging **2-2**

functions, CMP **1-1**

---

## H

high availability **1-4**

---

## L

LEDs

status, LEDs **1-2**

logged console output, displaying **2-2**

logging file size **2-2**

logging functions **2-2**

---

## N

network connection **1-3**

---

## P

parity

display **1-2**

password

reset **2-5**

passwords **1-3**

ports

10GE uplink **1-2**

RP **1-2**

SFP uplink **1-2**

USB **1-2**

power domains, separate **1-1**

---

## R

recover

RP using TFTP boot **3-4**

redundancy **1-4**

RJ-45 connector **1-3**

RP

attaching **3-1**

monitoring **3-1**

ports **1-2**

reloading **3-2**

running configuration

displaying **2-4**

---

## S

software image information

displaying **2-4**

status

verify CMP **3-4**

stop bits

    display **1-2**

Supervisor Engine

    display front panel **1-2**

switchovers, CMP behavior **1-4**

synchronizing passwords **1-3**

---

## T

Telnet server

    disabling **1-4**

    enabling **1-4**

transfer files

    from CMP to RP bootdisk **3-2**

    from CMP to RP disk0 **3-2**

    from CMP to syslog **3-2**

---

## U

usernames **1-3**

