



## Configuring EnergyWise

---

EnergyWise is a Cisco energy management architecture that provides a common approach to configuring, reporting and managing the power consumed by Cisco switches and attached devices. With Cisco EnergyWise, power can be managed on a network, sub-network or network element level.

Release	Feature Modification
12.2(33)SX14	EnergyWise Phase2 introduced on Catalyst 6500 Series

EnergyWise configuration procedures for the Catalyst 6500 Series are documented in the “*Cisco EnergyWise Configuration Guide, EnergyWise Phase 2*” located at the following URL:

[http://www.cisco.com/en/US/docs/switches/lan/energywise/phase2/ios/configuration/guide/ew\\_v2.html](http://www.cisco.com/en/US/docs/switches/lan/energywise/phase2/ios/configuration/guide/ew_v2.html)

Additional Cisco EnergyWise documents, such as White Papers, Data Sheets, FAQs, and are located at the following URL:

<http://www.cisco.com/en/US/products/ps10195/>

Cisco EnergyWise Orchestrator configuration guides are located at the following URL:

[http://www.cisco.com/en/US/products/ps10195/products\\_installation\\_and\\_configuration\\_guides\\_list.html](http://www.cisco.com/en/US/products/ps10195/products_installation_and_configuration_guides_list.html)

