



Migrate Cisco iNode Manager

This chapter describes how to migrate Cisco iNode Manager.

- [Migrate Cisco iNode Manager, on page 1](#)

Migrate Cisco iNode Manager

Before you begin

Before migrating the iNode manager from 22.4 or later releases to 24.1, make sure the following requirements are met:

- The current iNode Manager installation is 22.4 or later release.
- Export the database from 22.4 (or later version) installation into a remote location.
- Following recommended hardware resource is available.

Table 1:

AIO(For iNode Manager 22.4 or later releases)	VMs	CPUs	RAM(GB)	Disk Size(GB)
	1	18	96	1529

Table 2: Multi Node (iNode Manager 22.4 and later releases)

Node Type	VMs	CPUs	RAM(GB)	Disk Size(GB)
Control Plane	3	2	16	125
Etd	3	2	16	125
Infra	3	8	64	1000
Ops	3	8	64	320

-
- Step 1** Take the database backup of source iNode Manager from UI
- Step 2** Prepare the configuration file for the target iNode Manager cluster.
- Step 3** Deploy the target cluster as described in the [Install Cisco iNode Manager with Autodeployer](#).
- Step 4** Import the Database taken from step 1 into Target iNode Manager.

Warning: Migration through standby mode (without CIN config) is not supported in iNode Manager 24.1 release.
