



## **Cisco iNode Manager User Guide, Release 24.1**

**First Published:** 2024-06-12

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883





## CONTENTS

---

<b>CHAPTER 1</b>	<b>Cisco iNode Manager Application</b>	<b>1</b>
	Introduction	1

---

<b>CHAPTER 2</b>	<b>How to Use Cisco iNode Manager</b>	<b>3</b>
	Logging into Cisco iNode Manager Application	3
	Cisco iNode Manager Application	4
	Overview	5
	Add an iNode to Inventory	7
	Update the iNode Name	8
	Delete iNode from Inventory	9
	Export the Inventory	9
	Download Logs	9
	Bulk Operations on the iNodes	11
	Config Profiles	15
	Create Node Profile	15
	Create RF Profile	17
	Assign Node Profile to iNodes	19
	Node Config	19
	iNode Selection Box	20
	Operational Data of the Selected iNode	20
	Information About Sub Modules of the iNode	21
	Settings	22
	Spectrum Graph	23
	Alarms	24
	Maintenance	25
	Alarms	26

- Alarm Settings 27
- System 27
  - Database Backup and Restore 27
  - Bulk Operation Status 30
  - Tag Management 31
- Operations Hub Metrics Dashboard 32
- Using REST APIs 35
- Update the Admin Password 37
- Renewing the Cisco iNode Manager Certification 38
  - AIO 38
  - Multinode Setup 39



## CHAPTER 1

# Cisco iNode Manager Application

---

The Cisco Intelligent Node (iNode) Manager application enables you to provision and monitor the intelligent nodes in the network.

This *User Guide* provides information on the Cisco iNode Manager and how to use the application. For details of installing the application, see the [Cisco iNode Manager Installation Guide](#)

- [Introduction, on page 1](#)

## Introduction

The following are some of the features of the Cisco iNode Manager application:

- Intelligent Node Inventory: iNode inventory operations such as monitoring the status of iNodes, current software version of the iNodes, searching for iNodes based on specific criteria.
- Remote configuration of iNodes: RF port configuration and general configuration are available.
- Spectrum analysis: Forward path and Reverse path.
- Alarm monitoring
- Configuration profiles: iNode settings and the RF port settings profile.
- DB import and export. Option to set schedule for DB export.
- RPD information.
- Debugging the iNode: Viewing the latest logs and the boot parameters in the UI.
- User-defined tags to group the iNodes in the inventory.





## CHAPTER 2

# How to Use Cisco iNode Manager

---

This section describes how to use the Cisco iNode Manager application:

- [Logging into Cisco iNode Manager Application](#) , on page 3
- [Cisco iNode Manager Application](#) , on page 4
- [Operations Hub Metrics Dashboard](#), on page 32
- [Using REST APIs](#), on page 35
- [Update the Admin Password](#), on page 37
- [Renewing the Cisco iNode Manager Certification](#), on page 38

## Logging into Cisco iNode Manager Application

Access the Cisco iNode Manager Web UI using the following URL:

- With FQDN disabled:

```
https://<ingress-ip>.nip.io
```

- For all-in-one (AIO) cluster, the ingress IP address is the management IP address of the `ops` node or VM.
- For multi node, the ingress IP address is the virtual IP address that is configured for the management network.

- With FQDN enabled:

```
https://<ingress-hostname>
```

You can log into the Cisco iNode Manager application by entering the credentials that are provided for inode manager operations center while installing the Cisco iNode Manager. Currently, `admin` is the only user profile that is allowed.


Enter the password that you mentioned while creating the Cisco iNode Manager cluster.

The LDAP user credentials can be entered if LDAP is configured in the Cisco iNode Manager cluster. For information on how to configure LDAP authentication in the Cisco iNode Manager, see the *Cisco iNode Manager Installation Guide*.



**Note** The login page is locked for one minute if there are three consecutive unsuccessful attempts to log into the iNode Manager.

**Figure 1: Operations Hub Welcome Page**

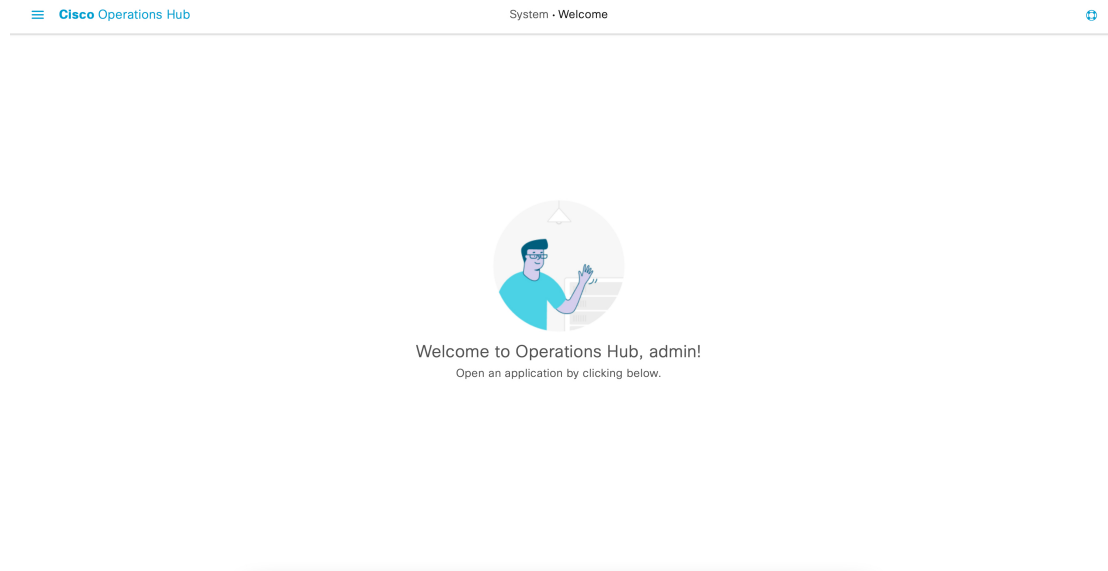

Launch the iNode Manager application by clicking the hamburger button on the top left corner of the Welcome Page and choose **iNode Manager > Overview**.



**Note** To logout from the iNode Manager application, click the hamburger button and select **Log out** at the bottom of the Operation Hubs Hamburger Menu.

## Cisco iNode Manager Application

The Cisco iNode Manager application page provides you options to add, organize, and update information about the iNodes in the network.

The **iNode Manager** page has five tabs:


- **Overview**
- **Config Profiles**
- **Node Config**
- **Alarms**
- **System**



# Overview



The **Overview** page provides the total number of iNodes, their connectivity status, software version running on them, and the number of active alarms. It also has an **Inventory** table which shows details of all iNodes in the network. You can perform the following tasks on this page:

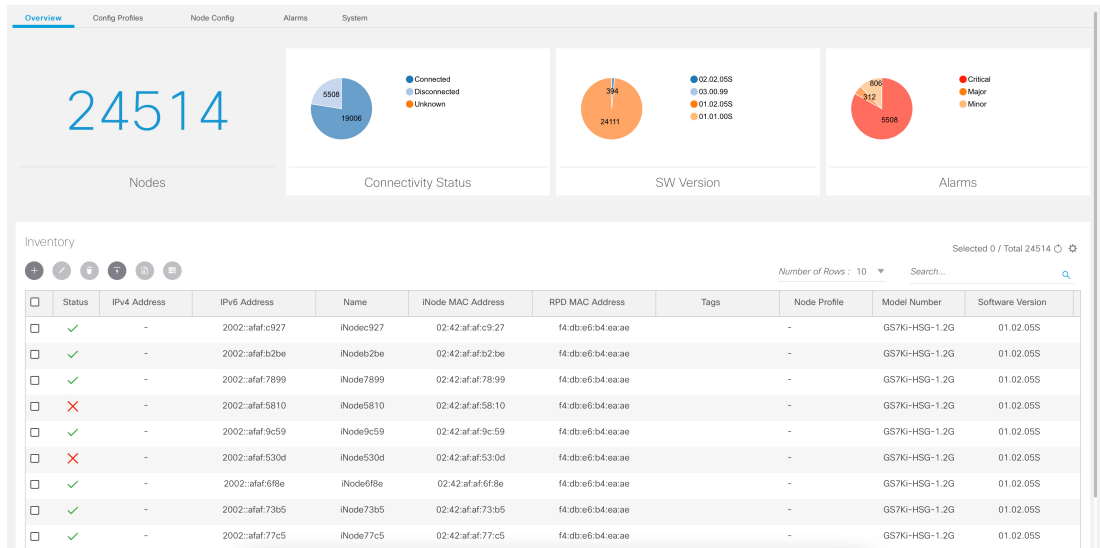





- Add a new iNode to the inventory
- Update the name of the iNode in the inventory
- Delete iNodes from the inventory
- Export the iNode details from the inventory table in the CSV format
- Download log files that are in the iNode, view the latest logs, and the boot parameters of an iNode
- Perform bulk operations: Initial setup in bulk, assign configuration profiles, assign tag, and bulk reboot



The following table contains the descriptions of the graphs on the **Overview** page and the fields in the inventory table:


Name	Description
Nodes	Total number of iNodes in the inventory.
Connectivity Status	Shows a pie chart of the connectivity status of the iNodes in the network. The following statuses are displayed: <ul style="list-style-type: none"> <li>• Connected</li> <li>• Disconnected</li> <li>• Unknown</li> </ul>
SW Version	Shows a pie chart of the number of iNodes running different software versions.

Name	Description
Alarms	<p>Shows a pie chart of the number of active alarms in the iNodes in the network. The following categories are displayed:</p> <ul style="list-style-type: none"> <li>• Critical</li> <li>• Major</li> <li>• Minor</li> </ul> <p><b>Note</b> The muted alarms are not counted in total alarms. Refer to <a href="#">Alarm Settings, on page 27</a> for more information.</p>
<b>Inventory Table Fields</b>	
Status	Current Status of the iNode.
iNode IPv4 Address	IPv4 address of the iNode. A hyphen (-) indicates that the iNode does not have an IPv4 address.
iNode IPv6 Address	IPv6 Address of the iNode. A hyphen (-) indicates that the iNode does not have an IPv6 Address.
iNode Name	Name of the iNode.
iNode MAC Address	MAC address of the iNode.
RPD MAC Address	MAC address of the RPD that is connected to the iNode.
Node Profile	Name of the Configuration Profile that is assigned to the iNode.
Model Number	Model number of the iNode.
Software Version	Software version of the iNode.
Safe Image Version	Software version of the secondary image in the iNode.
Serial Number	Serial number of the iNode.
RPD IPv4 Address	IPv4 address of the RPD that is connected to the iNode.
RPD IPv6 Address	IPv6 address of the RPD that is connected to the iNode.
RPD Serial Number	Serial number of the RPD that is connected to the iNode.
RPD Software Version	Software version of the RPD that is connected to the iNode.
	Hamburger button. Opens the hamburger menu.
	Adds an iNode to the inventory.


Name	Description
	Updates the iNode information.
	Deletes iNodes from the inventory.
	Exports iNode details to a CSV file.
	Downloads the iNode's logs.
	Perform bulk operations.
	Sets the columns in the inventory table.
Search	Allows you to search for iNodes based on the search criteria.

## Add an iNode to Inventory

**Step 1** Log into the Cisco iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** Click the  icon to add a node to the Inventory.

The **Add iNode** pop-up window appears.



Add iNode

*Node Name* Host Name

*iNode IPv4 Address* \*\* Connectivity IPv4

*iNode IPv6 Address* \*\* Connectivity IPv6

**Associate Tags**

Choose a tag to Associate

Type the Tag Name and hit 'Enter' Key to add a new Tag .

\*\* Denotes one or the other field is required.

52262

## Update the iNode Name

**Step 3** Enter the IPv4 address or the IPv6 address of the iNode.

The Cisco iNode Manager retrieves the rest of the details of the iNode, such as the name, MAC address, software version, serial number, and so on, from the iNode and stores it in the inventory.

**Step 4** (Optional) Assign one or more tags to the iNode.

You can create a new tag by typing the name of the tag in the corresponding text box and clicking the Enter key. Or you can select the tags that were already created from the drop-down box.

**Note** It is not recommended to create one new tag per iNode. The main purpose of the tag is to group iNode. So that it is easier to filter and view the iNode in the inventory table and perform bulk operations.


**Step 5** Click **Save** to add the node.

## Update the iNode Name

You can only update the name of an iNode.

**Step 1** Log into the Cisco iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** In the **Inventory** table, check the check box of the iNode which you want to update.

**Step 3** Click the  icon to update the name of the iNode.

The **Update iNode** pop-up window appears.

Update iNode

Node Name \* iNodec927

iNode IPv4 Address Connectivity IPv4

iNode IPv6 Address 2002::afaf:c927

MAC Address 02:42:af:af:c9:27

Associate Tags

Choose a tag to Associate

Type the Tag Name and hit 'Enter' Key to add a new Tag .

Save Cancel

\* Denotes that the field is required.

522283

**Step 4** Update the node name.

**Step 5** (Optional) Associate tags to the iNode, or remove tags from the iNode.

**Step 6** Click **Save**.


---

## Delete iNode from Inventory

You can delete multiple iNodes from the Inventory.

---

**Step 1** Log into the Cisco iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** Select the iNodes from the **Inventory** table and click the  icon.  
A confirmation message appears.

**Step 3** Click **Delete** to confirm.

---


## Export the Inventory

You can export the details of all iNodes listed in the Inventory in the CSV format.

---

**Step 1** Log into the iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** In the **Inventory** table, check the check boxes for the iNodes of which you want the details exported in a CSV file.

**Step 3** Click the  icon to export iNodes in the inventory.  
A request message to allow downloads appears. This request appears only once for a user profile.

**Step 4** Click **Allow**.

The CSV file is saved to your downloads location on your device. The file name is in the following format:  
`inodeInventoryData-yyyy-mm-dd.hhmmss`

---


## Download Logs

You can view and download the logs to your device.

---

**Step 1** Log into the iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** Check the check boxes for the iNodes of which you want to download the logs.

**Step 3** Click the  icon to view the download options.  
The **Download Logs** pop-up window appears.

## Download Logs

**Latest Logs & Boot Params**

[Get Latest Logs](#)

**View / Download only the latest 130 KB of the iNode logs**

[Get Boot Parameters](#)

**View Boot parameters of iNode**

**Historical Logs**

	File Name	File Size(MB)
<input type="checkbox"/>	messages	4.88
<input type="checkbox"/>	messages.0	10.25
<input checked="" type="checkbox"/>	messages.1	10.24
<input checked="" type="checkbox"/>	messages.2	10.25

[Download](#) [Close](#)

**Step 4** Click the option based on your requirement.

Option	Description
Get Latest Logs	View or download the latest logs. The <b>Latest Logs from iNode</b> window appears. The maximum size of the file is limited to 130 KB.
Get Boot Parameters	View and save the boot parameters.
Historical Logs	Download the entire log file. Downloading the file takes several minutes depending on the size of the log file. The progress bar indicates the current status of the log file download.

**Get Latest Logs:**

## Latest Logs from iNode

[Save](#)
Interval: 60 seconds  Auto Refresh [Refresh](#)
Select font color:   Font Size: S M L [Close](#)

IP Address: 10.90.149.108 MAC Address: 70:7d:b9:01:02:03

	Dload	Upload	Total	Spent	Left	Speed
0	0	0	0	0	0	0
0	0	0	0	0	0	0
% Total	% Received	% Xferd	Average Speed	Time	Time	Time Current
			Dload Upload	Total	Spent	Left
0	0	0	0	0	0	0
0	0	0	0	0	0	0
% Total	% Received	% Xferd	Average Speed	Time	Time	Time Current
			Dload Upload	Total	Spent	Left
0	0	0	0	0	0	0
0	0	0	0	0	0	0
% Total	% Received	% Xferd	Average Speed	Time	Time	Time Current
			Dload Upload	Total	Spent	Left
0	0	0	0	0	0	0
0	0	0	0	0	0	0
% Total	% Received	% Xferd	Average Speed	Time	Time	Time Current
			Dload Upload	Total	Spent	Left
0	0	0	0	0	0	0
0	0	0	0	0	0	0
% Total	% Received	% Xferd	Average Speed	Time	Time	Time Current
			Dload Upload	Total	Spent	Left

```

Oct 31 00:42:12 imx6uloib user.notice RPDDEVICEPARAMS: Adding rpd-device-params.sh CRON job with minute offset 0
Oct 31 00:42:12 imx6uloib cron.info crontab[21939]: (root) LIST (root)
Oct 31 00:42:12 imx6uloib cron.info crontab[21938]: (root) REPLACE (root)
Oct 31 00:43:01 imx6uloib cron.info crond[544]: (root) RELOAD (/var/spool/cron/root)
Oct 31 00:43:01 imx6uloib cron.info CROND[21941]: (root) CMD (/etc/init.d/rpd-device-params.sh >> /media/log/messages 2>&1)
Oct 31 00:43:01 imx6uloib user.notice RPDDEVICEPARAMS: Starting rpd-device-params
Oct 31 00:43:01 imx6uloib cron.info crontab[21945]: (root) LIST (root)
Oct 31 00:43:01 imx6uloib user.notice RPDDEVICEPARAMS: Deleting IP Monitor CRON job
Oct 31 00:43:01 imx6uloib cron.info crontab[21948]: (root) LIST (root)
Oct 31 00:43:01 imx6uloib cron.info crontab[21950]: (root) REPLACE (root)

```

- **Auto Refresh:** Enable the **Auto Refresh** option in the **Latest Logs from iNode** window, to get the latest logs periodically. The available range of the auto refresh interval is 10–600 seconds. You can also click the **Refresh** button to manually get the latest logs.


The **Refresh** button is disabled when you enable the **Auto Refresh** option.

- **Font color:** Click the color in the **Select font color** option to set the color of the font. You can also set the size of the font using the **Font Size** options.

Click **Save** to download the logs to your device. The log file name is in the following format: `inode-<IP address>-latest`

### Get Boot Parameters:

Click **Save** to download the boot parameters.

Boot Parameters of iNode : IP (10.90.149.108), MAC (70:7d:b9:01:02:03) Save 

#	Name	Value
1	ALLOW_FORCED_DOWNLOAD	yes
2	CURRENT_IMAGE_INDEX	1
3	CURRENT_SW_VERSION	02.00.08
4	IMAGE_2_VALID	yes
5	IPV6_TFTP_SVR	::
6	SAFE_IMAGE_INDEX	2
7	SW_VERSION_1	02.00.08
8	SW_VERSION_2	02.00.08
9	TFTP_FILE	undefined
10	TFTP_SVR	0.0.0.0
11	U_BOOT_ENV_VERSION	0.1.3
12	U_BOOT_PKG_VER	02.00.08
13	altbootcmd	echo fallback to Booting Safe Image ...; if test \${CURRENT_IMAGE_INDEX} -eq 1; then echo Marking Image 1 as failed; setenv IMAGE_1_VALID no; else if test \${CURRENT_IMAGE_INDEX} -eq 2; then echo Marking Image 2 as failed; setenv IMAGE_2_VALID no; fi; fi; if test \${SAFE_IMAGE_INDEX} -eq 1; then echo Booting to Safe Image - Image 1; if test \${IMAGE_1_VALID} = no; then echo ERROR: Unable to boot Safe Image - Image 1 is invalid; else run bootimage1; fi; else if test \${SAFE_IMAGE_INDEX} -eq 2; then echo Booting to Safe Image - Image 2; if test \${IMAGE_2_VALID} = no; then echo ERROR: Unable to boot Safe Image - Image 2 is invalid; else run bootimage2; fi; else echo ERROR: Unable to boot Safe Image - no fallback image available; fi; fi;
14	baudrate	115200
15	boot_fdt	try
16	boot_net	no
17	bootargs	console=ttyMC0,115200 root=/dev/mmcblk1p2 rootwait rw
18	bootcmd	mmc dev \${mmcdev}; mmc dev \${mmcdev}; echo MMC selected = \${mmcdev}; mmc info; mmc dev; mmc part; echo Checking for U-Boot ENV version = 0.1.3; if test \${U_BOOT_ENV_VERSION} != 0.1.3; then echo Updating U-Boot ENV from Version \${U_BOOT_ENV_VERSION} to Version 0.1.3...; env default -a -f; setenv U_BOOT_ENV_VERSION 0.1.3; saveenv; reset; else echo U-Boot ENV is at the correct version; fi; run findfd; if mmc rescan; then if test \$boot_net = yes; then run netboot; else if run loadbootscript; then run bootscript; else if run loadimage; then run mmcboot; else run netboot; fi; fi; else run netboot; fi;
19	bootcmd_mfg	run mfgtool_aras bootz \$loadaddr1 \$fintrd_addr1 \$fdt_addr1

**Historical Logs:** Check the check boxes for the files that you want to download and click **Download**. The log file is saved to the default download location on your device. the file name is in the following format: `inode-<IP address>-messages-complete`

## Bulk Operations on the iNodes

You can do the following bulk operations on the iNodes that are selected in the inventory:

- Assign or clear the configuration profile
- Initial setup
- Reboot
- Associate or diassociate tags


### Assign Configuration Profile




**Caution** If the iNodes are already associated with a configuration profile, this operation overwrites it.

**Step 1** Log into the iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** Check the check boxes for the iNodes of which you want to assign the configuration profiles.

**Step 3** Click the  icon.

The **Bulk Node Operations** pop-up window appears.

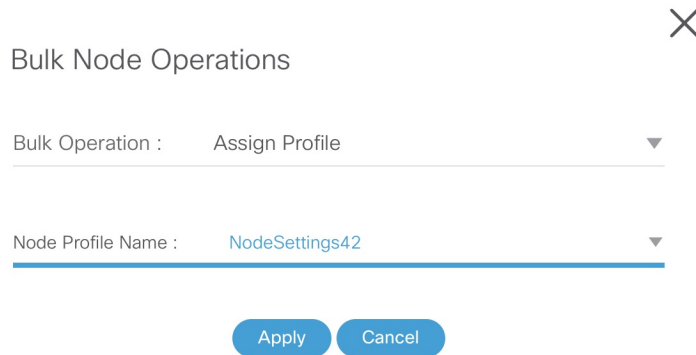

Bulk Node Operations

Bulk Operation : Assign Profile

Node Profile Name : NodeSettings42

Apply Cancel

**Step 4** Choose the **Assign Profile** from the **Bulk Operation** drop-down list.

**Step 5** Choose the profile name from the **Node Profile Name** drop-down list.

**Clear Config Profile:** If you choose **None** for **Node Profile Name**, the configuration profile is disassociated from the selected iNodes.

**Step 6** Click **Apply**.

The node profile is assigned to the iNodes that are selected in the inventory. A warning message appears if the selected iNodes are already associated with different profiles.


You can see the status of this bulk operation in the **System > Bulk Operation Status** page.

---

## Initial Setup on iNodes


**Step 1** Log into the iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** Check the check boxes of the iNodes for which you want to run the initial setup.

**Step 3** Click the  icon to view the bulk operations options.

The **Bulk Node Operations** pop-up window appears.



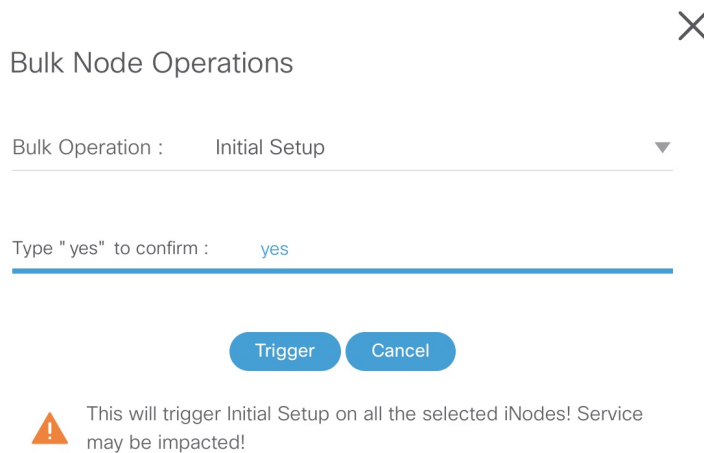


Bulk Node Operations

Bulk Operation : Initial Setup

Type "yes" to confirm : yes

Trigger Cancel

 This will trigger Initial Setup on all the selected iNodes! Service may be impacted!

**Step 4** Choose **Initial Setup** from the **Bulk Operation** drop-down list.

**Step 5** Enter **yes** in the **Type "yes" to confirm** field.

**Step 6** Click **Trigger**.

You can see the status of this bulk operation in the **System > Bulk Operation Status** page.

## Bulk Reboot of iNodes




**Note** Use the bulk reboot operation cautiously. Rebooting several iNodes simultaneously may add load on the network components such as DHCP server and TFTP server.

**Step 1** Log into the iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.


**Step 2** Check the check boxes for the iNodes of which you want to reboot the iNodes.

**Note** Before triggering the reboot of iNodes, ensure that you have not checked the check box in the header of the **Inventory** table. Check the check box in the header of the **Inventory** table only if you want to reboot all iNodes in your network. It affects the services until the iNodes are rebooted and active.

**Step 3** Click the  icon to view the bulk operations options.

The **Bulk Node Operations** pop-up window appears.

## Associate and Diassociate the Tags

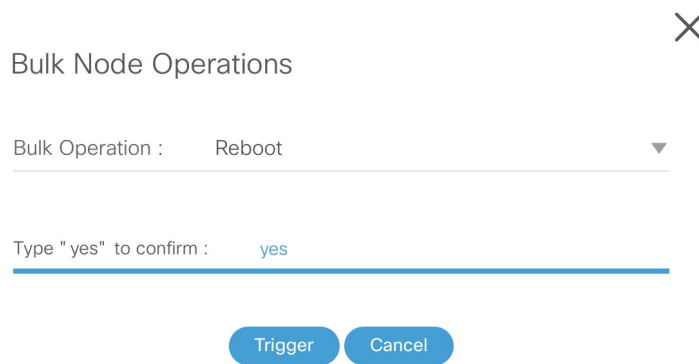


Bulk Node Operations

Bulk Operation : Reboot

Type "yes" to confirm : yes

Trigger Cancel

 This will trigger Reboot of all the selected iNodes! Service will be impacted!

**Step 4** Choose **Reboot** from the **Bulk Operation** drop-down list.

**Step 5** Enter **yes** in the **Type "yes" to confirm** field.

**Step 6** Click **Trigger**.


Reboot is triggered on the iNodes that are chosen in the Inventory.

View the status of the **Reboot** operation in the **System > Bulk Operation Status** page.


## Associate and Diassociate the Tags

**Step 1** Log into the iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** Check the check boxes for the iNodes of which you want to associate or diassociate tags.

**Step 3** Click the  icon.

The **Bulk Node Operations** pop-up window appears.

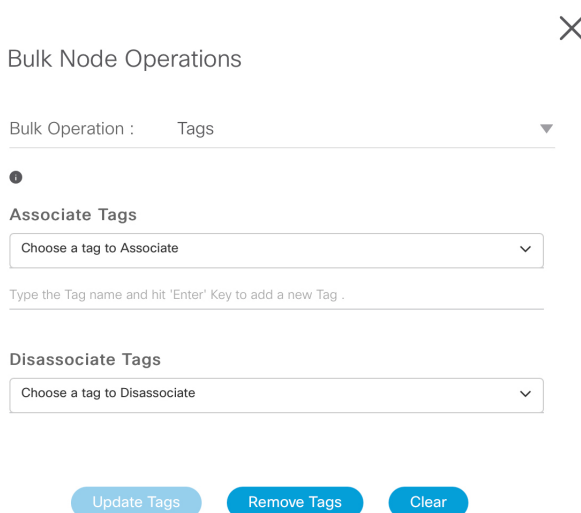

Bulk Node Operations

Bulk Operation : Tags

Associate Tags

Choose a tag to Associate

Type the Tag name and hit 'Enter' Key to add a new Tag .

Disassociate Tags

Choose a tag to Disassociate

Update Tags Remove Tags Clear

502284

- Step 4** Choose the **Tags** from the **Bulk Operation** drop-down list.
- Step 5** To associate or diassociate the tags on the selected iNode, choose the tags from the drop-down list, then click the **Update Tags** button. You can also create new tag by specifying the name of the tag in the corresponding text field and click the **Enter** key.
- Step 6** To remove all the tags associated with the selected iNode, click the **Remove Tags** button.  
The **Remove Tags** button is disabled if you choose any tags in Step 5.
- Note** You can manage the tags in the **System > Tag Management** page.
- 

## Config Profiles

You can apply the same node configuration to one or more iNodes in the inventory using the options available in the **Config Profiles** tab. The iNode Manager application provides two configuration profile options:

- **RF Profiles:** Contains RF port parameters such as the target frequency and amplitude, wink switch, wink attenuation (in dB, if the Wink Switch is set as variable), and the port status.

The RF profiles are associated to a particular port in the node profile and node profiles are assigned to iNodes.

You cannot apply RF Profiles directly to the iNodes.

- **Node Profiles:** Contains general node settings such as forward and reverse segmentation, power saving modes, OIB reverse attenuation (in dB), and the SNMP community string. In addition, the node profile also contains the RF port settings profiles which are assigned to the RF ports in the iNode.

You can assign a Node Profile to one or more iNodes in the inventory.

Using the **Config Profiles** tab, you can do the following:

- Add new node and RF port configuration profiles
- Update the configuration profile
- Assign the node configuration profile to one or more iNodes in the inventory
- Clear the association of the node configuration profiles from one or more iNodes in the inventory
- View the list of configuration profiles
- Delete configuration profiles

## Create Node Profile

The **Node Profiles** tab lists the node settings profiles. Each profile in the list shows the number of iNodes to which the Node Profile is assigned to.

You can do the following with node profiles:


- Create a new node profile
- Edit the profile
- Search for profiles

- Delete the profile
- Duplicate the profile
- Assign the profile

**Step 1** Log into the iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** Select **Config Profiles** tab from the top of the screen.

**Step 3** Select the **Node Profiles** tab.

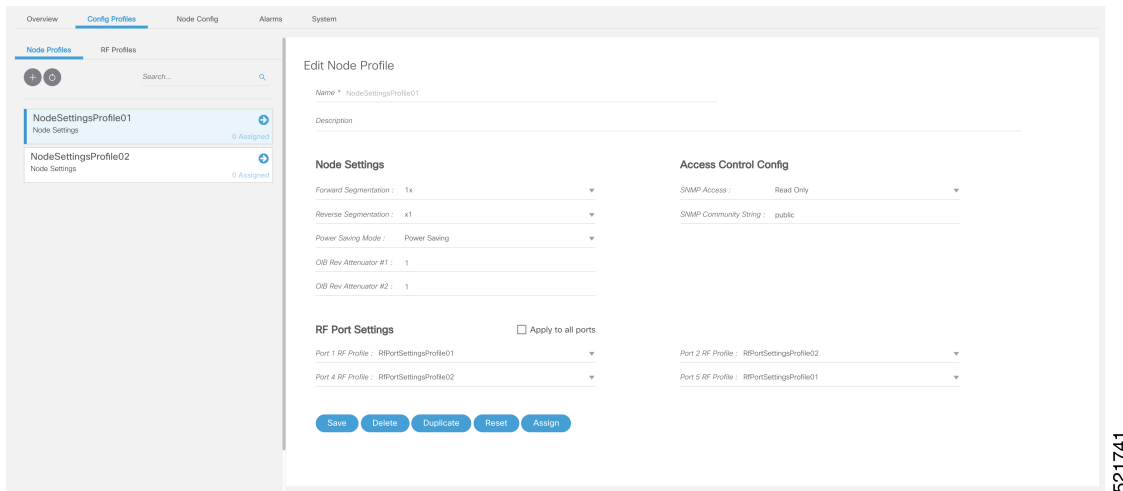

521741

**Step 4** Click the  icon to create a node profile.

**Step 5** Enter the following details in the appropriate fields.

Field	Description
Name	Name of the node configuration profile.
Description	A short description of the node profile.
<b>Node Settings</b>	
Forward Segmentation	Number of forward paths to the headend. Intelligent Node supports only one forward path.
Reverse Segmentation	Number of reverse paths to the headend. Intelligent Node supports two reverse paths.
Power Saving Mode	Choose whether the node is in power saving mode or in full power.
OIB Rev Attenuator #1	The attenuation in the reverse transmitter #1.
OIB Rev Attenuator #2	The attenuation in the reverse transmitter #2.
<b>Access Control Config</b>	

Field	Description
SNMP Access	To toggle access of the iNode through SNMP.
SNMP Community String	The community string with which the iNode parameters can be viewed and set.
<b>RF Port Settings</b>	
Apply to all ports	Check the check box to apply the settings to all ports.
Port 1 RF Profile	Choose the RF profile from the drop-down list. You can choose profiles for 4 ports.

**Step 6** Click **Save**.

The new node profile is listed on the left pane in the **Node Profiles** page.

## Create RF Profile

The **RF Profiles** tab lists the RF port settings profiles which are already created. Each RF profile panel shows whether the RF profile is in use or not.


You can do the following with RF port profiles:

- Create a new RF port profile
- Edit the profile
- Search for profiles
- Delete the profile
- Duplicate the profile

**Step 1** Log into the iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** Select **Config Profiles** tab from the top of the screen.

**Step 3** Select the **RF Profiles** tab.

**Step 4** Click the  icon to create an RF port profile.

## Create RF Profile

The screenshot shows the 'Create new RF Profile' configuration page in Cisco iNode Manager. The left sidebar displays a list of RF Profiles, including 'RFPortSettingsProfile01', 'RFPortSettingsProfile01-02\$', 'RFPortSettingsProfile02', and 'RFPortSettingsProfile02-01#'. The main area is titled 'Create new RF Profile' and contains the following fields:

- Name:** A text input field.
- Description:** A text input field.
- RF Settings:**
  - Lower Target Center Frequency (MHz):** 111
  - Upper Target Center Frequency (MHz):** 891
  - Lower Target Amplitude (dBmV):** 36.9
  - Upper Target Amplitude (dBmV):** 48.1
  - Calculated Tilt:** 16.67
  - Target Power @1215MHz:** 52.75
  - Wink Switch:** MAX
  - Wink Attenuation (dB):** 16.0
  - Port Status:** Enabled (toggle switch)

A 'Save' button is located at the bottom left of the form.

521850

**Step 5** Enter the following details in the appropriate fields.

Field	Description
Name	Name of the RF port configuration profile.
Description	Short description of the port profile.
<b>RF Settings</b>	
Lower Target Center Frequency (MHz)	Lower end frequency of the RF port.
Upper Target Center Frequency (MHz)	Upper end frequency of the RF port.
Lower Target Amplitude (dBmV)	Lower level of output power of the RF port.
Upper Target Amplitude (dBmV)	Upper level of output power of the RF Port.
Calculated Tilt	Tilt is the difference in the signal level between the lower and upper end frequencies of the RF port. It is calculated using the following formula: $\left( \frac{\text{UpperTargetAmplitude} - \text{LowerTargetAmplitude}}{\text{UpperTargetFrequency} - \text{LowerTargetFrequency}} \right) * ((1215 - 54))$
Target Power @1215MHz	The power level at the highest frequency of the RF port. Formula: $\text{UpperTargetAmplitude} + (\text{tilt} * (1215 - \text{UpperTargetFrequency})) / (1215 - 54)$
Wink Switch	To toggle the addition of extra attenuation.
Wink Attenuation (dB)	Reduction in the amplitude of the RF.
Port Status	Click to disable the port. By default, the port status is enabled.


**Step 6** Click **Save**.

The new RF profile is listed on the left pane in the **RF Profiles** page.

## Assign Node Profile to iNodes


**Step 1** Log into the iNode Manager application, click the hamburger button and choose **iNode Manager > Overview**.

**Step 2** Select **Config Profiles** tab from the top of the screen.

**Step 3** Select the **Node Profiles** tab and click the right arrow (  ) next to the profile name in the left pane.

The **Inventory** table appears with the **Assign** and **Clear** options.

Or click the profile that you want to assign and click **Assign** in the **Edit Node Profile** page

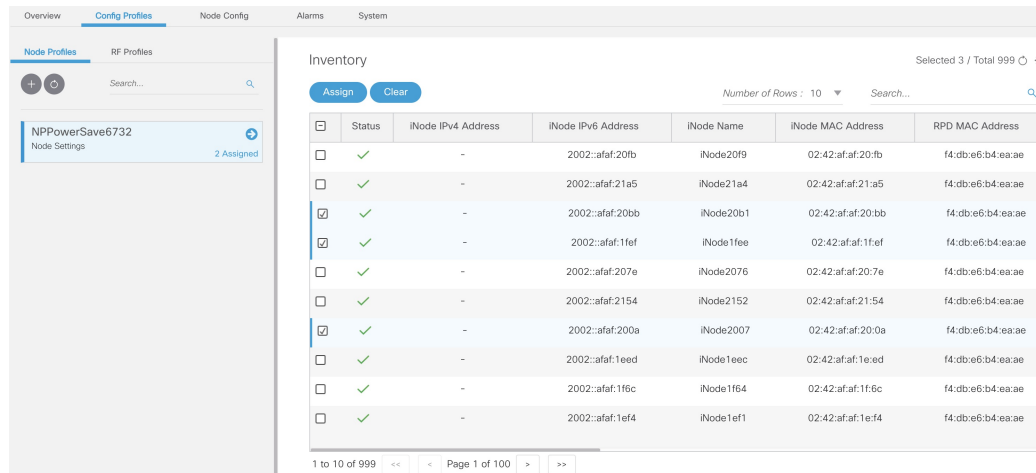

<input type="checkbox"/>	Status	iNode IPv4 Address	iNode IPv6 Address	iNode Name	iNode MAC Address	RPD MAC Address
<input type="checkbox"/>	✓	-	2002::afaf:20fb	iNode20f9	02:42:af:af:20:fb	f4:db:e6:b4:ea:ae
<input type="checkbox"/>	✓	-	2002::afaf:21a5	iNode21a4	02:42:af:af:21:a5	f4:db:e6:b4:ea:ae
<input checked="" type="checkbox"/>	✓	-	2002::afaf:20bb	iNode20b1	02:42:af:af:20:bb	f4:db:e6:b4:ea:ae
<input checked="" type="checkbox"/>	✓	-	2002::afaf:1fef	iNode1fee	02:42:af:af:1f:ef	f4:db:e6:b4:ea:ae
<input type="checkbox"/>	✓	-	2002::afaf:207e	iNode2076	02:42:af:af:20:7e	f4:db:e6:b4:ea:ae
<input type="checkbox"/>	✓	-	2002::afaf:2154	iNode2152	02:42:af:af:21:54	f4:db:e6:b4:ea:ae
<input checked="" type="checkbox"/>	✓	-	2002::afaf:200a	iNode2007	02:42:af:af:20:0a	f4:db:e6:b4:ea:ae
<input type="checkbox"/>	✓	-	2002::afaf:1eed	iNode1eec	02:42:af:af:1e:ed	f4:db:e6:b4:ea:ae
<input type="checkbox"/>	✓	-	2002::afaf:1f6c	iNode1f64	02:42:af:af:1f:6c	f4:db:e6:b4:ea:ae
<input type="checkbox"/>	✓	-	2002::afaf:1ef4	iNode1ef1	02:42:af:af:1e:f4	f4:db:e6:b4:ea:ae

**Step 4** Check the check boxes of the iNodes to which you want to assign the profile.

**Step 5** Click **Assign**.

A message appears showing that assigning the profile is initiated.

View the status in the **System > Bulk Operation Status** page.

## Node Config

The Node Config tab provides the following information:


- Displays operational data of the selected iNode, along with the information on its submodule.
- Allows you to configure the general settings of the iNode, and the settings of each of the RF ports of the iNode.
- Allows you to query and view the forward and reverse path spectrum graphs (Amplitude (dBmV) versus frequency (MHz)) of each of the RF ports of the selected iNode.
- Displays active alarms on the iNode.
- Allows you to trigger the initial setup on the iNode, and then reboot the iNode.

## iNode Selection Box

You can use the iNode selection box to list the names and IPv4/IPv6 address of the iNode's that are in inventory.

You can search for any substring in the name or the IP address of the iNode using the search bar. The filtered list that is based on the search query would be displayed in the drop-down box, and you can select the iNode from the list. After you select the iNode, the current operational data of the iNode is displayed.

**Figure 2: iNode Selection Box**

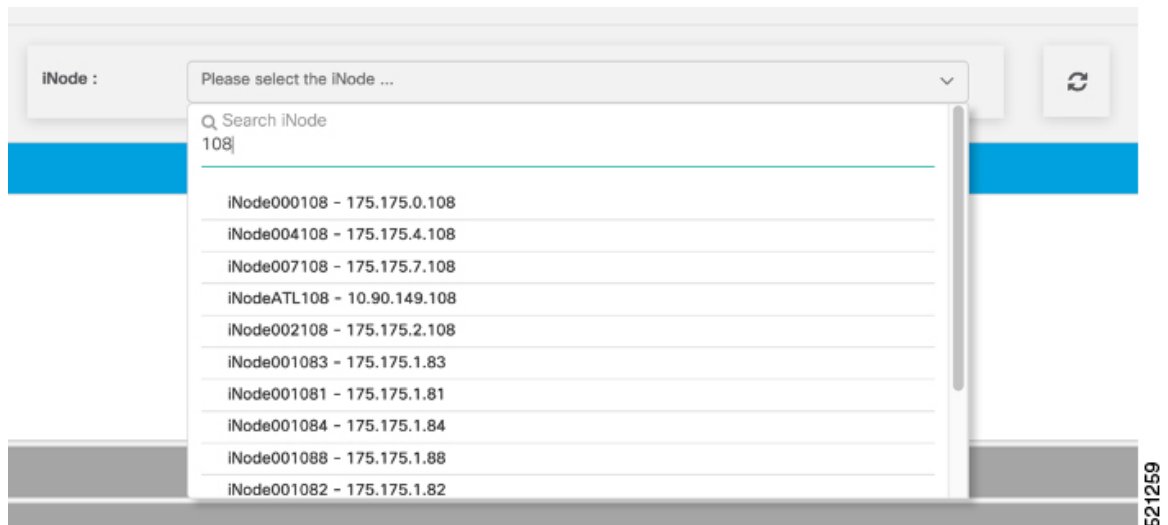

## Operational Data of the Selected iNode


The operational data of the iNode is displayed in the form of scorecards. To view the operational data, complete the following steps:

1. On the iNodeManager, click **Node Config**.
2. Select an iNode from the drop-down list.
3. Click **Dashboard**. The following information is displayed by default:
  - iNode and RPD IP addresses
  - Software version and model information
  - OIB temperature
  - Lid status
  - Spectrum capture device status
  - Initial setup status
  - Power saving mode

To view all the operational data, click **More Details**. To view the default scorecards, click **Show Less**.



Figure 3: Dashboard Page with all Operational Data of the iNode

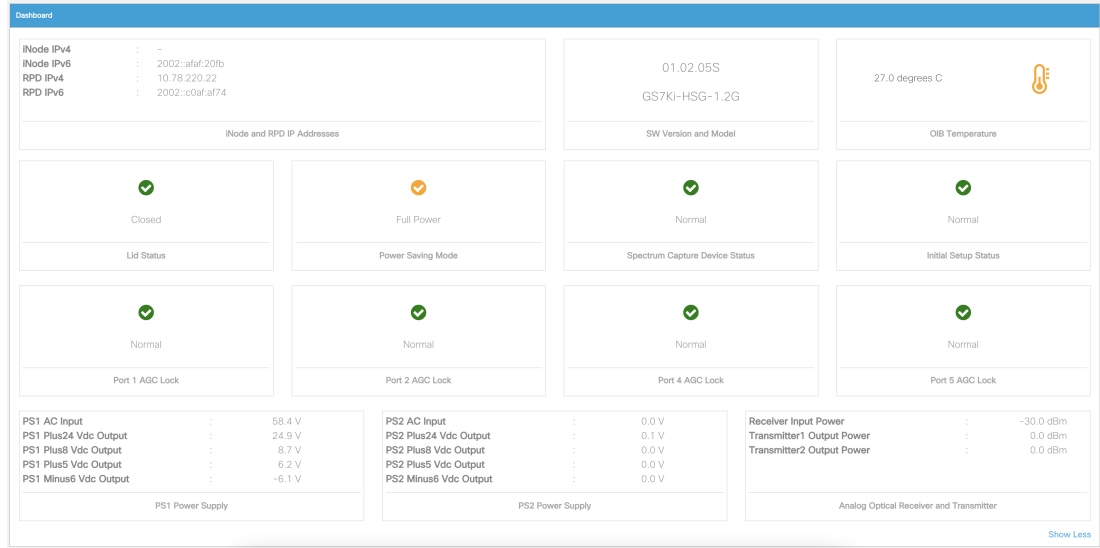

521743


## Information About Sub Modules of the iNode

The SubModules pane on the Node Config tab displays the description, serial number, part number, product identifier, and version of the sub-modules of the iNode.

You can view the SubModules pane by completing the following step:

1. On the iNodeManager, click the **Node Config** tab.
2. Select the iNode for which you want to view the settings from the drop-down list.
3. Click **SubModules**. Information on the following sub-modules is displayed:
  - OIB
  - Forward Amplifier
  - Reverse Amplifier

Figure 4: SubModules Pane of the Node Config Tab

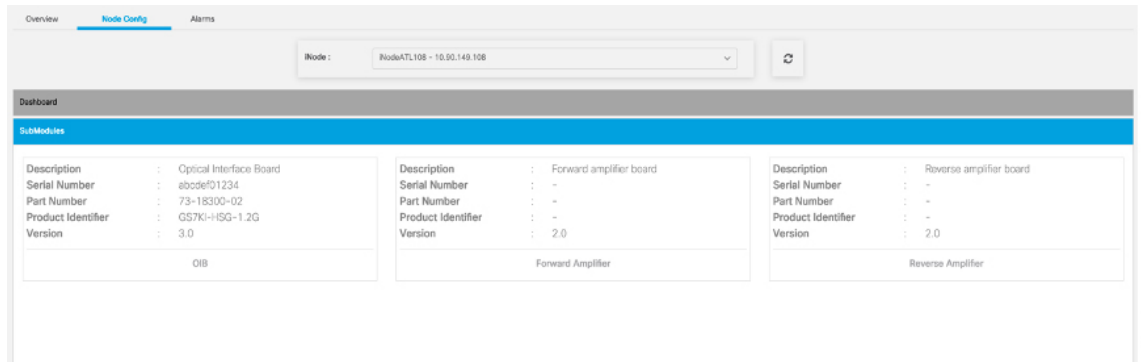

521261


## Settings

You can configure the forward segmentation, reverse segmentation, power-saving mode, and the SNMP community string on the Settings pane. You can also view and modify the general settings of the iNode and of each of the RF ports of the iNode using the Settings pane.

To view the Settings pane, complete the following steps:

1. On the iNodeManager, click the **Node Config** tab.
2. Select the iNode for which you want to view the settings from the drop-down list.
3. Click **Settings**.


**Figure 5: General Settings Tab**

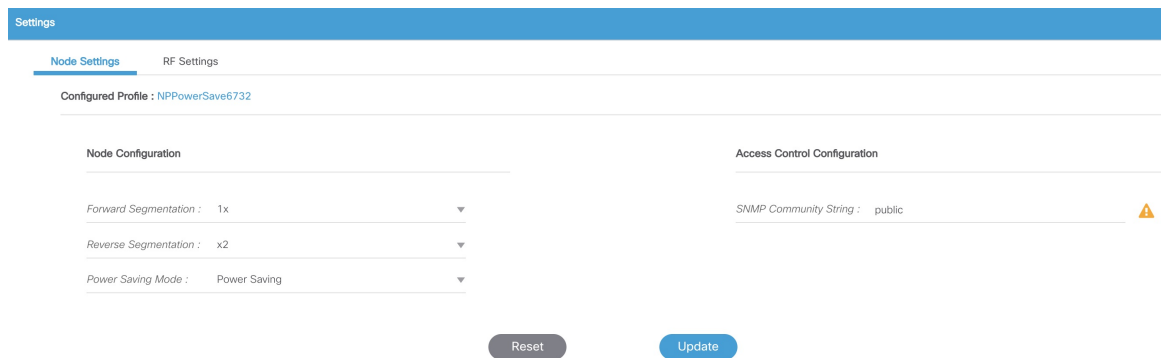

If you have assigned a Node Setting Configuration Profile to the iNode, the profile name and profile information is displayed when you click the profile name.

A warning icon is displayed against settings that are different in the iNode and Node Profile. Values present in the Configuration Profile are displayed when you point to the warning icon.

**Figure 6: RF Settings Tab**

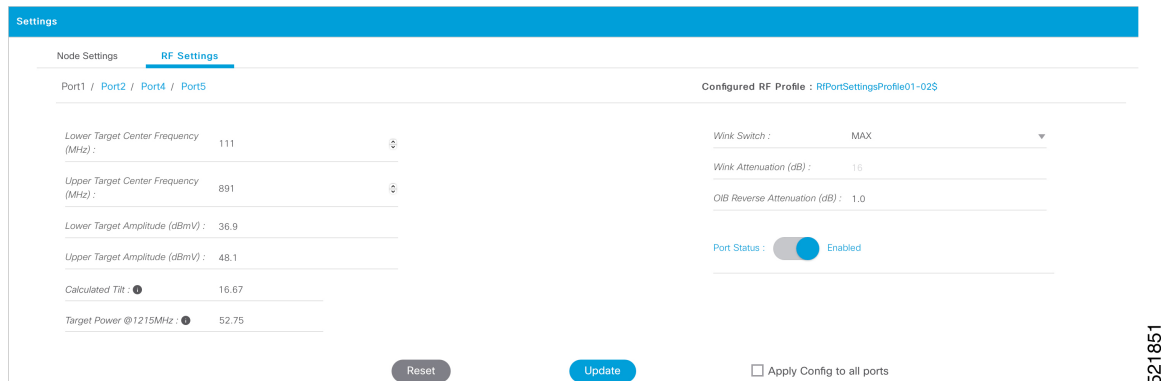

You can choose to set the Lower Target Center Frequency and Amplitude, Upper Target Center Frequency and Amplitude, Wink Switch, Wink Attenuation (in dB, if the Wink Switch is set as variable), the OIB Reverse Attenuation (in dB), and enable/disable each of the RF Port on the Settings pane. You can also apply the settings that are configured on an RF Port to all the other ports of the iNode by selecting the **Apply Config to all ports** check box.

You can calculate the value of tilt using the following formula:

$$\frac{((UpperTargetAmplitude - LowerTargetAmplitude) * ((1215 - 54)) / (UpperTargetFrequency - LowerTargetFrequency))}$$



**Note** You can set the RF parameters on the iNode only if the value of tilt is calculated to be 0–22 dBmV.

The target power at maximum frequency is also calculated, and the RF Port Config is allowed to be set on the iNode only if the target power is less than 58 dBmV.

You can calculate the target power at max frequency using the following formula:

$$(UpperTargetAmplitude + (tilt * (1215 - UpperTargetFrequency) / (1215 - 54)))$$

If you have assigned an RF Port Configuration Profile to the iNode, the profile name and profile information are displayed when the profile name is clicked.

A warning icon is displayed against settings that are different in the iNode and RF Port Profile. Values present in the Configuration Profile are displayed when you point to the warning icon.

## Spectrum Graph

You can query and view the Forward Path and the Reverse Path Spectrum Graph (amplitude (in dBmV) and frequency (in MHz)) of each of the RF Ports on the Forward and Reverse Path pane.


To view the Spectrum Graphs, complete the following steps:

1. On the iNode Manager, click the **Node Config** tab.
2. Select the iNode for which you want to view the settings from the drop-down list.
3. Click **Forward and Reverse Path**.

The Forward Path Spectrum Graph displays the full range of frequencies (102–1214 MHz) by default and it refreshes every 30 seconds. You can change the refresh interval, select the sample size (in KHz), the range of frequencies, and refetch the data from the iNode. The current and the average amplitude at the frequency is displayed when you hover on the graph.

The table in the right part displays user-configured amplitude and actual level of the amplitude at the lower target and the upper target frequencies.

**Figure 7: Forward Path Spectrum Graph**

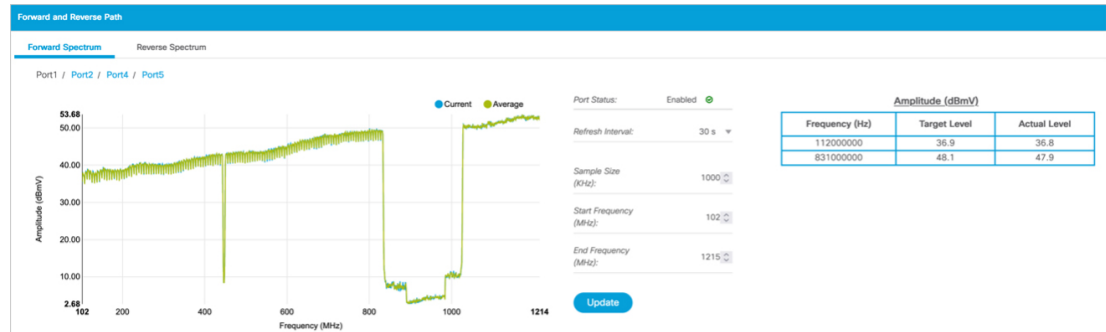

522274

The Reverse Path Spectrum Graph displays the full range of frequencies (5–85 MHz) by default and it would refresh every 30 seconds. You can choose to change the refresh interval, select the sample size, the range of

frequencies and refetch the data from the iNode. The current and the Max Hold amplitude at the frequency is displayed when you hover on the graph.

**Figure 8: Reverse Path Spectrum Graph**



521265

## Alarms

You can view the list of active alarms, and also the history of alarms for the selected iNode by using the Alarms pane.

To view the Alarms, complete the following steps:

1. On the iNodeManager, click the **Node Config** tab.
2. Select the iNode for which you want to view the settings from the drop-down list.
3. Click **Alarms**.

**Figure 9: Active Alarms Pane**

Time Stamp	Severity	Alarm Message	Muted
05/04/2021 3:30:16 PM UTC (GMT0:00)	Critical	iNode is not reachable	False

521744

The **Muted** column indicates whether the alarm is muted by the user.

You can export the list of active alarms as a CSV file by clicking the Export CSV  button.

The Alarms History table lists the timestamp at which the alarms were set and cleared on the iNode. The table lists the active alarms as *SET*.

**Figure 10: Alarms History Pane**

Time Stamp	Alarm State	Alarm Message
05/04/2021 3:45:55 PM UTC (GMT0:00)	▲ SET	iNode is not reachable
04/30/2021 10:15:18 AM UTC (GMT0:00)	● CLEAR	Tamper
04/30/2021 10:15:18 AM UTC (GMT0:00)	● CLEAR	Spectrum analyzer status
04/30/2021 10:15:18 AM UTC (GMT0:00)	● CLEAR	Port 4 AGC lock
04/30/2021 10:15:18 AM UTC (GMT0:00)	● CLEAR	Port 2 AGC lock
04/30/2021 10:15:18 AM UTC (GMT0:00)	● CLEAR	Port 1 AGC lock
04/30/2021 10:15:18 AM UTC (GMT0:00)	● CLEAR	Auto setup status
04/23/2021 6:55:16 AM UTC (GMT0:00)	▲ SET	Lid of the iNode is currently open.
04/23/2021 6:55:16 AM UTC (GMT0:00)	▲ SET	Device used to capture the frequency spectrum is not functioning properly.
04/23/2021 6:55:16 AM UTC (GMT0:00)	▲ SET	Port 5 AGC not lock

You can also choose to group the alarms based on the category, and then select each category to view the timestamps.

You can also export the alarm history as a CSV file by clicking the **Export CSV** button.


## Maintenance

The Maintenance pane allows you to trigger the initial setup operation in the selected iNode, and allows you to reboot the selected iNode.

To view the Maintenance pane, complete the following steps:

1. On the iNodeManager, click the **Node Config** tab.
2. Choose the iNode for which you want to view the settings from the drop-down list.
3. Click **Maintenance**.

Figure 11: Maintenance Pane

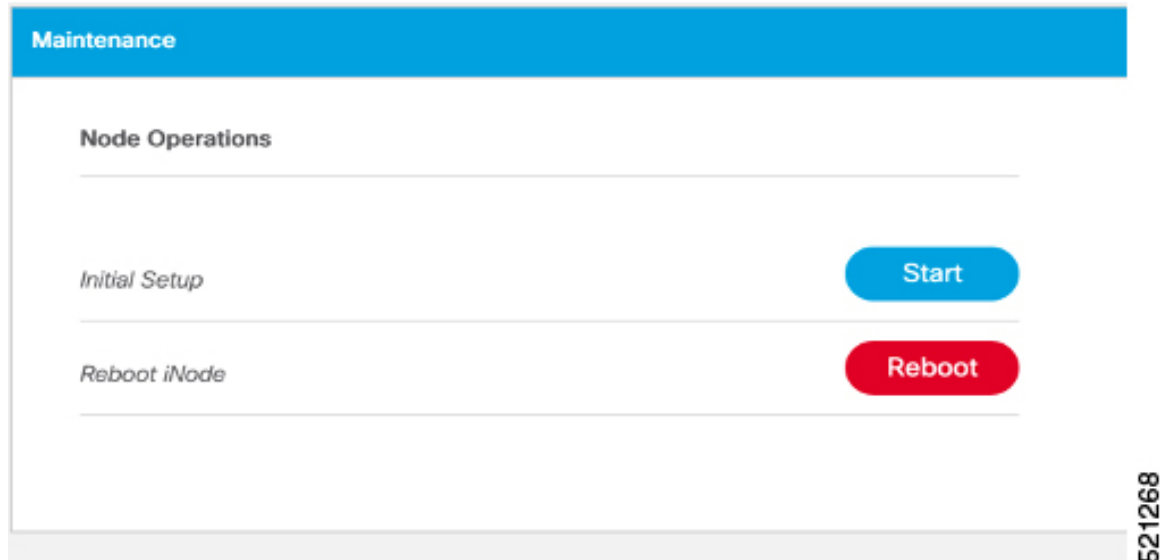

### Initial Setup

When initial-setup is triggered, the output level of the input source is measured and the attenuators on the OIB are adjusted to optimize the input level into the forward amplifier. After successful completion, the `Initial Setup Status` on the Dashboard turns green (status: Normal)



**Note** Before you click the **Start** button for the **Initial Setup**, set the port frequencies and levels, enable at least Port 1, and save the configuration on the RF configuration pages.

Perform the Initial Setup in the following scenarios:

- Replacing RPD or iNode
- Changing the RF band, especially when modifying high and low frequencies
- Modifying the power level from CCAP core

## Alarms


You can use the Alarms tab to list the total number of unmuted alarms in the iNode's, along with the number of unmuted alarms based on their severity in a table. You can select the number of rows to be displayed on page and can filter the alarms that are displayed by specifying a substring using the search. You can also filter the alarms based on severity by clicking the corresponding scorecard.

To view the Alarms, complete the following step:

1. On the iNodeManager, click the **Alarms** tab.

To view the muted alarms, click the **Muted Alarms** scorecard.

Figure 12: Alarms Tab

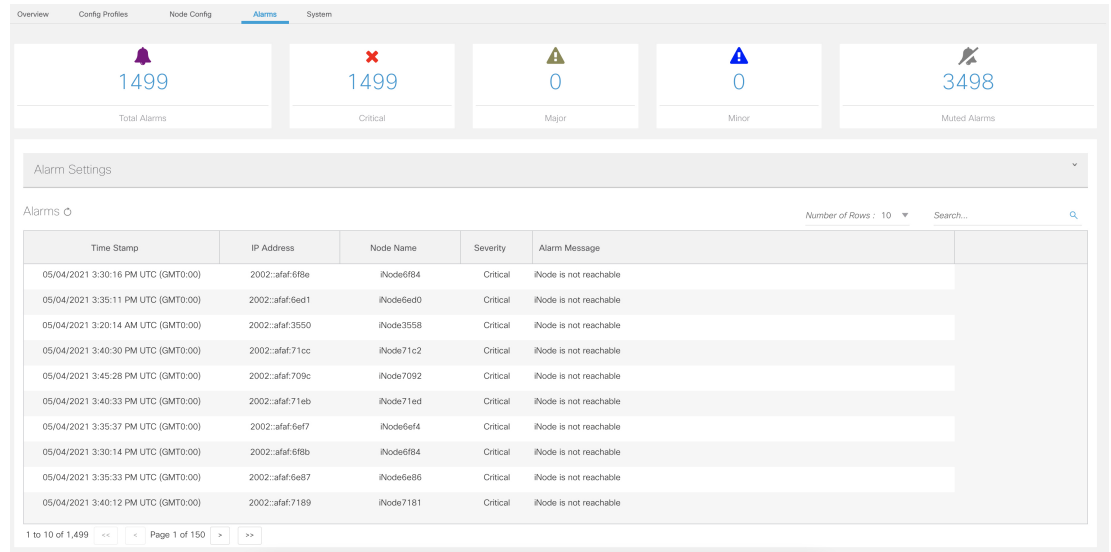

521745

## Alarm Settings

In Alarm Settings section, all alarm categories are enabled by default. You can uncheck the box corresponding to the alarm category to mute that category of alarms. The muted alarms are not displayed in the Alarms table, and they are not counted as part of the alarm statistics.

All Power Supply related alarms can be muted by checking the corresponding PS (Power Supply) checkbox at the bottom of the section. After making the change, click the **Enable** button to update the Alarm Settings.

Figure 13: Alarm Settings



521738

## System

You can choose to take backup of the database, import a database file into the iNode Manager, and to view the results of the bulk operations using the System tab.

### Database Backup and Restore

You can create a backup of the database, and also restore the iNode Manager to an earlier state by importing a database file by using the Database Backup and Restore pane. You can also view the results and status of the backup and restore operations that were performed earlier.

To view the Database Backup and Restore pane, complete the following steps:

1. On the iNodeManager, click the **System** tab.
2. Click **Database Backup and Restore**.

**Figure 14: Database Backup and Restore Pane**

Overview Config Profiles Node Config Alarms **System**

**Database Backup & Restore**

Server IP : \_\_\_\_\_  
 User Name : \_\_\_\_\_  
 Password : \_\_\_\_\_  
 Directory : \_\_\_\_\_  
 Filename (For Import Only \*) : \_\_\_\_\_  
 Schedule DB Export : None

Export Import Reset

Database Export Schedule

	Server	User	Freq	Every	Time	Next schedule	Upload Directory
	10.78.229.203	inodemgruser	Weekly	Mon	22:00	05/24/2021 10:00:00 PM UTC	/home/inodemgruser/

Database Export/Import Status

Operation	Status	Start Time	End Time	Message
EXPORT	✓	05/17/2021 10:00:00 PM UTC (GMT0:00)	05/17/2021 10:00:14 PM UTC (GMT0:00)	Successfully exported file: 10.78.229.203:/home/inodemgruser/inodemgr_inode-manager-chn-mm1_backup_20210517
EXPORT	✓	05/10/2021 10:00:00 PM UTC (GMT0:00)	05/10/2021 10:00:13 PM UTC (GMT0:00)	Successfully exported file: 10.78.229.203:/home/inodemgruser/inodemgr_inode-manager-chn-mm1_backup_20210510
EXPORT	✓	05/10/2021 11:42:15 AM UTC (GMT0:00)	05/10/2021 11:42:29 AM UTC (GMT0:00)	Successfully exported file: 10.78.229.203:/home/inodemgruser/inodemgr_inode-manager-chn-mm1_backup_20210510

521746




**Note** The Database Import operation is possible only if the iNode Manager does not have any data. Ensure that the iNode Manager does not have any iNode, configuration profile, and the DB export schedule.

## Database Import Validation


Starting from Cisco iNode Manager release 3.2.0, the exported database file contains important metadata and the checksum. The checksum is used to validate the database file during the import operation. The metadata in the database file is displayed to the user during the import operation. The user can confirm/cancel the database import operation after checking the metadata.




Figure 15: Database Import Confirmation

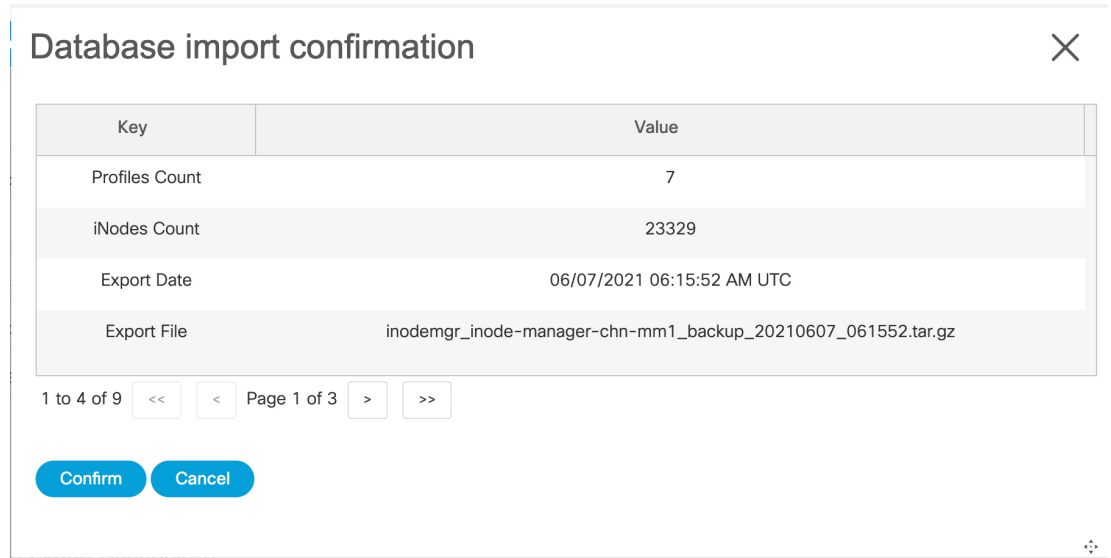

If you try to import a database file that was exported from the iNode Manager prior to release 3.2.0, you can see the following warning message and confirm/cancel the database import.

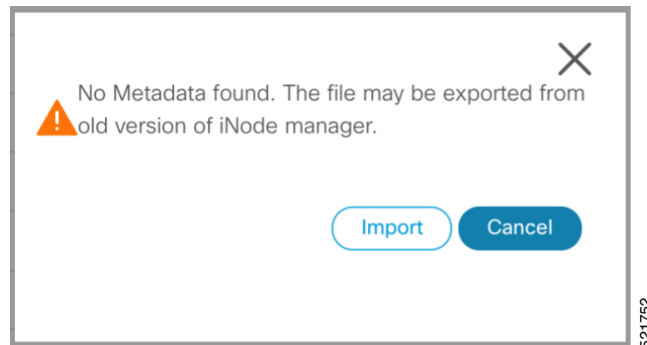

If the database file is found to be corrupt while importing, the database import will stop and you will see the following message.

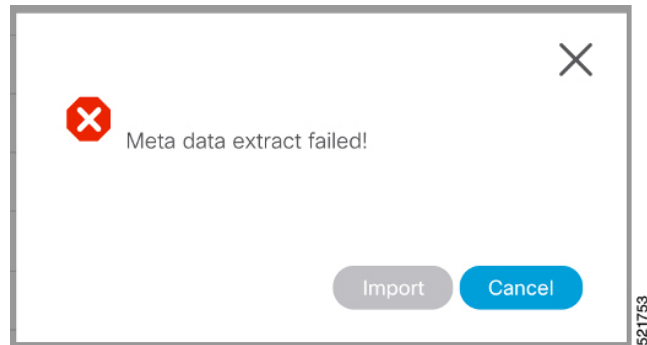

**Database Export Scheduling**

You can schedule the database export at the following intervals:

- every 1 to 6 days
- every week
- every month

**Figure 16: Database Export Scheduling**

Database Backup & Restore

Server IP : 10.78.210.203

---

User Name : cabuchn

---

Password : ••••••••

---

Directory : /home/cabuchn/srkrish2/iNodeMgr

---

Filename (For Import Only \*) :

---

Schedule DB Export : Daily ▼

---

Every 1 day(s) ▼

---

Export schedule time : 10:06 AM 🕒

---

Export
Import
Reset

521754

Only one schedule can be configured. To delete the schedule, click on the Delete  button.

Database Export Schedule [🔗](#)

	Server	User	Freq	Every	Time	Next schedule	Upload Directory
	10.78.229.203	inodemgruser	Weekly	Mon	22:00	05/24/2021 10:00:00 PM UTC	/home/inodemgruser/

521761

## Bulk Operation Status


You can view the status of the bulk operations using the Bulk Operation Status pane.

To view the Bulk Operation Status, complete the following steps:

1. On the iNodeManager, click the **System** tab.

## 2. Click the **Bulk Operation Status** pane.

**Figure 17: Bulk Operation Status**

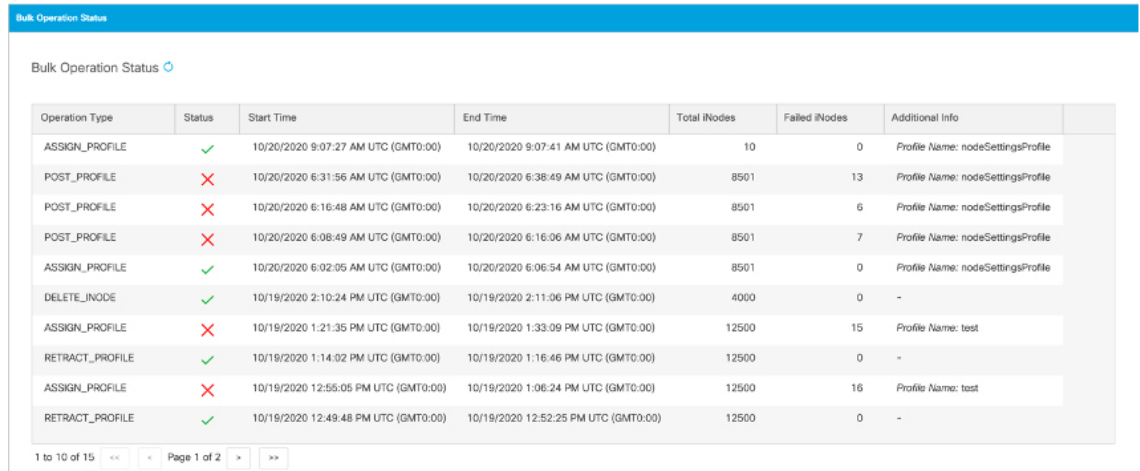


Operation Type	Status	Start Time	End Time	Total iNodes	Failed iNodes	Additional Info
ASSIGN_PROFILE	✓	10/20/2020 9:07:27 AM UTC (GMT0:00)	10/20/2020 9:07:41 AM UTC (GMT0:00)	10	0	Profile Name: nodeSettingsProfile
POST_PROFILE	✗	10/20/2020 6:31:56 AM UTC (GMT0:00)	10/20/2020 6:38:49 AM UTC (GMT0:00)	8501	13	Profile Name: nodeSettingsProfile
POST_PROFILE	✗	10/20/2020 6:16:48 AM UTC (GMT0:00)	10/20/2020 6:23:16 AM UTC (GMT0:00)	8501	6	Profile Name: nodeSettingsProfile
POST_PROFILE	✗	10/20/2020 6:08:49 AM UTC (GMT0:00)	10/20/2020 6:16:06 AM UTC (GMT0:00)	8501	7	Profile Name: nodeSettingsProfile
ASSIGN_PROFILE	✓	10/20/2020 6:02:05 AM UTC (GMT0:00)	10/20/2020 6:06:54 AM UTC (GMT0:00)	8501	0	Profile Name: nodeSettingsProfile
DELETE_INODE	✓	10/19/2020 2:10:24 PM UTC (GMT0:00)	10/19/2020 2:11:06 PM UTC (GMT0:00)	4000	0	-
ASSIGN_PROFILE	✗	10/19/2020 1:21:35 PM UTC (GMT0:00)	10/19/2020 1:33:09 PM UTC (GMT0:00)	12500	15	Profile Name: test
RETRACT_PROFILE	✓	10/19/2020 1:14:02 PM UTC (GMT0:00)	10/19/2020 1:16:46 PM UTC (GMT0:00)	12500	0	-
ASSIGN_PROFILE	✗	10/19/2020 12:55:05 PM UTC (GMT0:00)	10/19/2020 1:06:24 PM UTC (GMT0:00)	12500	16	Profile Name: test
RETRACT_PROFILE	✓	10/19/2020 12:49:48 PM UTC (GMT0:00)	10/19/2020 12:52:25 PM UTC (GMT0:00)	12500	0	-

1 to 10 of 15 << < Page 1 of 2 > >>

521271

For Bulk Configuration Profile operations such as *Post Profile* and *Assign Profile*, the configuration profile name is listed in *Additional Info*. The table displays the status of the last 15 bulk operations carried out. The status of the operation on each iNode can be viewed by clicking the corresponding record on the table.

**Figure 18: Bulk Operation Details**

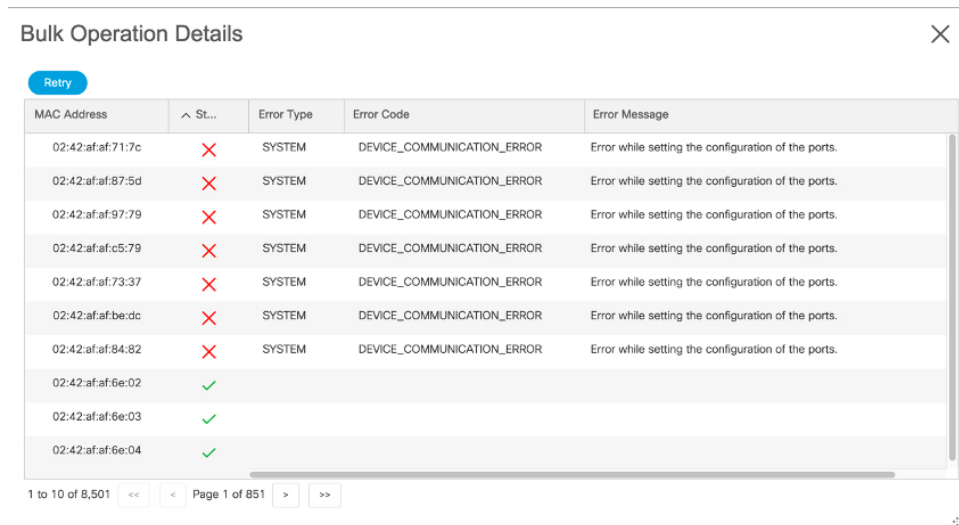

MAC Address	St...	Error Type	Error Code	Error Message
02:42:af:af:71:7c	✗	SYSTEM	DEVICE_COMMUNICATION_ERROR	Error while setting the configuration of the ports.
02:42:af:af:87:5d	✗	SYSTEM	DEVICE_COMMUNICATION_ERROR	Error while setting the configuration of the ports.
02:42:af:af:97:79	✗	SYSTEM	DEVICE_COMMUNICATION_ERROR	Error while setting the configuration of the ports.
02:42:af:af:c5:79	✗	SYSTEM	DEVICE_COMMUNICATION_ERROR	Error while setting the configuration of the ports.
02:42:af:af:73:37	✗	SYSTEM	DEVICE_COMMUNICATION_ERROR	Error while setting the configuration of the ports.
02:42:af:af:be:dc	✗	SYSTEM	DEVICE_COMMUNICATION_ERROR	Error while setting the configuration of the ports.
02:42:af:af:84:82	✗	SYSTEM	DEVICE_COMMUNICATION_ERROR	Error while setting the configuration of the ports.
02:42:af:af:6e:02	✓			
02:42:af:af:6e:03	✓			
02:42:af:af:6e:04	✓			

1 to 10 of 8,501 << < Page 1 of 851 > >>

521272


Click **Retry** to reattempt the bulk operation on the failed iNodes. The corresponding records related to the bulk operation would be updated with the *retry* status.

For bulk operations that might be *In Progress* for a long time, you can choose to click the **Abort** button.

## Tag Management



Tag Management pane displays the information about the tags that were created by the user. Tag Management Status table lists the name of the tag, the number of iNode to which the tag is associated with, the name of the user who created the tag, and the time at which the tag was created.

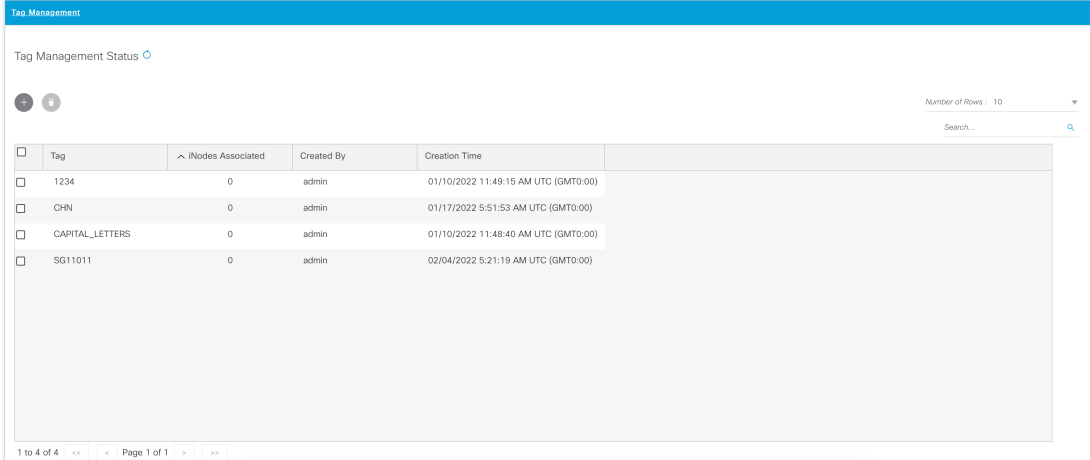Figure 19: Tag Management



Tag	iNodes Associated	Created By	Creation Time
1234	0	admin	01/10/2022 11:49:15 AM UTC (GMT0:00)
CHN	0	admin	01/17/2022 5:51:53 AM UTC (GMT0:00)
CAPITAL_LETTERS	0	admin	01/10/2022 11:48:40 AM UTC (GMT0:00)
SG11011	0	admin	02/04/2022 5:21:19 AM UTC (GMT0:00)


522286

You can create a new tag by clicking the  button. The tags that are not associated with any iNode can be removed by selecting the tags in the table, and then clicking the  button.

## Operations Hub Metrics Dashboard

To open the Grafana Metrics Dashboard, click the hamburger button and choose **Dashboards**.

Figure 20: Operations Hub Metrics Dashboard

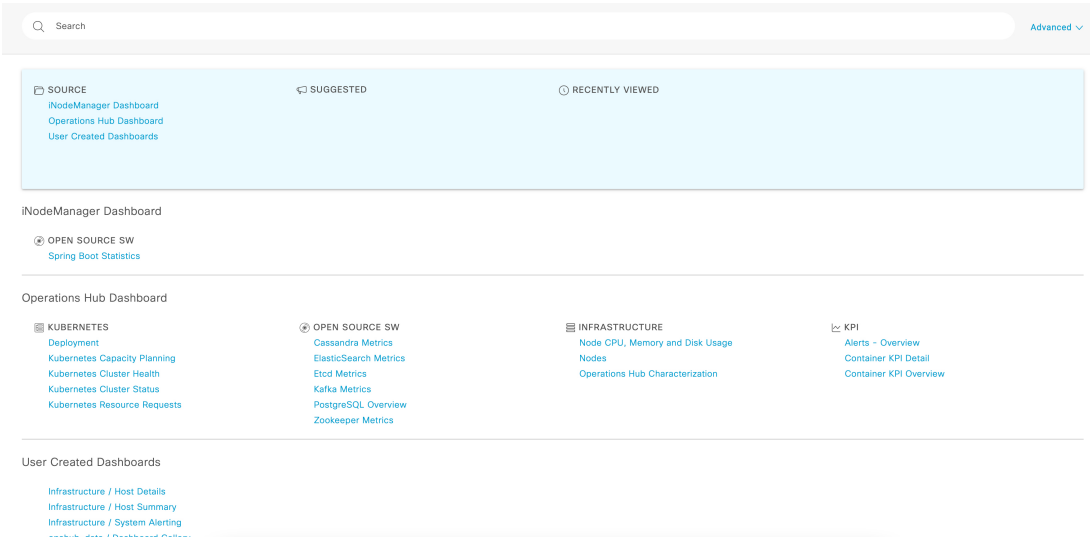

The dashboard displays a search bar at the top with the text "Search" and "Advanced" on the right. Below the search bar, there are two tabs: "SUGGESTED" and "RECENTLY VIEWED". Under "SUGGESTED", there are three items: "iNodeManager Dashboard", "Operations Hub Dashboard", and "User Created Dashboards". Under "RECENTLY VIEWED", there is one item: "Spring Boot Statistics".

The main content area is divided into several sections:


- iNodeManager Dashboard**: Contains "OPEN SOURCE SW" with "Spring Boot Statistics".
- Operations Hub Dashboard**: Contains four categories:
  - KUBERNETES**: Deployment, Kubernetes Capacity Planning, Kubernetes Cluster Health, Kubernetes Cluster Status, Kubernetes Resource Requests.
  - OPEN SOURCE SW**: Cassandra Metrics, ElasticSearch Metrics, Etcd Metrics, Kafka Metrics, PostgreSQL Overview, Zookeeper Metrics.
  - INFRASTRUCTURE**: Node CPU, Memory and Disk Usage, Nodes, Operations Hub Characterization.
  - KPI**: Alerts - Overview, Container KPI Detail, Container KPI Overview.
- User Created Dashboards**: Infrastructure / Host Details, Infrastructure / Host Summary, Infrastructure / System Alerting, opshub-data / Dashboard Gallery.

522278

This page displays the various statistics that are available both from the iNode Manager application and the underlying Kubernetes and infra.


The following are a few snapshots of the statistics that are provided by the iNode Manager application:

Figure 21: Operations Hub Metrics – iNode Manager Application – Spring Boot – Basic Stats

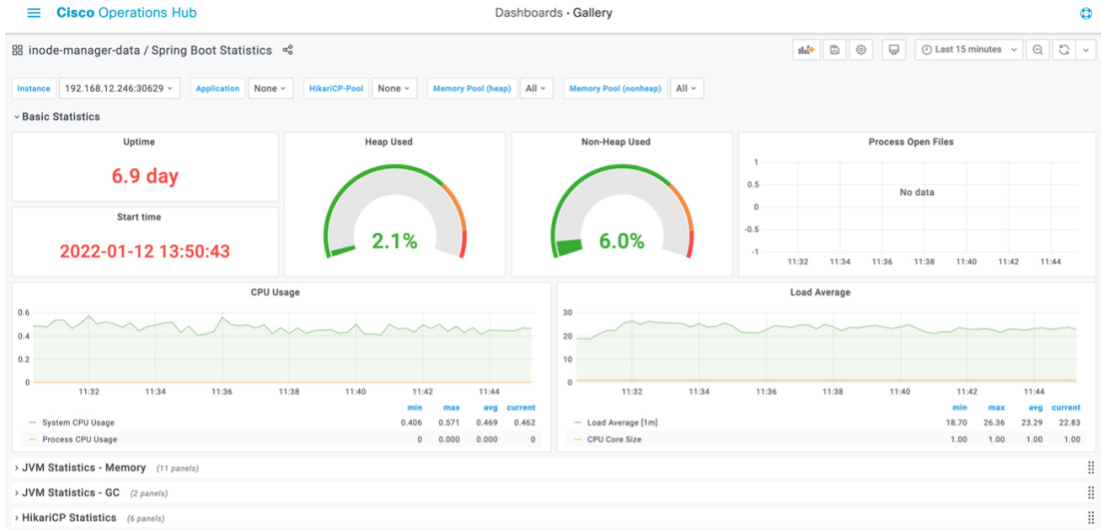

522268


Figure 22: Operations Hub Metrics – iNode Manager Application – Spring Boot – HTTP Stats

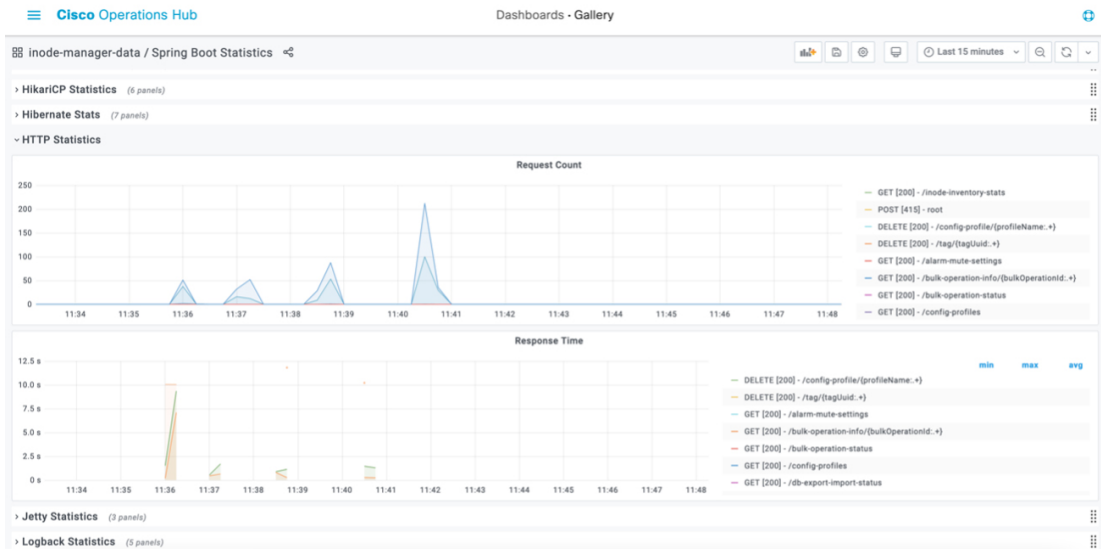

522269


The following are a few snapshots of the statistics that are exposed by Kubernetes, and the infra pods:

Figure 23: Operations Hub Metrics – Node CPU, Memory and Disk Usage

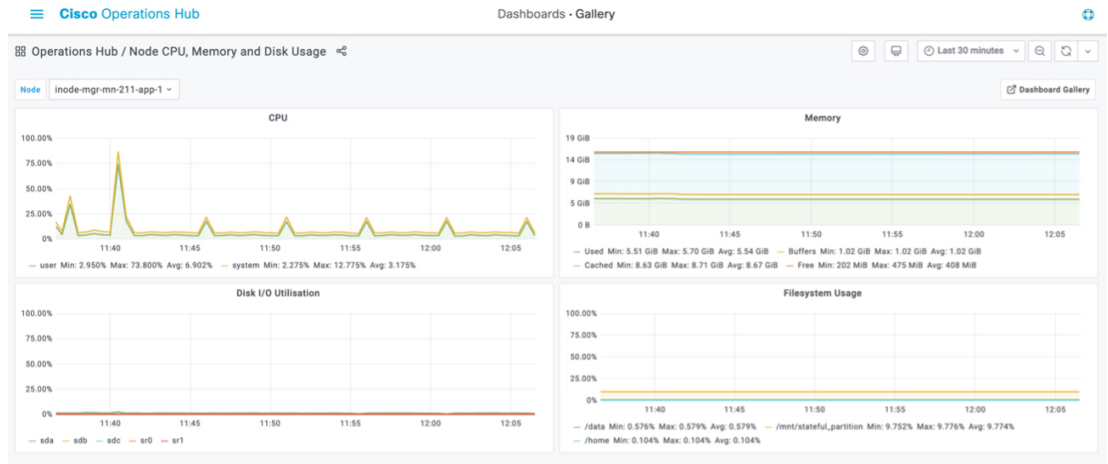


522270

Figure 24: Operations Hub Metrics – Cassandra Stats

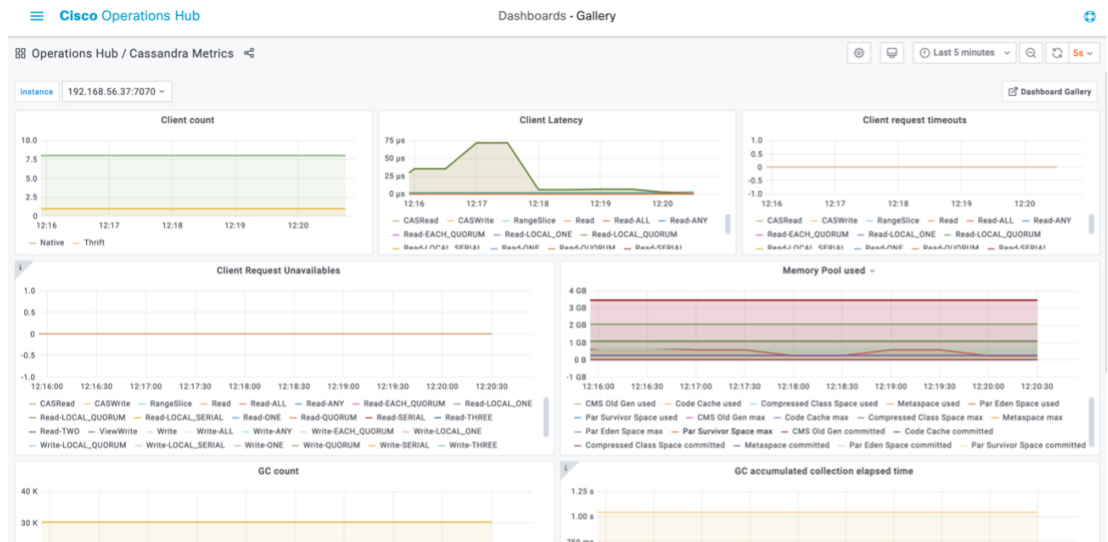

522271

Figure 25: Operations Hub Metrics – Elastic Search Stats

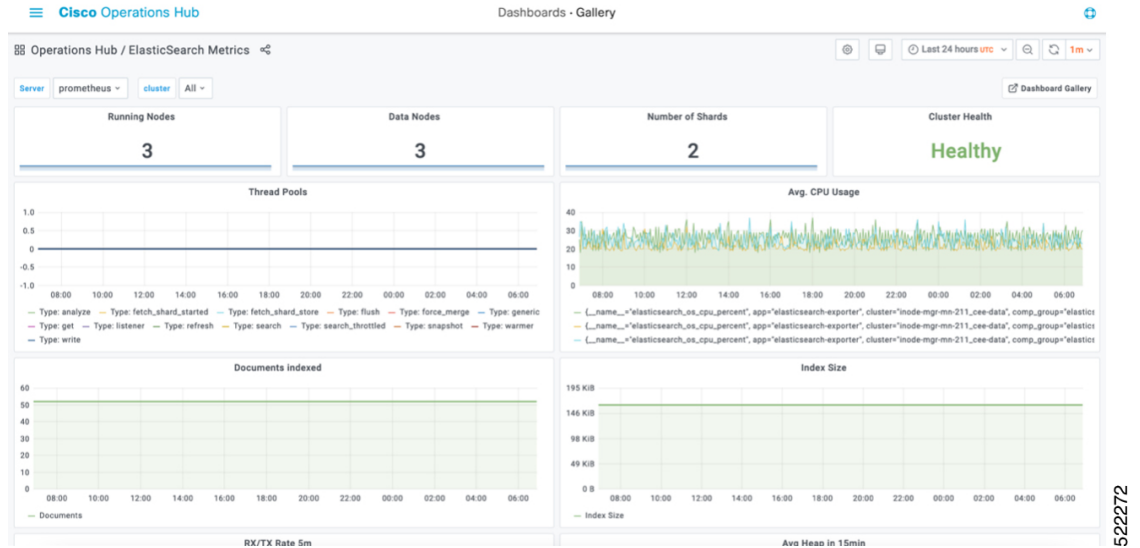

522272

## Using REST APIs

### API Explorer

To open the API Explorer Dashboard:

1. Click the hamburger button and select **API Explorer**.
2. Click **iNode Service Manager** under **INODE MANAGER API** to open the **iNode Service Manager API Docs** page.

The iNode Service Manager API Docs can also be launched directly by using the URL:

- With FQDN disabled:

```
https://<ingress-ip>.nip.io/home/inodemanager/api-explorer/inode-service-manager
```

- For all-in-one (AIO) cluster, the ingress IP address is the management IP address of the `ops` node or VM.
- For multi node, the ingress IP address is the virtual IP address that is configured for the management network.

- With FQDN enabled:

```
https://<ingress-hostname>/home/inodemanager/api-explorer/inode-service-manager
```







Update the password in the Update Password pane of the My Account page. Make sure to follow the password requirements in the pane.

**Figure 28: Update Password**

The screenshot shows the 'My Account' page in the Cisco Operations Hub. On the left, account details for 'admin' are listed: Username: admin, Role: Admin, and Password: Update Password. The main content area is the 'Update Password' pane for the 'admin' user. It contains three password input fields: 'Current Password\*', 'New Password\*', and 'Confirm New Password\*', each with a requirement to 'Must contain at least 8 characters'. Below these is a 'PASSWORD REQUIREMENTS' section with four criteria: 'Contains an uppercase letter', 'Contains a lowercase letter', 'Contains a number', and 'Contains a special character'. A password strength indicator shows '- - @ # \$ % ^ & \* ( ) \_ - = + [ ] { } ; : ' ' < > , . / ?'. At the bottom right of the pane are 'Cancel' and 'Update' buttons. A vertical ID '522281' is visible on the right side of the image.

A message displays when the password expires in less than 30 days. You can change the password by clicking the **Reset your password** link.

**Figure 29: Password Expiry Reminder**

The screenshot shows the 'System' page in the Cisco Operations Hub. A message box at the top states: 'Your password will expire in 19 days. Reset your password'. The page header shows 'System · Welcome'. A vertical ID '522273' is visible on the right side of the image.

## Renewing the Cisco iNode Manager Certification

Cisco iNode Manager utilizes an X.509 certificate to secure the communications channel between it and the Cisco GS7000 Intelligent Nodes it manages. The certificate validity period is 11 months from the date the iNode Manager software was installed. If the certificate expires, you lose the ability to remotely manage your GS7000 Intelligent Nodes. In iNodeManager 24.1 the certificate is automatically renewed after 300 days (approximately 10 months) while for all the previous releases the certificate is automatically renewed after 270 days. The validity of certificate is 11 from the date of renewal. User can also renew the certificate manually as follows.

### AIO

For AIO, login to the cluster and use the following steps to restart the **inode-service-manager** pod:

**Step 1** Identify the **inode-service-manager**.

**Example:**

```
inodemgruser@cicd-aio-229-control-plane:~$ kubectl get pods -A | grep inode-manager-data
inode-manager-data   diskutil-9ltzz                1/1   Running
      2             26d
inode-manager-data   documentation-79cf864479-w22dp 1/1   Running
      2             26d
inode-manager-data   inode-registry-service-8495f69bdb-wvfp6 1/1   Running
      4             23d
inode-manager-data   inode-service-manager-b7bdcf769-k7lpd 1/1   Running
      3             26d
inode-manager-data   inodemanager-grafana-dashboard-metrics-7754fc5589-vstnv 1/1   Running
      2             26d
inode-manager-data   ops-center-inode-manager-data-ops-center-7b64855f7c-dk82g 5/5   Running
      10            26d
inode-manager-data   robot-ui-74b86b4979-txgwr      2/2   Running
      4             26d
inode-manager-data   smart-agent-inode-manager-data-ops-center-b9867c68-8c7rv 1/1   Running
      5             26d
```

**Step 2** Delete the **inode-service-manager**.**Example:**

```
inodemgruser@cicd-aio-229-control-plane:~$ kubectl delete pod -name
inode-service-manager-b7bdcf769-k7lpd -n inode-manager-data
pod "inode-service-manager-b7bdcf769-k7lpd" deleted
```

The **inode-service-manager** restarts automatically.

**Step 3** Ensure that **inode-service-manager** pod restarts with a different ID appended at the end.**Example:**

```
inodemgruser@cicd-aio-229-control-plane:~$ kubectl get pods -A | grep inode-manager-data
inode-manager-data   diskutil-9ltzz                1/1   Running
      2             26d
inode-manager-data   documentation-79cf864479-w22dp 1/1   Running
      2             26d
inode-manager-data   inode-registry-service-8495f69bdb-wvfp6 1/1   Running
      4             23d
inode-manager-data   inode-service-manager-b7bdcf769-rhlxk 1/1   Running
      0             46s
inode-manager-data   inodemanager-grafana-dashboard-metrics-7754fc5589-vstnv 1/1   Running
      2             26d
inode-manager-data   ops-center-inode-manager-data-ops-center-7b64855f7c-dk82g 5/5   Running
      10            26d
inode-manager-data   robot-ui-74b86b4979-txgwr      2/2   Running
      4             26d
inode-manager-data   smart-agent-inode-manager-data-ops-center-b9867c68-8c7rv 1/1   Running
      5             26d
```

## Multinode Setup

For Multinode setup, login into the control plane and execute the **kubectl get pods** command.

**Step 1** **Example:**

```
inodemgruser@cicd-multi-node-211-control-plane-1:~$ kubectl get pods -A | grep inode-manager-data
inode-manager-data   diskutil-8jwst                1/1   Running
      2             25d
```

inode-manager-data	diskutil-gcdhm	1/1	Running
2	25d		
inode-manager-data	diskutil-ldvxn	1/1	Running
2	25d		
inode-manager-data	documentation-556f96574-pn6lx	1/1	Running
1	11d		
inode-manager-data	inode-registry-service-74bddb657f-khtnz	1/1	Running
2	25d		
inode-manager-data	inode-registry-service-74bddb657f-smr4g	1/1	Running
1	11d		
inode-manager-data	inode-registry-service-74bddb657f-vhrpt	1/1	Running
2	25d		
inode-manager-data	inode-service-manager-6b5f8694b4-jf5kz	1/1	Running
0	9d		
inode-manager-data	inode-service-manager-6b5f8694b4-kmj66	1/1	Running
0	9d		
inode-manager-data	inode-service-manager-6b5f8694b4-vs2p7	1/1	Running
0	9d		
inode-manager-data	inodemanager-grafana-dashboard-metrics-b794f6ccf-5b7h7	1/1	Running
2	25d		
inode-manager-data	ops-center-inode-manager-data-ops-center-69ff64db6-vg7x1	5/5	Running
0	9d		
inode-manager-data	robot-ui-7bd88c77cb-jckxd	2/2	Running
2	11d		
inode-manager-data	smart-agent-inode-manager-data-ops-center-557c6cc9b8-55t7h	1/1	Running
6	25d		

It shows three ISM pods running in three VMs.

## Step 2

Delete the three ISM pods and ensure that ISM pods restart as mentioned in the preceding AIO setup.