

# **clear Commands**

- clear avc nbar, on page 2
- clear counters, on page 3
- clear cts, on page 4
- clear datapath, on page 5
- clear dot11, on page 6
- clear logging, on page 7

# clear avc nbar

To clear AVC NBAR statistics, use the clear avc nbar command.

clear avc nbar statistics

Syntax Description statistics Clears AVC NBAR

statistics

**Command Modes** Privileged EXEC (#)

Command History Release Modification

8.1.111.0 This command was introduced.

## **Examples**

The following example shows how to clear AVC NBAR statistics:

cisco-ap# clear avc nbar statistics

# clear counters

To clear 802.11 radio statistics, use the **clear counters** command.

**clear countersDot11Radio** interface-number | **client** | **fast-path profinet** | **wired** interface-number MIB-stats

# **Syntax Description**

Dot11Radio	(Optional) Clears the Dot11 interface statistics.
interface-number	Dot11Radio interface number; valid value is 0 or 1.
client	Clears the client statistics.
fast-path	Clears the controller fast-path statistics.
profinet	Clears the profinet statistics.
wired	Clears the wired interface statistics.
interface-number	Wired interface number, valid value is between 0 and 3.
MIB-stats	Clears the AP Internal-Switch MIB counters.

### **Command Modes**

Privileged EXEC (#)

### **Command History**

Release	Modification
8.1.111.0	This command was introduced.
8.7	This command was enhanced by adding <b>client, fast-path, profinet, wired</b> parameters.

### **Examples**

The following example shows how to clear 802.11 interface statistics for the interface number specified:

cisco-ap# clear counters Dot11Radio 1

# clear cts

To clear the statistics of Cisco TrustSec Security, use the **clear cts** command.

clear cts role-based counters [all | client mac-addr | from sgt to dgt]

# **Syntax Description**

counters	Clears Cisco TrustSec summary counters
all	Clears all Cisco TrustSec counters
client mac-addr	Clears the Cisco TrustSec counters for a client MAC address specified in xx:xx:xx:xx:xx format
from	Specifies the source group tag for filtered traffic
sgt	Security Group Tag (SGT); valid values are 0 to 65535
to	Specifies the destination group tag for filtered traffic
dgt	Destination Group Tag (DGT); valid values are 0 to 65535

#### **Command Modes**

Privileged EXEC (#)

# **Command History**

Release	Modification
8.1.111.0	This command was introduced.

This example shows you how to clear all the statistics of Cisco TrustSec Security counters:

cisco-ap# clear cts role-based counters all

# clear datapath

To clear the datapath counters or drops, use the clear datapath command.

clear	datapath	{ drops	statistics }	ļ
cicai	uauapaui	urops		

•	_			
Syntax	Hacc	rin	***	
SVIILAX	DCOL	, I I L	ш	"

drops	Clears the datapath drop counter	
statistics	Clears the datapath counters	

### **Command Modes**

Privileged EXEC (#)

# **Command History**

Release	Modification
8.1.111.0	This command was introduced.

This example shows you how to clear the datapath drop counters:

cisco-ap# clear datapath drops

# clear dot11

To clear the 802.11 configuration, use the **clear dot11** command.

clear dot11 sensor

**Syntax Description** 

**sensor** Clears the sensor configuration and reboots

**Command Modes** 

Privileged EXEC (#)

**Command History** 

Release Modification

8.1.111.0 This command was introduced.

This example shows you how to clear the 802.11 configuration:

cisco-ap# clear dot11 sensor

# clear logging

**Syntax Description** 

**Command Modes** 

**Command History** 

To clear the logging details, use the **clear logging** command.

clear logg	ging [capwap   message   warning]
capwap	(Optional) Clears CAPWAP logging details
message	(Optional) Clears message logging details
warning	(Optional) Clears warnings logging details
Privileged	EXEC (#)
Release I	Modification

This example shows you how to clear the CAPWAP logging details:

cisco-ap# clear logging capwap

8.1.111.0 This command was introduced.

clear logging