



## Telnet Configuration Mode Commands

The Telnet Configuration Mode is used to manage the telnet server options for the current context.

### Command Modes

Exec > Global Configuration > Context Configuration > Telnet Configuration

**configure > context** *context\_name* > **server telnet**

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-telnetd) #
```



### Important

The commands or keywords/variables that are available are dependent on platform type, product version, and installed license(s).



### Caution

For maximum system security, you should not enable telnet functionality. SSH is the recommended remote access protocol. In release 20.0 and higher Trusted StarOS builds, telnet is not supported.

The global limit for utility service connections, including SSH, Telnet, and SFTP, is 201. This includes any inter-card communication that uses SSH.

- [do show, on page 1](#)
- [end, on page 2](#)
- [exit, on page 2](#)
- [max servers, on page 2](#)

## do show

Executes all **show** commands while in Configuration mode.

### Product

All

### Privilege

Security Administrator, Administrator

### Syntax Description

**do show**

**end****Usage Guidelines**

Use this command to run all Exec mode **show** commands while in Configuration mode. It is not necessary to exit the Config mode to run a **show** command.

The pipe character | is only available if the command is valid in the Exec mode.

**Caution**

There are some Exec mode **show** commands which are too resource intensive to run from Config mode. These include: **do show support collection**, **do show support details**, **do show support record** and **do show support summary**. If there is a restriction on a specific **show** command, the following error message is displayed:

```
Failure: Cannot execute 'do show support' command from Config mode.
```

## end

Exits the current configuration mode and returns to the Exec mode.

**Product**

All

**Privilege**

Security Administrator, Administrator

**Syntax Description****end****Usage Guidelines**

Use this command to return to the Exec mode.

## exit

Exits the current mode and returns to the parent configuration mode.

**Product**

All

**Privilege**

Security Administrator, Administrator

**Syntax Description****exit****Usage Guidelines**

Use this command to return to the parent configuration mode.

## max servers

Configures the maximum number of telnet servers that can be started within any 60-second interval. If this limit is reached, the system waits two minutes before trying to start any more servers.

**Product**

All

**Privilege**

Security Administrator, Administrator

**Command Modes**

Exec > Global Configuration > Context Configuration > Telnet Configuration

**configure > context *context\_name* > server telnet**

Entering the above command sequence results in the following prompt:

```
[local]host_name(config-telnetd)#
```

---

**Syntax Description**

**max servers** *count*

***count***

Specifies the maximum number of telnet servers that can be spawned in any 6- second interval. *count* must be an integer from 1 through 100. Default: 40

---

**Usage Guidelines**

Use this command to set the number of telnet servers to tune the system response, as a heavily loaded system may need more servers to support the incoming requests.

The converse would be true in that a system can benefit by reducing the number of servers such that telnet services do not cause excessive system impact to other services.

**Example**

The following command sets the maximum number of telnet servers to 30:

```
max servers 30
```

max servers