



## show demux-mgr

---

This chapter includes the **demux-mgr** command output tables.

- [show demux-mgr statistics egtpegmgr all, on page 1](#)
- [show demux-mgr statistics egtpinmgr all, on page 1](#)
- [show demux-mgr sessions egtpinmgr all, on page 2](#)

## show demux-mgr statistics egtpegmgr all

*Table 1: show demux-mgr statistics egtpegmgr all Command Output Descriptions*

Field	Description
<b>IMSI Manager Stats</b>	
max sess threshold exceeded	Indicates if the maximum session threshold is exceeded.
connected sess threshold exceeded	Indicates if the connected sessions threshold is exceeded.
Sessions disconnected due to overload disconnect	Indicates the number of sessions disconnected due to an overload.
<b>Peer Salvation Stats</b>	
No of peer salvation requests sent by demux	Indicates the number of peer salvation requests sent by the Demux.
No of peer salvaged on demux	Indicates the number of peers salvaged on the Demux.

## show demux-mgr statistics egtpinmgr all

*Table 2: show demux-mgr statistics egtpinmgr all Command Output Descriptions*

Field	Description
<b>IMSI Manager Stats</b>	
max sess threshold exceeded	Indicates if the maximum session threshold is exceeded.

■ show demux-mgr sessions egtpinmgr all

Field	Description
connected sess threshold exceeded	Indicates if the connected sessions threshold is exceeded.
Sessions disconnected due to overload disconnect	Indicates the number of sessions disconnected due to an overload.
<b>Peer Salvation Stats</b>	
No of peer salvation requests sent by demux	Indicates the number of peer salvation requests sent by the Demux.
No of peer salvaged on demux	Indicates the number of peers salvaged on the Demux.
<b>DCNR</b>	
#DCNR	Indicates the instance number of the DCNR session.

## show demux-mgr sessions egtpinmgr all

*Table 3: show demux-mgr statistics egtpinmgr all Command Output Descriptions*

Field	Description
DCNR Session	Indicates if the session is a DCNR session or not.