

AP as a Sensor

• AP as a Sensor, on page 1

AP as a Sensor

You can now configure the following access points as sensors:

- Cisco Catalyst 9136 Series Access Points
- Cisco Catalyst Wireless 9166I Series Access Points


Once configured as a sensor, you can collect telemetry data using this AP. The following sensor values can be configured:

- Temperature
- Relative humidity
- Total volatile organic compound (TVOC), and
- Indoor air quality

Enabling or Disabling an AP Sensor


Step 1 Navigate to Cisco Spaces: IoT Service > **Device Management** > **Devices** > **AP Beacons** > **Sensor**.

Figure 1: AP as a Sensor

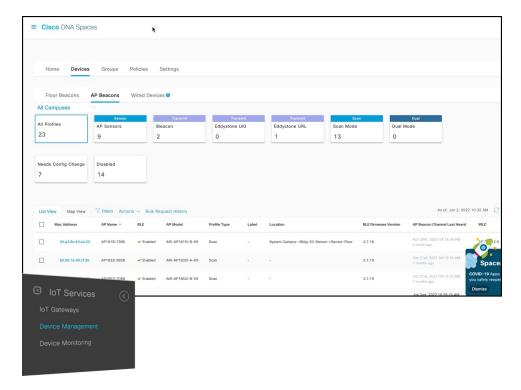

- Step 2 Click the AP that you want to configure as a sensor. The AP Beacons details page opens.
- **Step 3** In the **Settings** area, click **Sensor** to enable or disable the AP as a sensor.

Figure 2: Enabling or Disabling AP as a Sensor

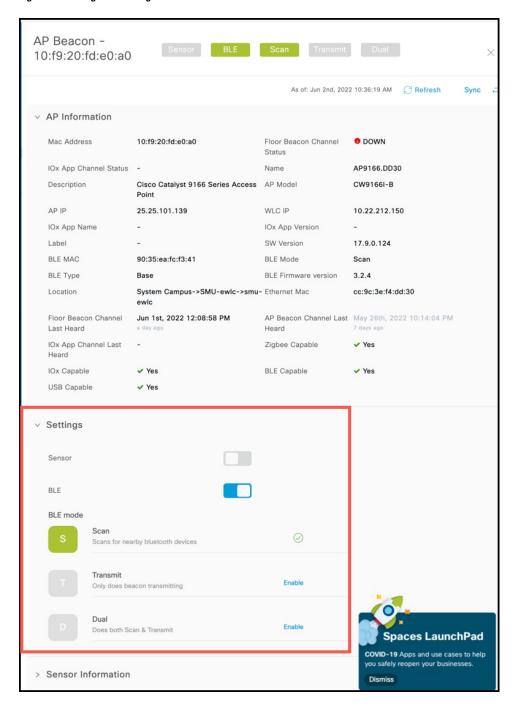

Viewing Sensor Information

You can view sensor information from the **Sensor Information** area.

Figure 3: Viewing Sensor Information

