

Configuración de parámetros WPS en el RV110W

Objetivo

La configuración Wi-Fi protegida (WPS) es una forma rápida de establecer una red inalámbrica segura. El objetivo de este artículo es explicar cómo configurar los parámetros WPS en el RV110W.

Dispositivos aplicables

·RV110W

Pasos del procedimiento

Paso 1. Utilice la utilidad de configuración del router para elegir **Wireless > WPS**.

WPS

Wi-Fi Protected Setup™

SSID: ciscosb1

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.

OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

Paso 2. En el menú desplegable *SSID*, elija una red inalámbrica a la que aplicar WPS.

WPS

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

Paso 3. A la derecha de WPS, marque la casilla **Enable** para habilitar la configuración de WPS.

Paso 4. Realice una de las tres opciones para agregar un dispositivo cliente a la red.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

- Opción 1. Si el cliente tiene un botón WPS, pulse el botón. Haga clic en el icono WPS.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

- Opción 2. Si el dispositivo cliente tiene un número PIN WPS, introduzca el número PIN en el campo de la opción 2. Haga clic en **Register**.
- Opción 3. El cliente solicita el número PIN del router. El cliente ingresa el número 61443143 en el dispositivo cliente.