# Ejemplo de Configuración de Marcar Direcciones IP desde Terminales Registrados a CUCM con VCS / Expressway

## Contenido

Introducción Prerequisites Requirements Componentes Utilizados Background Opción 1 Opción 2 Configuración de CUCM Configuración del control VCS Configuración del control VCS Configuración de VCS Expressway Opción 1: Agregar un sufijo a la dirección IP Opción 2: Convierta la dirección IP en una cadena Verificación Troubleshoot

## Introducción

Este documento describe cómo puede marcar las direcciones IP desde los terminales registrados en Cisco Unified Communications Manager (CUCM) con Cisco Video Communication Server (VCS) o Cisco Expressway como solución.

## Prerequisites

### Requirements

Cisco recomienda que tenga conocimiento sobre estos temas:

- Zonas vecinas de Cisco VCS/Expressway
- Transformación y reglas de búsqueda en Cisco VCS / Expressway
- Patrones de ruta del protocolo de inicio de sesión (SIP) y enlaces troncales SIP en CUCM

**Nota:** En este documento se asume que la zona transversal de VCS Control / Expressway-C hacia VCS Expressway / Expressway-E está activa y que la clave de interconexión está instalada en VCS / Expressway.

### **Componentes Utilizados**

La información que contiene este documento se basa en las siguientes versiones de software y hardware.

- Cisco VCS x8.1 y posterior
- CUCM versión 9 y posterior

**Nota:** El mismo documento se puede utilizar para implementaciones de la serie de Expressway.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

## Background

CUCM no admite la marcación de direcciones IP. Si desea utilizar la marcación de direcciones IP, Cisco recomienda uno de los dos procedimientos descritos en este artículo. Un ejemplo de caso práctico sería para los terminales registrados en CUCM para marcar un terminal H.323 por dirección IP.

### Opción 1

- Agregue un sufijo a la dirección IP, de modo que la cadena se asemeje a un identificador uniforme de recursos (URI) de SIP.
- Por ejemplo, para marcar la dirección IP **198.51.100.2**, los usuarios marcarán **198.51.100.2@domain**.
- El administrador debe instruir a los usuarios para que marquen <IP address>@domain. Este dominio puede ser el dominio interno corporativo o un dominio ficticio. Este documento se basa en el uso del dominio VCS.

### Opción 2

- Reemplace los puntos por un símbolo para convertir la dirección IP en una cadena.
- Por ejemplo, para marcar la dirección IP 198.51.100.2, los usuarios marcarán 198\*51\*100\*2.

**Nota:** En ambas opciones, Expressway-E intenta llamar a la dirección IP con el protocolo H.323. Si el punto final de destino no soporta H.323, debe habilitar SIP UDP. De lo contrario, mantenga el UDP SIP desactivado.

**Nota:** La opción 2 se puede utilizar con teléfonos IP o cuando se marca desde la CLI o la GUI web de los terminales que utilizan el software Tandberg Codec (TC). Cuando intente marcar \* con el panel táctil o el mando a distancia, es posible que esto no funcione, ya que el \* se convierte automáticamente en . cuando utilice estas opciones para marcar.

### Configuración

Nota: Esta configuración es aplicable a ambas opciones previamente mencionadas.

#### Configuración de CUCM

En CUCM, el administrador debe configurar un perfil de seguridad de troncal SIP para VCS en el puerto 5060 (esto supone que 5060 es el puerto utilizado en el VCS hacia CUCM a través de TCP).

**Nota:** Si utiliza el puerto 5060/5061 para el acceso remoto y móvil (MRA), utilice un puerto TCP diferente (como 5075) para el perfil de seguridad troncal SIP.

Elija System > Security > SIP Trunk Security Profile en CUCM y haga clic en Add New.

ababi	Cisco Ur	nified Cl	M Adr	minist	ration			Navi	gation	Cisco I	Unified C	M Admir	nistratio	n	•	Go
cisco	For Cisco Uni	ified Commu	nication	s Solution	ns				admin	Se	arch Do	cumenta	ation	About	I LO	gout
System +	Call Routing 👻	Media Resour	ces 🕶 /	Advanced F	Features +	Device 🔻	Application -	User Manager	ment 👻	Bulk A	dministra	ation 👻	Help 🖣			
Find and I	List SIP Trunk	Security Pr	rofiles													
🕂 Add N	ew															
Status																
(i) 0 rec	ords found															
STP True	ak Security Pro	file											Powe n	er Page	50	•
SIF III	in security Pro	inc											tona p	er rage		<u> </u>
Find SIP T	runk Security Pro	ofile where	Name	÷)(1	begins with	•		Find	Clear F	liter	+	-				
				No activ	re query. Ple	ase enter yo	ur search criteria	using the options	above.							
Add Nev	W															

Cree un perfil de seguridad de troncal SIP como se muestra en esta captura de pantalla.

Cisco Unified CM	Administration	Navigation Cise	co Unified CM Administration	Cont Locout
System - Call Routing - Media Resource	s · Advanced Features · Device ·	Application - User M	Management 👻 Bulk Administ	ration - Help -
SIP Trunk Security Profile Configura	tion	Relat	ed Links: Back To Find/L	.ist ‡ Go
🔚 Save 💥 Delete 📄 Copy 🎦 Ri	eset 🧷 Apply Config 🕂 Add New			
Status				
(i) Status: Ready				
SIP Trunk Security Profile Informatio	n			
Name*	Non Secure SIP Trunk Profile For VCS	5		
Description	Non Secure SIP Trunk Profile authen	ticated by null S		
Device Security Mode	Non Secure	\$		
Incoming Transport Type*	TCP+UDP	;]		
Outgoing Transport Type	ТСР	\$]		
Enable Digest Authentication				
Nonce Validity Time (mins)*	600			
X.509 Subject Name				
Incoming Port*	5060			
Enable Application level authorization				
Accept presence subscription				
Accept out-of-dialog refer**				
Accept unsolicited notification				
Accept replaces header				
Transmit security status				
Allow charging header				
SIP V.150 Outbound SDP Offer Filtering*	Use Default Filter	\$		
Save Delete Copy Reset	Apply Config Add New			

En CUCM, agregue un troncal SIP hacia VCS Control/Expressway-C.

### Elija **Device > Trunk** y haga clic en **Add New**.

cisco	Cisco U	nified CM Ad	Iministration Iminis Solutions	1					Navi cucmapp	cation Cisco Unified CM Ad Search Documentation	ministration About	÷ Go Logout
System 👻	Call Routing +	Media Resources 👻	Advanced Features	- Device -	Application +	User Management 👻	Bulk Administration +	Help	•			
Find and I	List Trunks											
🕂 Add N	845											
Trunks												
Find Trunk	s where Devic	e Name	‡ ] begins with	:   Select Ite	em or enter sea	Find Clear Filter	4 =					
				No active	query. Please ent	ter your search criteria us	sing the options above.					
Add New												

Estos parámetros del tronco dependen del diseño.

System - Call Routing - Media Resources - Advanced Features - Device	e + Application + User Management + Bulk Administration + Help +
Trunk Configuration	Related Links: Back To Find/List 📫 Go
Sare	
Status	
Status: Ready	
Device Information	
Product:	SIP Trunk
Device Protocol:	SIP
Trunk Service Type Device Name <sup>3</sup>	None(Default)
Description	VC5_DBK
Dester peak	Trunk to VCS-Control
Common Device Conferentian	Default :
Coll Classification 5	< Note > +
Call Classification	use system belaut.
Instantian <sup>1</sup>	< NOTE > +
AAB Group	Hub_None :
Tempeted Bratecol <sup>2</sup>	kass A
OSIG Variant <sup>†</sup>	No Channes
ASN 1 BOSE OID Encoding <sup>2</sup>	No Changes +
Parket Canture Mode*	None 2
Packet Capture Duration	
Mode Tomination Baint Required	<u> </u>
Gridea termination rene requirea	
-SIP Information	
Destination	
Destination Address is an SRV	
Destination Address Destination Add	ress IPut Destination Rort Status Status Researe Duration
1* 10.106.93.178	5060 up Time Up: 0 day 0 hour 20 minutes 🔳 🖃
MTP Preferred Originating Codec* 711ulaw	8
BLF Presence Group * Standard Presence group	;
SIP Trunk Security Profile* Non Secure SIP Trunk Profile For VCS	8
Rerouting Calling Search Space < None >	
Supschilde Gallee Search Space   Supschilde Search Space   Supschilde Search Space   Supschilde Search Sear	*
SIP Profile * Standard SIP Profile For Clace VCS	2 View Details
DTMF Signaling Nethod <sup>®</sup> No Preference	1
- Normalization Script	
Normalization Script < None > 0	
Enable Trace	
Parameter Name Parameter V	due
1	
Recording Information	
None	
This brunk connects to a recording-enabled gataway     This brunk connects to a theorem with prevention enabled estructory	
Construction of the state of th	
Geolocation Configuration	
Scolocation < Nore > 2	
CONSIGNATION & Mana &	
C find finderative followables	
Send Geslocation Information	

### Configuración del control VCS

Cree una zona vecina en VCS Control / Expressway-C hacia CUCM.

Elija **Configuration > Zones > Zones** y haga clic en **New** para agregar la zona.

cis	ilii CO Cisc	o TelePresence	e Video Com	munication Server	Control			
Status	System	Configuration	Applications	Users Maintenan	08			0 G
Zones	5						You are here: Cor	figuration + Zones + Zones
	Name 🔻	Туре	Calls	Bandwidth used	H323 status	SIP status	Search rule status	Actions
	DefaultZone	Default zone	٥	0 kbps	On	On		View/Edit
New	Delete Se	lect all Unselect all						

Esta configuración de zona depende del diseño.

CISCO Cisco TelePresence Video Communication Server Control

Status System Configuration Applications Users M	almenance 3) Help. (i) Local
Create zone	You are here: <u>Configuration</u> + <u>Zones</u> + <u>Zon</u>
Configuration	
Name	Zone Iowards CUCM
Туро	(Neighbor :)
Hop count .	15 1
94.323	
Mode	(ar :) b
811	
Mode	0n 2 ()
Port	· 5060
Transport	(TCP : ) j
Accept provied registrations	Alex 1 ()
Media encryption mode	Auto : U
ICE support	(or :) j
AuthenStation	
Authentication policy	Do not check oredentials 🗧 👔
S P authentication trust mode	(ar : )
Location	
Peer 1 address	10.106.93 167
Peer 2 address	
Peer 3 address	0
Peer 4 address	0
Peer 6 address	
Peer 8 address	U U
Advanced	
Zone profile	Cisco Unified Communications Manager (5.8.1 or Mar)

Create zone Cancel

Asegúrese de que el parámetro Llamadas a direcciones IP desconocidas esté configurado como Indirecta en VCS Control / Expressway-C. Para hacerlo, elija Configuración > Plan de marcación > Configuración.

CISCO Cisco TelePresence Video Com	munication Server Control	
Status System Configuration Applications	Users Maintenance	? Help. I Logout
Dial plan configuration		You are here: Configuration > Dial plan > Configuration
Configuration		
Calls to unknown IP addresses	Indirect :	
Fallback alies	()	

Save

#### Configuración de VCS Expressway

En la lista desplegable Llamadas a direcciones IP desconocidas, elija Directa en VCS Expressway / Expressway-E. No se requiere una regla de búsqueda en VCS Expressway / Expressway-E para enrutar llamadas basadas en IP.

CISCO Cisco TelePresence Video Con	nmunication Server Expressway	
Status System Configuration Applications	Users Maintenance	7 Help & Logout
Dial plan configuration		You are here: Configuration > Dial plan > Configuration
Configuration		
Calls to unknown IP addresses	Direct 🗘 👔	
Fallback alias		

#### Opción 1: Agregar un sufijo a la dirección IP

ahaha

En CUCM, agregue un patrón de ruta SIP para enviar llamadas con el sufijo como vcs.domain al troncal VCS Control/Expressway-C.

Elija Call Routing > SIP Route Pattern y haga clic en Add New.

ababi	aluda Cisco Unified CM Administration								Navigation Cisco Unified CM Administration						: Go			
cisco	For Cisco	Unif	ied Com	municati	ons Solutio	ons				dmi	in I	Search (	Docum	entation	1	About	I L	ogout
System 👻	Call Routing	- 1	Media Rea	sources +	Advanced	Features 👻	Device	•	Application	•	User	Manageme	ent 🕶	Bulk Adr	ninist	ration 👻	He	elp 🕶
Find and I	List SIP Ro	ute I	Pattern	s														
Add Ne	9W																	
Status								_		_								
(i) 0 rec	ords found																	
SIP Rou	te Pattern													Rows	; per	Page	50	+
Find SIP R	oute Pattern	wher	re IPv4	Pattern	¢ beg	ins with	•				Find	Clear	r Filter	•	-			
				No a	ctive query.	Please enter	your searc	h cri	teria using t	he op	tions a	above.						
Add New	v																	

Establezca la configuración del patrón de ruta SIP como se muestra aquí.

Patrón IPV4: vcs.domain

alada Cisco	Unified CM Administration	on	Navigation	Cisco Unified CM Administration	÷ Go
CISCO For Cisc	o Unified Communications Solutions		admir	Search Documentation About	Logout
System - Call Routing	<ul> <li>Media Resources - Advanced Features</li> </ul>	s 🕶 Device 🕶 🖉	Application 👻	User Management 👻 Bulk Administration 👻	Help 👻
SIP Route Pattern (	Configuration			Related Links: Back To Find/List	\$ Go
Save					
Status					
i Status: Ready					
Pattern Definition					
Pattern Usage*	Domain Routing	\$	1		
IPv4 Pattern*	vcs.domain				
IPv6 Pattern			•		
Description					
Route Partition	< None >	;			
SIP Trunk/Route List	* VCS_trunk	÷) (E	idit)		
Block Pattern					
Calling Party Trans	formations				
Use Calling Party'	s External Phone Mask				
Calling Party Transfor	mation Mask				
Prefix Digits (Outgoin	g Calls)				
Calling Line ID Preser	ntation* Default		\$		
Calling Line Name Pre	esentation* Default		:		
Connected Party Tr	ansformations				
Connected Line ID Pr	esentation* Default		\$		
Connected Line Name	Presentation* Default		:)		
Save					

En VCS Control / Expressway-C, transforme la parte del dominio de striptede un alias cuando se marca una dirección IP.

Elija Configuration > Dial Plan > Transforms y haga clic en New.

uļu cis	CO Cisc	o TelePresen	i <b>ce</b> Video Con	nmunica	tion Ser	rver Control				
Status	System	Configuration	Applications	Users	Mainte	enance				200
Trans	forms							You are here: Configuration	n • Dial plan •	Transforms
_	Priority 🔻	State	Description		Pattern	Туре	Behavior	Replace	Actions	_
New	Delete	able Disable	Select all Unsel	lect all			Transforms are app	blied in priority order, with 1	being the high	est priority

Cree la transformación como se muestra aquí.

Cadena de patrón: (.\*)\.(.\*)\.(.\*)\.(.\*)@vcs.domain

Reemplazar cadena: \1.\2.\3.\4

CISCO Cisco TelePresence Video Communication Server Control

s	tatus	System	Configuration	Application	s Users	Maintenance		(2) Help. Col Logout
С	reate	transform	n					You are here: Configuration > Dial plan > Transforms > Create transform
	Configu	ration						
	Priority				1	۲		
	Descript	ion			Tmasfor	m to strip domain from ip-address calls		
	Pattern t	уре			Regex	• (j)		
	Pattern	atring			★ (.*)\.(.*)\.	(.*)\.(.*)@vcs.domain	۲	
	Pattern I	behavior			Replac	• • •		
	Replace	string			\1.\2.\3\/	4	۲	
	State				Enable	d : ()		

Create transform Cancel

En VCS Control / Expressway-C necesita una regla de búsqueda que envíe la llamada a VCS Expressway / Expressway-E cuando se marca una dirección IP.

Elija Configuration > Dial Plan > Search Rules y haga clic en New.

cis	CISCO Cisco TelePresence Video Communication Server Control													
Status	Syst	em Configura	ation	Applicatio	ns Users	Mainter	nance						3	Help. 🕞 Logout
Searc	h rule	s									You a	re here: Conf	Iguration • Dia	il plan • Search rules
	Priority	Rule name	Protocol	Source	Authentication re	boriup	Mode	Pattern type	Pattern string	Pattern behavior	On match	Target	State	Actions
0	50	LocalZoneMatch	Any	Any	No		Any alias				Continue	LocaiZone	<ul> <li>Enabled</li> </ul>	View/Edit   Clone
New	Delete	Enable Disab	e Selec	al Un	select all					Search rules	are applied in	n priority orde	r, with 1 being	the highest priority

Cree esta regla de búsqueda hacia VCS Expressway / Expressway-E.

CISCO Cisco TelePresence Video Com	munication Server Control	
Status System Configuration Applications	Users Maintenance	ී Help. ලම Lagout
Edit search rule		You are here: Configuration + Dial plan + Search rules + Edit search rule
Configuration		
Rule name	Dial IP Address search rule	
Description	ß	
Priority	• 10 (i)	
Protocol	Any 🛟 👔	
Source	Any :	
Request must be authenticated	No ‡	
Mode	Any IP address 🛟	
On successful match	Stop 🗘 🧃	
Target	Traversal Client zone B2B	
State	Enabled ;	

Save Delete Cancel

#### Opción 2: Convierta la dirección IP en una cadena

En CUCM, agregue un patrón de ruta para enviar llamadas con el patrón !\*!\*!\*! al enlace troncal

VCS Control / Expressway-C.

Elija Call Routing > Route/Hunt > Route Pattern y haga clic en Add New.

cisco	Cisco Unifie	fied CM Ad	Iministration	1				Nat	vigation admin	Cisco Unific   Search I	d CM Administr	ation About	: Go Logout
System +	Call Routing + M	edia Resources 👻	Advanced Features	- Device -	Application +	User Manageme	nt 👻 Bulk A	dministration	+ Help	•			
Find and I	List Route Patter	ns											
	216												
Status	cords found												
Route P	atterns										Row	s per Pag	(50 -= )
Find Route	Patterns where	lattern	t begins with	•		Find Clear Fi	ter 🔶	-					
			N	active query. I	Please enter your	search criteria usin	g the options a	above.					
Add New	N												

Agregue un nuevo patrón de ruta como se muestra aquí.

#### Patrón de ruta: ¡\*!\*!

abab	Cisco Unif	ied CM Ad	ministration				N	avigation	Cisco Unified	CM Administrat	ion	÷ Go
cisco	For Cisco Unifie	d Communication	s Solutions					admin	Search D	ocumentation	About	Logout
System +	Call Routing + Ma	dia Resources 👻	Advanced Features +	Device +	Application +	User Management 👻	Bulk Administration	+ Help	· •			
Route Pat	tern Configuratio	'n							Related L	inks: Beck To	o Find/List	÷ Go
Save												
-Status-												
i) Stat.	is: Ready											
-Pattern D	efinition											
Route Pat	tern *		Telelel									
Route Par	tition		< None >			÷						
Descriptio	n											
Numberin	g Plan		Not Selected			÷						
Route Filt	er		< None >			\$						
MLPP Prec	edence*		Default			٥						
Apply	Call Blocking Percen	tage										
Resource	Priority Namespace	Network Domain	< None >			+						
Route Clas	ss *		Default			\$						
Gateway/I	Route List*		VCS_trunk			÷ (Edit)						
Route Opt	lon		Route this pattern									
			<ul> <li>Block this pattern</li> </ul>	No Error		÷.						
Call Class	fication*	OffNet			\$							
External C	all Control Profile	< None >			\$							
Allow	🗌 Allow Device Override 🧭 Provide Outside Dial Tone 📄 Allow Overlap Sending 📄 Urgent Priority											
Require Forced Authorization Code												
Authorization Level* 0												
Requir	Require Client Matter Code											

#### Nota:

En VCS Control / Expressway-C necesita una transformación que modifique el alias con "\*" a "." cuando se marca una dirección IP.

Elija Configuration > Dial Plan > Transforms y haga clic en New.

cis	CO Ciso	co TelePreser	i <b>ce</b> Video Con	nmunicat	ion Serv	ver Control				
Status	System	Configuration	Applications	Users	Mainte	nance				20
Trans	forms							You are here: Configuration	on• Dial plan• T	ransforms
	Priority 💌	State	Description	_	Pattern	Туре	Behavior	Replace	Actions	_
New	Delete	Disable	Select all Unsel	lect all		1	Fransforms are app	blied in priority order, with 1	being the higher	at priority

Cree la transformación como se muestra aquí.

Cadena de patrón: (\d\d?\d?)(\\*)(\d\d?\d?)(\\*)(\d\d?\d?)(\\*)(\d\d?\d?)(.\*)

Reemplazar cadena: \1.\3.\5.\7

## CISCO Cisco TelePresence Video Communication Server Control

reate transform	You are here: Conf	iguration • Dial plan • Transforms • Create transform
Configuration		
Priority	1	
Description	Transform to modify * to . for ip-address dialing.	1
Pattern type	Regax : ()	
Pattern string	(/d/d?/d?)(*)(/d/d?/d?)(*)(/d/d?/d?)(*)(/d/d?/d?)(.*)	
Pattern behavior	Replace + i	
Replace string	111.131.151.17	
State	Enabled : i	

Create transform Cancel

En VCS Control / Expressway-C necesita una regla de búsqueda que envíe la llamada a VCS Expressway / Expressway-E cuando se marca una dirección IP.

Elija Configuration > Dial Plan > Search Rules y haga clic en New.

	cis	Cisco TelePresence Video Communication Server Control													
1	Status System Configuration Applications Users Maintenance (2) Help. 🕞 Logout														
-	Searc	h rule:	5									You a	re here: Conf	guration • Dia	l plan • Search rules
		Priority	Rule name	Protocol	Source	Authentication	n required	Mode	Pattern type	Pattern string	Pattern behavior	On match	Target	State	Actions
	$\odot$	50	LocalZoneMatch	Any	Any	No		Any alias				Continue	LocalZone	<ul> <li>Enabled</li> </ul>	View/Edit   Clone
j	New	Delete	Enable Disab	le Select	tal Ur	select all					Search rules	are applied in	n priority orde	r, with 1 being	the highest priority

Cree esta regla de búsqueda hacia VCS Expressway / Expressway-E.

ahaha	
cisco	Cisco TelePresence Video Communication Server Control

Status	System	Configuration	Applications	Users Maintenance	7) Help. In Logout
Edit se	earch rule				You are here: Configuration + Dial plan + Search rules + Edit search rule
Config	uration				
Rule n	ame			* Dial IP Address search rule	
Descrip	ation				0
Priority				• 10 ()	
Protoc	ol			Any 🛟 👔	
Source				Any 🔹 👔	
Reque	st must be auth	enticated		No 🗧 👔	
Mode				Any IP address 📫	
On suc	cossful match			Stop 🗘 👔	
Target				Traversal Client zone B2B	1 ()
State				Enabled +	

Save	Delete	Cancel

**Nota:** Si el modo UDP SIP está activado, VCS Expressway / Expressway-E inicia primero la llamada SIP como una llamada nativa. En caso de que el dispositivo de destino no responda a la invitación SIP, VCS Expressway / Expressway-E continúa ejecutando la llamada UDP SIP hasta que se agote el tiempo de espera de negociación de llamada estándar (aproximadamente 32 segundos). A continuación, se devuelve a una llamada de interconexión H.323 como comportamiento diseñado.

### Verificación

Use esta sección para confirmar que su configuración funciona correctamente.

Una vez completados los pasos anteriores, marque la dirección IP como una cadena o la dirección IP con el dominio agregado (esto depende de la opción de configuración que haya seleccionado) y vea si la llamada al otro extremo funciona.

### Troubleshoot

En esta sección encontrará información que puede utilizar para solucionar problemas de configuración.

Recopile los registros detallados de la interfaz de diagnóstico del sistema / capa de distribución de señales (SDI / SDL) de los registros de diagnóstico de CUCM y "nivel de depuración" de VCS-Control / Expressway-C y VCS-Expressway / Expressway-E. Proporcione estos registros al centro de asistencia técnica Cisco Technical Assistance Center (TAC) para su análisis si la llamada no funciona después de completar los pasos de configuración anteriores.