

Comment appliquer des listes d'accès pour les interfaces de numérotation avec un serveur RADIUS

Contenu

[Introduction](#)

[Conditions préalables](#)

[Conditions requises](#)

[Components Used](#)

[Conventions](#)

[Diagramme du réseau](#)

[Définir des listes d'accès numérotées sur le routeur](#)

[Commandes pour les autres versions du logiciel Cisco IOS](#)

[Configurations de serveur - Listes d'accès sur le routeur](#)

[Exemple de débogage de routeur](#)

[Définir des listes d'accès sur le serveur](#)

[Commandes pour les autres versions du logiciel Cisco IOS](#)

[Configurations de serveur](#)

[Exemple de débogage de routeur](#)

[Commandes de débogage](#)

[Informations connexes](#)

Introduction

Ce document explique comment appliquer des listes d'accès aux interfaces de numérotation avec un serveur RADIUS. Il existe deux méthodes possibles :

- Définissez la liste d'accès numérotée sur le routeur, puis référencez la liste d'accès numérotée sur le serveur RADIUS. La plupart des versions du logiciel Cisco IOS® le prennent en charge. Par exemple, définissez la liste d'accès numérotée sur le routeur et référencez-la sur le serveur.
- Définissez l'intégralité de la liste d'accès sur le serveur. La version 11.3 ou ultérieure du logiciel Cisco IOS est requise pour cette méthode par utilisateur. Par exemple, définissez la liste d'accès sur le serveur RADIUS (plutôt que sur le serveur NAS). Lorsque l'appel se connecte, le NAS authentifie l'appel avec le serveur RADIUS. Outre les informations d'authentification, le serveur renvoie la liste d'accès au NAS qu'il applique ensuite à l'interface de numérotation.

Remarque : Pour RNIS, vous devez utiliser la méthode **par utilisateur** et configurer des profils virtuels sur le routeur. Celles-ci sont décrites pour le logiciel Cisco IOS Version 11.3 dans [Configuration des profils virtuels](#).

Conditions préalables

Conditions requises

Aucune spécification déterminée n'est requise pour ce document.

Components Used

Les informations dans ce document sont basées sur les versions de logiciel et matériel suivantes :

- Logiciel Cisco IOS Version 11.1 ou ultérieure (définition des listes d'accès sur le routeur)
- Logiciel Cisco IOS Version 11.3 ou ultérieure (définition des listes d'accès sur le serveur)
- Cisco Secure ACS UNIX ou Cisco Secure ACS pour Windows 2.x ou Livingston RADIUS ou Merit RADIUS


Les informations présentées dans ce document ont été créées à partir de périphériques dans un environnement de laboratoire spécifique. All of the devices used in this document started with a cleared (default) configuration. Si vous travaillez dans un réseau opérationnel, assurez-vous de bien comprendre l'impact potentiel de toute commande avant de l'utiliser.

Conventions

For more information on document conventions, refer to the [Cisco Technical Tips Conventions](#).

Diagramme du réseau

Ce réseau est utilisé dans les deux exemples :

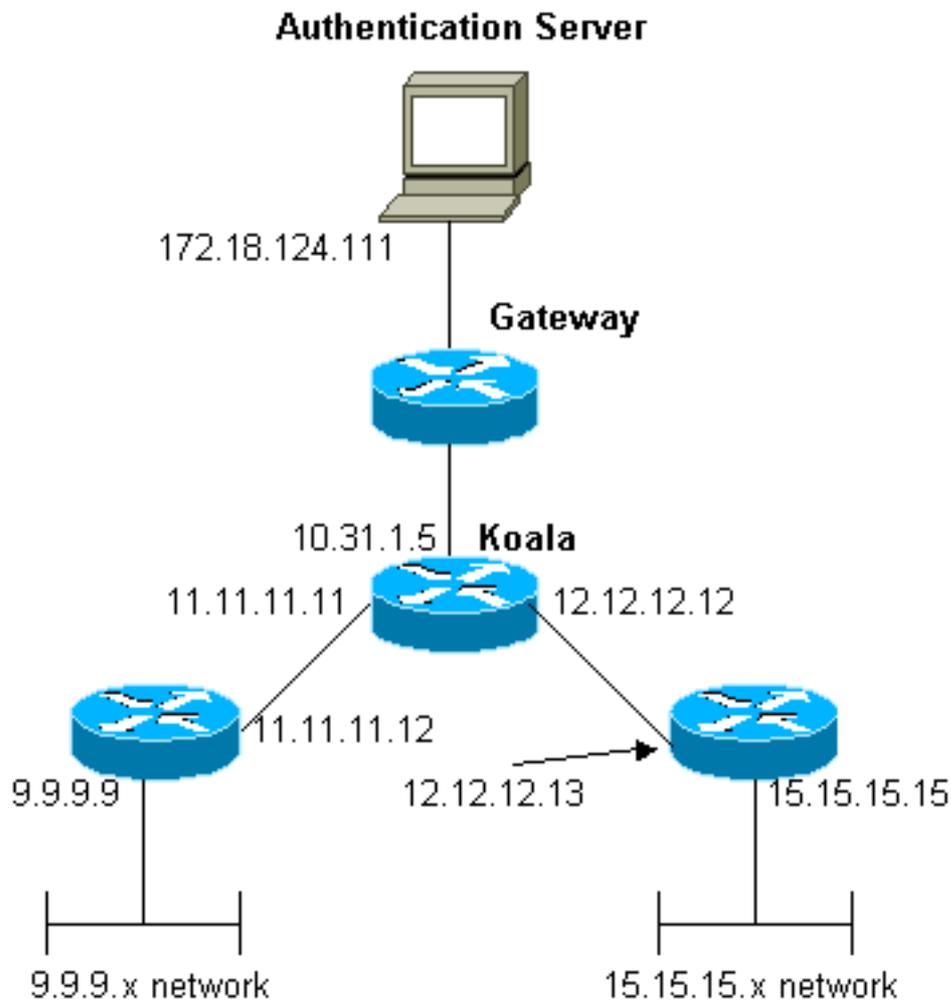

Définir des listes d'accès numérotées sur le routeur

Configuration du routeur

```

Current configuration:
!
version 12.0
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
!
hostname koala
!
aaa new-model
!
!--- The following three lines of the configuration !---
!--- are specific to Cisco IOS Software Release 12.0.5.T and
!--- later. !--- See below this configuration for commands !-
!- for other Cisco IOS Software Releases. ! aaa
aaa authentication login default local group radius
aaa authentication ppp default if-needed group radius
aaa authorization network default group radius
enable secret 5 $1$mnZQ$g6XdsgVnnYjEa.17v.Pijl
enable password ww
!
username john password 0 doe
!
ip subnet-zero

```

```

!
cns event-service server
!
interface Ethernet0
ip address 10.31.1.5 255.255.255.0
no ip directed-broadcast
no mop enabled
!
interface Serial0
ip address 11.11.11.11 255.255.255.0
no ip directed-broadcast
no ip mroute-cache
no fair-queue
!
interface Serial1
ip address 12.12.12.12 255.255.255.0
no ip directed-broadcast
!
interface Async1
ip unnumbered Ethernet0
no ip directed-broadcast
encapsulation ppp
no ip route-cache
no ip mroute-cache
async mode dedicated
peer default ip address pool mypool
fair-queue 64 16 0
no cdp enable
ppp authentication chap
!
ip local pool mypool 1.1.1.1 1.1.1.5
ip classless
ip route 0.0.0.0 0.0.0.0 10.31.1.1
ip route 9.9.9.0 255.255.255.0 11.11.11.12
ip route 15.15.15.0 255.255.255.0 12.12.12.13
no ip http server
!
access-list 101 permit icmp 1.1.1.0 0.0.0.255 9.9.9.0
0.0.0.255
access-list 101 permit tcp 1.1.1.0 0.0.0.255 15.15.15.0
0.0.0.255
!--- This is the access-list that is specified by the
RADIUS server. dialer-list 1 protocol ip permit dialer-
list 1 protocol ipx permit ! radius-server host
172.18.124.111 auth-port 1645 acct-port 1646 radius-
server key cisco ! line con 0 transport input none line
1 modem InOut transport input all stopbits 1 speed
115200 flowcontrol hardware line 2 16 line aux 0 line
vty 0 4 password ww ! end

```

[Commandes pour les autres versions du logiciel Cisco IOS](#)

Remarque : Pour utiliser ces commandes, supprimez les commandes en gras de la configuration ci-dessus et collez ces commandes dans, comme indiqué dans votre version du logiciel Cisco IOS.

[Logiciel Cisco IOS versions 11.3.3.T à 12.0.5.T](#)

```
aaa authentication login default radius local
```

```
aaa authentication ppp default if-needed radius local
aaa authorization network default radius
```

[Logiciel Cisco IOS versions 11.1 à 11.3.3.T](#)

```
aaa authentication login default radius
aaa authentication ppp default if-needed radius
aaa authorization network radius
```

[Configurations de serveur - Listes d'accès sur le routeur](#)

Cette procédure implique la configuration de la liste d'accès elle-même sur le routeur. Le serveur RADIUS est configuré avec le numéro de liste d'accès appliqué. Lorsque l'appel s'authentifie, le serveur RADIUS renvoie le numéro de liste d'accès au NAS, qui applique ensuite la liste d'accès correspondante.

[Configuration du serveur - Cisco Secure ACS pour Windows 2.X - RADIUS](#)

Procédez comme suit :

1. Dans Paramètres utilisateur, indiquez le nom et le ou les mots de passe.
2. Dans les paramètres de groupe, cochez la case :Attribut 6 - **Cadre**Attribut 7 - **PPP**Attribut 11 - **ID de filtre**. Dans la zone ci-dessous, tapez **101.in****Remarque** : l'attribut 11 spécifie que la liste d'accès 101 est appliquée. Assurez-vous que access-list 101 est configuré sur le routeur.

[Configuration du serveur - Cisco Secure ACS UNIX - RADIUS](#)

```
rtp-evergreen# ./ViewProfile -p 9900 -u chaprtr
User Profile Information
user = chaprtr{
profile_id = 51
profile_cycle = 1
radius=Cisco {
check_items= {
2="chaprtr"
}
reply_attributes= {
6=2
7=1
11=101.in
}
}
}
```

Remarque : L'attribut 11 spécifie que la liste d'accès 101 est appliquée. Assurez-vous que access-list 101 est configuré sur le routeur.

[Configuration du serveur - Livingston RADIUS](#)

```
chaprtr Password = chaprtr
User-Service-Type = Framed-User,
Framed-Protocol = PPP,
```

Framed-Filter-Id = 101.in

Remarque : Cette option spécifie que la liste d'accès 101 est appliquée. Assurez-vous que access-list 101 est configuré sur le routeur.

Exemple de débogage de routeur

```
koala#show debug
```

```
General OS:
```

```
AAA Authentication debugging is on
```

```
AAA Authorization debugging is on
```

```
PPP:
```

```
PPP protocol negotiation debugging is on
```

```
Radius protocol debugging is on
```

```
koala#
```

```
*Mar 1 00:55:36.307: As1 LCP: I CONFREQ [Closed] id 0 len 23
*Mar 1 00:55:36.311: As1 LCP: ACCM 0x00000000 (0x020600000000)
*Mar 1 00:55:36.311: As1 LCP: MagicNumber 0x00004CDD (0x050600004CDD)
*Mar 1 00:55:36.315: As1 LCP: PFC (0x0702)
*Mar 1 00:55:36.319: As1 LCP: ACFC (0x0802)
*Mar 1 00:55:36.319: As1 LCP: Callback 6 (0x0D0306)
*Mar 1 00:55:36.323: As1 LCP: Lower layer not up, Fast Starting
*Mar 1 00:55:36.323: As1 PPP: Treating connection as a dedicated line
*Mar 1 00:55:36.327: As1 PPP: Phase is ESTABLISHING,
Active Open [0 sess, 0 load]
*Mar 1 00:55:36.331: As1 AAA/AUTHOR/FSM: (0): LCP succeeds trivially
*Mar 1 00:55:36.335: As1 LCP: O CONFREQ [Closed] id 26 len 25
*Mar 1 00:55:36.339: As1 LCP: ACCM 0x000A0000 (0x0206000A0000)
*Mar 1 00:55:36.343: As1 LCP: AuthProto CHAP (0x0305C22305)
*Mar 1 00:55:36.343: As1 LCP: MagicNumber 0xE0512B4A (0x0506E0512B4A)
*Mar 1 00:55:36.347: As1 LCP: PFC (0x0702)
*Mar 1 00:55:36.347: As1 LCP: ACFC (0x0802)
*Mar 1 00:55:36.355: As1 LCP: O CONFREQ [REQsent] id 0 len 7
*Mar 1 00:55:36.355: As1 LCP: Callback 6 (0x0D0306)
00:55:36: %LINK-3-UPDOWN: Interface Async1, changed state to up
*Mar 1 00:55:36.479: As1 LCP: I CONFACK [REQsent] id 26 len 25
*Mar 1 00:55:36.483: As1 LCP: ACCM 0x000A0000 (0x0206000A0000)
*Mar 1 00:55:36.483: As1 LCP: AuthProto CHAP (0x0305C22305)
*Mar 1 00:55:36.487: As1 LCP: MagicNumber 0xE0512B4A (0x0506E0512B4A)
*Mar 1 00:55:36.491: As1 LCP: PFC (0x0702)
*Mar 1 00:55:36.491: As1 LCP: ACFC (0x0802)
*Mar 1 00:55:36.495: As1 LCP: I CONFREQ [ACKrcvd] id 1 len 20
*Mar 1 00:55:36.499: As1 LCP: ACCM 0x00000000 (0x020600000000)
*Mar 1 00:55:36.503: As1 LCP: MagicNumber 0x00004CDD (0x050600004CDD)
*Mar 1 00:55:36.503: As1 LCP: PFC (0x0702)
*Mar 1 00:55:36.507: As1 LCP: ACFC (0x0802)
*Mar 1 00:55:36.511: As1 LCP: O CONFACK [ACKrcvd] id 1 len 20
*Mar 1 00:55:36.515: As1 LCP: ACCM 0x00000000 (0x020600000000)
*Mar 1 00:55:36.515: As1 LCP: MagicNumber 0x00004CDD (0x050600004CDD)
*Mar 1 00:55:36.519: As1 LCP: PFC (0x0702)
*Mar 1 00:55:36.519: As1 LCP: ACFC (0x0802)
*Mar 1 00:55:36.523: As1 LCP: State is Open
*Mar 1 00:55:36.527: As1 PPP: Phase is AUTHENTICATING,
by this end [0 sess, 1 load]
*Mar 1 00:55:36.531: As1 CHAP: O CHALLENGE id 8 len 26 from "koala"
*Mar 1 00:55:36.647: As1 LCP: I IDENTIFY [Open] id 2 len 18
magic 0x00004CDD MSRASV4.00
*Mar 1 00:55:36.651: As1 LCP: I IDENTIFY [Open] id 3 len 21
magic 0x00004CDD MSRAS-1-ZEKIE
*Mar 1 00:55:36.655: As1 CHAP: I RESPONSE id 8 len 28 from "chaptrtr"
```

```
*Mar 1 00:55:36.663: AAA: parse name=Async1 idb type=10 tty=1
*Mar 1 00:55:36.667: AAA: name=Async1 flags=0x11 type=4 shelf=0
    slot=0 adapter=0 port=1 channel=0
*Mar 1 00:55:36.671: AAA/MEMORY: create_user (0x4E9DF4) user='chaptrtr'
    ruser='' port='Async1' rem_addr='async'
    authen_type=CHAP service=PPP priv=1
*Mar 1 00:55:36.675: AAA/AUTHEN/START (128288046): port='Async1'
    list='' action=LOGIN service=PPP
*Mar 1 00:55:36.675: AAA/AUTHEN/START (128288046): using "default" list
*Mar 1 00:55:36.679: AAA/AUTHEN (128288046): status = UNKNOWN
*Mar 1 00:55:36.679: AAA/AUTHEN/START (128288046): Method=radius (radius)
*Mar 1 00:55:36.683: RADIUS: ustruct sharecount=1
*Mar 1 00:55:36.687: RADIUS: Initial Transmit Async1
    id 8 172.18.124.111:1645, Access-Request, len 78
*Mar 1 00:55:36.691:      Attribute 4 6 0A1F0105
*Mar 1 00:55:36.695:      Attribute 5 6 00000001
*Mar 1 00:55:36.695:      Attribute 61 6 00000000
*Mar 1 00:55:36.695:      Attribute 1 9 63686170
*Mar 1 00:55:36.699:      Attribute 3 19 08E468A8
*Mar 1 00:55:36.699:      Attribute 6 6 00000002
*Mar 1 00:55:36.703:      Attribute 7 6 00000001
*Mar 1 00:55:36.835: RADIUS: Received from
    id 8 172.18.124.111:1645, Access-Accept, len 40
*Mar 1 00:55:36.839:      Attribute 6 6 00000002
*Mar 1 00:55:36.843:      Attribute 7 6 00000001
*Mar 1 00:55:36.843:      Attribute 11 8 3130312E
*Mar 1 00:55:36.851: AAA/AUTHEN (128288046): status = PASS
*Mar 1 00:55:36.855: As1 AAA/AUTHOR/LCP: Authorize LCP
*Mar 1 00:55:36.855: As1 AAA/AUTHOR/LCP (821299011):
    Port='Async1' list='' service=NET
*Mar 1 00:55:36.859: AAA/AUTHOR/LCP: As1 (821299011) user='chaptrtr'
*Mar 1 00:55:36.859: As1 AAA/AUTHOR/LCP (821299011):
    send AV service=ppp
*Mar 1 00:55:36.863: As1 AAA/AUTHOR/LCP (821299011):
    send AV protocol=lcp
*Mar 1 00:55:36.863: As1 AAA/AUTHOR/LCP (821299011):
    found list "default"
*Mar 1 00:55:36.867: As1 AAA/AUTHOR/LCP (821299011):
    Method=radius (radius)
*Mar 1 00:55:36.871: As1 AAA/AUTHOR (821299011): Post
    authorization status = PASS_REPL
*Mar 1 00:55:36.871: As1 AAA/AUTHOR/LCP: Processing
    AV service=ppp
*Mar 1 00:55:36.879: As1 CHAP: 0 SUCCESS id 8 len 4
*Mar 1 00:55:36.883: As1 PPP: Phase is UP [0 sess, 1 load]
*Mar 1 00:55:36.887: As1 AAA/AUTHOR/FSM: (0): Can we
    start IPCP?
*Mar 1 00:55:36.887: As1 AAA/AUTHOR/FSM (3701006396):
    Port='Async1' list='' service=NET
*Mar 1 00:55:36.891: AAA/AUTHOR/FSM: As1 (3701006396)
    user='chaptrtr'
*Mar 1 00:55:36.891: As1 AAA/AUTHOR/FSM (3701006396):
    send AV service=ppp
*Mar 1 00:55:36.895: As1 AAA/AUTHOR/FSM (3701006396):
    send AV protocol=ip
*Mar 1 00:55:36.899: As1 AAA/AUTHOR/FSM (3701006396):
    found list "default"
*Mar 1 00:55:36.899: As1 AAA/AUTHOR/FSM (3701006396):
    Method=radius (radius)
*Mar 1 00:55:36.903: As1 AAA/AUTHOR (3701006396):
    Post authorization status = PASS_REPL
*Mar 1 00:55:36.907: As1 AAA/AUTHOR/FSM: We can start IPCP
*Mar 1 00:55:36.915: As1 IPCP: 0 CONFREQ [Closed] id 5 len 10
*Mar 1 00:55:36.915: As1 IPCP:      Address 10.31.1.5 (0x03060A1F0105)
```

*Mar 1 00:55:36.923: As1 AAA/AUTHOR/FSM: (0): Can we start CDPCP?
*Mar 1 00:55:36.923: As1 AAA/AUTHOR/FSM (3075092411):
Port='Async1' list='' service=NET
*Mar 1 00:55:36.927: AAA/AUTHOR/FSM: As1 (3075092411) user='chaptrtr'
*Mar 1 00:55:36.931: As1 AAA/AUTHOR/FSM (3075092411):
send AV service=ppp
*Mar 1 00:55:36.931: As1 AAA/AUTHOR/FSM (3075092411):
send AV protocol=cdp
*Mar 1 00:55:36.935: As1 AAA/AUTHOR/FSM (3075092411):
found list "default"
*Mar 1 00:55:36.935: As1 AAA/AUTHOR/FSM (3075092411):
Method=radius (radius)
*Mar 1 00:55:36.939: RADIUS: unknown proto "cdp" in acl-check
*Mar 1 00:55:36.943: RADIUS: Filter-Id 101 out of range
for protocol cdp. Ignoring.
*Mar 1 00:55:36.943: As1 AAA/AUTHOR (3075092411): Post
authorization status = PASS_REPL
*Mar 1 00:55:36.947: As1 AAA/AUTHOR/FSM: We can start CDPCP
*Mar 1 00:55:36.951: As1 CDPCP: O CONFREQ [Closed] id 5 len 4
*Mar 1 00:55:36.987: As1 CCP: I CONFREQ [Not negotiated] id 4 len 12
*Mar 1 00:55:36.991: As1 CCP: OUI (0x0002)
*Mar 1 00:55:36.991: As1 CCP: MS-PPC supported bits
0x00007080 (0x120600007080)
*Mar 1 00:55:36.999: As1 LCP: O PROTREJ [Open] id 27 len 18
protocol CCP (0x80FD0104000C0002120600007080)
*Mar 1 00:55:37.003: As1 IPCP: I CONFREQ [REQsent] id 5 len 40
*Mar 1 00:55:37.007: As1 IPCP: CompressType VJ 15 slots
CompressSlotID (0x0206002D0F01)
*Mar 1 00:55:37.011: As1 IPCP: Address 0.0.0.0 (0x030600000000)
*Mar 1 00:55:37.015: As1 IPCP: PrimaryDNS 0.0.0.0 (0x810600000000)
*Mar 1 00:55:37.019: As1 IPCP: PrimaryWINS 0.0.0.0 (0x820600000000)
*Mar 1 00:55:37.023: As1 IPCP: SecondaryDNS 0.0.0.0 (0x830600000000)
*Mar 1 00:55:37.027: As1 IPCP: SecondaryWINS 0.0.0.0 (0x840600000000)
*Mar 1 00:55:37.027: As1 AAA/AUTHOR/IPCP: Start. Her
address 0.0.0.0, we want 0.0.0.0
*Mar 1 00:55:37.031: As1 AAA/AUTHOR/IPCP: Processing AV service=ppp
***Mar 1 00:55:37.035: As1 AAA/AUTHOR/IPCP: Processing AV inacl=101**
!-- Note that acl 101 is applied to the dialer interface. *Mar 1 00:55:37.035: As1
AAA/AUTHOR/IPCP: Authorization succeeded *Mar 1 00:55:37.039: As1 AAA/AUTHOR/IPCP: Done. Her
address 0.0.0.0, we want 0.0.0.0 *Mar 1 00:55:37.043: As1 IPCP: Pool returned 1.1.1.1 *Mar 1
00:55:37.047: As1 IPCP: O CONFREQ [REQsent] id 5 len 28 *Mar 1 00:55:37.051: As1 IPCP:
CompressType VJ 15 slots CompressSlotID (0x0206002D0F01) *Mar 1 00:55:37.055: As1 IPCP:
PrimaryWINS 0.0.0.0 (0x820600000000) *Mar 1 00:55:37.059: As1 IPCP: SecondaryDNS 0.0.0.0
(0x830600000000) *Mar 1 00:55:37.063: As1 IPCP: SecondaryWINS 0.0.0.0 (0x840600000000) *Mar 1
00:55:37.067: As1 IPCP: I CONFACK [REQsent] id 5 len 10 *Mar 1 00:55:37.071: As1 IPCP: Address
10.31.1.5 (0x03060A1F0105) *Mar 1 00:55:37.075: As1 LCP: I PROTREJ [Open] id 6 len 10 protocol
CDPCP (0x820701050004) *Mar 1 00:55:37.079: As1 CDPCP: State is Closed *Mar 1 00:55:37.183: As1
IPCP: I CONFREQ [ACKrcvd] id 7 len 16 *Mar 1 00:55:37.187: As1 IPCP: Address 0.0.0.0
(0x030600000000) *Mar 1 00:55:37.191: As1 IPCP: PrimaryDNS 0.0.0.0 (0x810600000000) *Mar 1
00:55:37.191: As1 AAA/AUTHOR/IPCP: Start. Her address 0.0.0.0, we want 1.1.1.1 *Mar 1
00:55:37.195: As1 AAA/AUTHOR/IPCP: Processing AV service=ppp *Mar 1 00:55:37.199: As1
AAA/AUTHOR/IPCP: Processing AV inacl=101 *Mar 1 00:55:37.199: As1 AAA/AUTHOR/IPCP: Authorization
succeeded *Mar 1 00:55:37.203: As1 AAA/AUTHOR/IPCP: Done. Her address 0.0.0.0, we want 1.1.1.1
*Mar 1 00:55:37.207: As1 IPCP: O CONFNAK [ACKrcvd] id 7 len 16 *Mar 1 00:55:37.211: As1 IPCP:
Address 1.1.1.1 (0x030601010101) *Mar 1 00:55:37.215: As1 IPCP: PrimaryDNS 172.18.125.3
(0x8106AC127D03) *Mar 1 00:55:37.327: As1 IPCP: I CONFREQ [ACKrcvd] id 8 len 16 *Mar 1
00:55:37.331: As1 IPCP: Address 1.1.1.1 (0x030601010101) *Mar 1 00:55:37.335: As1 IPCP:
PrimaryDNS 172.18.125.3 (0x8106AC127D03) *Mar 1 00:55:37.335: As1 AAA/AUTHOR/IPCP: Start. Her
address 1.1.1.1, we want 1.1.1.1 *Mar 1 00:55:37.343: As1 AAA/AUTHOR/IPCP (408915304):
Port='Async1' list='' service=NET *Mar 1 00:55:37.347: AAA/AUTHOR/IPCP: As1 (408915304)
user='chaptrtr' *Mar 1 00:55:37.347: As1 AAA/AUTHOR/IPCP (408915304): send AV service=ppp *Mar 1
00:55:37.351: As1 AAA/AUTHOR/IPCP (408915304): send AV protocol=ip *Mar 1 00:55:37.355: As1
AAA/AUTHOR/IPCP (408915304): send AV addr*1.1.1.1 *Mar 1 00:55:37.355: As1 AAA/AUTHOR/IPCP
(408915304): found list "default" *Mar 1 00:55:37.359: As1 AAA/AUTHOR/IPCP (408915304):

```
Method=radius (radius) *Mar 1 00:55:37.363: As1 AAA/AUTHOR (408915304): Post authorization
status = PASS_REPL *Mar 1 00:55:37.367: As1 AAA/AUTHOR/IPCP: Reject 1.1.1.1, using 1.1.1.1 *Mar
1 00:55:37.375: As1 AAA/AUTHOR/IPCP: Processing AV service=ppp *Mar 1 00:55:37.375: As1
AAA/AUTHOR/IPCP: Processing AV inacl=101 *Mar 1 00:55:37.379: As1 AAA/AUTHOR/IPCP: Processing AV
addr*1.1.1.1 *Mar 1 00:55:37.379: As1 AAA/AUTHOR/IPCP: Authorization succeeded *Mar 1
00:55:37.383: As1 AAA/AUTHOR/IPCP: Done. Her address 1.1.1.1, we want 1.1.1.1 *Mar 1
00:55:37.387: As1 IPCP: O CONFACK [ACKrcvd] id 8 len 16 *Mar 1 00:55:37.391: As1 IPCP: Address
1.1.1.1 (0x030601010101) *Mar 1 00:55:37.395: As1 IPCP: PrimaryDNS 172.18.125.3 (0x8106AC127D03)
*Mar 1 00:55:37.399: As1 IPCP: State is Open *Mar 1 00:55:37.727: As1 IPCP: Install route to
1.1.1.1 *Mar 1 00:55:37: %LINEPROTO-5-UPDOWN: Line protocol on Interface Async1, changed state
to up koala#
```

Définir des listes d'accès sur le serveur

Remarque : les instructions de route ne doivent pas être transmises du serveur au routeur ; l'utilisateur de numérotation choisit normalement les routes à partir du routeur. La présence des instructions de route sur le routeur dépend de la transmission ou de la récupération des routes à partir du serveur. Cependant, dans cet exemple, la liste d'accès et les instructions de route sont transmises.

```
ip route 9.9.9.0 255.255.255.0 11.11.11.12
ip route 15.15.15.0 255.255.255.0 12.12.12.13
```

Dans cet exemple de configuration, le passage des routes vers le bas à partir du serveur est uniquement à des fins d'illustration.

Configuration du routeur

```
Current configuration:
!
version 12.0
service timestamps debug uptime
service timestamps log uptime
no service password-encryption
!
hostname koala
!
aaa new-model
!
!--- The following three lines of the configuration are
!--- specific to Cisco IOS Software Release 12.0.5.T and
!--- later. !--- See below this configuration for commands !-
-- for other Cisco IOS Software Releases. ! aaa
authentication login default group radius none
aaa authentication ppp default if-needed group radius
aaa authorization network default group radius
enable secret 5 $1$mNZQ$g6XdsgVnnYjEa.17v.Pij1
enable password ww
!
username john password 0 doe
!
ip subnet-zero
!
cns event-service server
!
interface Ethernet0
ip address 10.31.1.5 255.255.255.0
no ip directed-broadcast
no mop enabled
!
```

```
interface Serial0
ip address 11.11.11.11 255.255.255.0
no ip directed-broadcast
no ip mroute-cache
no fair-queue
!
interface Serial1
ip address 12.12.12.12 255.255.255.0
no ip directed-broadcast
!
interface Async1
ip unnumbered Ethernet0
no ip directed-broadcast
encapsulation ppp
no ip route-cache
no ip mroute-cache
async mode dedicated
peer default ip address pool mypool
fair-queue 64 16 0
no cdp enable
ppp authentication chap
!
ip local pool mypool 1.1.1.1 1.1.1.5
ip classless
ip route 0.0.0.0 0.0.0.0 10.31.1.1
ip route 172.17.192.0 255.255.255.0 10.31.1.1
ip route 172.18.124.0 255.255.255.0 10.31.1.1
ip route 172.18.125.0 255.255.255.0 10.31.1.1
no ip http server
!
dialer-list 1 protocol ip permit
dialer-list 1 protocol ipx permit
!
radius-server host 172.18.124.111 auth-port 1645 acct-
port 1646
radius-server key cisco
!
line con 0
transport input none
line 1
autoselect during-login
autoselect ppp
modem InOut
transport input all
stopbits 1
speed 115200
flowcontrol hardware
line 2 16
line aux 0
line vty 0 4
password ww
!
end
```

[Commandes pour les autres versions du logiciel Cisco IOS](#)

Remarque : Pour utiliser ces commandes, supprimez les commandes en gras de la configuration ci-dessus et collez ces commandes dans, comme indiqué dans votre version du logiciel Cisco IOS.

[Logiciel Cisco IOS versions 11.3.3.T à 12.0.5.T](#)

```
aaa authentication login default radius local
aaa authentication ppp default if-needed radius local
aaa authorization network default radius
```

Logiciel Cisco IOS versions 11.3 à 11.3.3.T

```
aaa authentication login default radius
aaa authentication ppp default if-needed radius
aaa authorization network radius
```

Configurations de serveur

Configuration du serveur - Cisco Secure ACS UNIX - RADIUS

```
# ./ViewProfile -p 9900 -u chaprtr
User Profile Information
user = chaprtr{
profile_id = 31
profile_cycle = 1
radius=Cisco {
check_items= {
2="chaprtr"
}
reply_attributes= {
6=2
7=1
9,1="ip:route#1=9.9.9.9 255.255.255.255 11.11.11.12"
9,1="ip:route#2=15.15.15.15 255.255.255.255 12.12.12.13"
9,1="ip:route#3=15.15.15.16 255.255.255.255 12.12.12.13"
9,1="ip:inacl#1=permit icmp 1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255"
9,1="ip:inacl#2=permit tcp 1.1.1.0 0.0.0.255 15.15.15.0 0.0.0.255"
!--- The access-list to be applied is specified. !--- Note that the number after inacl#
increments for each line of the access-list. } } }
```

Configuration du serveur - Cisco Secure ACS pour Windows 2.x - RADIUS

Procédez comme suit :

1. Dans Paramètres utilisateur, saisissez le nom et le ou les mots de passe.
2. Dans les paramètres de groupe, cochez la case :Attribut 6 - **Cadre**Attribut 7 - **PPP**
3. Sous Attributs RADIUS Cisco, cochez **[009\001] AV-Pair** et tapez le texte suivant dans la zone en dessous :

```
ip:route#1=9.9.9.9 255.255.255.255 11.11.11.12
ip:route#2=15.15.15.15 255.255.255.255 12.12.12.13
ip:route#3=15.15.15.16 255.255.255.255 12.12.12.13
ip:inacl#1=permit icmp 1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255
ip:inacl#2=permit tcp 1.1.1.0 0.0.0.255 15.15.15.0 0.0.0.255
!--- The access-list to be applied is specified. !--- Note that the number after inacl#
increments for !--- each line of the access-list.
```

Configuration du serveur - Mérite RADIUS

Remarque : Cette configuration est valide pour les versions Merit RADIUS 3.6b ou ultérieures qui prennent en charge les paires av Cisco.

```

chaprttr Password = "chaprttr",
Service-Type = Framed,
Framed-Protocol = PPP,
Framed-IP-Address = 255.255.255.254
Cisco:Avpair="ip:route#1=9.9.9.9 255.255.255.255 11.11.11.12"
Cisco:Avpair="ip:route#2=15.15.15.15 255.255.255.255 12.12.12.13"
Cisco:Avpair="ip:route#3=15.15.15.16 255.255.255.255 12.12.12.13"
Cisco:Avpair="ip:inacl#1=permit icmp 1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255"
Cisco:Avpair="ip:inacl#2=permit tcp 1.1.1.0 0.0.0.255 15.15.15.0 0.0.0.255"
!--- The access-list to be applied is specified. ! --- Note that the number after inacl#
increments for each line of the access-list.

```

Exemple de débogage de routeur

La configuration utilisateur RADIUS pour le débogage ci-dessous était :

```

RADIUS user password = "radiususer",
Service-Type = Framed,
Framed-Protocol = PPP,
Framed-IP-Address = 255.255.255.254
cisco-avpair = "ip:route#1=9.9.9.0 255.255.255.0 11.11.11.12"
cisco-avpair = "ip:route#2=15.15.15.0 255.255.255.0 12.12.12.13"
cisco-avpair = "ip:inacl#1=permit icmp 1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255 log"
cisco-avpair = "ip:inacl#2=permit tcp 1.1.1.0 0.0.0.255 15.15.15 .0 0.0.0.255 log"

```

koala#

koala#

```

4d05h: As1 AAA/AUTHOR/FSM: (0): LCP succeeds trivially
4d05h: %LINK-3-UPDOWN: Interface Async1, changed state to up
4d05h: AAA: parse name=Async1 idb type=10 tty=1
4d05h: AAA: name=Async1 flags=0x11 type=4 shelf=0 slot=0
      adapter=0 port=1 channel=0
4d05h: AAA/MEMORY: create_user (0x552AB4) user='radiususer'
      ruser='' port='Async1' rem_addr='async' authen_type=CHAP
      service=PPP priv=1
4d05h: AAA/AUTHEN/START (624846144): port='Async1' list=''
      action=LOGIN service=PPP
4d05h: AAA/AUTHEN/START (624846144): using "default" list
4d05h: AAA/AUTHEN (624846144): status = UNKNOWN
4d05h: AAA/AUTHEN/START (624846144): Method=radius (radius)
4d05h: RADIUS: ustruct sharecount=1
4d05h: RADIUS: Initial Transmit Async1 id 9 172.18.124.111:1645,
      Access-Request, len 81
4d05h: Attribute 4 6 0A1F0105
4d05h: Attribute 5 6 00000001
4d05h: Attribute 61 6 00000000
4d05h: Attribute 1 12 72616469
4d05h: Attribute 3 19 1672E16F
4d05h: Attribute 6 6 00000002
4d05h: Attribute 7 6 00000001
4d05h: RADIUS: Received from id 9 172.18.124.111:1645,
      Access-Accept, len 287
4d05h: Attribute 6 6 00000002
4d05h: Attribute 7 6 00000001
4d05h: Attribute 8 6 FFFFFFFE
4d05h: Attribute 26 52 00000009012E6970
4d05h: Attribute 26 55 0000000901316970
4d05h: Attribute 26 70 0000000901406970
4d05h: Attribute 26 72 0000000901426970
4d05h: AAA/AUTHEN (624846144): status = PASS
4d05h: As1 AAA/AUTHOR/LCP: Authorize LCP

```

```
4d05h: As1 AAA/AUTHOR/LCP (3679631149): Port='Async1' list=''
service=NET
4d05h: AAA/AUTHOR/LCP: As1 (3679631149) user='radiususer'
4d05h: As1 AAA/AUTHOR/LCP (3679631149): send AV service=ppp
4d05h: As1 AAA/AUTHOR/LCP (3679631149): send AV protocol=lcp
4d05h: As1 AAA/AUTHOR/LCP (3679631149): found list "default"
4d05h: As1 AAA/AUTHOR/LCP (3679631149): Method=radius (radius)
4d05h: RADIUS: cisco AVPair "ip:route#1=9.9.9.0 255.255.255.0
11.11.11.12" not applied for lcp
4d05h: RADIUS: cisco AVPair "ip:route#2=15.15.15.0 255.255.255.0
12.12.12.13" not applied for lcp
4d05h: RADIUS: cisco AVPair "ip:inacl#1=permit icmp 1.1.1.0 0.0.0.255
9.9.9.0 0.0.0.255 log" not applied for lcp
4d05h: RADIUS: cisco AVPair "ip:inacl#2=permit tcp 1.1.1.0 0.0.0.255
15.15.15.0 0.0.0.255 log" not applied for lcp
4d05h: As1 AAA/AUTHOR (3679631149): Post authorization
status = PASS_REPL
4d05h: As1 AAA/AUTHOR/LCP: Processing AV service=ppp
4d05h: As1 AAA/AUTHOR/FSM: (0): Can we start IPCP?
4d05h: As1 AAA/AUTHOR/FSM (231623628): Port='Async1' list=''
service=NET
4d05h: AAA/AUTHOR/FSM: As1 (231623628) user='radiususer'
4d05h: As1 AAA/AUTHOR/FSM (231623628): send AV service=ppp
4d05h: As1 AAA/AUTHOR/FSM (231623628): send AV protocol=ip
4d05h: As1 AAA/AUTHOR/FSM (231623628): found list "default"
4d05h: As1 AAA/AUTHOR/FSM (231623628): Method=radius (radius)
4d05h: RADIUS: Using NAS default peer
4d05h: RADIUS: Authorize IP address 0.0.0.0
4d05h: RADIUS: cisco AVPair "ip:route#1=9.9.9.0 255.255.255.0
11.11.11.12"
4d05h: RADIUS: cisco AVPair "ip:route#2=15.15.15.0 255.255.255.0
12.12.12.13"
4d05h: RADIUS: cisco AVPair "ip:inacl#1=permit icmp 1.1.1.0 0.0.0.255
9.9.9.0 0.0.0.255 log"
4d05h: RADIUS: cisco AVPair "ip:inacl#2=permit tcp 1.1.1.0 0.0.0.255
15.15.15.0 0.0.0.255 log"
!--- The access list is sent down from the RADIUS server. 4d05h: As1 AAA/AUTHOR (231623628):
Post authorization status = PASS_REPL 4d05h: As1 AAA/AUTHOR/FSM: We can start IPCP 4d05h: As1
AAA/AUTHOR/IPCP: Start. Her address 0.0.0.0, we want 0.0.0.0 4d05h: As1 AAA/AUTHOR/IPCP:
Processing AV service=ppp 4d05h: As1 AAA/AUTHOR/IPCP: Processing AV addr=0.0.0.0 4d05h: As1
AAA/AUTHOR/IPCP: Processing AV route#1=9.9.9.0 255.255.255.0 11.11.11.12 4d05h: As1
AAA/AUTHOR/IPCP: Processing AV route#2=15.15.15.0 255.255.255.0 12.12.12.13 4d05h: As1
AAA/AUTHOR/IPCP: Processing AV inacl#1=permit icmp 1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255 log
4d05h: As1 AAA/AUTHOR/IPCP: Processing AV inacl#2=permit tcp 1.1.1.0 0.0.0.255 15.15.15.0
0.0.0.255 log 4d05h: As1 AAA/AUTHOR/IPCP: Authorization succeeded 4d05h: As1 AAA/AUTHOR/IPCP:
Done. Her address 0.0.0.0, we want 0.0.0.0 4d05h: As1 AAA/AUTHOR/IPCP: Start. Her address
0.0.0.0, we want 1.1.1.3 4d05h: As1 AAA/AUTHOR/IPCP: Processing AV service=ppp 4d05h: As1
AAA/AUTHOR/IPCP: Processing AV addr=0.0.0.0 4d05h: As1 AAA/AUTHOR/IPCP: Processing AV
route#1=9.9.9.0 255.255.255.0 11.11.11.12 4d05h: As1 AAA/AUTHOR/IPCP: Processing AV
route#2=15.15.15.0 255.255.255.0 12.12.12.13 4d05h: As1 AAA/AUTHOR/IPCP: Processing AV
inacl#1=permit icmp 1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255 log 4d05h: As1 AAA/AUTHOR/IPCP:
Processing AV inacl#2=permit tcp 1.1.1.0 0.0.0.255 15.15.15.0 0.0.0.255 log 4d05h: As1
AAA/AUTHOR/IPCP: Authorization succeeded 4d05h: As1 AAA/AUTHOR/IPCP: Done. Her address 0.0.0.0,
we want 1.1.1.3 4d05h: As1 AAA/AUTHOR/IPCP: Start. Her address 1.1.1.3, we want 1.1.1.3 4d05h:
As1 AAA/AUTHOR/IPCP (2383669304): Port='Async1' list='' service=NET 4d05h: AAA/AUTHOR/IPCP: As1
(2383669304) user='radiususer' 4d05h: As1 AAA/AUTHOR/IPCP (2383669304): send AV service=ppp
4d05h: As1 AAA/AUTHOR/IPCP (2383669304): send AV protocol=ip 4d05h: As1 AAA/AUTHOR/IPCP
(2383669304): send AV addr*1.1.1.3 4d05h: As1 AAA/AUTHOR/IPCP (2383669304): found list "default"
4d05h: As1 AAA/AUTHOR/IPCP (2383669304): Method=radius (radius) 4d05h: RADIUS: Using NAS default
peer 4d05h: RADIUS: Authorize IP address 1.1.1.3 4d05h: RADIUS: cisco AVPair "ip:route#1=9.9.9.0
255.255.255.0 11.11.11.12" 4d05h: RADIUS: cisco AVPair "ip:route#2=15.15.15.0 255.255.255.0
12.12.12.13" 4d05h: RADIUS: cisco AVPair "ip:inacl#1=permit icmp 1.1.1.0 0.0.0.255 9.9.9.0
0.0.0.255 log" 4d05h: RADIUS: cisco AVPair "ip:inacl#2=permit tcp 1.1.1.0 0.0.0.255 15.15.15.0
0.0.0.255 log" 4d05h: As1 AAA/AUTHOR (2383669304): Post authorization status = PASS_REPL 4d05h:
```

```

As1 AAA/AUTHOR/IPCP: Processing AV service=ppp 4d05h: As1 AAA/AUTHOR/IPCP: Processing AV
addr=1.1.1.3 4d05h: As1 AAA/AUTHOR/IPCP: Processing AV route#1=9.9.9.0 255.255.255.0 11.11.11.12
4d05h: As1 AAA/AUTHOR/IPCP: Processing AV route#2=15.15.15.0 255.255.255.0 12.12.12.13 4d05h:
As1 AAA/AUTHOR/IPCP: Processing AV inacl#1=permit icmp
1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255 log
4d05h: As1 AAA/AUTHOR/IPCP: Processing AV inacl#2=permit tcp
1.1.1.0 0.0.0.255 15.15.15.0 0.0.0.255 log
!--- Access list from the RADIUS server is applied. 4d05h: As1 AAA/AUTHOR/IPCP: Authorization
succeeded 4d05h: As1 AAA/AUTHOR/IPCP: Done. Her address 1.1.1.3, we want 1.1.1.3 4d05h: As1
AAA/AUTHOR/PER-USER: Event IP_UP 4d05h: As1 AAA/AUTHOR: IP_UP 4d05h: As1 AAA/PER-USER:
processing author params. 4d05h: As1 AAA/AUTHOR: Parse 'IP route 9.9.9.0 255.255.255.0
11.11.11.12' 4d05h: As1 AAA/AUTHOR: Parse returned ok (0) 4d05h: As1 AAA/AUTHOR: enqueue peruser
IP txt=no IP route 9.9.9.0 255.255.255.0 11.11.11.12 4d05h: As1 AAA/AUTHOR: Parse 'IP route
15.15.15.0 255.255.255.0 12.12.12.13' 4d05h: As1 AAA/AUTHOR: Parse returned ok (0) 4d05h: As1
AAA/AUTHOR: enqueue peruser IP txt=no IP route 15.15.15.0 255.255.255.0 12.12.12.13 4d05h: As1
AAA/AUTHOR: Parse 'ip access-list extended Async1#0' 4d05h: As1 AAA/AUTHOR: Parse returned ok
(0) 4d05h: As1 AAA/AUTHOR: Parse 'permit icmp 1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255 log' 4d05h:
As1 AAA/AUTHOR: Parse returned ok (0) 4d05h: As1 AAA/AUTHOR: Parse 'permit tcp 1.1.1.0 0.0.0.255
15.15.15.0 0.0.0.255 log' 4d05h: As1 AAA/AUTHOR: Parse returned ok (0) 4d05h: As1 AAA/AUTHOR:
enqueue peruser IP txt=no ip access-list extended Async1#0 4d05h: As1 AAA/AUTHOR: Parse
'interface Async1' 4d05h: %LINEPROTO-5-UPDOWN: Line protocol on Interface Async1, changed state
to up 4d05h: As1 AAA/AUTHOR: Parse returned ok (0) 4d05h: As1 AAA/AUTHOR: Parse 'IP access-group
Async1#0 in' 4d05h: As1 AAA/AUTHOR: Parse returned ok (0) 4d05h: As1 AAA/AUTHOR: enqueue peruser
IP txt=interface Async1 no IP access-group Async1#0 in koala#show ip access-list
Extended IP access list 101
permit icmp 1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255 log (5 matches)
permit tcp 1.1.1.0 0.0.0.255 15.15.15.0 0.0.0.255 log (11 matches)
Extended IP access list Async1#0 (per-user)
permit icmp 1.1.1.0 0.0.0.255 9.9.9.0 0.0.0.255 log
permit tcp 1.1.1.0 0.0.0.255 15.15.15.0 0.0.0.255 log
!--- Verify that the access list is applied to the AS1 dial interface. koala#show ip route
Codes: C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
* - candidate default, U - per-user static route, o - ODR
P - periodic downloaded static route

Gateway of last resort is 10.31.1.1 to network 0.0.0.0

1.0.0.0/32 is subnetted, 1 subnets
C 1.1.1.3 is directly connected, Async1
172.17.0.0/24 is subnetted, 1 subnets
S 172.17.192.0 [1/0] via 10.31.1.1
172.18.0.0/24 is subnetted, 2 subnets
S 172.18.124.0 [1/0] via 10.31.1.1
S 172.18.125.0 [1/0] via 10.31.1.1
9.0.0.0/24 is subnetted, 1 subnets
U 9.9.9.0 [1/0] via 11.11.11.12
!--- The static user route specified by the RADIUS server is applied. 10.0.0.0/24 is subnetted,
1 subnets C 10.31.1.0 is directly connected, Ethernet0 11.0.0.0/24 is subnetted, 1 subnets C
11.11.11.0 is directly connected, Serial0 12.0.0.0/24 is subnetted, 1 subnets C 12.12.12.0 is
directly connected, Serial1 15.0.0.0/24 is subnetted, 1 subnets U 15.15.15.0 [1/0] via
12.12.12.13
!--- The static user route specified by the RADIUS server is applied. S* 0.0.0.0/0 [1/0] via
10.31.1.1

```

Commandes de débogage

- **debug aaa authentication** - Affiche des informations sur l'authentification AAA.
- **debug aaa Authorization** - Affiche des informations sur l'autorisation AAA.
- **debug aaa per-user** - Affiche des informations sur les paramètres de configuration par

utilisateur sur le routeur ou le serveur d'accès qui sont envoyés depuis un serveur AAA.

- **debug radius** - Affiche les informations de débogage détaillées associées à RADIUS.
- **debug ppp negotiation** - Affiche les paquets PPP transmis lors du démarrage PPP, où les options PPP sont négociées.

Pour plus d'informations sur le dépannage, consultez [Dépannage des listes d'accès sur les interfaces de numérotation](#).

[Informations connexes](#)

- [Documentation pour le Cisco Secure ACS pour l'UNIX](#)
- [Cisco Secure ACS pour la page d'assistance de Windows](#)
- [Documentation pour Cisco Secure ACS pour Windows](#)
- [Page d'assistance RADIUS](#)
- [Configuration de RADIUS](#)
- [Demandes de commentaires \(RFC\)](#)