# Configurer un réseau privé virtuel (VPN) IPsec site à site sur un routeur RV132W ou RV134W

## Objectif

Les réseaux privés virtuels (VPN) de site à site sont mis en oeuvre en fonction des politiques IPsec qui sont affectées aux topologies VPN. Une stratégie IPsec est un ensemble de paramètres qui définissent les caractéristiques du VPN site à site, tels que les protocoles et algorithmes de sécurité qui seront utilisés pour sécuriser le trafic dans un tunnel IPsec.

Les routeurs RV132W et RV134W prennent en charge le VPN IPsec site à site pour un tunnel VPN passerelle à passerelle unique. Après avoir configuré les paramètres VPN de base, vous pouvez vous connecter en toute sécurité à un autre routeur VPN. Par exemple, vous pouvez configurer votre périphérique sur un site de filiale pour qu'il se connecte à un routeur qui connecte des tunnels VPN de site à site sur le site de l'entreprise, de sorte que le site de filiale dispose d'un accès sécurisé au réseau de l'entreprise.

Cet article vise à vous montrer comment configurer les paramètres VPN de base pour une connexion IPsec de site à site sur votre routeur RV132W ou RV134W.

## Périphériques pertinents

- RV132W
- RV134W

#### Version du logiciel

- 1.0.0.17 RV132W
- 1.0.0.21 RV134W

#### Configurer un VPN IPSec site à site sur un routeur

Étape 1. Connectez-vous à l'utilitaire Web et choisissez VPN > Site-to-Site IPSec VPN > Basic VPN Setup.



Étape 2. Dans le champ *Nouveau nom de connexion*, saisissez un nom pour le tunnel VPN. Le nom ne peut contenir que des lettres, des chiffres et des tirets.

Note: Dans cet exemple, le nom est Branch1.

Basic ∨PN Setup			
About Basic VPN Setup			
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu			
View Default Settings			
Connection Name and Remote IP Type			
New Connection Name:	Branch1	]	
Pre-Shared Key:	Cisco1234\$	]	
Protocol:	ESP V		
Endpoint Information			
Remote Endpoint:	IP Address 🔻		
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint 1.2.3.4 or abc.com)	
Local WAN (Internet) IP Address:	192.168.100.121	]	
Secure Connection Remote Accessibility			
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)	
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)	
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)	
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)	
Save Cancel Back			

Étape 3. Dans le champ *Pre-Shared Key*, saisissez la clé ou le mot de passe pré-partagé, qui seront échangés entre les deux routeurs. Le mot de passe doit comporter entre 8 et 49 caractères.

Note: Dans cet exemple, la clé pré-partagée est Cisco1234\$.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	
Pre-Shared Key:	Cisco1234\$	
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint	IP Address 🔻	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint: 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Étape 4. Dans la liste déroulante Protocole, sélectionnez le nom du protocole. Les options sont les suivantes :

- ESP : le protocole ESP (Encapsulating Security Payload) assure l'authenticité, l'intégrité et la confidentialité des paquets d'origine.
- AH : le protocole AH (Authentication Header) authentifie l'origine des datagrammes et garantit l'intégrité des données.

Note: Dans cet exemple, ESP est choisi.

Basic VPN Setup			
About Basic VPN Setup			
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu			
View Default Settings			
Connection Name and Remote IP Type			
New Connection Name:	Branch1		
Pre-Shared Key:	Cisco1234\$		
Protocol:	ESP V		
Endpoint Information	ESP		
Remote Endpoint:	IP Address V		
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint: 1.2.3.4 or abc.com)	
Local WAN (Internet) IP Address:	192.168.100.121		
Secure Connection Remote Accessibility			
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint: 1.2.3.4)	
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)	
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint: 1.2.3.4)	
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)	
Save Cancel Back			

Étape 5. Sélectionnez Remote Endpoint dans le menu déroulant. Les options sont les suivantes :

- IP Address : cette option identifie le routeur auquel votre périphérique se connectera avec son adresse IP.
- FQDN : le nom de domaine complet (FQDN) identifie le routeur auquel votre périphérique se connectera avec son nom de domaine.

Note: Dans cet exemple, l'adresse IP est choisie.

Basic VPN Setup			
About Basic VPN Setup			
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu			
View Default Settings			
Connection Name and Remote IP Type			
New Connection Name:	Branch1	]	
Pre-Shared Key:	Cisco1234\$	]	
Protocol:	ESP V		
Endpoint Information			
Remote Endpoint:	IP Address V		
Remote WAN (Internet) IP Address:	IP Address FQDN	(Hint 1.2.3.4 or abc.com)	
Local WAN (Internet) IP Address:	192.168.100.121	]	
Secure Connection Remote Accessibility			
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)	
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)	
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)	
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)	
Sava Cancel Back			
Save Cancel Back			

Étape 6. Saisissez l'adresse IP ou le nom de domaine complet du WAN distant (Internet) dans le champ *Adresse IP du WAN distant (Internet)*.

Note: Dans cet exemple, l'adresse IP du WAN distant (Internet) est 10.11.12.13.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint	IP Address 🔻	
Remote WAN (Internet) IP Address:	10.11.12.13	Hint: 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	]
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Étape 7. Vérifiez que l'adresse IP source dans le champ *Local WAN (Internet) IP Address* est correcte. Ceci est généré automatiquement.

Note: Dans cet exemple, l'adresse IP du WAN local (Internet) est 192.168.100.121.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint	IP Address V	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint 255.255.255.0)
Save Cancel Back		

Étape 8. Entrez l'adresse IP du réseau privé (LAN) du point de terminaison distant dans le champ *Remote LAN (Local Network) IP Address*. Il s'agit de l'adresse IP du réseau interne du site distant.

Note: Dans cet exemple, l'adresse IP du réseau local distant est 10.10.100.162.

Basic VPN Setup		
Busic VIII Colup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint	IP Address 🔻	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint: 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	]
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Étape 9. Vérifiez le masque de sous-réseau du réseau privé (LAN) du point de terminaison distant dans le champ *Masque de sous-réseau du réseau local distant (Internet)*. Ceci est généré automatiquement.

Note: Dans cet exemple, le masque de sous-réseau du réseau local distant est 255.0.0.0.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint:	IP Address 🔻	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	]
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Étape 10. Entrez l'adresse IP du réseau privé (LAN) du réseau local dans le champ *Local LAN (Local LAN (Local Network) IP Address*. Il s'agit de l'adresse IP du réseau interne du périphérique.

Note: Dans cet exemple, l'adresse IP du LAN local (réseau local) est 192.168.100.128.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint	IP Address 🔻	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint: 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	]
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Étape 11. Vérifiez le masque de sous-réseau du réseau privé (LAN) du point de terminaison local dans le champ *Local LAN (Local Network) Subnet Mask (Masque de sous-réseau local)*. Ceci est généré automatiquement.

**Note:** Dans cet exemple, le masque de sous-réseau LAN local (réseau local) est 255.255.255.0.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	
New Connection Name.	branch	]
Pre-Shared Key:	Cisco1234\$	
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint	IP Address 🔻	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	]
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		_

**Note:** Les adresses IP WAN et LAN distantes ne peuvent pas se trouver sur le même sousréseau. Par exemple, une adresse IP LAN distante de 192.168.1.100 et une adresse IP LAN locale de 192.168.1.115 provoquent un conflit lorsque le trafic est routé sur le VPN. Le troisième octet doit être différent pour que les adresses IP se trouvent sur des sous-réseaux différents. Par exemple, une adresse IP LAN distante de 192.168.1.199 et une adresse IP LAN locale de 192.168.2.100 sont acceptables.

Étape 12. Click Save.

Vous devez maintenant avoir correctement configuré le VPN IPsec site à site sur votre routeur RV132W ou RV134W.