

Configurazione delle impostazioni di WPS sull'RV110W

Obiettivo

Wi-Fi Protected Setup (WPS) è un modo rapido per stabilire una rete wireless sicura. L'obiettivo di questo articolo è spiegare come configurare le impostazioni WPS sull'RV110W.

Dispositivi interessati

RV110W

Fasi della procedura

Passaggio 1. Usare l'utility di configurazione del router per scegliere **Wireless > WPS**.

WPS

Wi-Fi Protected Setup™

SSID: ciscosb1

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.

OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

Passaggio 2. Dal menu a discesa *SSID*, scegliere una rete wireless a cui applicare WPS.

WPS

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

Passaggio 3. A destra di WPS, selezionare la casella di controllo **Abilita** per abilitare le impostazioni di WPS.

Passaggio 4. Eseguire una delle tre opzioni per aggiungere un dispositivo client alla rete.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

·Opzione 1. Se il client ha un pulsante WPS, premere il pulsante. Fare clic sull'icona WPS.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

·Opzione 2. Se il dispositivo client ha un numero PIN WPS, immettere il numero PIN nel campo dell'opzione 2. Fare clic su **Registra**.

·Opzione 3. Il client richiede il numero PIN del router. Il client immette il numero 61443143 nel dispositivo client.