

RV016, RV042, RV042G 및 RV082 VPN 라우터의 Windows 8용 대체 VPN 설정

목표

라우터에서 VPN을 구성할 때 VPN에 연결할 수 있도록 컴퓨터에 VPN 클라이언트 소프트웨어를 구성해야 합니다. Cisco는 최종 사용자가 VPN 터널에 연결할 수 있는 소프트웨어인 QuickVPN을 제공합니다. QuickVPN을 사용할 수 없거나 제대로 실행할 수 없는 경우가 있으므로 연결하려면 다른 방법이 필요합니다.

이 문서의 목적은 windows 8에서 RV Series VPN 라우터용 대체 VPN을 설정하는 방법을 설명하는 것입니다.

적용 가능한 디바이스

- RV016
- RV042
- RV042G
- RV082

소프트웨어 버전

- v4.2.2.08

Windows 8용 VPN

1단계. 컴퓨터에 로그인하고 시작 > 제어판 > 네트워크 및 인터넷 > 네트워크 및 공유 센터를 선택합니다. Network and Sharing Center(네트워크 및 공유 센터) 페이지가 열립니다.

View your basic network information and set up connections



View your active networks

[Connect or disconnect](#)



Access type: Internet
Connections: Wireless Network Connection (Secure)

Change your networking settings



[Set up a new connection or network](#)

Set up a wireless, broadband, dial-up, ad hoc, or VPN connection; or set up a router or access point.



[Connect to a network](#)

Connect or reconnect to a wireless, wired, dial-up, or VPN network connection.



[Choose homegroup and sharing options](#)

Access files and printers located on other network computers, or change sharing settings.



[Troubleshoot problems](#)

Diagnose and repair network problems, or get troubleshooting information.

View your basic network information and set up connections



[See full map](#)

View your active networks

[Connect or disconnect](#)



Access type: Internet
Connections: Wireless Network Connection (Secure)

Change your networking settings



[Set up a new connection or network](#)

Set up a wireless, broadband, dial-up, ad hoc, or VPN connection; or set up a router or access point.



[Connect to a network](#)

Connect or reconnect to a wireless, wired, dial-up, or VPN network connection.



[Choose homegroup and sharing options](#)

Access files and printers located on other network computers, or change sharing settings.



[Troubleshoot problems](#)

Diagnose and repair network problems, or get troubleshooting information.

2단계. Set up a new connection or network(새 연결 또는 네트워크 설정)를 클릭하여 새 연결 또는 네트워크를 생성합니다. Set Up a Connection or Network(연결 또는 네트워크 설정) 창이 나타납니다.



Set Up a Connection or Network

Choose a connection option



Connect to the Internet

Set up a wireless, broadband, or dial-up connection to the Internet.



Set up a new network

Configure a new router or access point.



Manually connect to a wireless network

Connect to a hidden network or create a new wireless profile.



Connect to a workplace

Set up a dial-up or VPN connection to your workplace.



Set up a dial-up connection

Connect to the Internet using a dial-up connection.

Next

Cancel



Set Up a Connection or Network

Choose a connection option



Connect to the Internet

Set up a wireless, broadband, or dial-up connection to the Internet.



Set up a new network

Configure a new router or access point.



Manually connect to a wireless network

Connect to a hidden network or create a new wireless profile.



Connect to a workplace

Set up a dial-up or VPN connection to your workplace.



Set up a dial-up connection


Connect to the Internet using a dial-up connection.

Next

Cancel

3단계. Connect to a workplace를 클릭하여 VPN 연결을 설정합니다.

4단계. 계속하려면 다음을 클릭합니다. Connect to a Workplace(작업 공간에 연결) 창이 나타납니다.

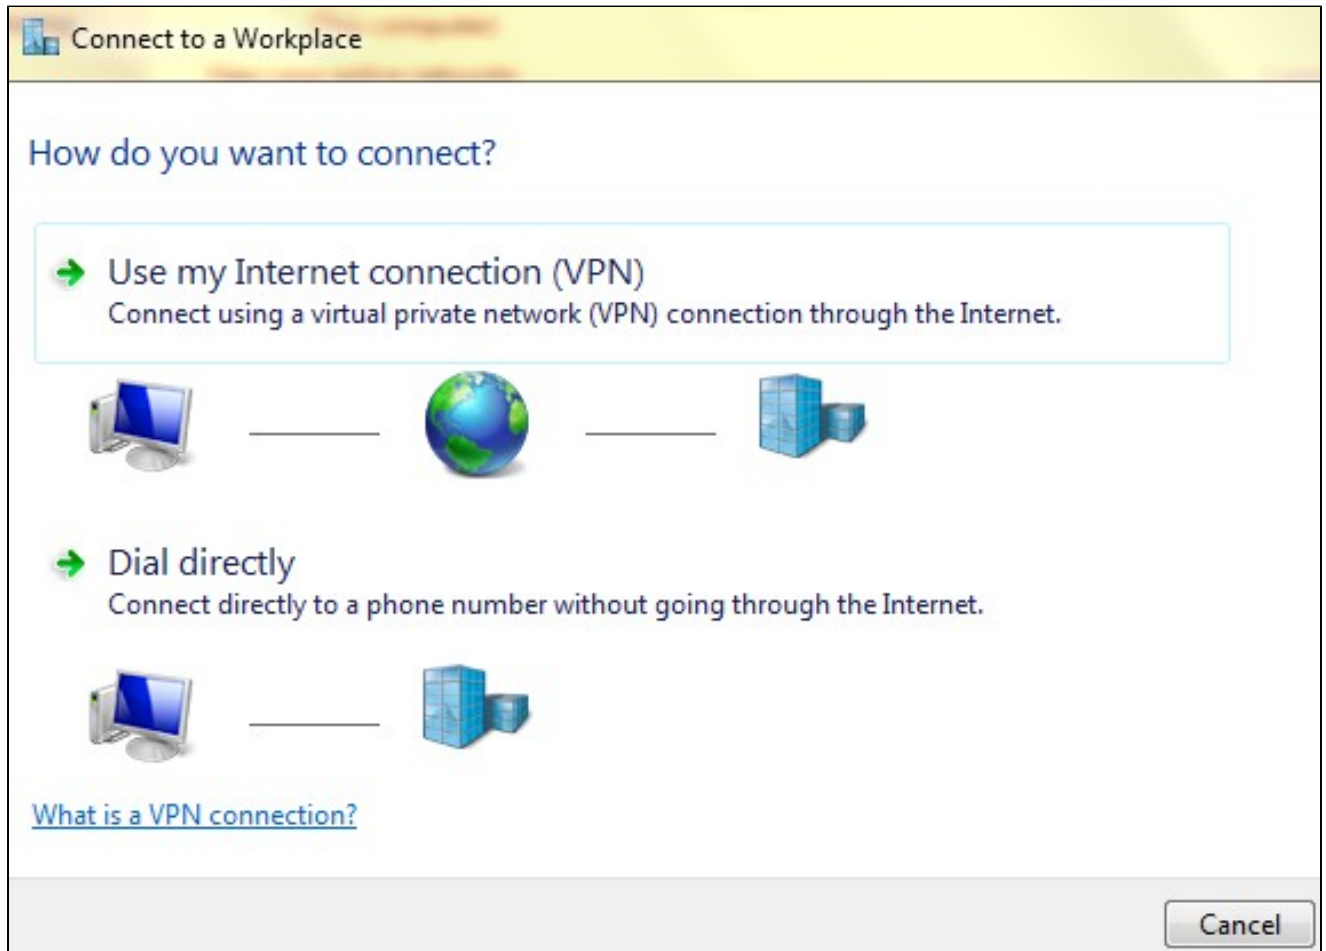



Connect to a Workplace

How do you want to connect?

- Use my Internet connection (VPN)
Connect using a virtual private network (VPN) connection through the Internet.




- Dial directly
Connect directly to a phone number without going through the Internet.



[What is a VPN connection?](#)

Cancel


5단계. VPN에 대한 인터넷 연결을 사용하려면 Use my Internet connection (VPN)(내 인터넷 연결 사용(VPN))을 클릭합니다.

 Connect to a Workplace

Do you want to set up an Internet connection before continuing?


An Internet connection is necessary for using a VPN connection.

 Set up an Internet connection

 I'll set up an Internet connection later

Cancel

6단계. 나중에 인터넷 연결을 구성하려면 I'll set up a internet connection later(나중에 인터넷 연결 설정)를 클릭합니다.

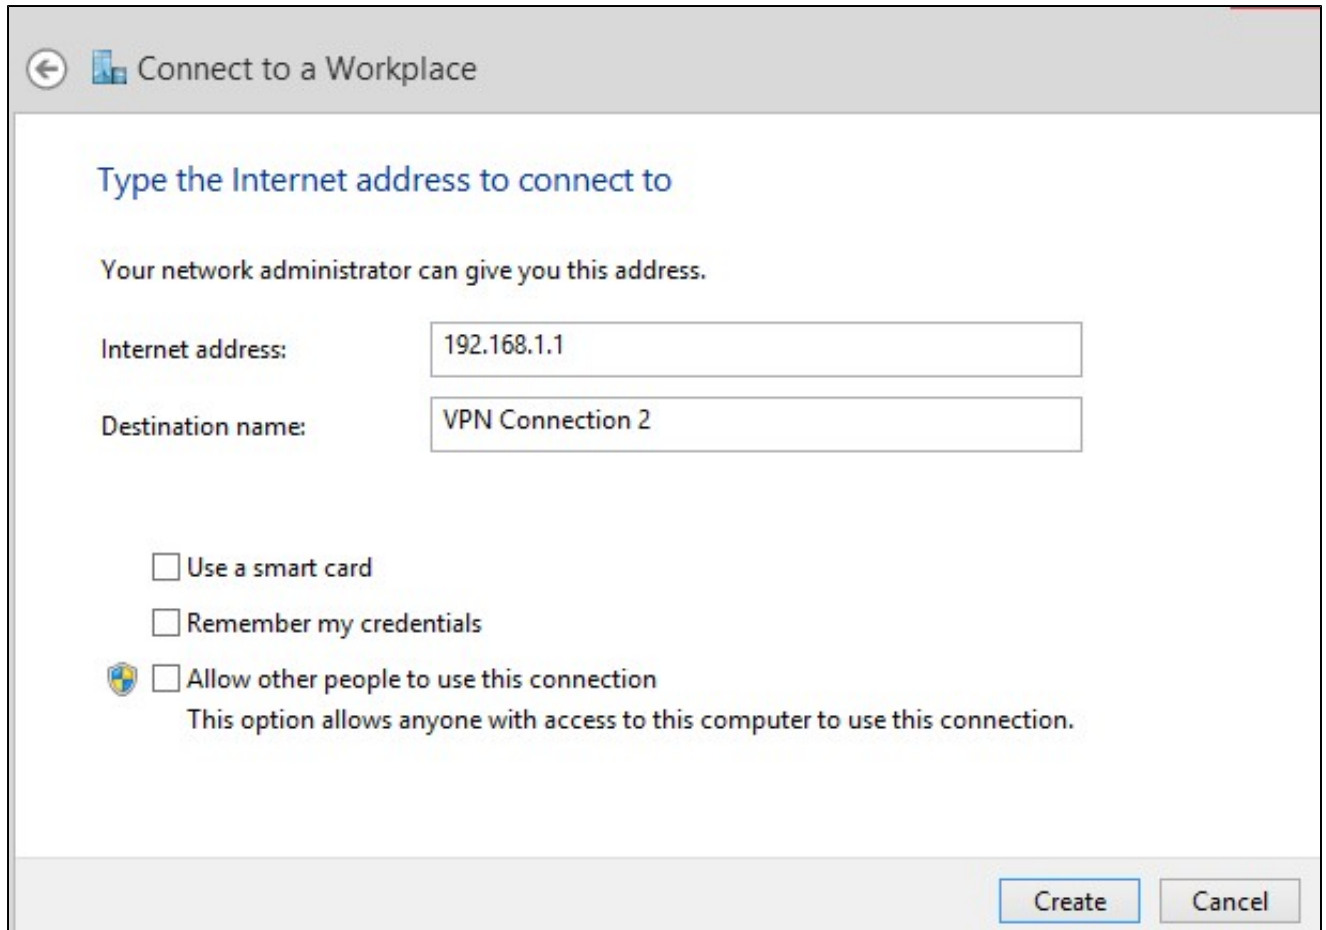

7단계. VPN 라우터의 IP 주소를 Internet Address 필드에 입력합니다.

8단계. Destination name(대상 이름) 필드에 VPN 연결을 식별하는 이름을 입력합니다.

9단계. Create(생성)를 클릭합니다.




10단계. 작업 표시줄에서 네트워크 아이콘을 클릭합니다. 컴퓨터에 연결할 수 있는 모든 네트워크, 무선, VPN 및 전화 걸기 기능이 표시됩니다.

Connections

Network 6

 Limited



VPN Connection 2



Connect

VPN Connection 3



Wi-Fi

Wi-Fi Secure

Connected




Wi-Fi Secure



11단계. 연결을 클릭하여 특정 연결을 연결합니다.

Network Authentication

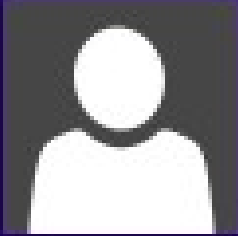

user_2



Domain:

OK

Cancel

12단계 Username(사용자 이름) 필드에 사용자 이름을 입력합니다. RV0xx Series VPN Router의 VPN 터널에 대해 구성된 동일한 사용자 이름입니다. VPN 터널에 대해 사용자를 구성하는 방법에 대한 자세한 내용은 RV016, RV042, RV042G 및 RV082 VPN Router에서 VPN 사용자 관리를 참조하십시오.

13단계. Password(비밀번호) 필드에 비밀번호를 입력합니다. RV0xx Series VPN Router의 VPN 터널에 대해 구성된 것과 동일한 비밀번호입니다. VPN 터널에 대해 사용자를 구성하는 방법에 대한 자세한 내용은 RV016, RV042, RV042G 및 RV082 VPN Router에서 VPN 사용자 관리를 참조하십시오.

14단계. OK(확인)를 클릭합니다.

이 번역에 관하여

Cisco는 전 세계 사용자에게 다양한 언어로 지원 콘텐츠를 제공하기 위해 기계 번역 기술과 수작업 번역을 병행하여 이 문서를 번역했습니다. 아무리 품질이 높은 기계 번역이라도 전문 번역가의 번역 결과물만큼 정확하지는 않습니다. Cisco Systems, Inc.는 이 같은 번역에 대해 어떠한 책임도 지지 않으며 항상 원본 영문 문서(링크 제공됨)를 참조할 것을 권장합니다.