IP-adressen van endpoints die zijn geregistreerd op CUCM met VCS/Express Configurationvoorbeeld

Inhoud

Inleiding Voorwaarden Vereisten Gebruikte componenten Achtergrond Optie 1 Optie 2 Configuratie CUCM-configuratie Configuratie van VCS-controle Configuratie van VCS-snelweg Optie 1 - Voeg een samenvatting toe aan het IP-adres Optie 2 - Schakel het IP-adres in een string Verifiëren Problemen oplossen

Inleiding

Dit document beschrijft hoe u IP-adressen kunt bellen van endpoints die zijn geregistreerd in Cisco Unified Communications Manager (CUCM) met Cisco Video Communication Server (VCS) of Cisco Express als een oplossing.

Voorwaarden

Vereisten

Cisco raadt kennis van de volgende onderwerpen aan:

- Buurgebieden op Cisco VCS / autosnelweg
- Omzet- en zoekregels voor Cisco VCS/autosnelweg
- Session Initiation Protocol (SIP)-routepatronen en SIP-trunks op CUCM

Opmerking: In dit document wordt aangenomen dat de draaisnelheid van de VCS-regelaar / Expressway-C naar de VCS-snelweg / Expressway-E actief is en dat de interworking-toets op de VCS / Expressway is geïnstalleerd.

Gebruikte componenten

De informatie in dit document is gebaseerd op de volgende software- en hardware-versies:

- Cisco VCS x8.1 en hoger
- CUCM release 9 en hoger

Opmerking: Dit document kan ook worden gebruikt voor de implementaties van snelheden.

De informatie in dit document is gebaseerd op de apparaten in een specifieke laboratoriumomgeving. Alle apparaten die in dit document worden beschreven, hadden een opgeschoonde (standaard)configuratie. Als uw netwerk live is, moet u de potentiële impact van elke opdracht begrijpen.

Achtergrond

CUCM ondersteunt IP-adresomzetting niet. Als u IP-adresdialing wilt gebruiken, raadt Cisco een van de twee procedures aan die in dit artikel worden beschreven. Een voorbeeld use case zou voor endpoints die zijn geregistreerd op CUCM om een H.323-eindpunt door IP-adres te selecteren.

Optie 1

- Voeg een achtervoegsel aan het IP adres toe, zodat de string lijkt op een SIP Uniform Resource Identifier (URI).
- Bijvoorbeeld, om het IP-adres **198.51.100.2** te kunnen bellen, zullen gebruikers **198.51.100.2@domain** bellen.
- Admin moet gebruikers informeren om <IP Address>@domein te bellen. Dit domein kan ofwel het interne domein van het bedrijf ofwel een schijndomein zijn. Dit document is gebaseerd op het gebruik van het VCS-domein.

Optie 2

- Vervang de punten door een symbool om het IP-adres in een string te veranderen.
- Om bijvoorbeeld het IP-adres 198.51.100.2 te kunnen bellen, bellen gebruikers 198*51*100*2.

Opmerking: In beide opties probeert de expressway-E het IP-adres te bellen met het H.323protocol. Als het doeleindpunt H.323 niet ondersteunt, moet u SIP UDP inschakelen. Houd SIP UDP anders uitgeschakeld.

Opmerking: Optie 2 kan met IP-telefoons worden gebruikt of wanneer u vanuit de CLI of Web GUI van endpoints belt die de software van Tandberg Codec (TC) gebruiken. Wanneer u * probeert te bellen met Touch Panel of Remote Control, werkt dit misschien niet omdat het * automatisch wordt geconverteerd naar. wanneer u deze opties gebruikt om te bellen.

Configuratie

Opmerking: Deze configuratie is van toepassing op beide van de eerder genoemde opties.

CUCM-configuratie

Op het CUCM moet de beheerder een SIP-torbeveiligingsprofiel voor VCS configureren op poort 5060 (hierbij wordt ervan uitgegaan dat 5060 de poort is die op het VCS in de richting van het CUCM via TCP wordt gebruikt).

Opmerking: Als u poort 5060/5061 voor Mobiele en Remote Access (MRA) gebruikt, gebruik een andere TCP poort (zoals 5075) voor het SIP veiligheidsprofiel.

Kies Systeem > Security > SIP Trunk Security Profile op CUCM en klik op Add New.

abab	Cisco Uni	fied CM Ad	ministration			Navigation	Cisco Unified CM Ad	dministration	÷ Go	
cisco	For Cisco Unifie	ed Communicatio	ns Solutions			admin	Search Docum	entation About	Logout	
System +	Call Routing - M	edia Resources 👻	Advanced Features 👻	Device 🔻	Application -	User Management 👻	Bulk Administration			
Find and I	List SIP Trunk S	ecurity Profiles								
Add New										
Status										
(i) 0 rec	cords found									
SIP True	nk Security Profil	e						Rows per Page	50 ÷	
Find SIP T	runk Security Profi	e where Name	begins with	:		Find Clear	Filter 🜵 📟			
No active query. Please enter your search criteria using the options above.										
Add Nev	v									

Maak een SIP stam veiligheidsprofiel zoals in dit screenshot wordt getoond.

Cisco Unified CM	Administration	Navigation Cisco Unified CM Administration Go admin Search Documentation About Logout					
System - Call Routing - Media Resource	s · Advanced Features · Device ·	Application - User M	Management 👻 Bulk Administ	ration - Help -			
SIP Trunk Security Profile Configura	tion	Relat	ed Links: Back To Find/L	.ist ‡ Go			
🔚 Save 💥 Delete 📄 Copy 🎦 Ri	eset 🧷 Apply Config 🕂 Add New						
Status							
(i) Status: Ready							
SIP Trunk Security Profile Informatio	n						
Name*	Non Secure SIP Trunk Profile For VCS	5					
Description	Non Secure SIP Trunk Profile authen	ticated by null S					
Device Security Mode	Non Secure	\$					
Incoming Transport Type*	TCP+UDP	;]					
Outgoing Transport Type	ТСР	\$]					
Enable Digest Authentication							
Nonce Validity Time (mins)*	600						
X.509 Subject Name							
Incoming Port*	5060						
Enable Application level authorization							
Accept presence subscription							
Accept out-of-dialog refer**							
Accept unsolicited notification							
Accept replaces header							
Transmit security status							
Allow charging header							
SIP V.150 Outbound SDP Offer Filtering*	Use Default Filter	\$					
Save Delete Copy Reset	Apply Config Add New						

Voeg aan het CUCM een SIP-romp toe naar de VCS Control/Expressway-C.

Kies Apparaat > Trunk en klik op Nieuw toevoegen.

cisco	Cisco Un	nified CM Ad	ministration ns Solutions	I					Nav cucmapp	igation Cisco Unified CM Search Documentation	Administration	÷ Go Logout
System +	Cell Routing +	Media Resources 👻	Advanced Features	Device 🔻	Application +	User Management 👻	Bolk Administration 👻	Help	-			
Find and I	List Trunks											
- Add N	inne -											
Trunks												
Find Trunk	s where Devic	e Name	begins with	Select Ite	em or enter sea	Find Clear Filter	= =					
				No active	query. Please en:	ter your search criteria us	sing the options above.					
Add New												

Deze boomstaminstellingen zijn ontwerpafhankelijk.

System - Call Routing - Media Resources - Advanced Features - Device	• + Application + User Management + Bulk Administration + Help +
Trunk Configuration	Related Links: Back To Find/List + Go
Save	
Status	
Status: Ready	
Device Information	
Product:	SIP Trunk
Device Protocol:	SIP
Device Name ³	Mone(Detault)
Description	Technology Control
Proving Deal 2	Trank to VCS-Colle of
Common Device Configuration	Default :
Call Classification 5	< NOTE > +
Maria Resource Colum List	use system belaut.
Location ²	Fub None A
AAR Group	A Nova b
Turneled Botecol ^a	kass A
OSIG Variant*	No Channer :
ASN.1 ROSE OID Encoding*	No Changes 1
Packet Capture Mode*	None ÷
Packet Capture Duration	0
Media Termination Point Required	-
0.00	
SIP Information	
Destination	
Destination Address is an SRV	
Destination Address Destination Add	res. IPut Destination Port Statue Statue Reson Duration
1* 10.106.93.178	5060 up Time Up: 0 day 0 hour 20 minutes 🗷 🖬
MTP Preferred Originating Codec* 211ulaw	\$
BLF Presence Group* Standard Presence group	*
SIP Trunk Security Profile* Non Secure SIP Trunk Profile For VCS Remetion Calina Search Searce	
Cut-Ol-Dialog Refer Calling Search Space C NAVA S	
SUBSCRUBE Calling Search Space K None >	
SIP Profile* Standard SIP Profile For Claco VCS	2 View Details
DTHF Signaling Nethod ⁹ No Preference	4
-Normalization Script	
Normalization Script < None > 0	
Crable Trace	
Parameter Name Parameter V.	**
Recording Information	
None This trunk connects to a recording-enabled gatesery	
O This trunk connects to other clusters with recording-ensisted gateways	
Generation Confinuention	
Geolocation < Nore > 2	
Ceolocation Filter < None > 2	
Send Geolocation Information	
Rave Beine Broot add aver	
ANTE ALERA TRANS	

Configuratie van VCS-controle

Maak een buurzone op de VCS Control/Expressway-C in de richting van CUCM.

Kies **Configuration > Zones > Zones** en klik op **New** om de zone toe te voegen.

aha cis	CISCO Cisco TelePresence Video Communication Server Control										
Status	System	Configuration	Applications	Users Maintenar	108			20			
Zones	Zones You are here: Configuration + Zones + Zones										
	Name 🔻	Туре	Calls	Bandwidth used	H323 status	SIP status	Search rule status	Actions			
	DefaultZone	Default zone	0	0 kbps	On	On		View/Edit			
New	Delete Se	lect all Unselect all									

Deze zone instellingen zijn ontwerpafhankelijk.



CISCO Cisco TelePresence Video Communication Server Control

Status System Configuration Applications Users M	almenance (1) Helo. (9) Lacad
Create zone	You are here: Configuration * Zones * Zones * Create zo
Configuration	
None	Zone lowerts CUCM
Туро	ە(Neghtor :) اَن
Hop count .	• 15 J
H.323	
Mode	(or :) j
SIP	
Mode	(<u>0n-</u> ; <u>i</u>)
Port	* 50ED (J)
Transport	(TCP :)
Accept proxied registrations	(Alon 1) (j)
Media encryption mode	Auto : j
ICE support	(ar-:) ()
AuthenStation	
Authentication policy	Do not check credentials = 1 ij
SIP authentication trust mode	(or :)
Location	
Pser 1 address	10.105.93.187
Peer 2 address	J. J
Peer 3 address	0
Poer 4 address	Û.
Peer 6 address	U U
Peer 6 address	L. L
Advanced	
Zone profile	Caco Unified Communications Manager (8.8.1 or later) :

Create zone Cencel

Zorg ervoor dat de Oproeproutering naar onbekende IP-adressen parameter is ingesteld op Indirect op VCS Control/Expressway-C. Kies vervolgens Configuration > Dial Plan > Configuration.

CISCO Cisco TelePresence Video Communication Server Control									
Status System Configuration Applications	Users Maintenance	(2) Help. Of Logout							
Dial plan configuration		You are here: Configuration > Dial plan > Configuration							
Configuration									
Calls to unknown IP addresses	Indrect :								
Fallback alias									

Save

Configuratie van VCS-snelweg

Selecteer in de vervolgkeuzelijst Bel naar onbekende IP-adressen de optie Direct op de VCS Expressway/Expressway-E. Een zoekregel is niet vereist op de VCS snelweg/snelweg-E om IPgebaseerde oproepen te kunnen verzenden.

CISCO Cisco TelePresence Video Communication Server Expressway									
Status System Configuration Applications	Users Maintenance	? Help @ Logout							
Dial plan configuration		You are here: Configuration > Dial plan > Configuration							
Configuration									
Calls to unknown IP addresses	Direct 🗘 👔								
Fallback alias									

Optie 1 - Voeg een samenvatting toe aan het IP-adres

Op CUCM, voeg een SIP routepatroon toe om vraag met het achtervoegsel als vcs.domein aan de boomstam van VCS Controle/Expressway-C te verzenden.

Kies Oproeproutering > SIP-routepatroon en klik op Nieuw toevoegen.

ababa	Cisco	Unified CM A		Navigation Cisco Unified CM Administration : G							
CISCO For Cisco Unified Communications Solutions					ad	min	Search Docum	nentation	About	Logout	
System -	Call Routing	 Media Resources 	Advanced Features -	Device 👻	Application	- Use	r Management 👻	Bulk Administ	ration 👻	Help 👻	
Find and List SIP Route Patterns											
Add New											
Status											
(i) 0 rec	ords found										
SIP Rou	te Pattern							Rows per	Page 5	io :	
Find SIP R	Find SIP Route Pattern where IPv4 Pattern 🗘 begins with 🗧 🛛 Find Clear Filter 👍 🚍										
		No	active query. Please enter y	our search cr	iteria using the	options	above.				
Add New	N										

Stel de instellingen van het SIP-routepatroon in zoals hier wordt weergegeven.

IPV4-patroon: vcs.domein

alada Cisco	Unified CM Adm	ninistration		Navigatio	Cisco Unified CM Administration	÷ Go
CISCO For Cisco	Unified Communications	Solutions		adm	in Search Documentation	bout Logout
System - Call Routing	 Media Resources 	dvanced Features 👻	Device 👻	Application -	User Management 👻 Bulk Administr	ation 👻 Help 👻
SIP Route Pattern Co	onfiguration				Related Links: Back To Fin	d/List 🗘 Go
Save						
Status						
i Status: Ready						
Pattern Definition						
Pattern Usage*	Domain Routing		\$	1		
IPv4 Pattern*	vcs.domain					
IPv6 Pattern				-		
Description						
Route Partition	< None >		\$			
SIP Trunk/Route List*	VCS_trunk		÷)(Edit)		
Block Pattern						
Calling Party Transfo	rmations					
Use Calling Party's	External Phone Mask					
Calling Party Transform	nation Mask					
Prefix Digits (Outgoing	Calls)			_		
Calling Line ID Present	ation* Default			\$		
Calling Line Name Pres	entation* Default		:			
Connected Party Tra	nsformations					
Connected Line ID Pres	sentation* Default			\$		
Connected Line Name	Presentation* Default			;		
Save						

Op de VCS Control / Expressway-C zet u het strip-domeingedeelte van een alias om wanneer een IP-adres is geselecteerd.

Kies Configuratie > Kiesschema > Omzetten en klik op Nieuw.

lı D	SCO Cise	co TelePreser	ice Video Con	nmunica	tion Ser	ver Control				
Statu	s System	Configuration	Applications	Users	Mainte	enance				2 😁
Tran	sforms							You are here: Configuration	n• Dial plan•	Transforms
	Priority 🔻	State	Description		Pattern	Туре	Behavior	Replace	Actions	_
New	Delete	Disable	Select all Unse	lect all		т	ransforms are ap	plied in priority order, with 1	being the high	est priority

Maak de transformatie zoals hier wordt getoond.

Patroonstring: (.*)\.(.*)\.(.*)\.(.*)@vcs.domain

String vervangen: \1.\2.\3

CISCO Cisco TelePresence Video Communication Server Control

s	tatus	System	Configuration	Application	s Users	Maintenance		(2) Help. Col Logout
С	reate	transform	n					You are here: Configuration > Dial plan > Transforms > Create transform
	Configu	ration						
	Priority				1	۲		
	Descript	ion			Tmasfor	m to strip domain from ip-address calls		
	Pattern t	уре			Regex	• (j)		
	Pattern	atring			★ (.*)\.(.*)\.	(.*)\.(.*)@vcs.domain	۲	
	Pattern I	behavior			Replac	• • •		
	Replace	string			\1.\2.\3\/	4	۲	
	State				Enable	d 📫 👔		

Create transform Cancel

Op de VCS Control / Expressway-C hebt u een zoekregel nodig die de oproep naar de VCS Expressway / Expressway-E stuurt wanneer een IP-adres wordt geselecteerd.

Kies Configuratie > Kiesschema > Zoeken regels en klik op Nieuw.

cis	CISCO Cisco TelePresence Video Communication Server Control												
Status	atus System Configuration Applications Users Maintenance 2 Help - Logout												
Search rules You are here: Configuration + Dial plan + Search rules													
	Priority	Rule name	Protocol	Source	Authentication required	Mode	Pattern type	Pattern string	Pattern behavior	On match	Target	State	Actions
\odot	50	LocalZoneMatch	Any	Any	No	Any alias				Continue	Loca/Zone	 Enabled 	View/Edit Clone
New	Delete	Enable Disab	Selec	tal Ur	select all				Search rules	are applied i	n priority orde	ar, with 1 being	a the highest priority

Maak deze zoekregel naar de VCS snelweg/snelweg-E.

Status System Configuration Application	s Users Maintenance	2 Help. Se Logout
Edit search rule		You are here: Configuration > Dial plan > Search rules > Edit search rule
Configuration		
Rule name	* Dial IP Address search rule	0
Description		B
Priority	* 10 👔	
Protocol	Any 🗧 👔	
Source	Any :	
Request must be authenticated	No 💠 🧃	
Mode	Any IP address 🛟	
On successful match	Stop 🗘 👔	
Target	Traversal Client zone B2B	
State	Enabled 📫 🧃	

Save Delete Cancel

Optie 2 - Schakel het IP-adres in een string

Voeg een routepatroon toe om aanroepen met een patroon te verzenden!*!*! naar de VCS-stam /

snelweg-C.

Kies Oproeproutering > Route/hunting > Route Pattern en klik op Add New.

cisco	Cisco Un For Cisco Uni	fied CM A	dministration	1					Navigati adm	ion Ci	co Unified CM Search Docu	Administrat	ion About	: [0]	Go gout
System +	Call Routing +	Media Resources 👻	Advanced Features	- Device -	Application +	- User f	Management	👻 🛛 Bulk Admini	istration 👻 H	Help 👻					
Find and I	List Route Pati	terns													
🕂 Add Ni	2W														
-Status-	cords found														
Route P	atterns											Rows	per Page	50	÷)
Find Route	Patterns where	Pattern	t begins with	•		Find	Clear Filte	•							
			N	active query. I	Please enter you	ar search d	oriteria using t	he options above	۰. ۱						
Add New	v														

Voeg een nieuw routepatroon toe zoals hier wordt getoond.

Routepatroon: !*!*!

ahaha	Cisco Ur	nified CM	Adn	ministration					P	lavigation	Cisco	Unified CM Ad	iministratio	n	÷ Go
cisco	For Cisco Uni	fied Commun	Ications	s Solutions						admin	I S	earch Docume	ntation	About	Logout
System -	Call Routing 🔻	Media Resource	es 🗸 /	Advanced Features +	Device +	Application +	User Management	- Bulk	Administratio	n v Hel	p 🕶				
Route Pat	tern Configura	ation									Re	lated Links:	Back To	Find/List	÷ Go
Save															
Status															
i) Statu	s: Ready														
-Pattern D	efinition														
Route Patt	tern *		1	1414141											
Route Part	tition		(< None >			+								
Description	n		Γ												
Numbering	g Plan		- ē	Not Selected			¢								
Route Filte	er		0	< None >			0								
MLPP Prec	edence*		- 6	Default			•								
Apply (Call Blocking Per	roentage													
Resource i	Priority Namespa	ace Network D	omain	< None >			\$								
Route Clas	25 ⁴		- 6	Default			\$								
Gateway/F	Route List*			VCS_trunk			÷ (Edit)								
Route Opt	ion			Route this pattern											
				 Block this pattern 	No Error	·	\$								
Call Classi	fication*	OWN	x.			\$									
External C	all Control Profil	e (< No	ne >			\$									
	Device Override	Provide Ou	tside Di	ial Tone 🗍 Allow Ove	rlap Sendi	ng 🕞 Urgent P	riority								
Requin	e Forced Authori	zation Code													
Authorizat	ion Level*	0													
Require	e Client Matter C	Code													

Opmerking: De!*!*! kan vertraging veroorzaken bij het verwerken van andere routepatronen, daarom moet u voorzichtig zijn bij het gebruik van dit patroon. Een goede manier zou zijn om dit Routepatroon in een afzonderlijke scheiding te plaatsen en alleen de endpoints te hebben die IP-adressen nodig hebben om toegang tot deze scheiding te bellen.

Op de VCS Control / Expressway-C heb je een transformatie nodig die het alias wijzigt met "*" in "." wanneer een IP-adres is geselecteerd.

Kies Configuratie > Kiesschema > Omzetten en klik op Nieuw.

ulu ci	sco Cise	co TelePrese	nce Video Com	munication Server (Control			
Status	System	Configuration	Applications	Users Maintenance	e			2 0
Tran	sforms						You are here: Configurati	on • Dial plan • Transform
-	Priority 🔻	State	Description	Pattern	Туре	Behavior	Replace	Actions
New	Delete	Disable	Select all Unsele	ect all		Transforms are app	plied in priority order, with	1 being the highest priority

Maak de transformatie zoals hier wordt getoond.

Patroonstring: (\d\d?\d?)(*)(\d\d?\d?)(*)(\d\d?\d?)(*)(\d\d?\d?)(.*)

String vervangen: \1.\3.\5

atus System Configuration Appl	ications Users Maintenance ?
reate transform	You are here: Configuration Dial plan Transforms Create transfo
Configuration]
Priority	1
Description	Transform to modify * to . for ip-address dialing.
Pattern type	Regex :
Pattern string	(\d\d?\d?)(*)(\d\d?\d?)(*)(\d\d?\d?)(*)(\d\d?\d?)(*)(\d\d?\d?)(.*)
Pattern behavior	Replace :
Replace string	111.131.151.17

Create transform Cancel

Op de VCS Control / Expressway-C hebt u een zoekregel nodig die de oproep naar de VCS Expressway / Expressway-E stuurt wanneer een IP-adres wordt geselecteerd.

Kies Configuratie > Kiesschema > Zoeken regels en klik op Nieuw.

1	ili. cis	ISCO Cisco TelePresence Video Communication Server Control													
S	atus	Syste	em Configur	ration	Application	ons Users	Mainte	nance						3	Help. 🖂 Logout
S	earc	h rule	5									You a	re here: Coni	Iguration • Dia	l plan • Search rules
		Priority	Rule name	Protocol	Source	Authentication	required	Mode	Pattern type	Pattern string	Pattern behavior	On match	Target	State	Actions
	0	50	LocalZoneMatch	Any	Any	No		Any alias				Continue	LocaZone	 Enabled 	View/Edit Clone
New Delete Enable Disable Select all Unselect all									Search rules	are applied i	n priority orde	ar, with 1 being	the highest priority		

Maak deze zoekregel naar de VCS snelweg/snelweg-E.

cisco	Cisco TelePresence Video Communication Server Control	

Status	System	Configuration	Applications	Users Maintenance	? Help. I Logout
Edit s	earch rule				You are here: Configuration + Dial plan + Search rules + Edit search rule
Config	guration				
Rule n	ame			Dial IP Address search rule	Û.
Descri	ption				D
Priority	(• 10 (i)	
Protoc	ol			Any 🛟 🎚	
Source	,			Any :	
Reque	st must be authe	enticated		No 🗘 👔	
Mode				Any IP address 🛟 🧃	
On suc	coessful match			Stop 🗘 🧃	
Target				Traversal Client zone B2B	
State				Enabled +	

Save	Delete	Cancel

Opmerking: Als de SIP UDP-modus is ingeschakeld, start de VCS Expressway/Expressway-E de SIP-oproep eerst als een native oproep. Indien het doelapparaat niet reageert op de SIP-uitnodiging, blijft de VCS Expressway/Expressway-E de SIP UDP-oproep uitvoeren tot de standaard gespreksonderbreking (ongeveer 32 seconden). Het valt dan terug op een H.323 interworking-oproep als ontworpen gedrag.

Verifiëren

Gebruik dit gedeelte om te bevestigen dat de configuratie correct werkt.

Zodra de vorige stappen zijn voltooid, kies dan het IP-adres als string of het IP-adres met het toegevoegd domein (dit is afhankelijk van de geselecteerde configuratieoptie) en zie of de aanroep aan het einde werkt.

Problemen oplossen

Deze sectie bevat informatie waarmee u problemen met de configuratie kunt oplossen.

Verzamel gedetailleerde systeemdiagnostische indelingen / Signal Distribution Layer (SDI/SDL) van het CUCM en 'debug level'-diagnostische bestanden van het VCS-Control / Expressway-C en VCS-Expressway / Expressway-E. Geef deze logbestanden aan het Cisco Technical Assistance Center (TAC) voor analyse als de oproep niet werkt nadat de vorige configuratiesstappen zijn voltooid.