Configurar o recurso de autoprovisionamento no CUCM (baseado em IVR)

Contents

Introduction Prerequisites Requirements Componentes Utilizados O que é o provisionamento automático? Configurar Serviços associados ao provisionamento automático Experiência do usuário final no telefone Troubleshoot Logs a serem coletados Defeitos conhecidos Informações Relacionadas

Introduction

Este documento descreve como configurar o recurso de autoprovisionamento no CUCM (baseado em IVR).

Prerequisites

Requirements

A Cisco recomenda que você tenha conhecimento destes tópicos:

- Cisco Unified Communication Manager.
- Voice over Internet Protocol (VoIP)
- Processo de registro de telefone.

Componentes Utilizados

As informações neste documento são baseadas no Cisco Unified Communications Manager 10.5

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

O que é o provisionamento automático?

O provisionamento automático é um recurso introduzido na versão 10.x do Cisco Unified

Communications Manager (CUCM). Ele fornece um tipo de funcionalidade **plug and play** que simplifica o processo de implantação do telefone. Usando o **registro automático**, algumas configurações de modelo e perfil, juntamente com um serviço IVR, os administradores do CUCM têm a capacidade de implantar telefones com configuração inicial mínima.

Autoprovisionamento (baseado em IVR) semelhante em função ao método antigo de ferramenta para telefones registrados automaticamente (TAPS). A principal diferença com o provisionamento automático é que o **serviço de IVR é executado no CUCM** para que você não precise do UCCX como precisa com o TAPS.

Configurar

1. Crie um modelo de dispositivo universal (UDT).

Etapa 1. Navegar para Gerenciamento de usuário > Adicionar telefone do usuário > Modelo de dispositivo universal e Adicionar novo modelo.

CISCO Unified CM Administration For Cisco Unified Communications Solutions								
System 💌	Call Routing • Media Resources • Advanced Features • Device • Application •	Us	ser Management 🔻 Bulk Administration	on 🔻	r Help ▼			
			Application User					
			End User					
Cisc	o Unified CM Administration		User/Phone Add	•	Page Layout Preference			
System	version: 10 5 2 13001-2	SIP Realm			Universal Device Template			
VMware Installation: 2 vCPU Intel(R) Xeon(R) Platinum 8176 CPU @ 2.10GHz,		User Settings		·	Universal Line Template			
			Self-Provisioning		Feature Group Template			
TANTA		Assign Presence Users			Quick User/Phone Add			
Last Su	ccessful Backup: 513 day(s) ago							
	Cisco Unified CM Administrat	ti	on					
	For Cisco Unified Communications Solutions							
Add Nam	Add Nor Call Routing - Media Resources - Advanced Features - Device - Application - User Management - Bulk Administration - Help -							
Find and List Universal Device Templates								
-} - ∧	Add New Elect All Clear All 🙀 Delete Selected							

Etapa 2. Aplique a configuração que você espera que os telefones usem após o registro automático para o novo UDT.

System Call Routing	Media Resources • Advanced Features • Device • Application • User Management • Bulk Administration • Help •								
Universal Device Template Configuration									
🔚 Save X Delete Expa	🔜 Save 💢 Delete Expand All 🕂 Add New								
▼ Template Information									
Name * Auto-registration	Name * Auto-registration Template								
- Required and Frequently En	tered Settings								
Device Description	#FirstName# #LastName# (#Pro								
Device Pool *	Default view Details								
Device Security Profile *	Universal Device Template - Moc -								
SIP Profile *	Standard SIP Profile 🔹								
Phone Button Template *	Universal Device Template Butto -								

2. Criar Modelo de Linha Universal (ULT).

Etapa 1. Navegue até User Management > User/Phone Add > User Line Template, como mostrado na imagem.

cisco	Cisco U For Cisco Un	nified CM Ad	ministration								
System 👻	Call Routing 🔻	Media Resources 🔻	Advanced Features 👻	Device 🔻	Application -	Us	er Management 👻	Bulk Administrati	on 👻	Help 👻	
							Application User				
							End User				
Cisc	o Unifie	d CM Adm	inistration				User/Phone Add	1	•	Page Layout Preference	
							SIP Realm			Universal Device Template	
System	version: 10.5	5.2.13901-2					User Settings		· 🕅	Universal Line Template	
VMware	e Installation	2 vCPU Intel(R)	Xeon(R) Platinum	8176 CPU	@ 2.10GHz,		Self-Provisioning			Feature Group Template	

Etapa 2. Adicione a partição de rota e o CSS esperados no telefone após o registro automático.

System - Call Ro	ting 👻 Media Resou	rces - Advanced Features -	Device -	Application	User Management 👻	Bulk Administration 👻	Help 👻			
Universal Line Template Configuration										
🔚 Save 🗙 I	elete Expand A	II 🕂 Add New								
- Templat	* Template Information									
Name *	Name * Sample Line Template with TF Urgent Priority									
* Required	and Frequent	ly Entered Settings								
Line Descri	otion:	#FirstName# #LastNar	ne# (# 🦯	,						
Route Part	tion:	PT-Intra	-							
Voice Mail	Profile:		-							
Calling Sea	rch Space:	CSS-Inter	-							
Alerting Na	me:	#FirstName# #LastNar	ne# 🦯	,						
External Ca	Il Control Profile:		-							

Note: Esses modelos de dispositivo universal e de linha universal devem ser vinculados ao registro automático para que os telefones possam assumir a configuração quando registrados automaticamente.

3. Adicione os Modelos ao nó do CUCM para **Autorregistration** Configuration e navegue para **System > Cisco Unified CM**, como mostrado na imagem.

cisco	Cisco Unified CM Administration Sco For Cisco Unified Communications Solutions							
System 👻	Call Routing - Media Re	ources • Advanced Features • Device • Application • User Management • Bulk Administration • Help •						
Server								
Cisco	Cisco Unified CM							
Cisco	Unified CM Group	Administration						

System - Call Routing - Ma	edia Resources 🔻	Advanced Features 🔻	Device 🔻	Application 🔻	User Management 🔻	Bulk Administration 🔻	Help 🔻
Cisco Unified CM Configura	ation						
🔜 Save 省 Reset 🥖	Apply Config						
_ Status							
i Status: Ready							
┌ Cisco Unified Communicati	ons Manager Inf	ormation					
Cisco Unified Communications	s Manager: CM_UC	M-PUB10 (used by 74	devices)				
Server Information							
CTI ID		1					
Cisco Unified Communications	s Manager Server*	10.106.114.151					
Cisco Unified Communications	s Manager Name*	CM_UCM-PUB10					
Description		10.106.114.151					
Location Bandwidth Manager Group < None >							
- Auto-registration Informal	tion						
Universal Device Template*	Auto-registration	Template					
Universal Line Template*	Sample Line Tem	plate with TAG usage	examples				
Starting Directory Number*	1000		•				

4. Adicione um novo perfil de usuário para autoprovisionamento.

Etapa 1. Navegue até User Management > User Settings > User Profile, conforme mostrado na imagem.

cisco	Cisco Unified CM Administration For Cisco Unified Communications Solutions						
System 👻	Call Routing Media Resources Advanced Features Device Application	Us	er Management 👻 Bulk	k Administratio	n 🕶	Help 🔻	
			Application User				
			End User				
Cisc	o Unified CM Administration		User/Phone Add	,			
			SIP Realm				
System	version: 10.5.2.13901-2		User Settings	•		Credential Policy Default	
VMware	e Installation: 2 vCPU Intel(R) Xeon(R) Platinum 8176 CPU @ 2.10GHz,		Self-Provisioning		1	Credential Policy	
WARNI	NG: DNS unreachable		Assign Presence Users	1		Role	
Last Su	ccessful Backup: 514 day(s) ago					Access Control Group	
						Application User CAPF Profile	
lser admini	strator last logged in to this cluster on Friday, February 15, 2019 8:57:30 PM CST, to	nod	le 10.106.114.151, from	m 10.142.18		End User CAPF Profile	
apyright © 1999 - 2015 Cisco Systems, Inc.						UC Service	
Il rights res	erved.				Service Profile		
his product sers are res	his product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use.					User Profile	oes not imply third-party authority S. and local laws, return this proc

Etapa 2. Adicione o Modelo de dispositivo do usuário, Modelo de linha do usuário e marque a caixa de **seleção Permitir que o usuário final provisione seu próprio telefone**.

System Call Routing Media Resources Advanced Features Device Application User Managem	nent 🔻 Bulk Administration 👻 Help 👻								
User Profile Configuration									
🔚 Sava 🗶 Dalete 🕂 Add New									
⊂ Status									
Status: Ready									
User Profile									
Name* selfpro									
Description									
Make this the default licer Brafile Far the system									
-Universal Device Template									
Desk Phones Auto-registration Template 🗘 View Details									
Mobile and Desktop Devices Auto-registration Template 😒 View Details									
Remote Destination/Device Profiles Auto-registration Template									
-Universal Line Template									
Universal Line Template Sample Line Template with TAG usage examples									
- Self-Provisioning									
Allow End User to Provision their own phones									
Limit Provisioning once End User has this many phones 10									

Note: Essas configurações são aplicadas quando os usuários tentam provisionar automaticamente os dispositivos com seus próprios ramais.

Note: Você também pode definir um limite máximo para usuários para o número de dispositivos após os quais o provisionamento automático não funcionará para usuários. Por exemplo: se o usuário já tiver 9 dispositivos atribuídos, já que o limite máximo na captura de tela Acima está definido como 10, o usuário poderá autoprovisionar apenas um dispositivo.

Note: Se a caixa de seleção "Permitir que o usuário final provisione seu próprio telefone" estiver desmarcada. O provisionamento automático não funcionaria para os usuários.

5. Criar Grupo de Modelos de Recursos e atribuir o Perfil de Usuário. Agora, navegue para User Management > User/Phone Add > Feature Group Template e clique em Add New.



System ▼ Call Routing ▼ Media Resources ▼ Advanced Features ▼ Device ▼ Application ▼
Feature Group Template Configuration
🔚 Save 🗙 Delete 🕂 Add New
Feature Group Template
Name * self_fg
Description
Features
✓ Home Cluster
Enable User for Unified CM IM and Presence (Configure IM and Presence in the associated UC Service)
Include meeting information in Presence(Requires Exchange Presence Gateway to be configured on
Services Profile Use System Default View Details
User Profile selfpro View Details
Allow Control of Device from CTI
Enable Mobile Voice Access
Maximum Wait Time for Desk Pickup *

6. Crie um usuário a partir da página **de adição rápida de usuário/telefone** e Adicionar o **modelo de grupo de recursos**.

Etapa 1. Navegue até Gerenciamento de usuários > Adicionar telefone do usuário > Adicionar usuário rápido/telefone.

Cisco Unified CM Administration For Cisco Unified Communications Solutions						
System • Call Routing • Media Resources • Advanced Features • Device • Application •	User Management 👻 Bulk Administration 👻 Help 👻					
	Application User					
	End User					
Cisco Unified CM Administration	User/Phone Add Page Layout Preference					
Sustem version: 10 5 2 12001-2	SIP Realm Universal Device Template					
573(em version: 10.5.2.15901-2	User Settings Universal Line Template					
VMware Installation: 2 vCPU Intel(R) Xeon(R) Platinum 8176 CPU @ 2.10GHz, WARNING: DNS unreachable	Self-Provisioning Feature Group Template					
	Assign Presence Users Quick User/Phone Add					

Etapa 2. Adicione os Usuários finais CCM padrão na associação ao Grupo de controle de acesso.

System Call Routing	Media Resources 👻 Advanced Features 👻 Device 👻 Application 👻 User Management 👻 Bulk Administration 👻 Help 👻
Quick User/Phone Ac	d
딝 Save	
User Information	
First Name	akash
Middle Name	
Last Name *	sethi
User ID *	aksethi
Feature Group Template	self_fg View Details
Access Control Group	Membership
User is a member of:	- +
Access Control	Group Membership
User is a member	of: Standard CCM End Users

Etapa 3. Adicione um ramal no campo do ramal ao Usuário, clique em + Ícone em Ação para ativar o Campo.

Access Control Group Membership User is a member of: Standard CCM End Users						
Credentials						
Use default credential Password						
Confirm Password						
PIN						
Confirm PIN						
Extensions						
Order Extension		Line Primary URI/Partition		Actic		
	* New		1	+		

Etapa 4. Se uma nova extensão for criada, clique em **New** e Add a New DN, conforme mostrado na opção de imagem 1. Se a Extensão já existir no CUCM e for atribuída ao usuário, escolha

essa opção no menu suspenso mostrado na opção 2 da imagem aqui.

Access Control Group	Membership			
User is a member of:	Standard CCM End Users	• + =		
Credentials				
Use default credential Password				
Confirm Password				
PIN				
Confirm PIN				
Extensions				
Order Extension	<u>2 1</u>	Line Primary URI/Partition		Action
	• New		·	-

Note: Quando o usuário é criado, ele assume a linha principal como ID de usuário de autoatendimento por padrão.

7. Verifique se o usuário final recebeu o **ramal principal**, a **ID de usuário self-service, o perfil do usuário e a função de usuário final CCM padrão**. Agora, navegue para **User Management > End User** e Access the recém-criado User, como mostrado na imagem.

cisco	Cisco U For Cisco Ur	nified CM Ad	ministration						
System 👻	Call Routing 👻	Media Resources 👻	Advanced Features 👻	Device 🔻	Application -	Use	er Management 👻	Bulk Administration	✓ Help ✓
							Application User		
							End User		
Cico	o Unific	d CM Adm	inistration				Lloor/Dhone Add	k	

System Call Routing Addia Resources A	dvanced Features Device Application User Ma	nagement Bulk Administration Help
End User Configuration		
🔜 Save 🗙 Delete 🕂 Add New		
-		
-User Information		
User Status	Enabled Local User	
User 1D	þksethi	
Password	•••••	Edit Credential
Confirm Password	••••••	
Self-Service User ID	1004	
PIN	•••••	Edit Credential
Confirm PIN	•••••	
Last name*	sethi	
Middle name		
First name	akash	
Title		
System Call Routing Media Resources	Advanced Features Device Application User Ma	anagement 👻 Bulk Administration 👻 Help 👻
End User Configuration		
🔲 Save 💙 Delete 💾 Add New		
User Locale	< None >	
Associated PC		
Digest Credentials		
Confirm Direct Condentials		
User Profile	selfpro	View Details
Name Dialing	sethiakash	
Number of Digits needed for the Unique AA Nam	e 2	

System Call Routing Media Resources Advanced Features Device	Application User Management Bulk Administration Help
End User Configuration	
🔚 Save 🗙 Delete 🕂 Add New	
✓ Allow Control of Device from CTI	
Enable Extension Mobility Cross Cluster	
- Directory Number Associations	
Primary Extension 1004	
IPCC Extension < None >	
11 - L2PL- 7 - 6	
	View Details
-Permissions Information	
Groups Standard CCM End Users	
	Add to Access Control Group
	Remove from Access Control Group
	View Details

8. Para criar um **ponto de rota CTI**, navegue até **Device > CTI Route Point** e clique em **Add New**, como mostrado na imagem.

cisco	Cisco Unified	ed CM Adr Communication	ministration s Solutions					
System 💌	Call Routing - Media	ia Resources 🔻	Advanced Features 👻	Device -	Application \bullet	User Management 👻	Bulk Administration $$	Help 👻
				CTI R	oute Point			

Etapa 1. Adicione as entradas Nome e Pool de Dispositivos e clique em **Salvar**, como mostrado na imagem.

Save		
Status		
i Status: Ready		
Device Information		
Device is trusted		
Device Name*	Self_Pro	
Description	Self_Pro	
Device Pool*	Default	View Details
Common Device Configuration	< None >	S View Details
Calling Search Space	< None >	٠
_ocation *	Hub_None	۵
Jser Locale	< None >	
Media Resource Group List	< None >	
Network Hold MOH Audio Source	< None >	
User Hold MOH Audio Source	< None >	
Use Trusted Relay Point*	Default	 Image: A set of the set of the
Calling Party Transformation CSS	< None >	Sec. 1
Geolocation	< None >	🗢 🗧 🗧 🖓
Use Device Pool Calling Party	Transformation CSS	

Etapa 2. Adicionar um número de diretório ao ponto de rota CTI,

Device Information		
Registration:	Unknown	
IPv4 Address:	None	
Device is trusted		
Device Name*	Self_Pro]
Description	Self_Pro	
Device Pool*	Default	View Details
Common Device Configuration	< None >	S View Details
Calling Search Space	< None >	٥
Location *	Hub_None	٥
User Locale	< None >	٥
Media Resource Group List	< None >	٥
Network Hold MOH Audio Source	< None >	٥
User Hold MOH Audio Source	< None >	٥
Use Trusted Relay Point*	Default	٥
Calling Party Transformation CSS	< None >	٥
Geolocation	< None >	٥
✓ Use Device Pool Calling Party 1	Transformation CSS	
Association		
Line [1] - Add a new DN		

CTI Route Point Configuration		
Save 🗶 Delete [Copy	r 🎦 Reset 🛛 🖉 Apply Config 🕂 Add New	
- Status		
i Status: Ready		
Device Information		
Registration:	Unknown	
IPv4 Address:	None	
Device is trusted		
Device Name*	Self_Pro	
Description	Self_Pro	
Device Pool*	Default	View Details
Common Device Configuration	< None >	View Details
Calling Search Space	< None >	٥
Location*	Hub_None	۵
User Locale	< None >	٥
Media Resource Group List	< None >	۵
Network Hold MOH Audio Source	< None >	
User Hold MOH Audio Source	< None >	۵
Use Trusted Relay Point*	Default	٢
Calling Party Transformation CSS	< None >	•
Geolocation	< None >	٥
🗸 Use Device Pool Calling Party	Fransformation CSS	
- Association		
The [1] - 1111111 (no parti	tion)	

9. Para adicionar um novo **usuário de aplicativo**, navegue para **Gerenciamento de usuário > Usuário do aplicativo** e clique em **Adicionar novo**.

cisco	Cisco Un For Cisco Un	nified CM Ad	ministration					
System 👻	Call Routing 👻	Media Resources 👻	Advanced Features +	Device -	Application \bullet	User Management 👻	Bulk Administration	-
CTI Route	Point Config	uration				Application User		
						End Llear		

Etapa 1. Adicione o ponto de rota CTI criado, em Dispositivos controlados

Application User Configu	iration	
Save 🗶 Delete [Copy 🕂 Add New	
Status		
i Status: Ready		
Application User Informa	ation	
User ID *	selfpro	Edit Credential
Password		
Confirm Password		
Digest Credentials		
Confirm Digest Credentials		
BLF Presence Group*	Standard Presence group	
Accept Presence Subscr	iption	
Accept Out-of-dialog RE	FER	
Accept Unsolicited Notified	ication	
C Accept Replaces Header		
Device Information		
Available Devices	Sample Device Template with TAG usage examples Selftprocti TEST UPCNIPC VINNU	Device Association Find more Route Points
Controlled Devices	Sclf_Pro	

Etapa 2. Adicione o CTI padrão ativado e o CTI padrão permitem o controle de todos os dispositivos na seção Informações de permissão.

cisco Unif	fied CM Administration			rigation Car	
For Cisco Unifie	od Communications Solutions	nicolice w Liner Management w Bulk Administration w Line	administrator	r Search	
system • Carloosing • In		poson - Overeangement - Box Administration - He	• •		
Application User Configura	ation			Related L	
Save			Find and List Access Control Groups		
	((i) A https://10.106.114.151/cemadmin/userGroupFindList.do/whereCia	ause-skid	
Available Devices	cti_6871 recordin	Device Association			
	tactest testforveni	Find more Route Points	Find and List Access Control Groups		
	triger		Select Al 🔛 Clear Al 🛶 Add Selected 💽 Close		
Contract Designed	**				
Controlled Devices	d5_6872		Standard CCM Phone Administration		
			Standard CCM Read Only		
			Standard CCM Server Maintenance		
Available Profiles	sinto		Standard CCM Server Monitoring		
			Standard CCM Super Users		
			Standard CTI Allow Call Montoring		
	**		Standard CTI Allow Call Park Monitoring		
CTI Controlled Device Profiles	6		Standard CT: Alive Celline Norther Modification		
		*	Standard CTI Allow Calling Number Restriction	1	
		^	Standard CTL Alive Control of Rhones supporting Conserted Vier and of	-	
			Standard CTI Allow Control of Phones supporting Connected And and C	pre .	
CAPF Information		7	Standard CTI Aline Recention of SETP Key Reterial		
Associated CAPF Profiles			Standard CTI Evalued 2		
			Standard CTI Secure Connection		
		View Details	Standard Confidential Access Level Users		
			Standard EM Authentication Proxy Rights		
Permissions Information			Standard Packet Sniffer Users		
Groups		Add to Access Control Group	Standard RealtimeAndTraceCollection		
			Standard TabSync User		
	View Details		Third Party Application Users		
Roles			Select All Clear All Add Selected Close		
	Vew Details				

10. O serviço de autoprovisionamento pode ser configurado no nível do sistema para usar o modo seguro e uma senha pode ser definida. Este recurso é definido como **Non-Authentication Required** Mode por padrão, que não exige nenhum PIN para usar o provisionamento automático.

Etapa 1. Navegue a	é User Management >	Self-Provisionina.
Elapa II Ilaiogae a	e eeer management	

Self-Provisioning
Save
_ Status
Status: Ready
Authentication Mode
Require Authentication
In this mode, users may use their password or PIN to authenticate and provision devices based on the permissions in their User Profile. Additionally, administrators may authenticate on behal
Allow authentication for users only(via Password/PIN)
Allow authentication for users(via Password/PIN) and Administrators(via Authentication Code)
Authentication Code
No Authentication Required
In this mode, authentication is disabled during device self-provisioning. The administrator or end user can enter a user ID or self-provisioning ID into an endpoint and the endpoint will associate

Etapa 2. Adicione o ponto de rota CTI e o usuário do aplicativo ao provisionamento automático.

Self-Provisioning				
Save				
- Status				
i Status: Ready				
-Authentication Mode				
Require Authentication				
In this mode, users may use their password or PIN to authenticate and provision device				
Allow authentication for users only(via Password/PIN)				
Allow authentication for users(via Password/PIN) and Administrators(via Authentic				
Authentication Code				
No Authenticat	ion Required			
In this mode, authentication is disabled during device self-provisioning. The administrat				
- IVR Settings				
Language Preference	e			
	Available Language		Selected La	
	简体中文,普通话,简体字,中华人民共和国	3	English, Ur	
CTI Route Point	Self_Pro	😋 Dia	1111111 fror	

Note: Sempre que uma alteração de configuração é feita em Configurações de IVR, é necessário reiniciar a Configuração de IVR de autoprovisionamento para disparar a alteração.

0

Serviços associados ao provisionamento automático

selfpro

Cisco Call Manager

Application User

Este serviço está associado ao registro do telefone e deve ser ativado no nó para o qual o registro é tentado.

IVR de autoprovisionamento

Este Serviço pode ser encontrado em **serviços CM** na página **Serviços de Recursos** no **Cisco Unified Serviceability.**

Note: Você pode configurar o autoprovisionamento mesmo se o serviço estiver desativado, mas o administrador não pode atribuir telefones IP a usuários usando o serviço IVR. Por padrão, este serviço é desativado.

Note: O serviço de RVI de provisionamento automático é executado somente no Publisher.

Experiência do usuário final no telefone

- O usuário final disca para o ponto de rota CTI e é solicitado a inserir a ID de autoatendimento.
- O usuário é solicitado a Confirmar a ID de autoatendimento e digitar o PIN.
- Depois que o PIN for verificado, o dispositivo vai para uma reinicialização para obter a nova extensão.

Troubleshoot

Erro: O alerta "Não é possível provisionar o dispositivo" é recebido.

Causa: O dispositivo já está provisionado, não pode ser reprovisionado.

Logs a serem coletados

Para fazer troubleshooting adicional, Colete o Log de "Serviço de IVR de Autoprovisionamento" da RTMT.

Os nomes dos arquivos são do formato PnP#####.log. (# representa um número.)

Por padrão, os rastreamentos são definidos como Nível de informações.

O tamanho máximo do arquivo é 1 MB por padrão. O número máximo de arquivos armazenados padrão é 10.

Note: Quando você altera o Número Máximo de Arquivos ou as configurações do Tamanho Máximo de Arquivo na janela Configuração de Rastreamento, o sistema exclui todos os arquivos de log de serviço, exceto o arquivo atual, ou seja, se o serviço for executado. Se o serviço não tiver sido ativado, o sistema excluirá os arquivos imediatamente após a ativação do serviço.

Defeitos conhecidos

CSCun16461

Informações Relacionadas

Suporte Técnico e Documentação - Cisco Systems