

思科867VAE平台上的广域网模式功能

目录

[简介](#)

[先决条件](#)

[要求](#)

[使用的组件](#)

[配置](#)

[验证](#)

[故障排除](#)

简介

本文档介绍Cisco867VAE平台上的WAN模式功能以及启用DSL互联网服务的选项。

先决条件

要求

本文档没有任何特定的要求。

使用的组件

本文档中的信息基于Cisco867VAE平台。

本文档中的信息都是基于特定实验室环境中的设备编写的。本文档中使用的所有设备最初均采用原始（默认）配置。如果您使用的是真实网络，请确保您已经了解所有命令的潜在影响。

配置

以下是在CISCO867VAE平台上启用WAN模式的配置：

```
Cisco867VAE(config)#wan mode ?  
  
dsl          WAN interface is DSL  
  
ethernet    WAN interface is ethernet
```

DSL Mode

此模式允许在ATM或以太网上配置DSL参数，但不允许在任何第3层接口上配置DSL参数，即此设备中的千兆以太网0。

```
Cisco867VAE#sh ip int brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
ATM0	unassigned	YES	NVRAM	administratively down	down
Ethernet0	unassigned	YES	NVRAM	administratively down	down
FastEthernet0	unassigned	YES	unset	up	up
FastEthernet1	unassigned	YES	unset	down	down
FastEthernet2	unassigned	YES	unset	down	down
FastEthernet3	unassigned	YES	unset	down	down
GigabitEthernet0	unassigned	YES	NVRAM	down	down
Vlan1	10.106.47.21	YES	NVRAM	up	up

以下是在DSL模式下遇到的错误消息：

```
Cisco867VAE(config)#wan mode dsl
```

```
% Ethernet WAN interface will be disabled.
```

```
Cisco867VAE(config)#
```

```
*Jan 18 04:35:57.931: %LINK-5-CHANGED: Interface GigabitEthernet0, changed state to administratively down
```

```
Cisco867VAE(config)#int gig 0
```

```
Cisco867VAE(config-if)#no shut
```

```
% WAN interface is DSL
```

```
Cisco867VAE(config)#controller vdsl 0
```

```
Cisco867VAE(config-controller)#no shut
```

```
Cisco867VAE(config)#int eth0
```

```
Cisco867VAE(config-if)#no shut
```

```
*Jan 18 04:40:46.507: %LINK-3-UPDOWN: Interface Ethernet0, changed state to down
```

```
Cisco867VAE(config-if)#int atm 0
```

```
Cisco867VAE(config-if)#no shut
```

```
*Jan 18 04:40:58.771: %LINK-3-UPDOWN: Interface ATM0, changed state to down
```

以太网模式：

在以太网模式下，您将无法配置任何DSL参数，但是，您可以将第3层千兆以太网接口用于外部网络

。

```
Cisco867VAE#wan mode ethernet
```

```
% DSL interfaces will be disabled.
```

```
Cisco867VAE#
```

```
*Jan 18 04:12:48.687: %CONTROLLER-5-UPDOWN: Controller VDSL 0, changed state to administratively down
```

```
Cisco867VAE(config)#controller vdsl 0
```

```
Cisco867VAE(config-controller)#no shut
```

```
% Operation not allowed when wan mode is ethernet.
```

```
Cisco867VAE#sh ip int brief
```

Interface	IP-Address	OK?	Method	Status	Protocol
ATM0	unassigned	YES	NVRAM	administratively down	down
Ethernet0	unassigned	YES	NVRAM	administratively down	down
FastEthernet0	unassigned	YES	unset	up	up
FastEthernet1	unassigned	YES	unset	down	down
FastEthernet2	unassigned	YES	unset	down	down
FastEthernet3	unassigned	YES	unset	down	down
GigabitEthernet0	unassigned	YES	NVRAM	administratively down	down
Vlan1	10.106.47.21	YES	NVRAM	up	up

```
Cisco867VAE#conf t
```

```
Enter configuration commands, one per line. End with CNTL/Z.
```

```
Cisco867VAE(config)#int atm0
```

```
Cisco867VAE(config-if)#no shut
```

```
% WAN interface is Ethernet.
```

```
Cisco867VAE(config-if)#int eth0
```

```
Cisco867VAE(config-if)#no shut
```

```
% WAN interface is Ethernet.
```

```
Cisco867VAE(config)#int gig 0
```

```
Cisco867VAE(config-if)#no shut
```

*Jan 18 04:30:08.851: %LINK-3-UPDOWN: Interface GigabitEthernet0, changed state to down
在DSL模式下禁用WAN模式是CISCO 867平台的默认模式时，无法禁用WAN模式。

但在以太网模式下禁用时，它会变为DSL模式。

```
Cisco867VAE(config)#no wan mode dsl
```

```
Cisco867VAE(config)#do sh run | sec wan
```

```
wan mode dsl
```

```
Cisco867VAE(config)#do sh run | sec wan
```

```
wan mode ethernet
```

```
Cisco867VAE(config)#no wan mode ethernet
```

```
% Ethernet WAN interface will be disabled.
```

注意：使用[命令查找工具（仅限注册用户）](#)可获取有关本部分所使用命令的详细信息。

验证

使用本部分可确认配置能否正常运行。

```
Cisco867VAE#sh run | inc wan mode
```

```
wan mode dsl
```

故障排除

目前没有针对此配置的故障排除信息。