确定在Firepower威胁防御(FTD)上运行的活动 Snort版本

目录
先决条件
使用的组件
<u>背景信息</u>
<u>确定在FTD上运行的活动Snort版本</u>
FTD命令行界面(CLI)
由Cisco FDM管理的FTD
由Cisco FMC管理的FTD
<u>由思科CDO管理的FTD</u>
<u>相关信息</u>

简介

本文档介绍在思科FDM、思科FMC或CDO管理思科FTD时确认其运行的活动snort版本的步骤。

先决条件

要求

Cisco 建议您了解以下主题:

- 思科Firepower管理中心(FMC)
- 思科Firepower威胁防御(FTD)
- 思科Firepower设备管理器(FDM)
- 思科防御协调器(CDO)

使用的组件

本文档中的信息基于以下软件和硬件版本:

- Cisco Firepower威胁防御v6.7.0和7.0.0
- 思科Firepower管理中心6.7.0版和7.0.0版
- 思科防御协调器

本文档中的信息都是基于特定实验室环境中的设备编写的。本文档中使用的所有设备最初均采用原 始(默认)配置。如果您的网络处于活动状态,请确保您了解所有命令的潜在影响。

背景信息

SNORT®入侵防御系统已正式启动Snort 3,这是一个全面升级,它具有多项改进功能和新功能,能 够提高性能、加快处理速度、提高网络可扩展性,并且具有200多个插件,因此您可以为您的网络 创建自定义设置。

Snort 3的优势包括(但不限于):

- 性能改善
- 改进的SMBv2检测
- 新的脚本检测功能
- HTTP/2检测
- 自定义规则组
- 使自定义入侵规则更易于编写的语法。
- 它为什么会在入侵事件中丢弃内联结果。
- 将更改部署到VDB、SSL策略、自定义应用检测器、强制网络门户身份源和TLS服务器身份发现时,Snort不会重新启动。
- 通过发送到思科成功网络的Snort 3特定遥测数据和更好的故障排除日志,提高了适用性。

对Snort 3.0的支持是针对6.7.0 Cisco Firepower威胁防御(FTD)引入的,而此时正是FTD通过Cisco Firepower设备管理器(FDM)进行管理的时候。

- ✤ 注意:对于由FDM管理的新6.7.0 FTD部署,Snort 3.0是默认检测引擎。如果您将FTD从较旧 版本升级到6.7,则Snort 2.0仍为活动检测引擎,但您可以切换到Snort 3.0。
- 注意:对于此版本,Snort 3.0不支持虚拟路由器、基于时间的访问控制规则或TLS 1.1或更低级别连接的解密。仅在不需要这些功能时才启用Snort 3.0。

然后,Firepower版本7.0引入了对由思科FDM和思科Firepower管理中心(FMC)管理的Firepower威胁防御设备的Snort 3.0支持。

✤ 注意:对于新的7.0 FTD部署, Snort 3现在是默认检测引擎。升级后的部署继续使用Snort 2,但您可以随时进行切换。

⚠ 注意:您可以在Snort 2.0和3.0之间自由切换,以便在需要时恢复更改。只要您切换版本,流 量就会中断。

🗥 注意:在切换到Snort 3之前,强烈建议您阅读并理解《<u>Firepower管理中心Snort 3配置指南》</u>

⚠ 。请特别注意功能限制和迁移说明。虽然升级到Snort 3是为了将影响降至最低,但功能并不 完全匹配。升级前的规划和准备工作可以帮助您确保按照预期处理流量。

确定在FTD上运行的活动Snort版本

FTD命令行界面(CLI)

要确定在FTD上运行的活动Snort版本,请登录FTD CLI并运行show snort3 status命令:

示例1:当没有显示输出时,FTD运行Snort 2。

<#root>

>

show snort3 status

>

示例2:当输出显示当前运行Snort 2时,FTD运行Snort 2。

<#root>

>

show snort3 status

Currently running Snort 2

示例3:当输出显示当前运行Snort 3时,FTD运行Snort 3。

<#root>

>

show snort3 status

Currently running Snort 3

由Cisco FDM管理的FTD

要确定在Cisco FDM管理的FTD上运行的活动Snort版本,请继续执行以下步骤:

- 1. 通过FDM Web界面登录到Cisco FTD。
- 2. 从主菜单中选择Policies。
- 3. 然后选择Intrusion选项卡。
- 4. 查找Snort版本或检查引擎部分以确认FTD中处于活动状态的Snort版本。

示例1:FTD运行snort版本2。



示例2:FTD运行snort版本3。

dhaha cisco.	Firepower Device Manager Monitoring Police) the Objects Device: firepower	> 🖨 @ ?	* admin * Administrator
	Security Policies			
	$\square \rightarrow \bigcirc$ SSL Decryption $\rightarrow \bigcirc$ Identity	$ ightarrow$ \bigcirc Security Intelligence $ ightarrow$ \bigcirc NAT $ ightarrow$ \bigotimes Access C	iontrol \rightarrow 🔏 Intrusion	
	4 policies	Inspection Engine: 3.1.0.100-11	Filter by policy name	\$ +

由Cisco FMC管理的FTD

要确定在Cisco FMC管理的FTD上运行的活动Snort版本,请继续执行以下步骤:

- 1. 登录到Cisco FMC Web界面。
- 2. 从Devices菜单中选择Device Management。
- 3. 然后,选择适当的FTD设备。
- 4. 点击编辑铅笔图标。
- 5. 选择Device选项卡,并查找Inspection Engine部分以确认FTD中的活动Snort版本:

示例1:FTD运行snort版本2。

FTD-1	Pr Overview Analysis	Policies Devices Objects Integr	ation		Deploy 식 😵 🌣 🛛 adr
sco Firepower Threat Defense for VMware					
Device Routing Interfaces Inline Se	ets DHCP				
General		License	1	System	0 G
Name:	vFTD-1	Performance Tier :	FTDv - Variable	Model:	Cisco Firepower Threat Defense for VMware
Transfer Packets:	Yes	Base:	Yes	Serial:	
Mode:	Routed	Export-Controlled Features:	Yes	Time:	2023-04-20 00:57:11
Compliance Mode:	None	Malware:	Yes	Time Zone:	UTC (UTC+0:00)
TLS Crypto Acceleration:	Disabled	Threat:	Yes	Version:	7.0.4
		URL Filtering:	Yes	Time Zone setting for Time	UTC (UTC+0:00)
		AnyConnect Apex:	No	based Rules:	
		AnyConnect Plus:	No		
		AnyConnect VPN Only:	No		
Inspection Engine		Health		Management	/ 🔍
Inspection Engine:	Snort 2	Status:	0	Host:	
NEW Upgrade to our new and improved S	Snort 3	Policy: Initial_Health	Policy 2018-02-28 14:46:00	Status:	0
Snort 3 is the latest version of the most power inspection engine at the heart of Firepower Th significant improvements to performance and lot to be excited about! Learn more	ful, industry-standard ireat Defense devices. With security efficacy, there is a	Excluded:	None	FMC Access Interface:	Management Interface
▲ Switching snort versions requires a deployr process. Because Snort must be stopped so ti started, there will be momentary traffic loss.	ment to complete the hat the new version can be				
Note: If the device uses an Intrusion Policy tha Snort 3 will not be able to migrate those rules.	t has custom Intrusion Rule,				
Upgrade					

示例2:FTD运行snort版本3。

Firepower Management Center Devices / NGFW Device Summary	Br Overview Analysis	Policies Devices Objects	Integration		Deploy Q 🗳 🌣 🕲 admi
TD1010-1 Cisco Firepower 1010 Threat Defense Device Routing Interfaces Inline Se	ets DHCP SNMP				
General	/±+	License	1	System	8 G
Name:	FTD1010-1	Base:	Yes	Model:	Cisco Firepower 1010 Threat Defense
Transfer Packets:	Yes	Export-Controlled Features:	Yes	Serial:	
Mode:	Routed	Malware:	Yes	Time:	2023-04-20 01:44:01
Compliance Mode:	None	Threat:	Yes	Time Zone:	UTC (UTC+0:00)
TLS Crypto Acceleration:	Disabled	URL Filtering:	Yes	Version:	7.0.4
		AnyConnect Apex:	Yes	Time Zone setting for Time based Rules:	(UTC-05:00) America/New_York
		AnyConnect VPN Only:	No	Inventory:	View
Inspection Engine		Health		Management	/ 🔍
Inspection Engine:	Snort 3	Status:	9	Host:	
Revert to Snort 2	J	Policy: In	itial_Health_Policy 2018-02-28 14:46:00	Status:	•
		Excluded:	None	FMC Access Interface:	Management Interface
significant improvements to performance and lot to be excited about! Learn more	security efficacy, there is a				
Switching snort versions requires a deployr process. Because Snort must be stopped so ti started, there will be momentary traffic loss.	ment to complete the hat the new version can be				
Note: If the device uses an Intrusion Policy tha Snort 3 will not be able to migrate those rules.	at has custom Intrusion Rule,				
Upgrade					

由思科CDO管理的FTD

要确定在Cisco Defense Orchestrator管理的FTD上运行的活动snort版本,请继续执行以下步骤:

1. 登录到Cisco Defense Orchestrator Web界面。

- 2. 从资产菜单中,选择适当的FTD设备。
- 3. 在设备详细信息部分中,查找Snort版本:

示例1:FTD运行snort版本2。

cisco Defense Orchestrato	*	Invent	ory				Q Search	⊳ .	۵. 4	• •	mex_firewall_tac_test
Hide Menu	_							,	FTDv @		
A Dashboard	ι	T Der	vices Templates Q	Search by Device Name	, IP Address, or Serial Nurr	nber	Displaying 3 of 3 results C		Device Details		~
E Inventory		All FT	rD						Location	nja	
Configuration		•	Name 0			Configuration Status 0	Connectivity \$		Model	Cisco Fire Azure	epower Threat Defense for
Policies	>		FTDv			O Synced	Online		Serial Version	72.0	
Objects	>	-	FTD			,			Onboarding Method	Registrati	ion Key
"Č. VPN	>	0	FTDV-LC				Pending Setup		Snort Versio	2.9.21-10	2
Events & Monitoring			toetftd						O Synced		
√r Analytics	>		FTD			-	Pending Setup		Your device?	configuration is	up-to-date.
(Change Log									Device Action	s	
(+) Jobs									C. Check I	v Changes	
🛞 Tools & Services	>								Ø Manage	Licenses	
② Settings	>								Workflo Remove	vs	

示例2:FTD运行snort版本3。

cisco			Invent	ory			Q Search	📄 🖓 🕛 -	۵. ج	· mex_firewall_tac_test
=	Hide Menu	6	T Des	vices Templates	Search by Device Name. IP Address. or Seria	Number	Displaying 3 of 3 results	o - ,	FTDV @	
M	Dashboard								Device Details	v
	Inventory	-	AI FT	D					Location	n/a
Confi	guration			Name 0		Configuration Status 0	Connectivity 0		Model	Cisco Firepower Threat Defense for Azure
۲	Policies	>	_	FTDv		C Not Surger	Online		Serial	70.0
۲	Objects	>		FTD		W Not synoliu	Chang		Onboarding	Registration Key
-å-	VPN	>	0	FTDv-LC FTD			Pending Setup		Snort Version	3.1.211-126
Even/	Analytics	>	0	testftd FTD			Pending Setup		O Not Synced The configuration	has been modified in FMC. Synchronize
٢	Change Log								FMC Deployment	page
	Jobs								Device Actions	~
R	Tools & Services	>							C Check for C	hanges
٩	Settings	>							C Manage Lice Workflows	enses

相关信息

- <u>Cisco Firepower版本说明,版本6.7.0</u>
- <u>Cisco Firepower版本说明,版本7.0</u>
- <u>Snort 3网站</u>
- <u>技术支持和文档 Cisco Systems</u>

关于此翻译

思科采用人工翻译与机器翻译相结合的方式将此文档翻译成不同语言,希望全球的用户都能通过各 自的语言得到支持性的内容。

请注意:即使是最好的机器翻译,其准确度也不及专业翻译人员的水平。

Cisco Systems, Inc. 对于翻译的准确性不承担任何责任,并建议您总是参考英文原始文档(已提供 链接)。