# Sx250和Sx350交换机上的链路抖动预防

### 目标

链路抖动是交换机上的物理接口在至少10秒的时间内持续打开和关闭的一种情况,每秒3次或 更多次。常见原因通常与电缆损坏、不受支持或非标准电缆或小型封装热插拔(SFP)或其他链 路同步问题有关。链路抖动的原因可能是间歇性或永久性的。

链路抖动预防机制在链路抖动情况下最大限度地减少了对交换机和网络运行的中断。它通过自动将遇到过多链路抖动事件的端口设置为err-disable状态端口来稳定网络拓扑。此机制还提供 调试和查找抖动根本原因的时间。系统会发送系统日志消息或简单网络管理协议(SNMP)陷阱 ,以发出有关链路抖动和端口关闭的警报。只有在系统管理员明确启用时,接口才会再次激活 。

本文介绍如何在Sx250或Sx350系列交换机上启用链路抖动预防功能、配置自动错误禁用恢复 时间以及重新激活暂停接口。

## 适用设备

SF350系列

SG350系列

SF250系列

SG250系列

#### 软件版本

• 2.1.0.63

#### 配置链路抖动预防

#### 启用链路抖动预防

步骤1.登录交换机的基于Web的实用程序。

步骤2.在"显示模式"下拉菜单中,选择"高级"。

cisco	Language:	English	•	Display Mode	Basic 🔻	Logout
ed S	witch			and the second second	Basic	
					Advanced	

步骤3.选择Port Management > Port Settings。



步骤4.选中Enable Link Flap Prevention复选框。

**注意:**默认情况下,链路抖动防御功能已启用。

P 28-Port Gigabit PoE Managed Swite			
Port Settings			
Link Flap Prevention: 🕢 Enable			
Jumbo Frames: Enable Jumbo frames configuration changes will take effect after saving			
Apply Cancel			

步骤5.单击"应用"以保存对运行配置文件的更改。

步骤6.单击"保存"以更新启动配置文件。



现在,您应该已在Sx350系列托管交换机上启用链路抖动预防。

#### 配置自动ErrDisable恢复时间

步骤1.要设置暂停接口的恢复时间,请转到Port Management > Error Recovery Settings。

cisco SG350-28MF			
Getting Started			
Dashboard			
Configuration Wizards			
Search			
<ul> <li>Status and Statistics</li> </ul>			
<ul> <li>Administration</li> </ul>			
<ul> <li>Port Management</li> </ul>			
Port Settings			
Error Recovery Settings			
Loopback Detection Settings			
Link Aggregation			
▶ UDLD			
▶ PoE			
<ul> <li>Green Ethernet</li> </ul>			
▶ Smartport			

步骤2.(可选)在Automatic Recovery Interval字段中以秒为单位输入值。

Error Recovery Settings				
Automatic Recovery Interval:	300	sec (Range: 30 - 86400, Default: 300)		

步骤3.在Automatic ErrDisable Recovery(自动ErrDisable恢复)区域下,选中**Enable** Link Flap Prevention(启用链路抖动预防)复选框。

**注意:**默认情况下,链路抖动预防为自动ErrDisable恢复启用。

28-Port Gigabit Po	DE Managed Sv	Language: English vitch
Error Recovery Settings	5	
Automatic Recovery Interval:	300	sec (Range: 30 - 86400, Default: 300)
Automatic ErrDisable Recover	у	
Port Security:	Enable	
802.1x Single Host Violation:	Enable	
ACL Deny:	Enable	
STP BPDU Guard:	Enable	
STP Loopback Guard:	Enable	
UDLD:	Enable	
Loopback Detection:	Enable	
Storm Control:	Enable	
Link Flap Prevention:	Enable	
Apply Cancel		

步骤4.单击"**应用**"以保存对运行配置文件的更改。

步骤5.单击"**保存**"以更新启动配置文件。

		Save	cisco L		
P 28-Port Gigabit F	P 28-Port Gigabit PoE Managed Switch				
Error Recovery Setting	IS				
	<b>5</b> -				
Success. To permane	ntly save the configuration	n, go to the Copy/S	ave Configuration		
Automatic Recovery Interval:	300	sec (Range: 30 - 8	36400, Default: 30		
Automatic ErrDisable Recove	ery				
Port Security:	📃 Enable				
802.1x Single Host Violation:	📃 Enable				
ACL Deny:	Enable				
STP BPDU Guard:	Enable				
STP Loopback Guard:	Enable				
UDLD:	Enable				
Loopback Detection:	📃 Enable				
Storm Control:	📃 Enable				
Link Flap Prevention:	🕑 Enable				
Apply Cancel					
Apply Cancel					

现在,您应该已在Sx350系列托管交换机上配置了自动错误禁用恢复时间设置。

#### 重新激活暂停的接口

步骤1.要检查errDisabled或挂起接口的状态,请转到**Port Management > Error Recovery** Settings。

cisco SG350-28M	IF
Getting Started	
Dashboard	
Configuration Wizards	
Search	
<ul> <li>Status and Statistics</li> </ul>	
Administration	
✓ Port Management	
Port Settings	
Error Recovery Settings	
Loopback Detection Settings	
Link Aggregation	
▶ UDLD	
▶ PoE	
<ul> <li>Green Ethernet</li> </ul>	
<ul> <li>Smartport</li> </ul>	

**注意:**如果接口因链路抖动预防而挂起,则"已挂起(errDisabled)"接口表将显示已挂起的接口

	cisco	Language: English			
P 28-Port Gigabit P	oE Managed S	witch			
Error Recovery Settings					
Automatic Recovery Interval:	300	sec (Range: 30 - 86400, Default			
Automatic ErrDisable Recove	гу				
Port Security:	Enable				
802.1x Single Host Violation:	Enable				
ACL Deny:	Enable				
STP BPDU Guard:	Enable				
STP Loopback Guard:	Enable				
UDLD:	Enable				
Loopback Detection:	Enable				
Storm Control:	Enable				
Link Flap Prevention:	Enable				
Apply Cancel					
Suspended (errDisabled) Interface Table					
Filter: 📃 Suspension Reaso	n equals to Port Security	Go Clear Filter			
Interface Suspension Re	eason				
0 results found.					
Reactivate					

步骤2.选中要重新激活的接口旁的复选框。

o

步骤3.单击"重新激**活"**按钮以重新激活挂起的接口。

现在,您应该已重新激活Sx250或Sx350系列托管交换机上的挂起接口。