# 小型企业 VOIP 路由器:访问某些网站的问题

## 目录

<u>简介</u> <u>如何使用Linksys VOIP路</u> <u>由器访问某些网站?</u> <u>相关信息</u>

## <u>简介</u>

本文是一系列协助设置、排错和维护Cisco小型企业产品文档中的一篇。

问:如何使用思科S系列VoIP路由器访问某些网站?A.

无法访问某些网站的原因有三个:

Web浏览器上的安全设置过高 路由器上未正确设置MTU 安全网站

### Internet Explorer的安全设置较低

#### 步骤1:

双击"Internet Explorer(Internet Explorer)",然后单击"Tools(工具)"。

			Click Tool	ls.		
		🗿 Linksys Easy An	swers (P	of 25) - Micro	soft Internet Expl	orer p
		File Edit View F	avorites Tools	Help		
		🚱 Back 🝷 🕥	- 💌 🖻 🦿	<b>i</b> 🐨 -	📙 🗱 🦓	
		ddress 🙆 http://link	sys.custhelp.com/c	gi-bin/linksys.cfg/	php/enduser/std_alp.	php?p_
		LINK	SYS'			
Double-click Internet Explorer		A Division of Cis	co Systems, Inc.			
		United States [·	:hange]	PRODUCTS	WHERE TO BUY	SUPF
· · · · · · · · · · · · · · · · · · ·						

#### 步骤 2:

选择"Internet选项",单击"安全">"自定义级别"。类似于第3步的窗口将出现。



步骤 3 : 在"重置到"下拉菜单下,选择中低,然后单击确定。

Security Settings ? 🔀	
<u>S</u> ettings:	
<ul> <li>ActiveX controls and plug-ins</li> <li>Automatic prompting for ActiveX controls</li> <li>Disable</li> <li>Enable</li> </ul>	
Binary and script behaviors     Administrator approved     Disable	
<ul> <li>Enable</li> <li>Download signed ActiveX controls</li> <li>Disable</li> <li>Enable</li> <li>Recent</li> </ul>	
Download unsigned ActiveX controls	
Reset custom settings	
Reset to: Medium Medium Low Ca	Select <b>lium-low</b> .

**注意:**如果这不起作用,请在ADSL网关上启用MTU。有关说明,请完成下一节中的步骤。**在** VoIP路由器上启用MTU步骤 1:

确定网站适当的MTU大小。**步骤 2:** 

访问路由器的基于Web的设置页。如需指导,请点击<u>这里</u>。步骤 3:

当路由器的Web设置页出现时,请找到MTU并且设置为Manual。在Size字段中,输入您从步骤1获 得的MTU值。

LINKSYS <sup>®</sup> A Division of Cisco Systems, Inc.									
Cotun									
Setup	Setup	Wireless	Security	Access Restrictions	Applicati & Gami	ons Admin ng	istration -	Status	Voice
	Bas	ic Setup		DDNS	MA	C Address Clone	•	Advanced	Routing
Internet Setup				_			Bas	ic Setu	p
Internet Connection Type	10	otain an IP ai	utomatically	<b>_</b>			The E wher	asic Setu e basic co	p screen is nfiguration
Optional Settings (required by some ISPs)	Hos	t Name:					is per (Inte	formed. S rnet Servi	Some ISPs ice
	Dor	nain Name:				1	Enter th	e[ ∋ Th	require that DNS Dese settings
	MTU	J:	O Auto	Manual Size:			proper M1 size.	U ne	d from your have
<b>注意</b> :以下是推荐用 <sup>:</sup> PPPoE DSL连接:14 节中的步骤以打开路 访问路由器的基于Web 当路由器的基于Web	于 DSL 492 <b>步骤</b> 由器上的 3 <b>b的设置</b> 的设置]	和电缆连 【4:单音 内端口。 置页。如行 页出现时	Select M 接的 MT 品。 Sa 为安全站 需指导, ,单击"应	<sup>1anual.</sup> <sup>™</sup> 大小:目 we Setting i点开放端口 请点击 <u>这里</u> 互用和游戏"	<b>L缆连接</b> S 注意 □步骤 1 □步骤 1 。步骤 〕	:1500 【:如果这 : 2: <b>2:</b>	【不起作)	用,请	完成下一
A Division of Cisco Systems, Inc.					Click	Applicatio & Gaming.	ins	_	
Applications					_				
& Gaming	Setup Port Range	<b>Wireles</b> Forward	s Secu Port Trigger	rity Acc Restri ing	ess ctions DMZ	Applications & Gaming   QoS	Administ	ration	Status
			Click Po Triggerin	rt Ig,					

步骤 3: 在Application下,键入"https",在Triggered Range和Forwarded Range字段中,键入 "443"(https使用的端口)。

A Division of Cisco Systems, Inc.							
Applications & Gaming							
	Setup Wireles	s Security	Access Restriction	Applicat s & Gam	tions Admir	nistration Status Voice	
	Port Range Forwa	rding	Port Triggering		DMZ	QoS	
Port Triggering						Port Triggering	
Under <b>Application</b> , enter "https" then under <b>Triggered</b> and <b>Forwarded Range</b> , enter "443" on both fields.		Triggere	Triggered Range		ed Range	Port triggering will forward	
	Application	Start Port	End Port	Start port	End Port	port based on the incoming port specified.Check with your software application	
	https	443 to	443	443 to	443	to find out what is necessary to enter in these fields.	
		to		to		To add a server using forwarding:	
		to		to		1. Enter an Application	
		to		to		name of the service you want to forward.	
		to		to		for Start and End of the services to trigger	
		to		to		forwarding. 3. Enter the Forwarded	
		to		to		Range for Start and End of the service you want	
		to		to		to forward.	
	I	to		to		More	
		S	ave Setting	s Cance	l Changes	utility and the second se	
步骤 4:单击。 Save Se	ttings						

# 相关信息

• <u>技术支持和文档 - Cisco Systems</u>