# 在思科S系列VoIP路由器上启用远程管理

## 目录

<u>简介</u> <u>如何远程管理路由器?</u> <u>相关信息</u>

## <u>简介</u>

本文是一系列协助设置、排错和维护Cisco小型企业产品文档中的一篇。

## <u>问:如何远程管理路由器?</u>A.

远程管理允许您通过互联网从远程位置管理路由器。从远程位置管理思科S系列路由器与在本地访问路由器类似。主要区别是,您不必在Web浏览器的地址栏中键入路由器的LAN IP地址,而必须键入路由器的Internet IP地址。

要在思科S系列路由器上启用远程管理,请完成以下步骤:

在思科S系列路由器上启用远程管理 检查思科S系列路由器的Internet IP地址 从远程位置管理思科S系列路由器

**注意:**在继续之前,请确保已配置路由器,并且连接到路由器后计算机可以联机。要启用远程管理 ,请完成本文档中概述的步骤。

#### 在思科S系列路由器上启用远程管理

**注意:**启用远程管理功能后,任何知道路由器的Internet IP地址和密码的人都可以更改路由器的设置。

步骤 1:

访问路由器的基于Web的设置页。如需指导,请点击<u>这里</u>。

#### 步骤 2:

当路由器的基于Web的设置页打开时,单击Administration。

LINKSYS <sup>®</sup> A Division of Cisco Systems, Inc.						Click Administration		
Administration								
	Setup	Wireless	Security	Access Restrictions	Applicatio & Gamin	Administration	Status	¥oice
	Mar	nagement		Log	Fact	tory Defaults	Diagnost	cs

### **步骤 3:** 更改路**由器密**码以增加安全性。如需指导,请点击<u>这里</u>。

LINKSYS <sup>®</sup> A Division of Cisco Systems, Inc.		
Administration	Setup Wireless Security Access Restrictions Management Log	Applications & Gaming       Administration       Status       Voice         Factory Defaults       Diagnostics
Router Password		Management
Local Router Access	Router Password:	Enter your desired password on both fields.
Remote Router Access	VVeb:     O     Enabled     Isable       Administration Port:     8080       Secure Shell (SSH):     O     Enabled     O	ed Re-enter to confirm Enter the password chosen above to confirm that you properly entered the password. ed <u>More</u>
UPnP	UPnP: O Enabled O Disable	ed

#### 步骤 4:

在提供的字段中查找"远程路由器访问",将Web设置为已启用,并将管理端口保留为"8080"。

	Select Enabled		
Remote Router Access	Web: © Enable Administration Port: 8080 Secure Shell (SSH): O Enable	d () Disabled d () Disabled	Utility. <b>Re-enter to confirm</b> Enter the password chosen above to confirm that you properly entered the password.
UPnP	UPnP: Ô Enable	d 💿 Disabled	<u>More</u>
Backup and Restore	Backup (	and Restore	
	Save	e Settings Cancel Changes	Cisco Systems utility

步骤 5:

单击。 Save Settings

在路由器上启用远程管理后,检查Internet IP地址。有关说明,请完成下一节中的步骤。

### 检查思科S系列路由器的Internet IP地址

步骤1:

访问路由器的基于Web的设置页。如需指导,请点击<u>这里</u>。

步骤 2:

单击Status,然后检查路由器的Internet IP地址。

LINKSYS <sup>®</sup> A Division of Cisco Systems, Inc.		Click <b>Status</b> .
Status	Setup         Wireless         Security         Access Restrictions         Applications & Gaming         A           Router         Local Network         Wireless         Voice	dministration Status Voice
Information Status	Firmware Version:   Current Time:   MAC Address:   00:00:00:00:00:00:00   Login Type:   Internet IP Address:   0.0.0.0   Subnet Mask:   0.0.0.0   Default Gateway:   0.0.0.0   DNS 1:   0.0.0.0   DNS 2:   0.0.0.0   DNS 3:   0.0.0.0   MTU:   1500   DHCP Renew	Router Status This screen provides the Router's current status information in a read-only format. Login Type This field shows the Internet login status, When you choose PPPoE as the login method, you can click the Connect button to log in. If you click the Disconnect button, the Router will not dial up again until you click the Connect button. If your connection is DHCP or Static IP, the Status screen will show you the Internet IP Address, Subnet mask,

获得路由器的Internet IP地址后,请完成下一节中的步骤以远程访问路由器。

## 从远程位置管理思科S系列路由器



**注意**:路由器的映像可能因型号和版本号而异。

使用从远程位置连接到Internet的计算机,启动Internet Explorer并在Address字段中键入 "http://0.0.0.0:8080"(0代表路由器的Internet IP地址,8080代表指定的端口)。



注意:0代表您之前注意到的路由器Internet IP地址。

### 步骤 2:

系统将显示一个新窗口,并会要求**输入用户**名和**密码。**输入路由器的用户名和密码(启用远程管理 之前已更改的新密码),然后单击OK。

Connect to 0.0.0	.0 ? 🔀	
	G	
<u>U</u> ser name: <u>P</u> assword:	Remember my password	Enter the router's <b>Username</b> and <b>Password</b> (the new password you've changed before enabling remote management), then click <b>OK</b> .
	OK Cancel	

#### 步骤 3:

现在,您应该能够访问路由器的基于Web的设置页面。

## 相关信息

• <u>技术支持和文档 - Cisco Systems</u>