

在RV320和RV325 VPN路由器上配置時間和日期

目標

本文說明如何在RV32x VPN路由器系列上配置手動和自動的時間和日期設定。

簡介

日期和時間配置對於同步裝置之間的資料傳輸非常有用。對於RV32x VPN路由器系列，可以手動設定日期和時間，也可以使用網路時間協定(NTP)伺服器自動更新日期和時間。

適用裝置


- RV320 Dual WAN VPN路由器
- RV325 Gigabit Dual WAN VPN路由器

軟體版本

·v1.1.0.09

配置時間和日期

步驟1.登入到Web配置實用程式，然後選擇**Setup > Time**。

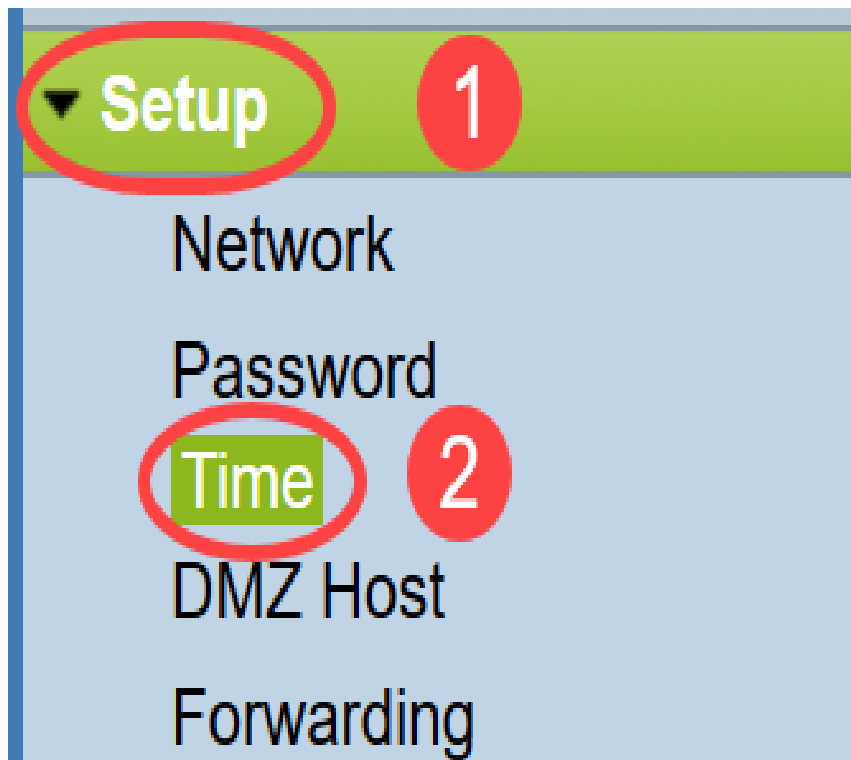

將打開「時間」頁：

Time

Current Time: 04/20/2013 03:20:52
 Modification time: 04/20/2013 02:20:52
 Time Zone: Alaska (GMT-9:00) ▾
 Daylight Saving:
 From: 06 month 25 day
 To: 12 month 25 day
 Set Date and Time: Auto Manual
 NTP Server: time.nist.gov
 Enter Date and Time: 3 hours 20 min 51 sec
 4 month 20 day 2013 year

Save Cancel

此頁顯示以下資訊：

- **當前時間** — 這表示最近的日期和時間。
- **修改時間** — 這表示上次修改完成的日期和時間。

附註：對於手動和自動時間設定，必須配置夏令時和時區。NTP伺服器不知道夏令時和時區，因此，如果路由器時區的位置處於夏令時，必須在裝置上配置夏令時。

步驟2. 從時區下拉選單中選擇基於路由器位置的時區。

Time

Current Time: 2016-01-12, 23:21:59
 Modification time: 2016-01-12, 23:21:59
 Time Zone: Pacific Time (US & Canada) (GMT-8:00) ▾
 Adjust for Daylight Savings Time: Eniwetok (GMT-12:00)
 Daylight Saving Mode: Midway Island (GMT-11:00)
 From: Hawaii (GMT-10:00)
 To: Alaska (GMT-9:00)
 From: Pacific Time (US & Canada) (GMT-8:00)
 To: Mountain Time (US & Canada) (GMT-7:00)
 From: Central Time (US & Canada) (GMT-6:00)
 To: Mexico City (GMT-6:00)
 Daylight Saving Offset: Bogota (GMT-5:00)
 Set Date and Time: Lima (GMT-5:00)
 NTP Server: Eastern Time (US & Canada) (GMT-5:00)
 Enter Date and Time: Atlantic Time (Canada) (GMT-4:00)
 Caracas (GMT-4:00)
 La Paz (GMT-4:00)
 Buenos Aires (GMT-3:00)
 Mid-Atlantic (GMT-2:00)
 Azores (GMT-1:00)
 Greenwich Mean Time: London (GMT+00:00)
 Amsterdam (GMT+01:00)
 Berlin (GMT+01:00)

Save Cancel

步驟3. (可選) 如果所選時區有夏令時，請選中夏令時覈取方塊。如果選中此框，請繼續步驟4，否則請轉到[步驟10](#)。

Time

Current Time: 2016-01-12, 23:21:59

Modification time: 2016-01-12, 23:21:59

Time Zone: Pacific Time (US & Canada) (GMT-8:00) v

Adjust for Daylight Savings Time:

Daylight Saving Mode: By date Recurring

步驟4.選擇夏令時模式。選項包括：

- 按日期 — 如果選擇此選項，請轉至[步驟5](#)。
- *Recurring* — 如果選擇此選項，請轉至[Step 7](#)。

Time

Current Time: 2016-01-12, 23:21:59

Modification time: 2016-01-12, 23:21:59

Time Zone: Pacific Time (US & Canada) (GMT-8:00) v

Adjust for Daylight Savings Time:

Daylight Saving Mode: By date Recurring

From: Month: 06 v Day: 25 v Time: 12 v 00 v

To: Month: 12 v Day: 25 v Time: 12 v 00 v

From: Month: 06 v Week: 2nd v Day: Tue v Time: 12 v : 00 v

To: Month: 12 v Week: 3rd v Day: Wed v Time: 12 v : 00 v

Daylight Saving Offset: +60 v Minutes

步驟5.在From欄位中，輸入Month、Day和Time，夏令時開始於此。

Time

Current Time: 2016-01-12, 23:21:59

Modification time: 2016-01-12, 23:21:59

Time Zone: Pacific Time (US & Canada) (GMT-8:00) ▾

Adjust for Daylight Savings Time:

Daylight Saving Mode: By date Recurring

From: Month: 06 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾

To: Month: 12 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾

From: Month: 06 ▾ Week: 2nd ▾ Day: Tue ▾ Time: 12 ▾ : 00 ▾

To: Month: 12 ▾ Week: 3rd ▾ Day: Wed ▾ Time: 12 ▾ : 00 ▾

步驟6. 在至欄位中，輸入夏令時結束的月、日和時間。

Time

Current Time: 2016-01-12, 23:21:59

Modification time: 2016-01-12, 23:21:59

Time Zone: Pacific Time (US & Canada) (GMT-8:00) ▾

Adjust for Daylight Savings Time:

Daylight Saving Mode: By date Recurring

From: Month: 06 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾

To: Month: 12 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾

From: Month: 06 ▾ Week: 2nd ▾ Day: Tue ▾ Time: 12 ▾ : 00 ▾

To: Month: 12 ▾ Week: 3rd ▾ Day: Wed ▾ Time: 12 ▾ : 00 ▾

步驟7. 在「自」欄位中，輸入夏令時開始的月、周、日和Time。

Time

Current Time: 2016-01-12, 23:21:59
Modification time: 2016-01-12, 23:21:59
Time Zone: Pacific Time (US & Canada) (GMT-8:00) ▾
Adjust for Daylight Savings Time:
Daylight Saving Mode: By date Recurring
From: Month: 06 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾
To: Month: 12 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾
From: Month: 06 ▾ Week: 2nd ▾ Day: Tue ▾ Time: 12 ▾ : 00 ▾
To: Month: 12 ▾ Week: 3rd ▾ Day: Wed ▾ Time: 12 ▾ : 00 ▾
Daylight Saving Offset: +60 ▾ Minutes

步驟8. 在「至」欄位中，輸入夏令時結束的月、周、日和Time。

Time

Current Time: 2016-01-12, 23:21:59
Modification time: 2016-01-12, 23:21:59
Time Zone: Pacific Time (US & Canada) (GMT-8:00) ▾
Adjust for Daylight Savings Time:
Daylight Saving Mode: By date Recurring
From: Month: 06 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾
To: Month: 12 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾
From: Month: 06 ▾ Week: 2nd ▾ Day: Tue ▾ Time: 12 ▾ : 00 ▾
To: Month: 12 ▾ Week: 3rd ▾ Day: Wed ▾ Time: 12 ▾ : 00 ▾
Daylight Saving Offset: +60 ▾ Minutes

步驟9. 中選擇適

Time

Current Time: 2016-01-12, 23:21:59
 Modification time: 2016-01-12, 23:21:59
 Time Zone: Pacific Time (US & Canada) (GMT-8:00)
 Adjust for Daylight Savings Time:
 Daylight Saving Mode: By date Recurring
 From: Month: 06 Day: 25 Time: 12 00
 To: Month: 12 Day: 25 Time: 12 00
 From: Month: 06 Week: 2nd Day: Tue
 To: Month: 12 Week: 3rd Day: Wed
 Daylight Saving Offset: +60 Minutes
 Set Date and Time: Manual
 NTP Server:
 Enter Date and Time: hours 21 min 59 sec
 month 12 day 2016 year

Save Cancel

步驟10.按一下所需的單選按鈕，選擇設定日期和時間的方法。

- 自動 — 它根據NTP伺服器的日期和時間自動設定日期和時間。
- 手動 — 用於手動配置裝置的日期和時間。

Time

Current Time: 2016-01-12, 23:21:59
 Modification time: 2016-01-12, 23:21:59
 Time Zone: Pacific Time (US & Canada) (GMT-8:00)
 Adjust for Daylight Savings Time:
 Daylight Saving Mode: By date Recurring
 From: Month: 06 Day: 25 Time: 12 00
 To: Month: 12 Day: 25 Time: 12 00
 From: Month: 06 Week: 2nd Day: Tue Time: 12 : 00
 To: Month: 12 Week: 3rd Day: Wed Time: 12 : 00
 Daylight Saving Offset: +60 Minutes
 Set Date and Time: Auto Manual
 NTP Server: time.nist.gov
 Enter Date and Time: 23 hours 21 min 59 sec
 1 month 12 day 2016 year

步驟11.如果在上一步中選擇了自動，請輸入完全限定的NTP服務器名稱或IP地址。

Time

Current Time:	2016-01-12, 23:21:59
Modification time:	2016-01-12, 23:21:59
Time Zone:	Pacific Time (US & Canada) (GMT-8:00) ▾
Adjust for Daylight Savings Time:	<input type="checkbox"/>
Daylight Saving Mode:	<input checked="" type="radio"/> By date <input type="radio"/> Recurring
From:	Month: 06 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾
To:	Month: 12 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾
From:	Month: 06 ▾ Week: 2nd ▾ Day: Tue ▾ Time: 12 ▾ : 00 ▾
To:	Month: 12 ▾ Week: 3rd ▾ Day: Wed ▾ Time: 12 ▾ : 00 ▾
Daylight Saving Offset:	+60 ▾ Minutes
Set Date and Time:	<input checked="" type="radio"/> Auto <input type="radio"/> Manual
NTP Server:	time.nist.gov
Enter Date and Time:	23 hours 21 min 59 sec
	1 month 12 day 2016 year

步驟12.如果在步驟10中選擇了「手動」，請在輸入日期和時間欄位中，在hours、min和sec欄位中輸入所需的值以設定時間。對月、日和年欄位執行相同操作。

Time

Current Time:	2016-01-12, 23:21:59
Modification time:	2016-01-12, 23:21:59
Time Zone:	Pacific Time (US & Canada) (GMT-8:00) ▾
Adjust for Daylight Savings Time:	<input type="checkbox"/>
Daylight Saving Mode:	<input checked="" type="radio"/> By date <input type="radio"/> Recurring
From:	Month: 06 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾
To:	Month: 12 ▾ Day: 25 ▾ Time: 12 ▾ 00 ▾
From:	Month: 06 ▾ Week: 2nd ▾ Day: Tue ▾ Time: 12 ▾ : 00 ▾
To:	Month: 12 ▾ Week: 3rd ▾ Day: Wed ▾ Time: 12 ▾ : 00 ▾
Daylight Saving Offset:	+60 ▾ Minutes
Set Date and Time:	<input checked="" type="radio"/> Auto <input type="radio"/> Manual
NTP Server:	time.nist.gov
Enter Date and Time:	23 hours 21 min 59 sec
	1 month 12 day 2016 year

步驟13.按一下**Save**以儲存設定。

Time

Current Time: 2016-01-12, 23:21:59
Modification time: 2016-01-12, 23:21:59
Time Zone: Pacific Time (US & Canada) (GMT-8:00) ▾
Adjust for Daylight Savings Time:
Daylight Saving Mode: By date Recurring
From: Month: 06 ▾ Day: 25 ▾ Time: 12 ▾ : 00 ▾
To: Month: 12 ▾ Day: 25 ▾ Time: 12 ▾ : 00 ▾
From: Month: 06 ▾ Week: 2nd ▾ Day: Tue ▾ Time: 12 ▾ : 00 ▾
To: Month: 12 ▾ Week: 3rd ▾ Day: Wed ▾ Time: 12 ▾ : 00 ▾
Daylight Saving Offset: +60 ▾ Minutes
Set Date and Time: Auto Manual
NTP Server: time.nist.gov
Enter Date and Time: 23 hours 21 min 59 sec
1 month 12 day 2016 year

Save **Cancel**

結論

現在，您已成功學習在RV32x VPN路由器系列上配置手動和自動時間和日期設定的步驟。

要瞭解有關RV320和RV325路由器的詳細資訊，請檢視以下影片：

[RV320和RV325路由器快速設定](#)

[RV320和RV325路由器基本配置教程](#)