

RV32x VPN路由器系列上的訪問規則設定嚮導

目標

訪問規則設定嚮導是在RV32x路由器上設定初始配置的簡單便捷引導方法。它引導使用者通過逐步過程來配置裝置。根據各種標準配置訪問規則，以便允許或拒絕對網路的訪問。訪問規則根據訪問規則需要應用到路由器的時間進行排程。本文概述並描述了訪問規則設定嚮導，用於確定允許哪些流量通過防火牆進入網路，從而幫助保護網路。

適用的裝置


- RV320 Dual WAN VPN路由器
- RV325 Gigabit Dual WAN VPN路由器

軟體版本


- v1.1.0.09

訪問規則設定嚮導

步驟1.登入到路由器配置實用程式並選擇**嚮導**。 *Wizard*頁面隨即開啟：

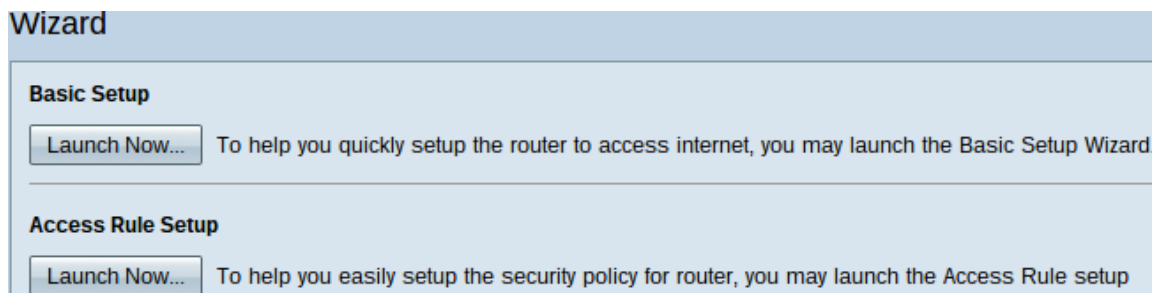

步驟2.按一下Access Rule Setup區域下方的**Launch Now**按鈕，開始訪問規則設定嚮導。系統將顯示*Access Rule Setup Installation Wizard*對話方塊。

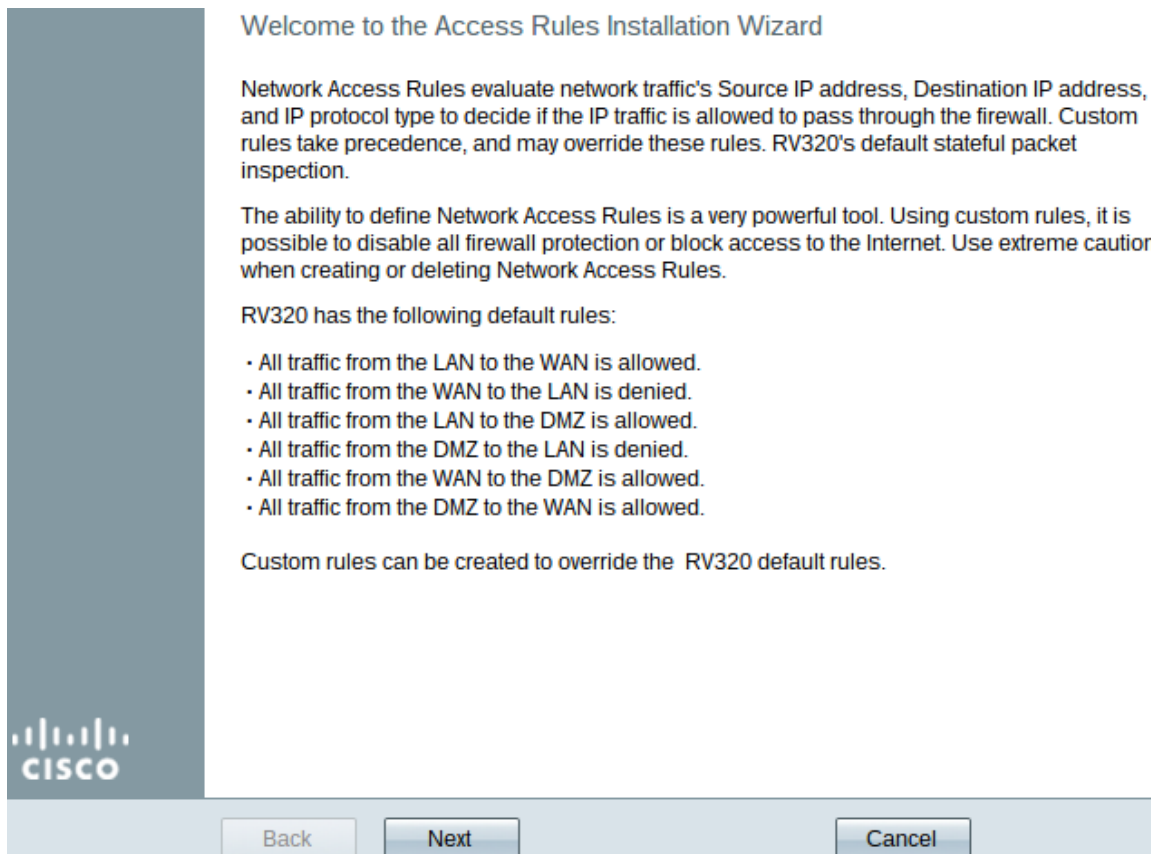

步驟3.按一下下一步繼續嚮導操作。

動作

Action	Select the Action.
Service	Select Allow or Deny depending on the intent of the rule. For example, to configure the router to allow all FTP traffic access to the Internet from the LAN, select Allow. Or, to restrict all FTP traffic access Internet from the LAN, select Deny.
Log	
Source Interface	
Source IP	Action: <input type="text" value="Deny"/>
Destination IP	
Schedule	
Summary	
Finish	



步驟1.從「操作」下拉選單中選擇相應的單選按鈕，以允許或限制您要設定的規則。訪問規則通過允許或拒絕來自特定服務或裝置的流量訪問來限制對子網路的訪問。

- 允許 — 允許所有流量。

·拒絕 — 限制所有流量。

步驟2.按一下下一步繼續嚮導。

服務

✓ Action	Select the Service.
Service	Select the service that will be allowed or denied from the Service menu.
Log	
Source Interface	Service: <input type="text" value="POP3 [TCP/110~110]"/>
Source IP	
Destination IP	
Schedule	
Summary	
Finish	

<input type="button" value="Back"/>	<input type="button" value="Next"/>	<input type="button" value="Cancel"/>
-------------------------------------	-------------------------------------	---------------------------------------

步驟1.從「服務」下拉選單中選擇要允許或限制的適當服務。

附註：如果操作設定為allow，則要允許所有流量，請從服務下拉選單中選擇**All Traffic [TCP&UDP/1~65535]**。該清單包含您可能要過濾的所有型別的服務。

步驟2.按一下下一步繼續安裝。

log

✓ Action Select the Log.

✓ Service You can select **Log packets matching this rule** or **Not log**.

Log

Source Interface

Source IP

Destination IP

Schedule

Summary

Finish

Log:

步驟1.從Log下拉選單中選擇適當的Log選項。log選項確定裝置是否保留與訪問規則集對應的流量日誌。

- 日誌資料包與此訪問規則匹配 — 使路由器能夠保持對所選服務的日誌跟蹤。
- 非日誌 — 禁用路由器以保持日誌跟蹤。

步驟2.按一下下一步繼續安裝。

來源介面

✓ Action	Select the Source Interface.
✓ Service	Select the source, either WAN, LAN, DMZ or Any from the Source Interface menu. For example, to allow all FTP traffic to access the Internet from the LAN, select the LAN as source.
✓ Log	
Source Interface	Interface: <input type="text" value="WAN 2"/>
Source IP	
Destination IP	
Schedule	
Summary	
Finish	

步驟1.點選Interface下拉選單並選擇適當的源介面。在該介面上強制實施訪問規則。

- LAN — 訪問規則僅影響LAN流量。
- WAN 1 — 訪問規則僅影響WAN 1流量。
- WAN 2 — 訪問規則僅影響WAN 2流量。
- Any — 訪問規則會影響裝置的任何介面中的所有流量。

步驟2.按一下下一步繼續安裝。

來源 IP

Action Select the Source IP type and enter the IP address.

Service For example, to allow all users on LAN side to access the Internet, select Any. To allow certain users on LAN side to access the Internet, select Single or Range and enter the IP address.

Log

Source Interface

Source IP

Destination IP

Schedule

Summary

Finish

步驟1.從可用下拉選單中選擇將訪問規則應用到的適當源IP型別。

·any — 裝置網路的任何IP地址均應用了規則。

Select the Source IP type and enter the IP address.

For example, to allow all users on LAN side to access the Internet, select Any. To allow certain users on LAN side to access the Internet, select Single or Range and enter the IP address.

·單一 — 只有裝置的網路的一個指定IP地址應用了規則。輸入所需的IP地址。

Select the Source IP type and enter the IP address.

For example, to allow all users on LAN side to access the Internet, select Single or Range and enter the IP address.

To

·範圍 — 只有網路上的指定IP地址範圍才對其應用規則。如果選擇範圍，則需要輸入範圍的起始IP地址和結束IP地址。

步驟2.按一下下一步繼續安裝。

目的地 IP

- ✓ Action Select the Destination IP type and enter the IP address.
- ✓ Service Select the destination, either Any, Single or Range * from the Destination IP pull-down menu.
- ✓ Log For example, to allow access to the DMZ port from the Internet, select Single or Range and enter the IP address of DMZ port.
- ✓ Source Interface
- ✓ Source IP

Destination IP

Schedule

Summary

Finish

Back

Next

Cancel

步驟1.從可用下拉選單中選擇將訪問規則應用到的適當目標IP型別。

·Any — 任何目標IP地址均應用規則。

Select the Destination IP type and enter the IP address.

Select the destination, either Any, Single or Range * from the Dest
For example, to allow access to the DMZ port from the Internet, sel
enter the IP address of DMZ port.

·單一 — 規則僅應用於它的單個指定IP地址。輸入所需的IP地址。

Select the Destination IP type and enter the IP address.

Select the destination, either Any, Single or Range * from the Desti
For example, to allow access to the DMZ port from the Internet, sel
enter the IP address of DMZ port.

To

·範圍 — 只有流出裝置網路外部的指定IP地址範圍才對其應用規則。如果選擇範圍，則需要輸入範圍的起始IP地址和結束IP地址。

步驟2.按一下下一步繼續安裝。

計畫

- ✓ Action
- ✓ Service
- ✓ Log
- ✓ Source Interface
- ✓ Source IP
- ✓ Destination IP

Schedule

Summary

Finish

When it works

Select the scheduling for this rule to be enforced.

- Always :**
Select **Always** from the Apply this rule menu if the rule is always in effect.
- Interval :**
Select **Interval** to define the specific time and day of week range for this rule to be enforced.

Back

Next

Cancel

步驟1.按一下相應的單選按鈕，選擇要在路由器上應用訪問規則的時間。

·始終 — 訪問規則在路由器上始終處於活動狀態。如果選擇此選項，請跳至步驟5。這是預設設定。

·間隔 — 訪問規則在特定時間處於活動狀態。如果選擇此選項，則需要輸入實施訪問規則的時間間隔。

✓ Action Enter the Scheduling

✓ Service

✓ Log

✓ Source Interface

✓ Source IP

✓ Destination IP

Schedule

Summary

Finish

Time Setting

Enter the time of day (in 24-hour format) to begin and end enforcement.

From: (hh:mm)

To: (hh:mm)

Date Setting

Enter the day of week to begin and end enforcement.

Everyday Sun Mon Tue Wed Thu Fri Sat

步驟2.在「自」欄位中輸入開始應用訪問清單的時間。時間格式為hh:mm。

步驟3.在「至」欄位中輸入要應用訪問清單的時間。時間格式為hh:mm。

步驟4.選中要應用訪問清單的特定日期的覈取方塊。

步驟5.按一下**Next**以繼續設定。

摘要

✓ Action	Summary
✓ Service	Please review the following settings and ensure the data is correct.
✓ Log	Action: Deny
✓ Source Interface	Service: All Traffic [TCP&UDP/1~65535]
✓ Source IP	Log: Not log
✓ Destination IP	Source Interface: WAN 2
✓ Schedule	Source IP: 192.0.2.4
Summary	Destination IP: Any
Finish	Schedule : From 04:30 To 17:14 , Sun , Tue

附註： *Summary* 頁面顯示剛剛由訪問設定嚮導在RV320上配置的所有設定的整體檢視。
 步驟1. 按一下 **提交** 以提交對嚮導配置的更改。

完成

✓ Action	Device Setup Complete
✓ Service	Access Rules have been successfully configured.
✓ Log	
✓ Source Interface	
✓ Source IP	
✓ Destination IP	
✓ Schedule	
✓ Summary	
Finish	

步驟1. 按一下 **完成** 完成訪問規則設定嚮導。